

Drive Pinion Front Bearing

Removal and Installation

NOTE: *The outer differential bearing cup needs to be replaced when replacing the outer differential bearing.*

1. Replace the outer pinion bearing cup.
Refer to: [Drive Pinion](#) (205-02A Rear Drive Axle/Differential - Vehicles With: Ford 8.8 Inch Ring Gear, Removal and Installation).