


Hood Latch Release Cable


Base Part Number: Base Part Number: 16916

Removal


1. Remove the hood latch.
Refer to: [Hood Latch](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
2. Remove the left headlamp assembly.
Refer to: [Headlamp Assembly](#) (417-01 Exterior Lighting, Removal and Installation).
3. Remove the hood latch release handle.
Refer to: [Hood Latch Release Handle](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
4. Route the hood latch release cable through the cowl.
 1. Release the cable routing clip.
 2. Route the hood latch release cable through the cowl.

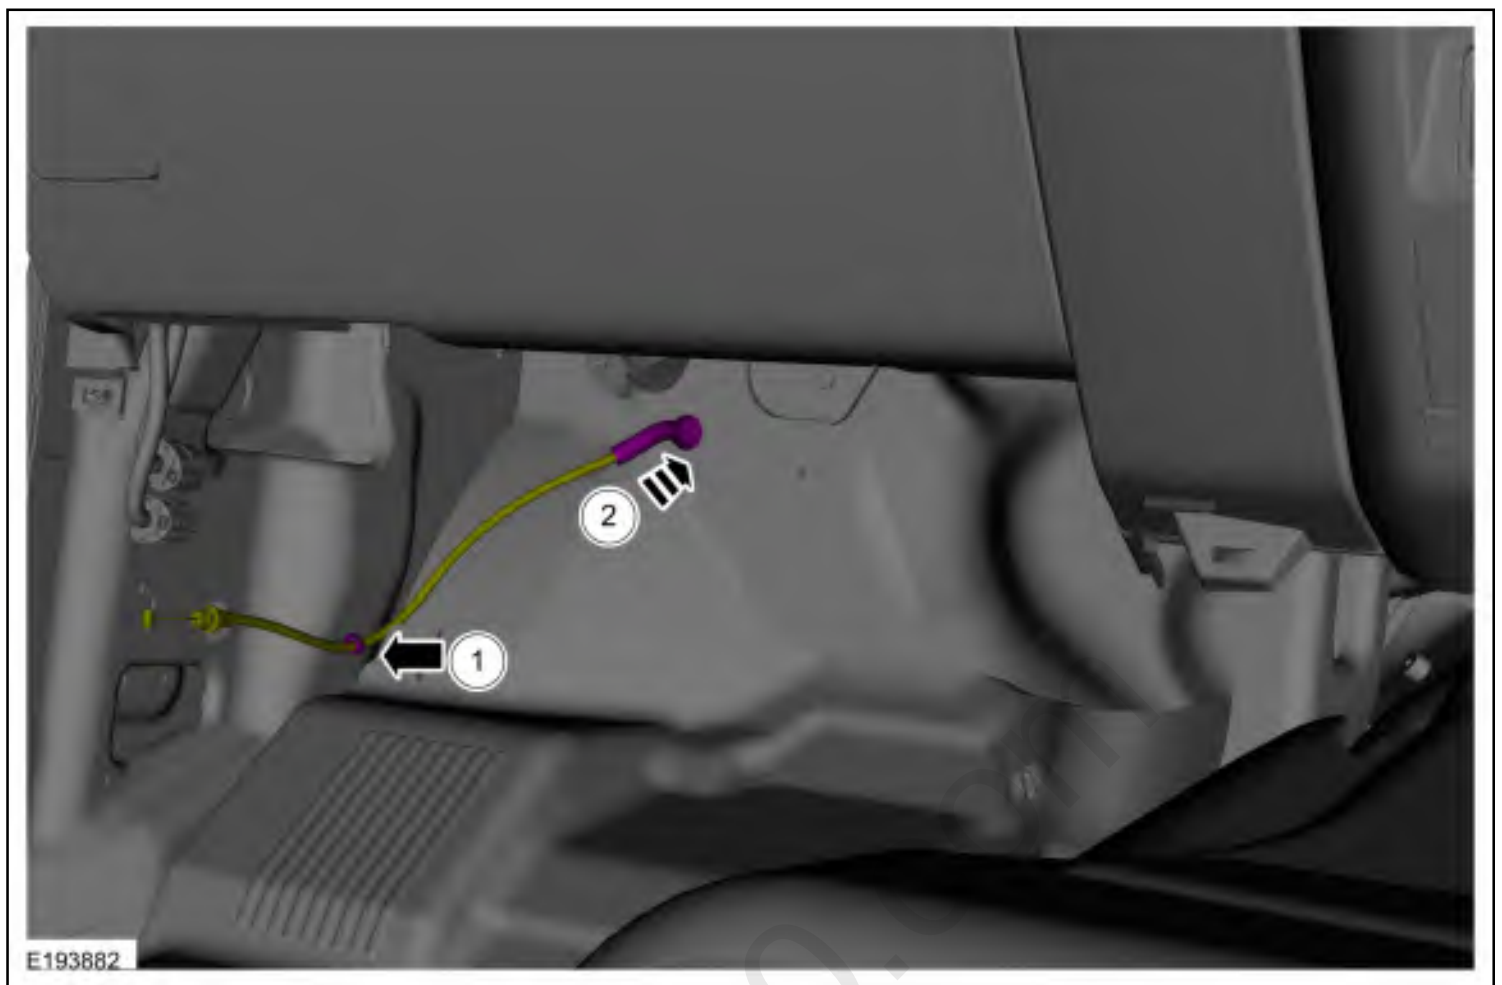


5. Remove the clip from the core support and position aside the air deflector.

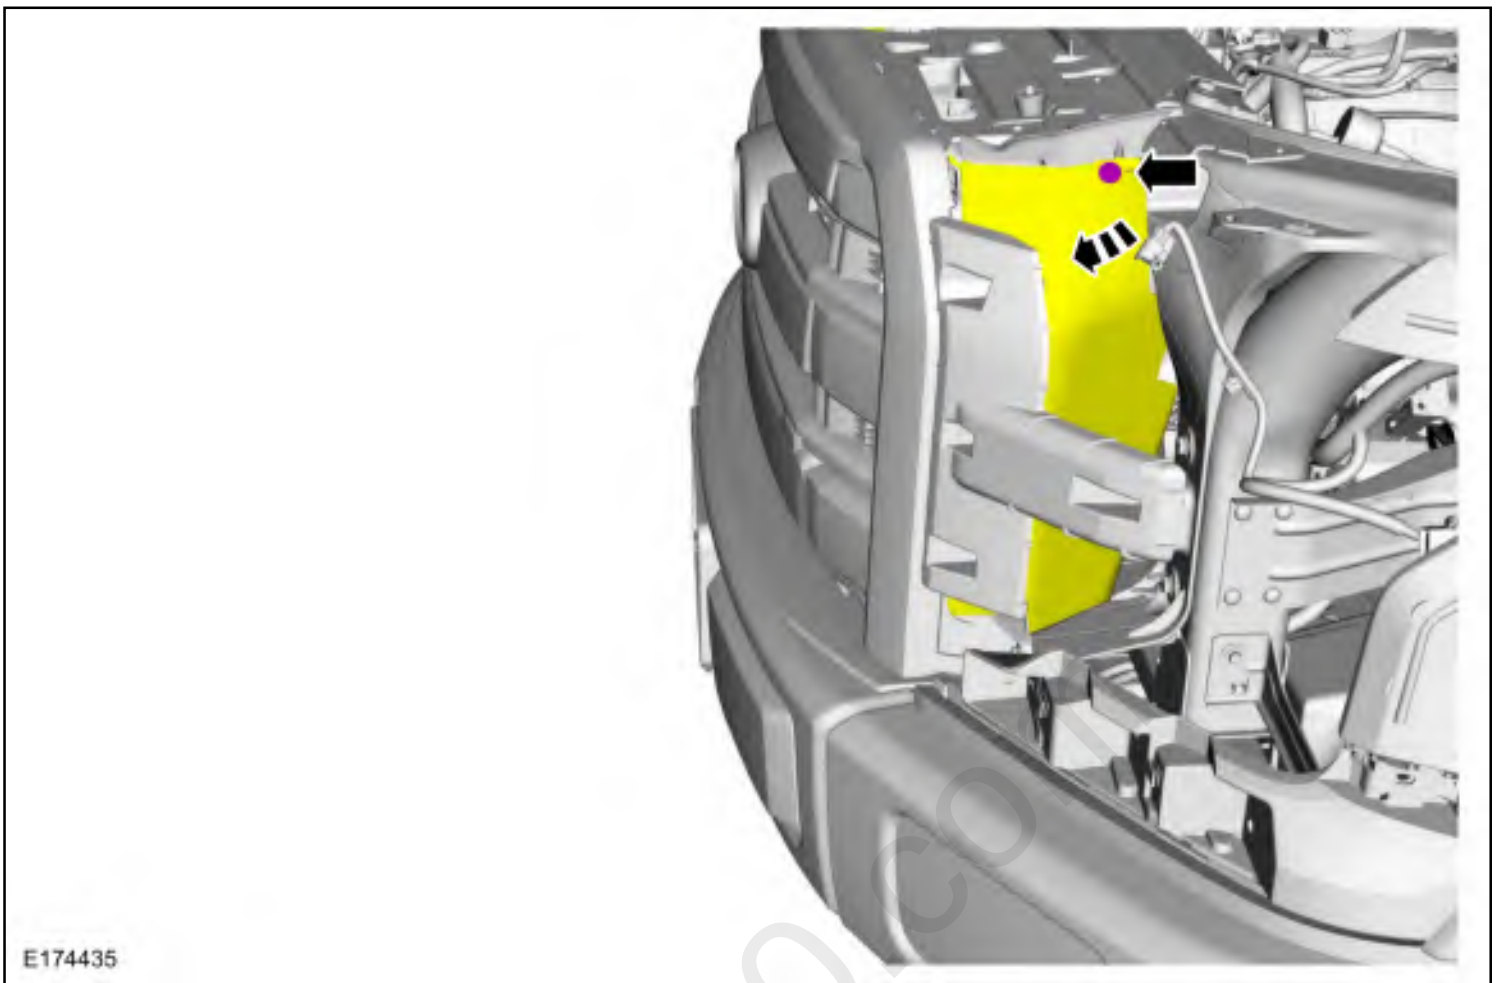

6. Detach the cable routing clip from the core support.

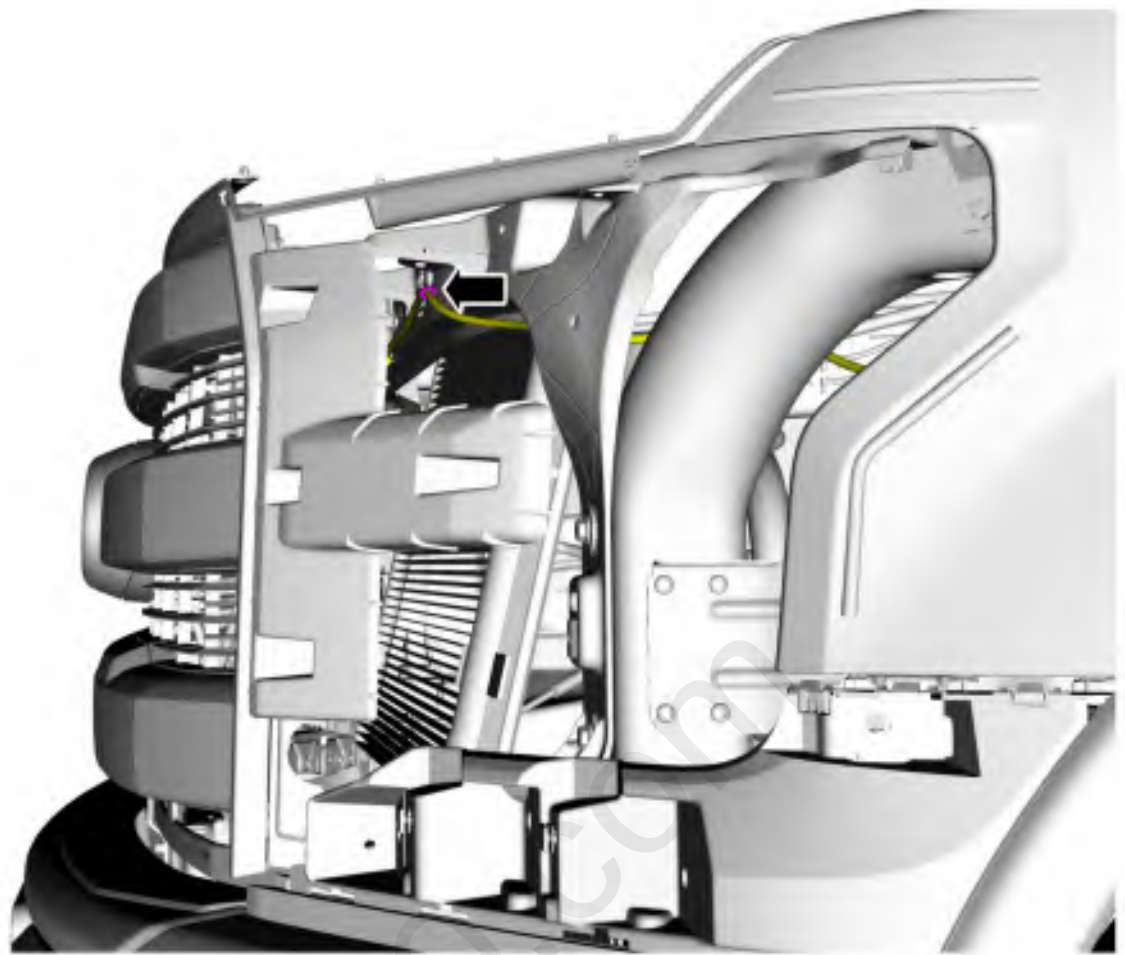

7. Remove the hood latch release cable.

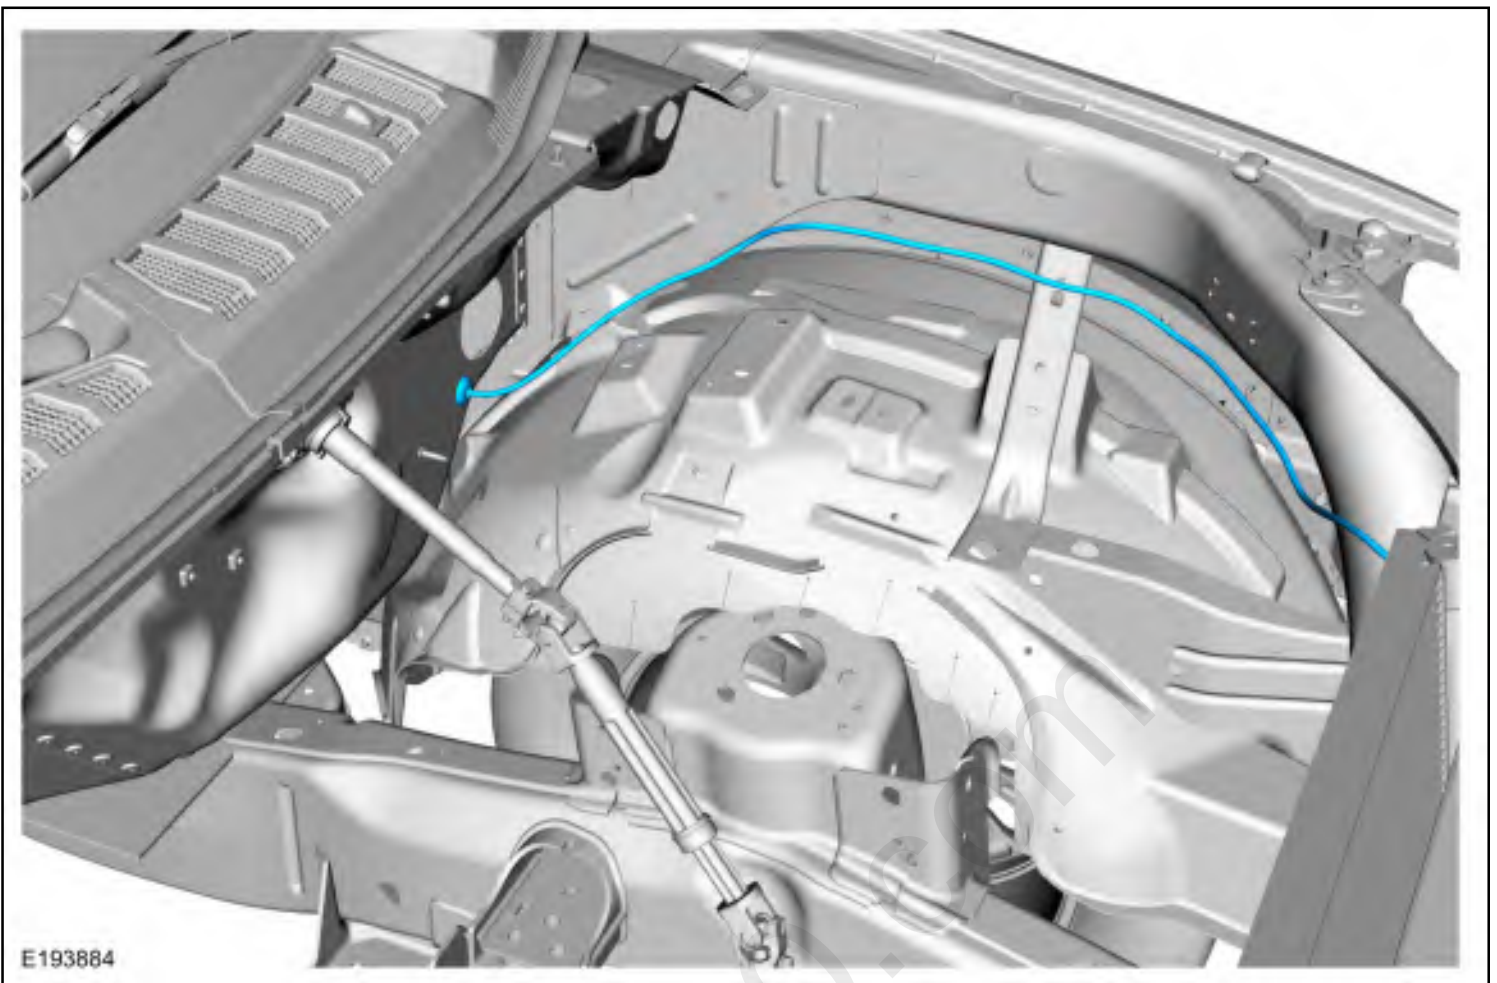

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

Hood Latch Release Handle

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. **NOTE:** Regular cab shown, Supercrew and Supercab similar.

Remove the scuff plate.



2. Remove the kick panel.

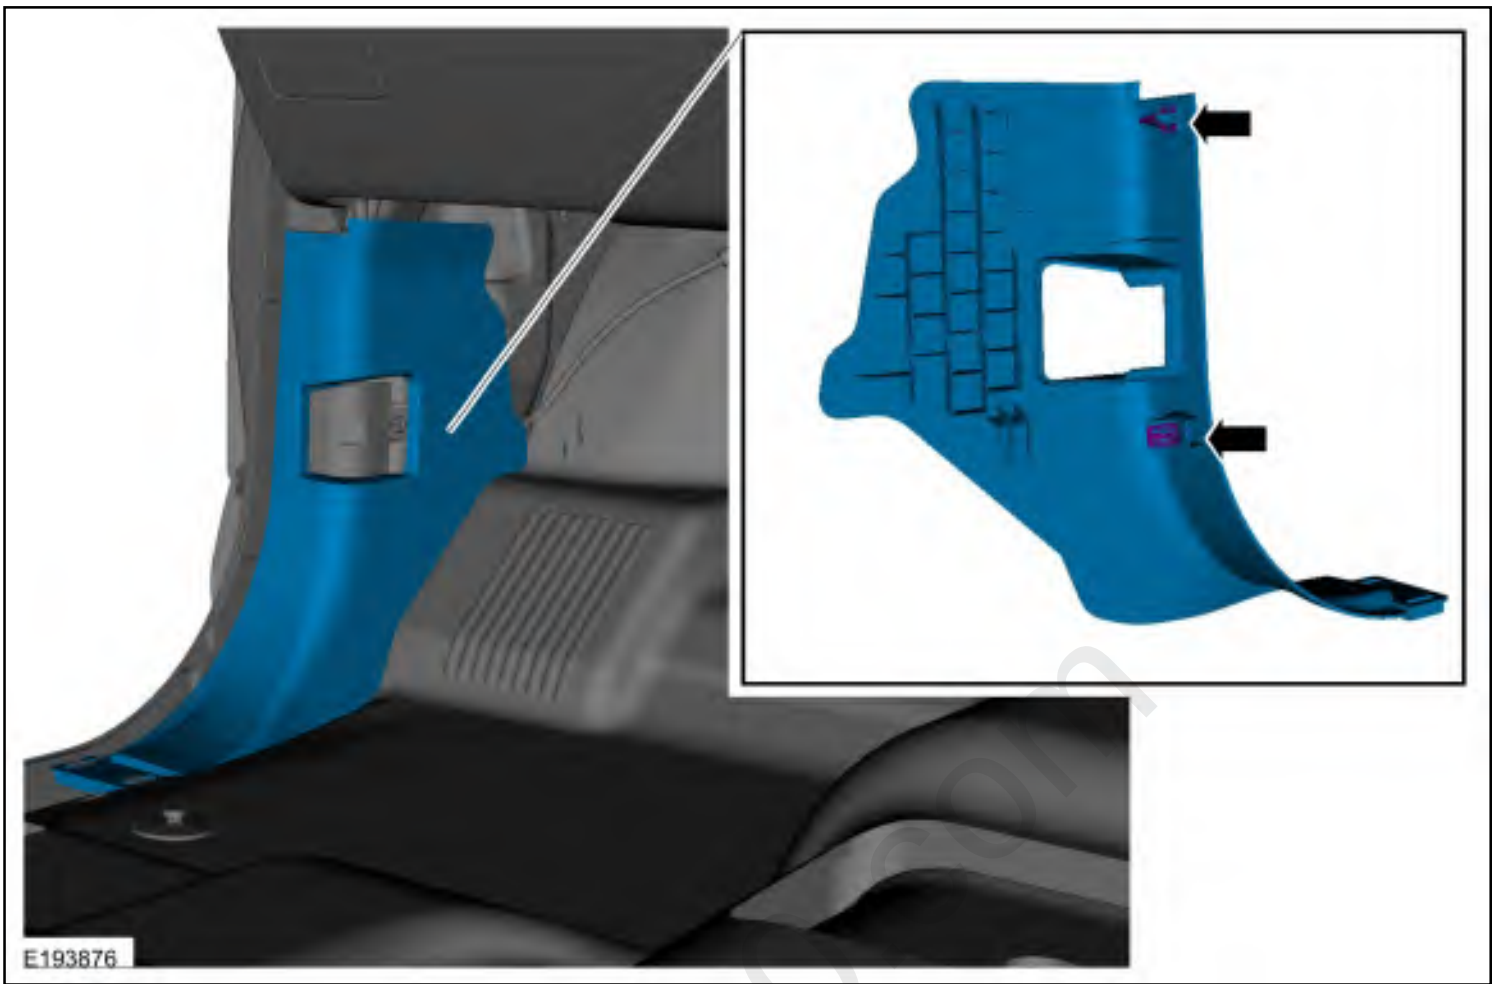


3. Remove the hood latch release handle.

1. Remove the bolt from the hood latch release handle.

Torque: 80 lb.in (9 Nm)

2. Remove the hood latch release cable from the hood latch release handle retaining bracket.
3. Remove the hood latch release cable end from the hood latch release handle.

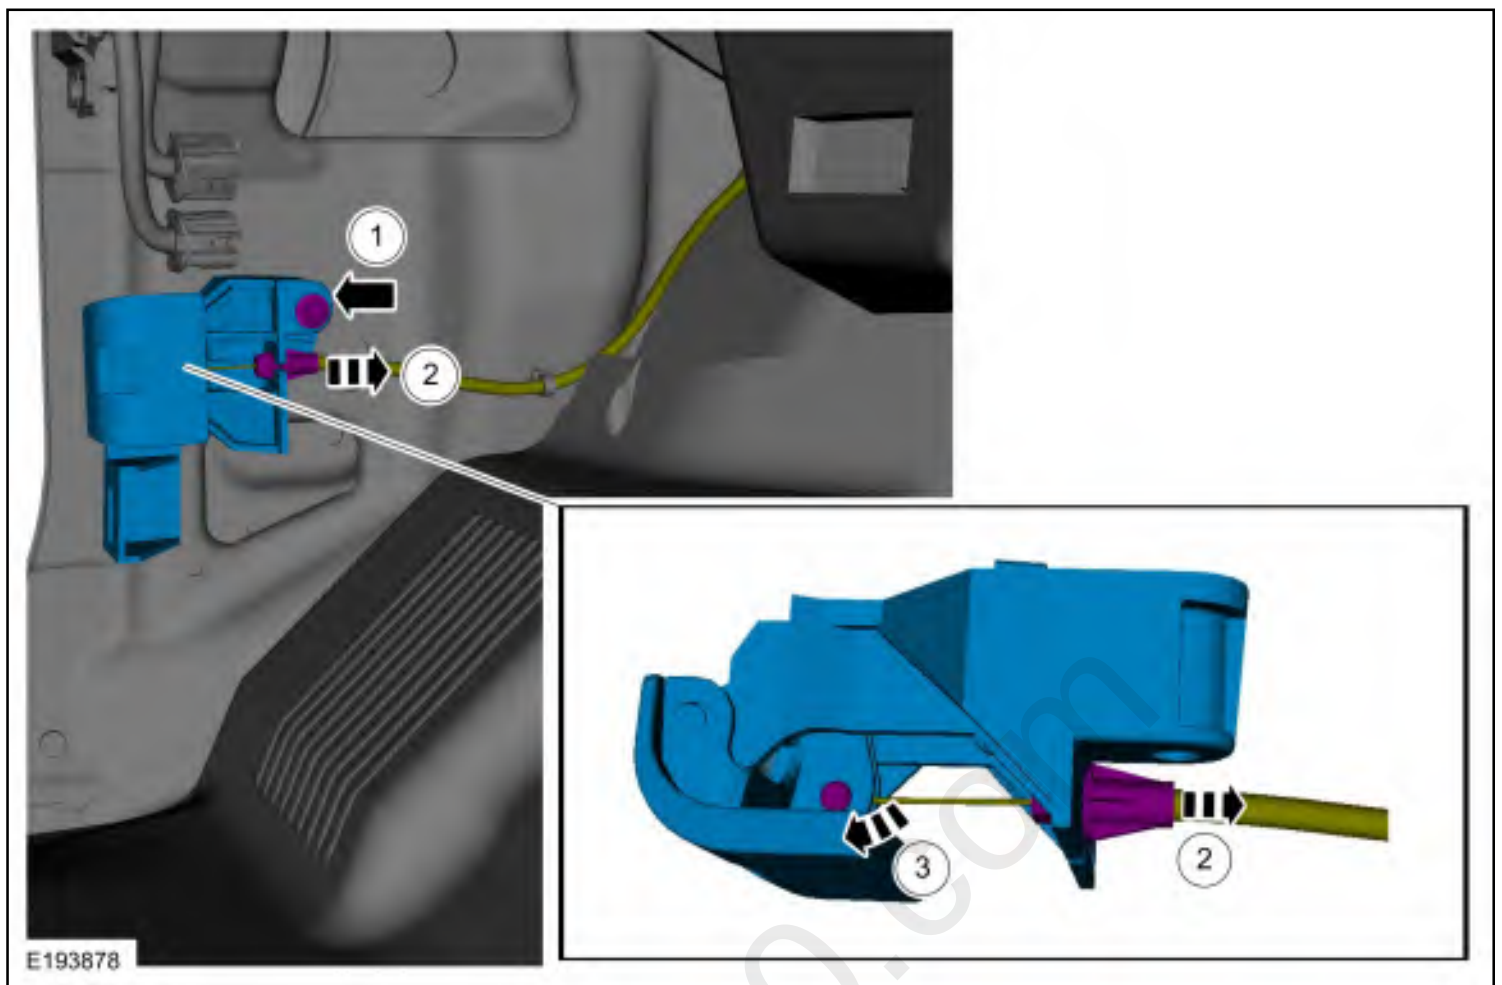

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company