

Hood Latch

Base Part Number: Base Part Number: 16700


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. **NOTE:** If reinstalling the original hood latch, mark around the bolts to aid in alignment during installation.


Remove the bolts and position aside the hood latch.

1. Remove the bolts from the hood latch.
Torque: 80 lb.in (9 Nm)
2. If equipped, disconnect the hood ajar switch.
3. Position aside the hood latch.

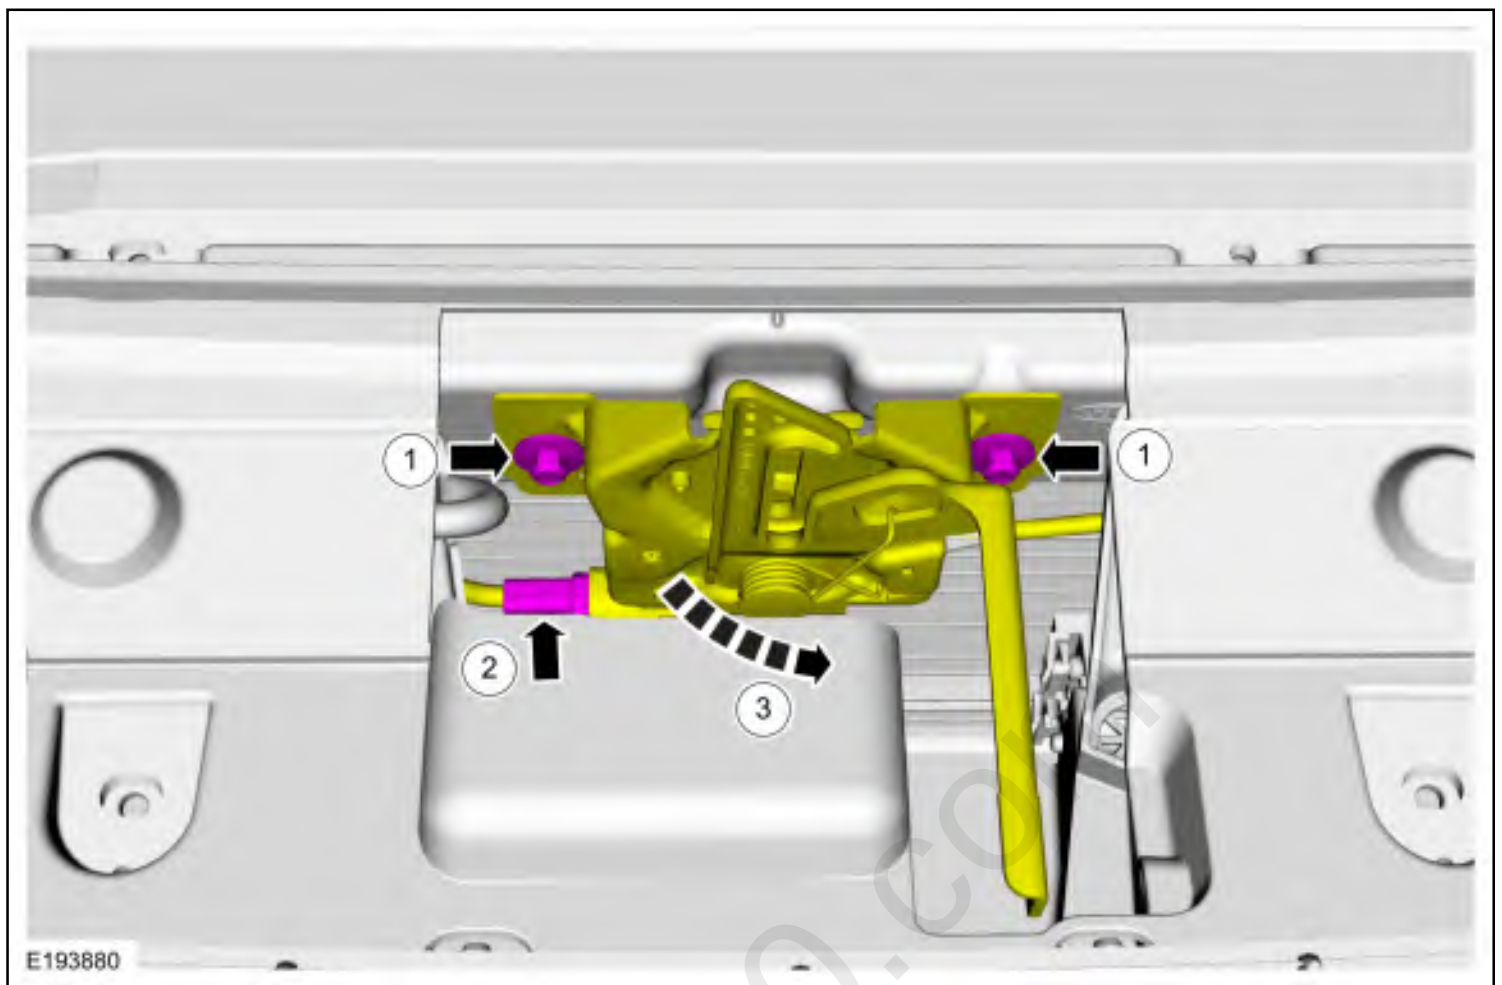

2. Disconnect the hood latch release cable and remove the hood latch.

1. Detach the cable from the mounting bracket.
2. Disconnect the hood latch release cable end.

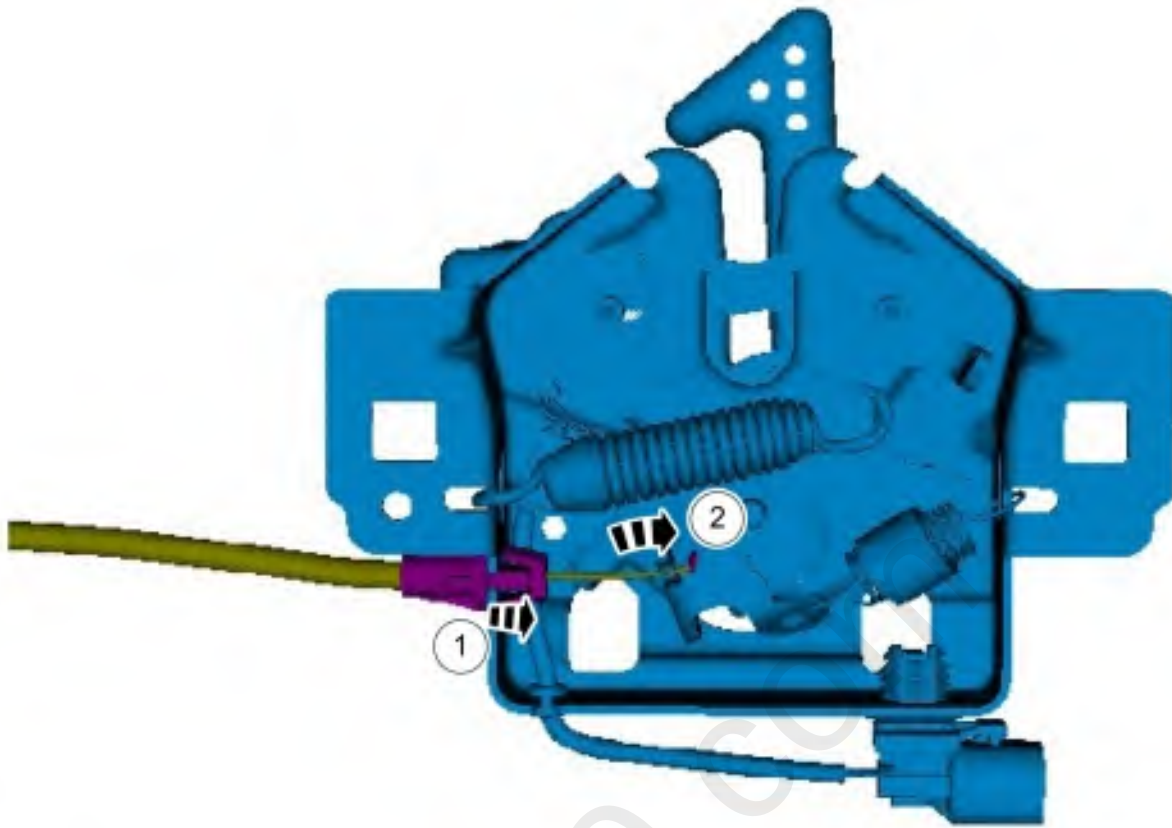

E193881




Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *If reinstalling the original hood latch, use the marks made during removal to aid in alignment.*

Install the bolts and align the hood latch.

1. Align the hood latch.
2. Tighten the hood latch bolts.

Torque: 80 lb.in (9 Nm)

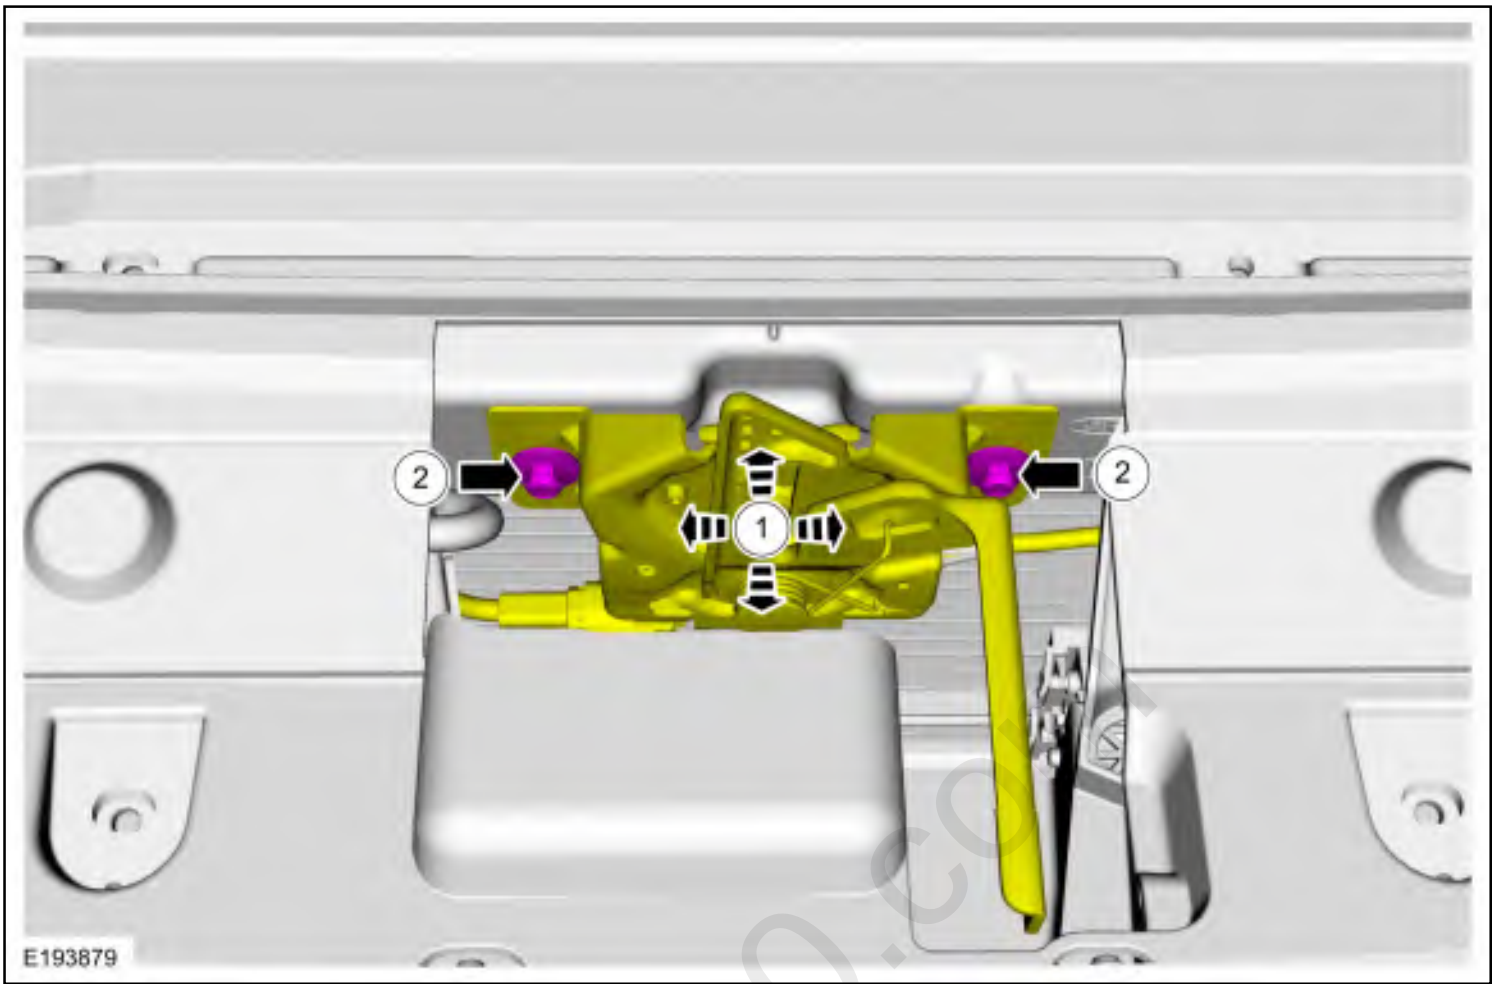

Copyright © 2018 Ford Motor Company