


Tailgate Latch Actuator

Removal

1. Remove the tailgate latch control assembly.
Refer to: [Tailgate Latch Control Assembly](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
2. **NOTE:** *This step is only necessary when installing a new component.*

Remove the tailgate latch actuator.

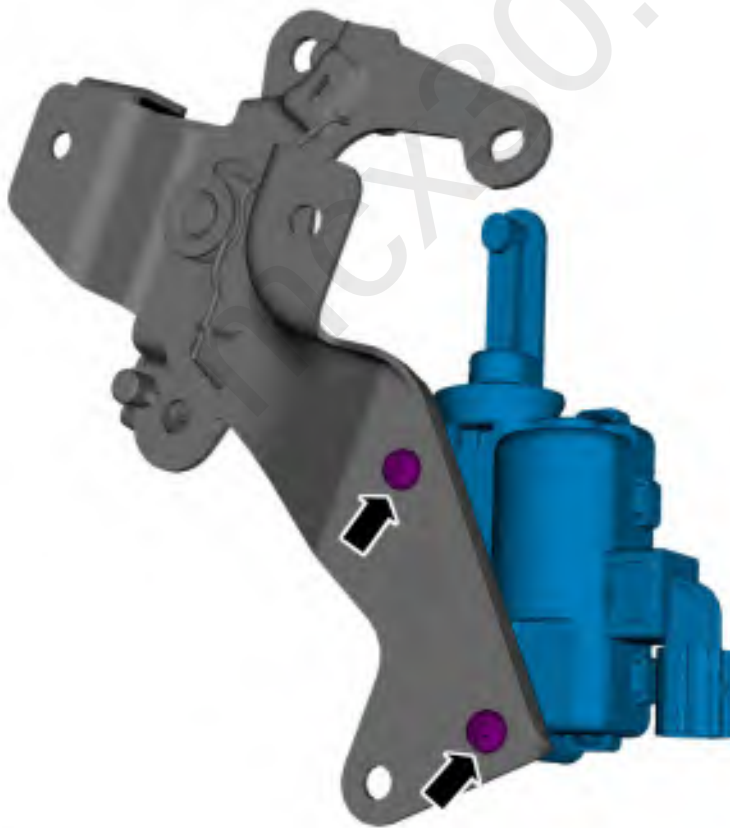

E196064



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

mcx30.com