

Rear Door Lower Latch - SuperCab

Removal

NOTE: LH side shown, RH side similar.

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the rear door trim panel.
Refer to: [Rear Door Trim Panel - SuperCab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the watershield.



E192561




3. Remove the interior rear door handle.

Refer to: [Interior Rear Door Handle - SuperCab](#) (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).


4. Remove the rear door lower latch bolts.

Torque: 106 lb.in (12 Nm)

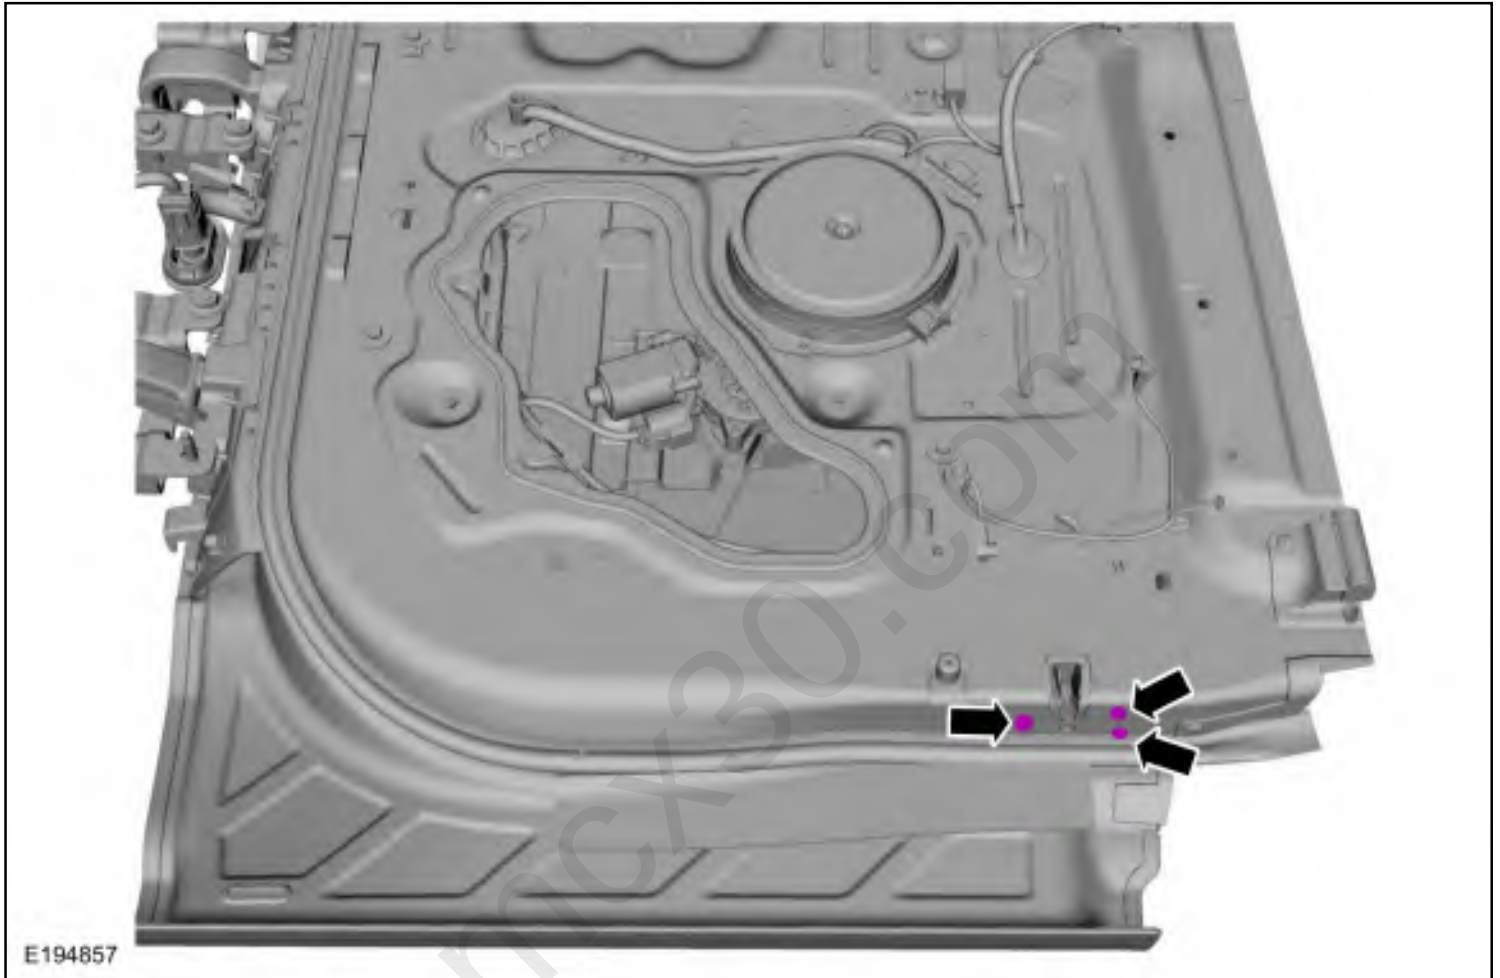

5. Remove the rear door lower latch.

1. Route the cable and grommet through the inner door.
2. Detach the tape.
3. Release the cable routing clip.
4. Disconnect the rear door ajar switch.
5. Remove the rear door lower latch.

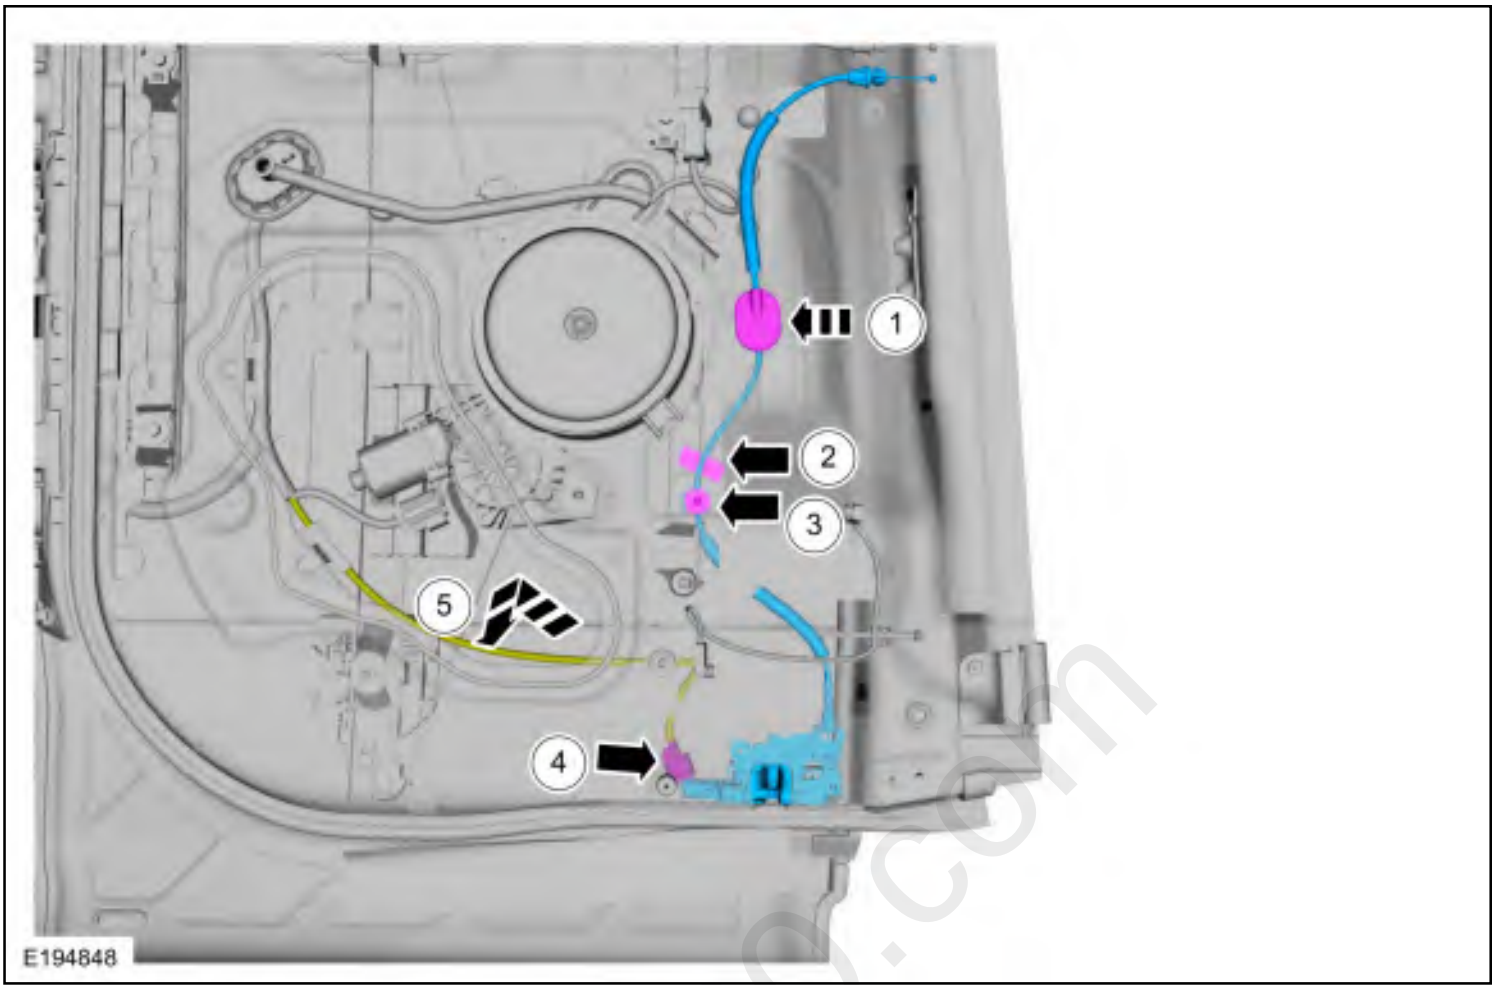

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company