


Tailgate Latch


Removal

NOTE: LH shown, RH similar.

1. Open the tailgate.

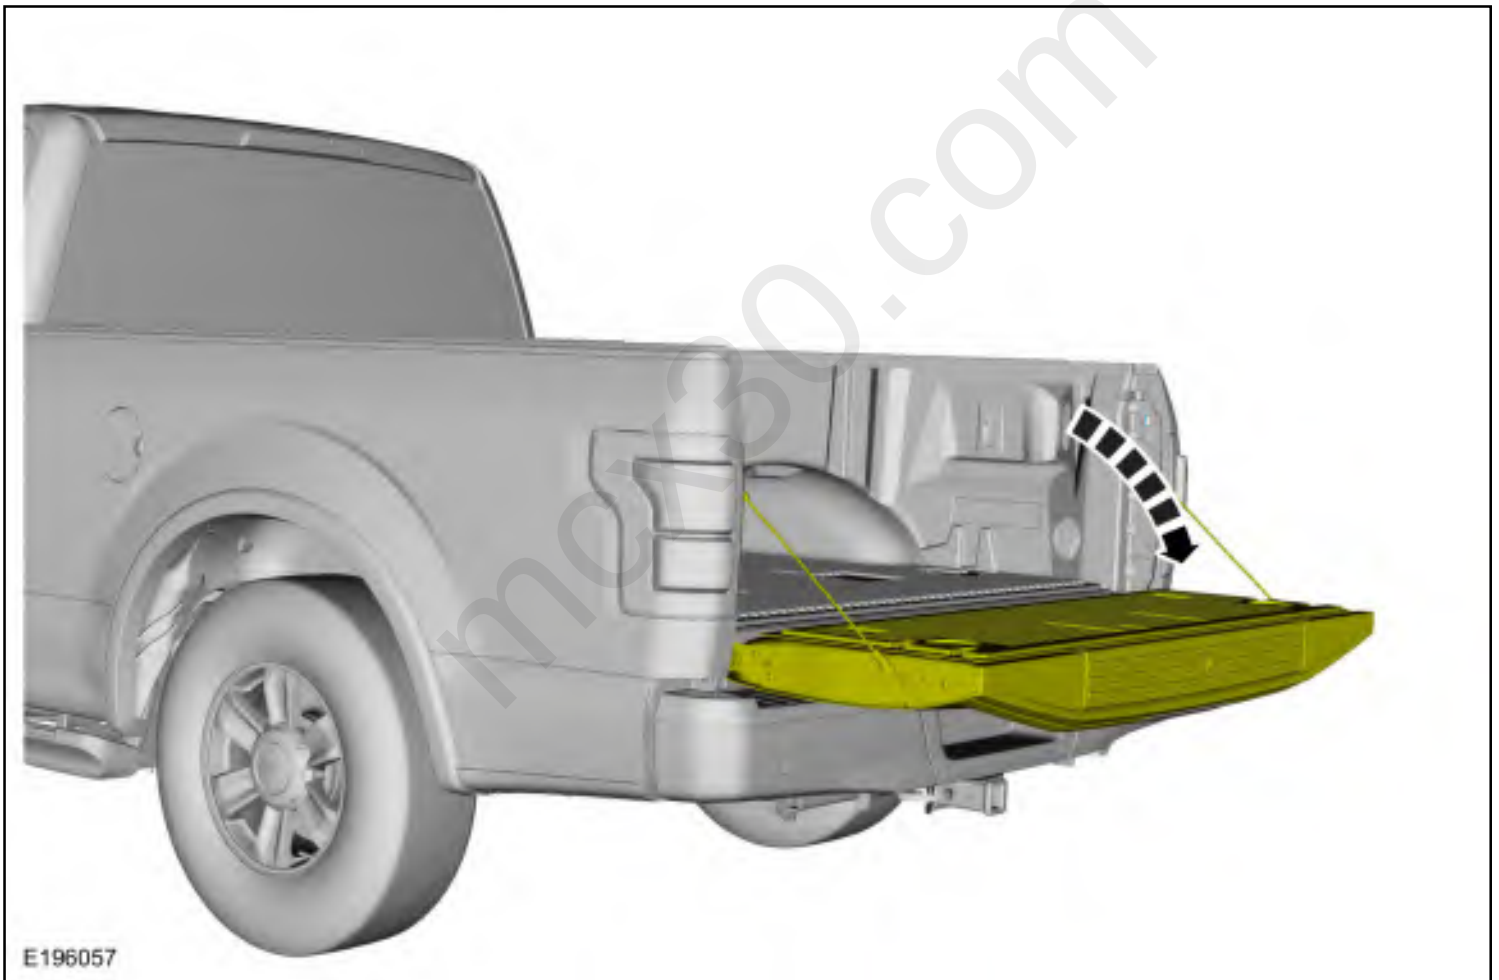

2. Remove the tailgate bolts and discard upper tailgate bolt.
Torque: 18 lb.ft (25 Nm)

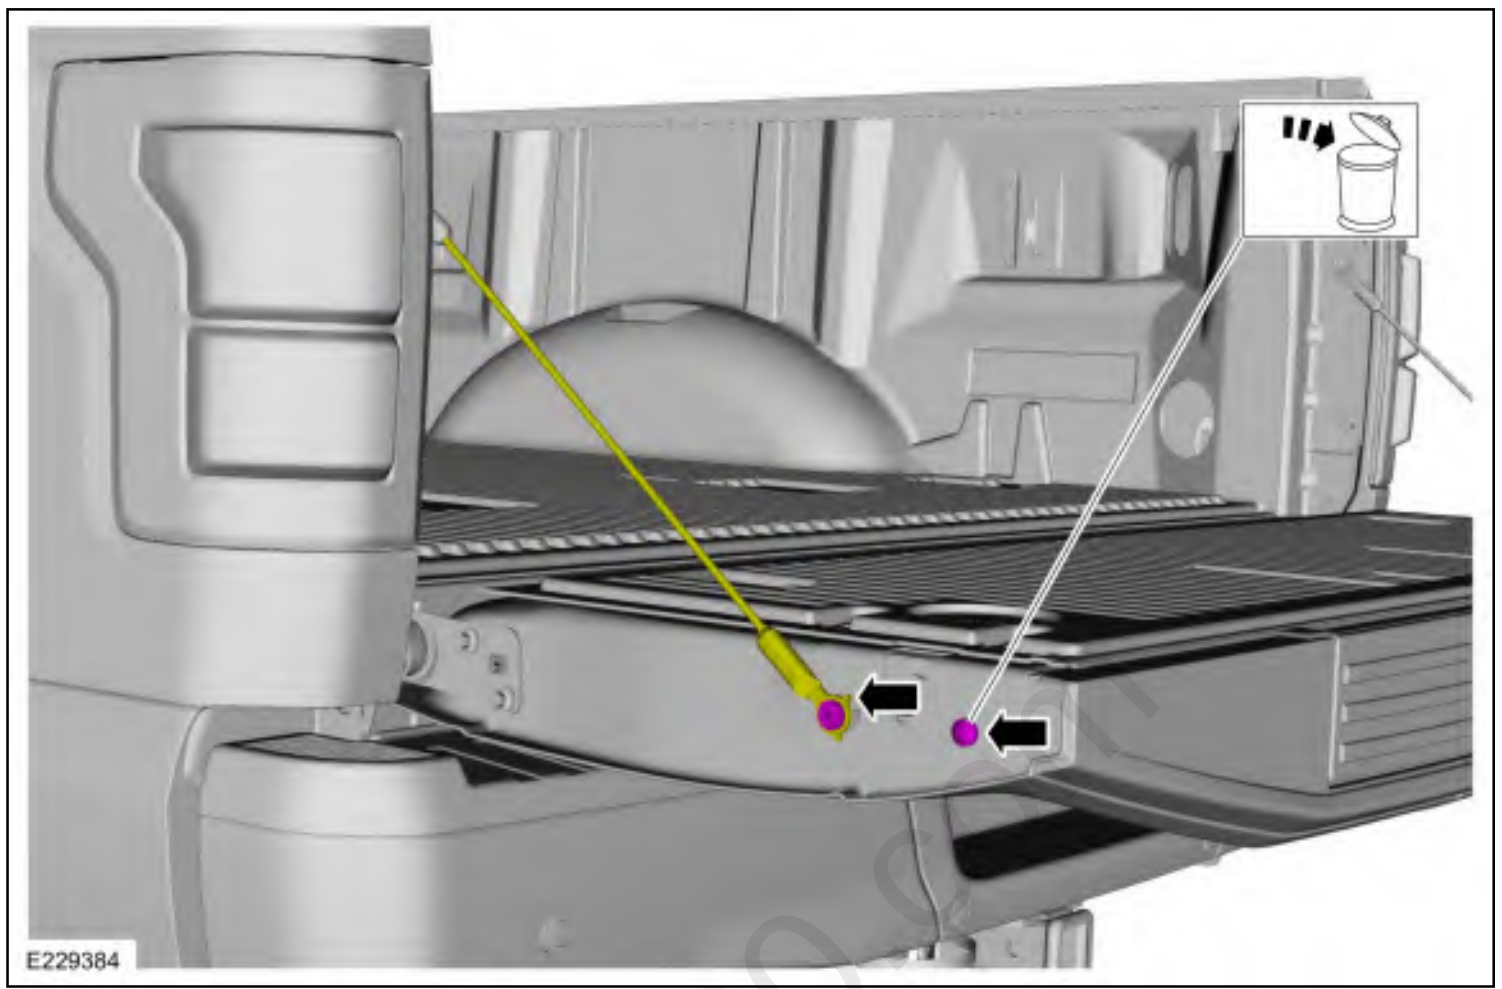


3. If equipped, remove the bedliner tailgate cover.
Torque: 28 lb.in (3.2 Nm)



E196058




4. Remove the tailgate access panel bolts and the tailgate access panel.
Torque: 28 lb.in (3.2 Nm)

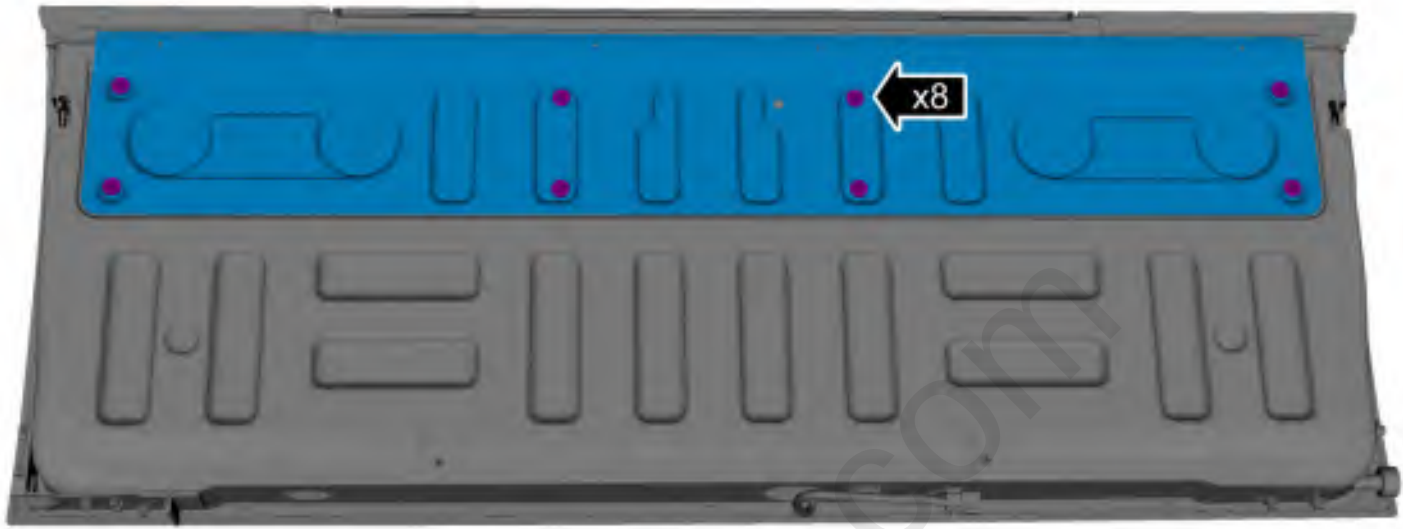

E196059

5. Remove the tailgate latch.

1. Disconnect the tailgate latch actuating rod from the tailgate latch control assembly.
2. Position the latch assembly toward the tailgate latch control assembly.
3. Remove the tailgate latch.

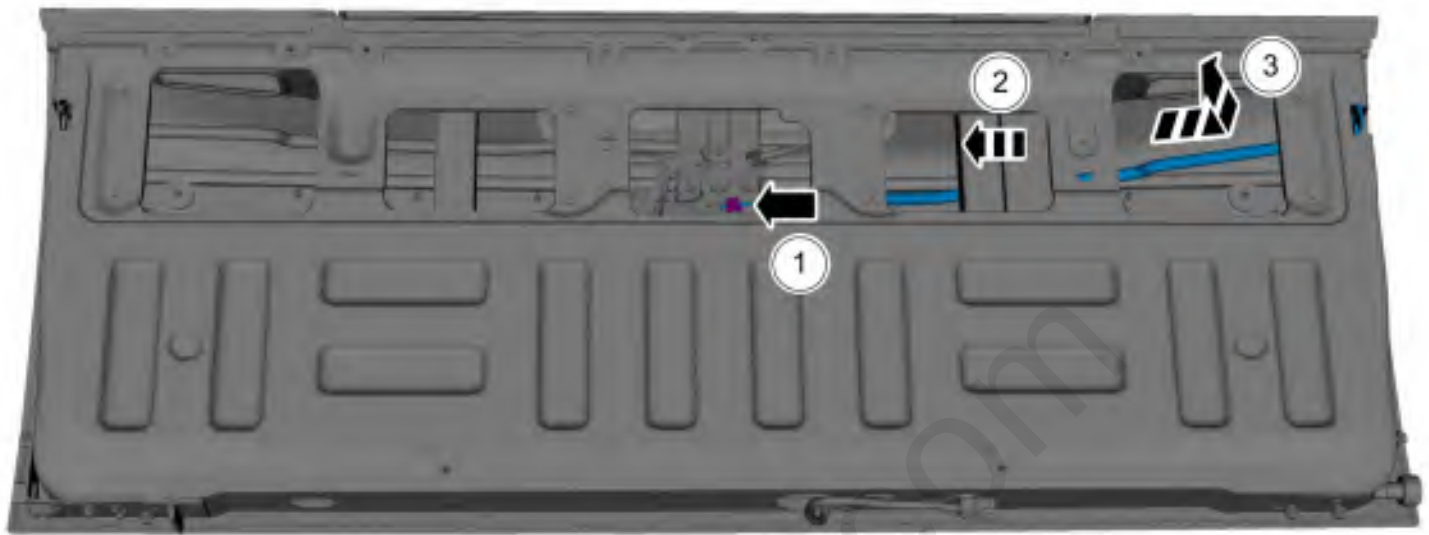

E196065

6. **NOTE:** *This step is only necessary when installing a new component.*

Remove the tailgate latch actuating rod.



E182489



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
