

Windshield Washer Reservoir

Special Tool(s) / General Equipment

Fluid Suction Gun


Materials

Name	Specification
Motorcraft® Premium Windshield Wash Concentrate with Bitterant ZC-32-B2	WSS-M14P19-A


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Siphon the windshield washer fluid.
Use the General Equipment: Fluid Suction Gun

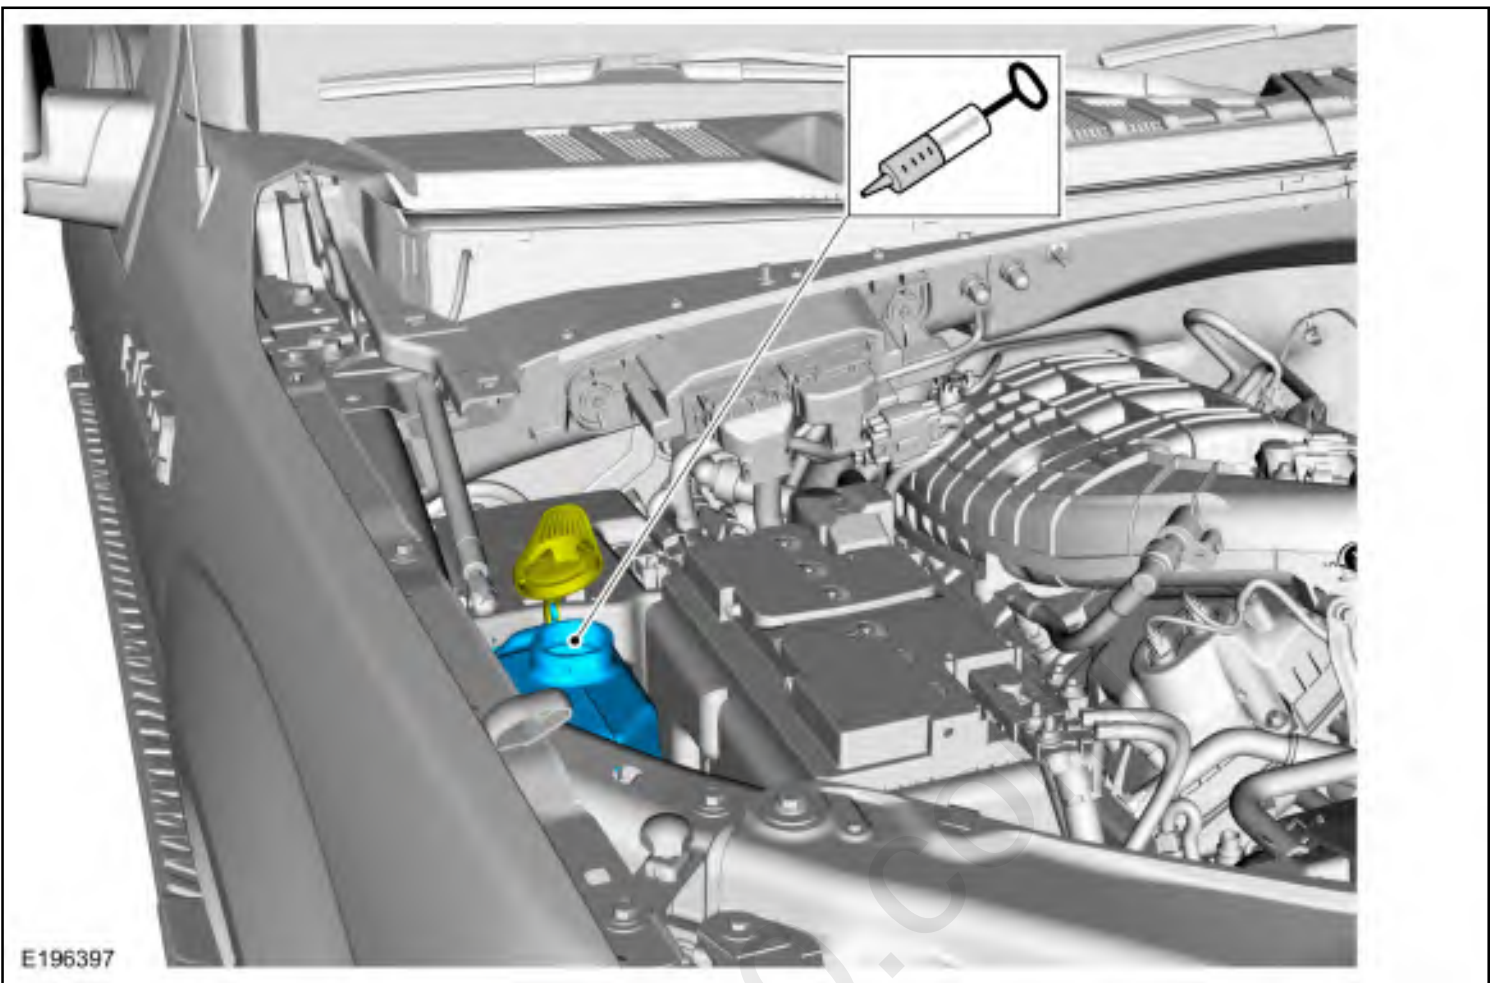

2. Remove the battery tray.
Refer to: Battery Tray (414-01 Battery, Mounting and Cables) .
3. Remove the pin-type retainers and the bolt.
Torque: 133 lb.in (15 Nm)

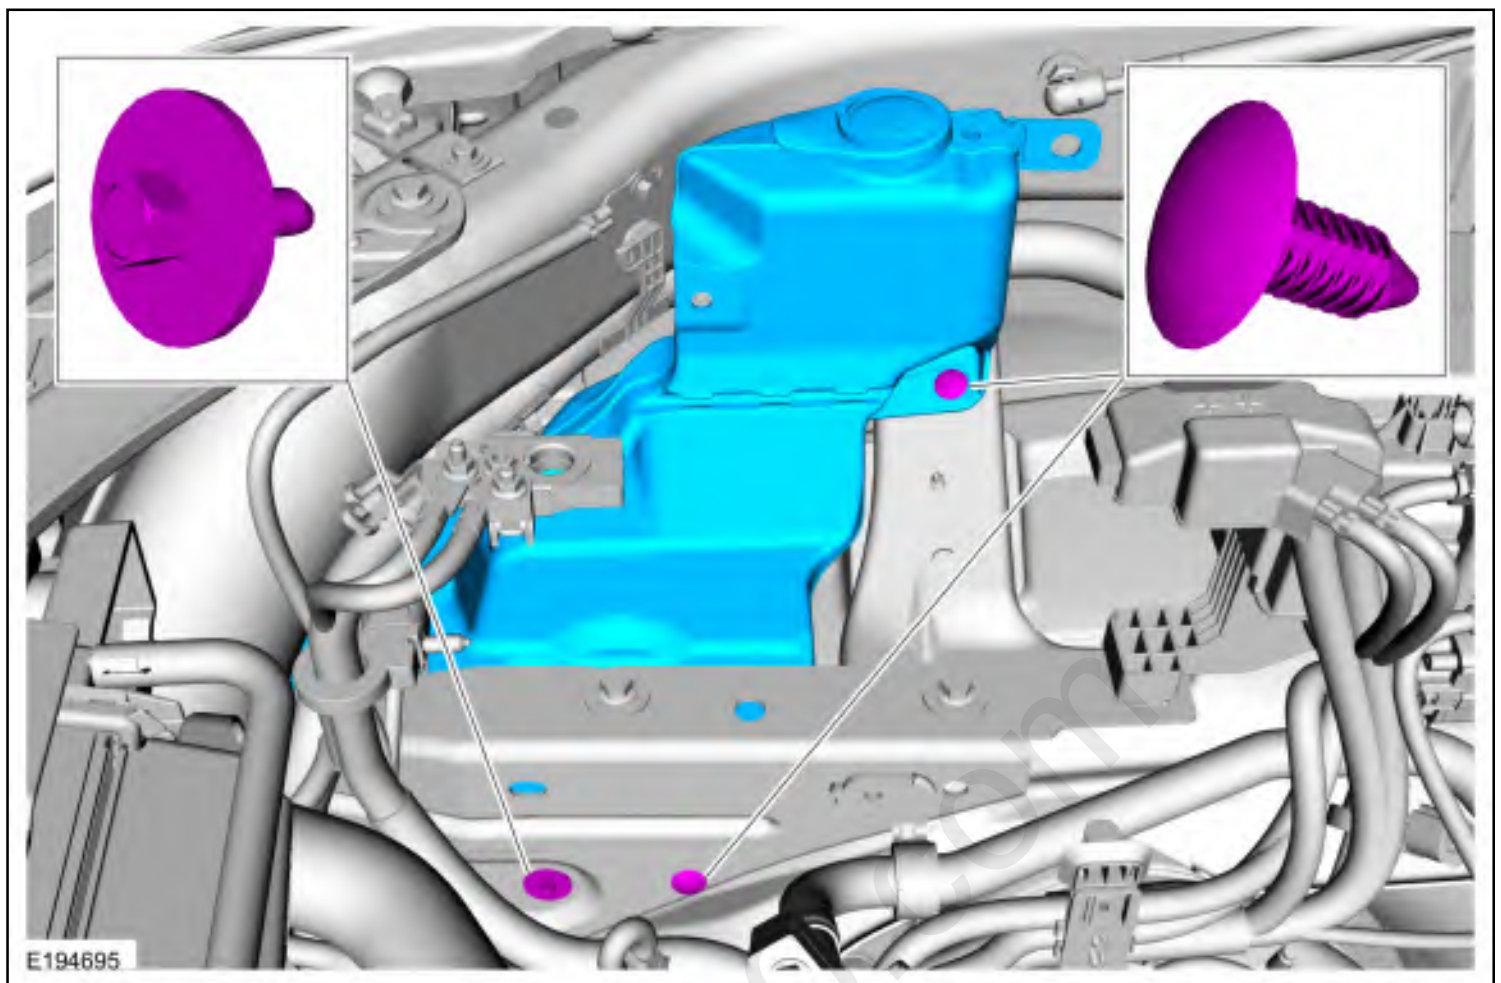


4. Remove the RH fender splash shield.


Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).

5. **NOTE:** *Be prepared to collect escaping fluid.*

1. Disconnect the washer pump electrical connector.
2. Disconnect the fluid level sensor electrical connector.
3. Disconnect the washer pump hose.

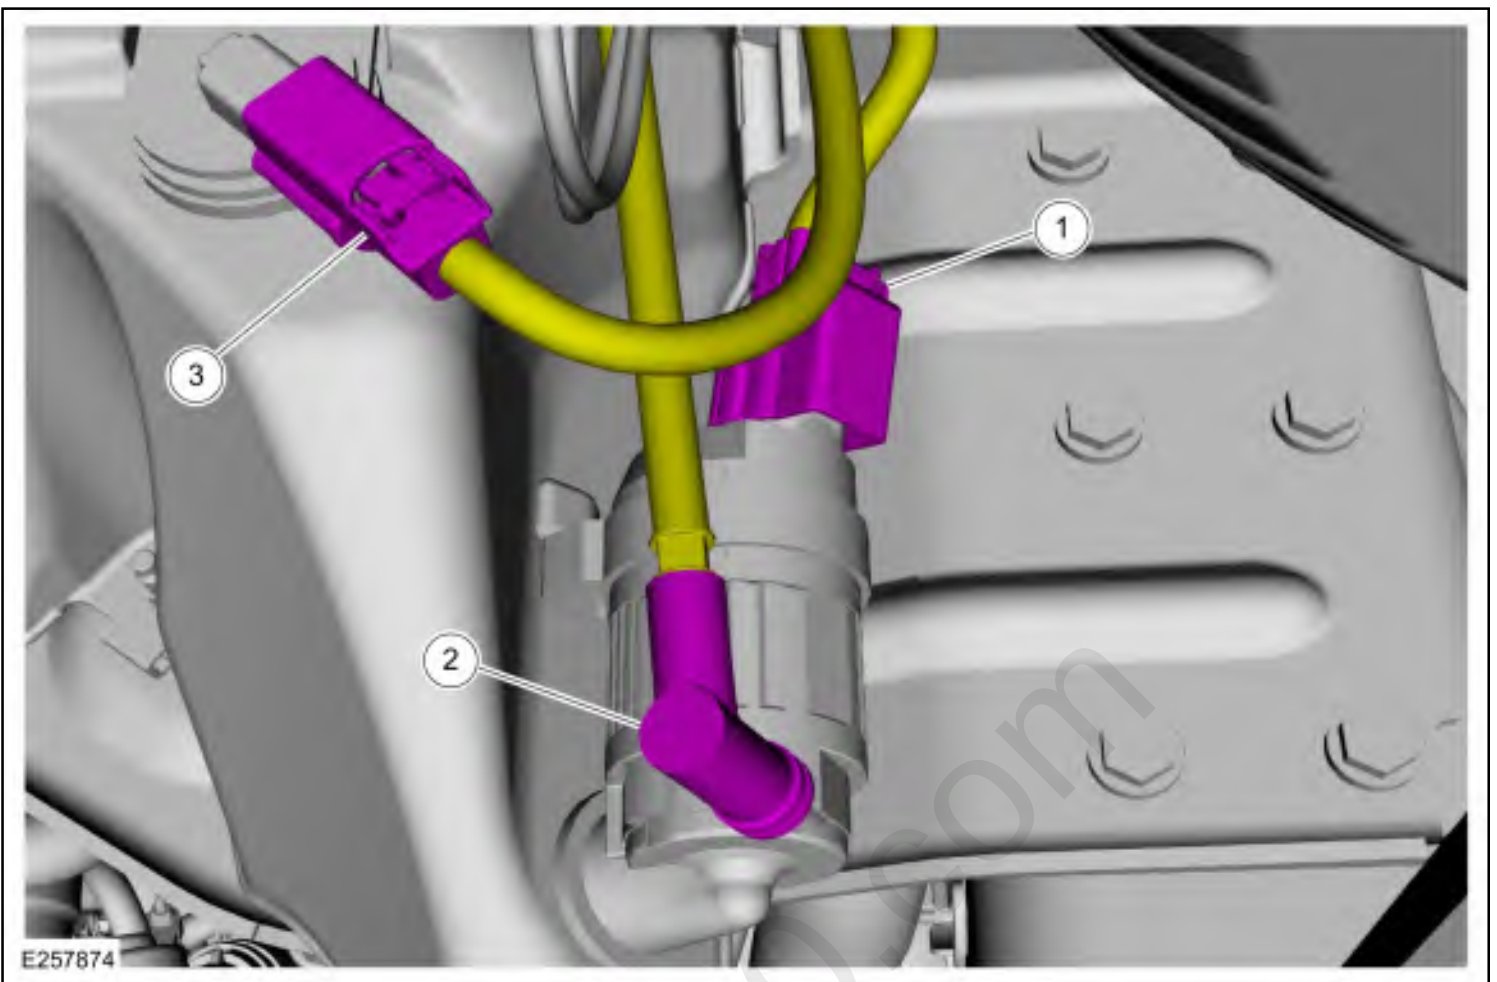

6. Detach the washer hose and remove the windshield washer reservoir.

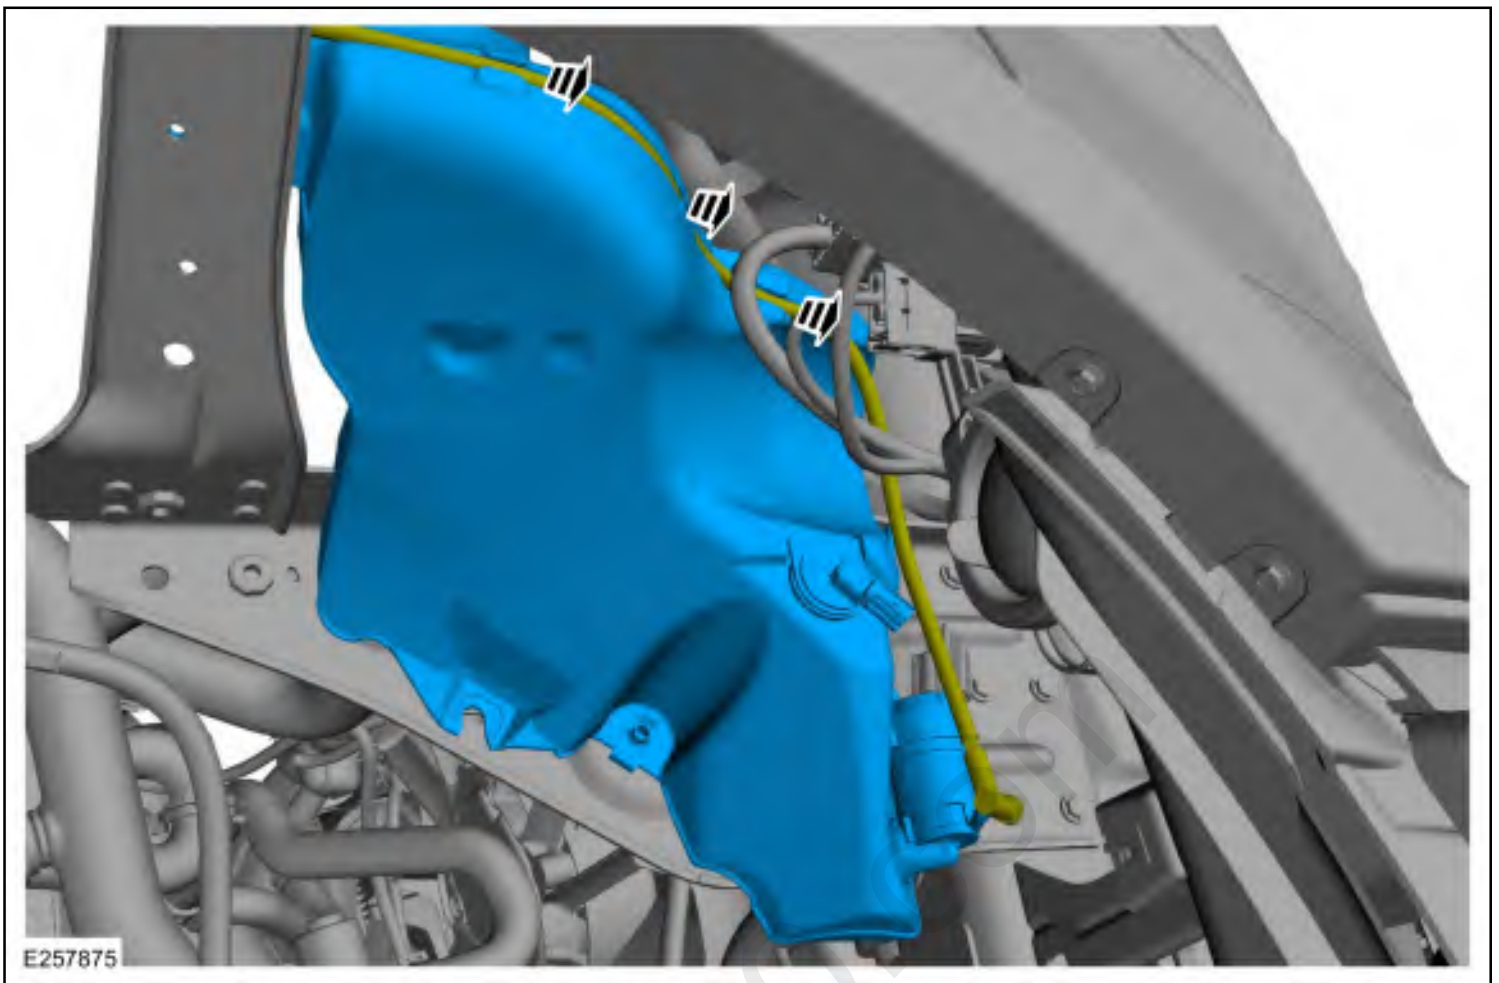

Installation

NOTICE: Do not operate the washer pump prior to filling the windshield washer reservoir. Failure to follow this instruction may result in premature pump failure.

1. To install, reverse the removal procedure.

Material: Motorcraft® Premium Windshield Wash Concentrate with Bitterant / ZC-32-B2 (WSS-M14P19-A)