

Windshield Washer Pump

Special Tool(s) / General Equipment


Fluid Suction Gun

Materials

Name	Specification
Motorcraft® Premium Windshield Wash Concentrate with Bitterant ZC-32-B2	WSS-M14P19-A

Removal


1. Siphon the windshield washer fluid out.
Use the General Equipment: Fluid Suction Gun

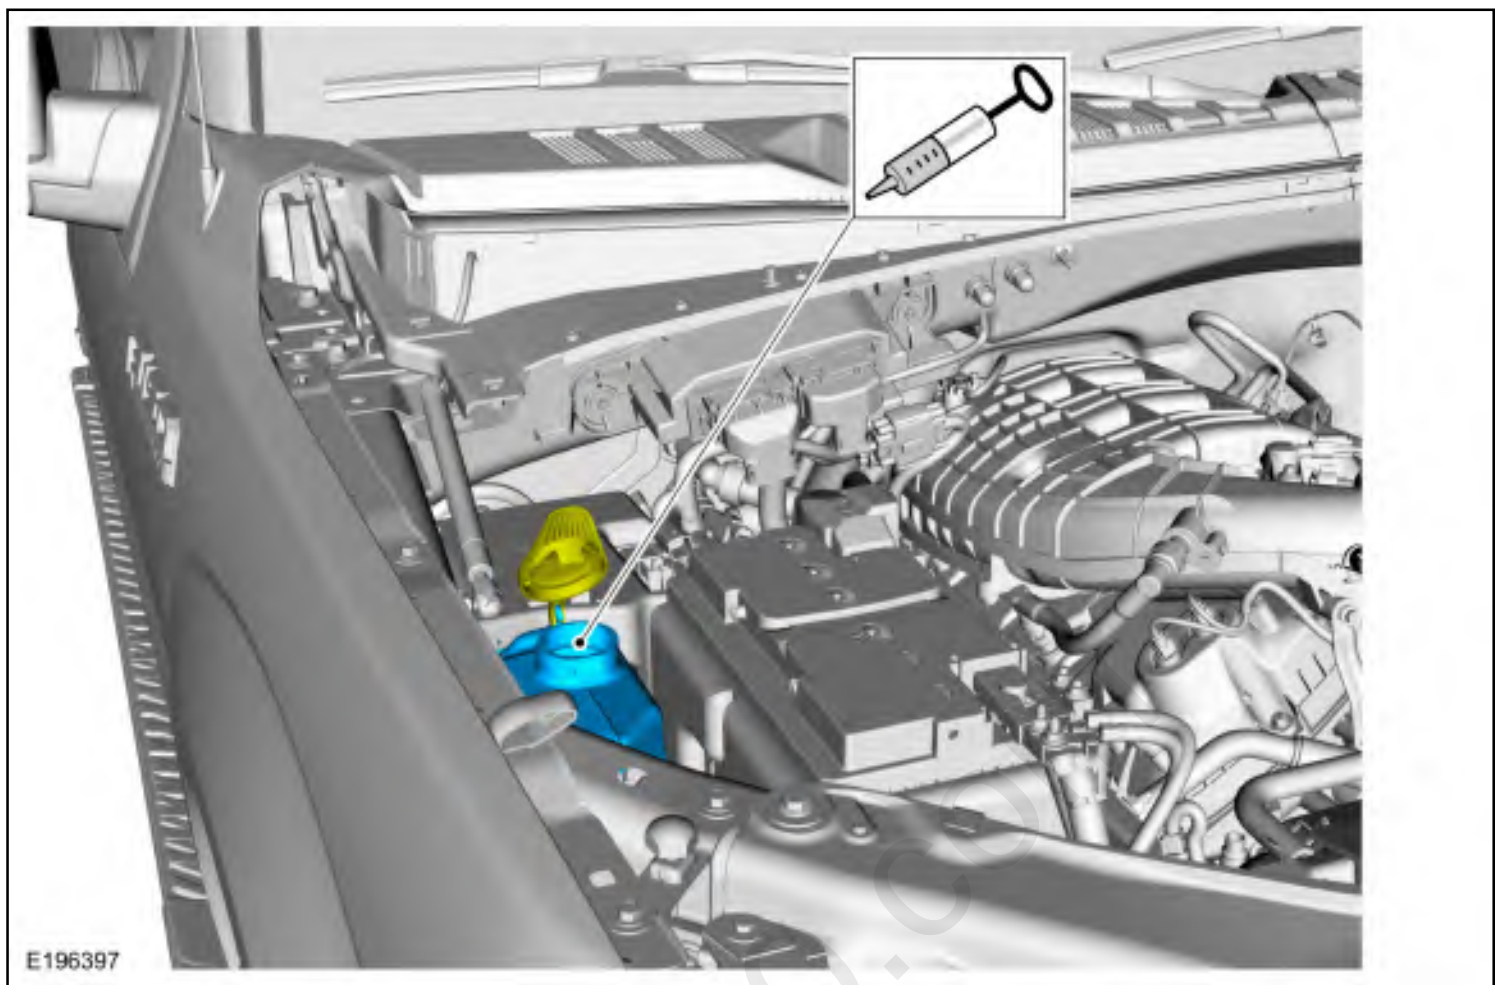


2. Remove the RH fender splash shield.
Refer to: [Fender Splash Shield](#) (501-02 Front End Body Panels, Removal and Installation).

3. **NOTE:** *Be prepared to collect escaping fluid.*

Disconnect the washer pump electrical connector and the washer hose.

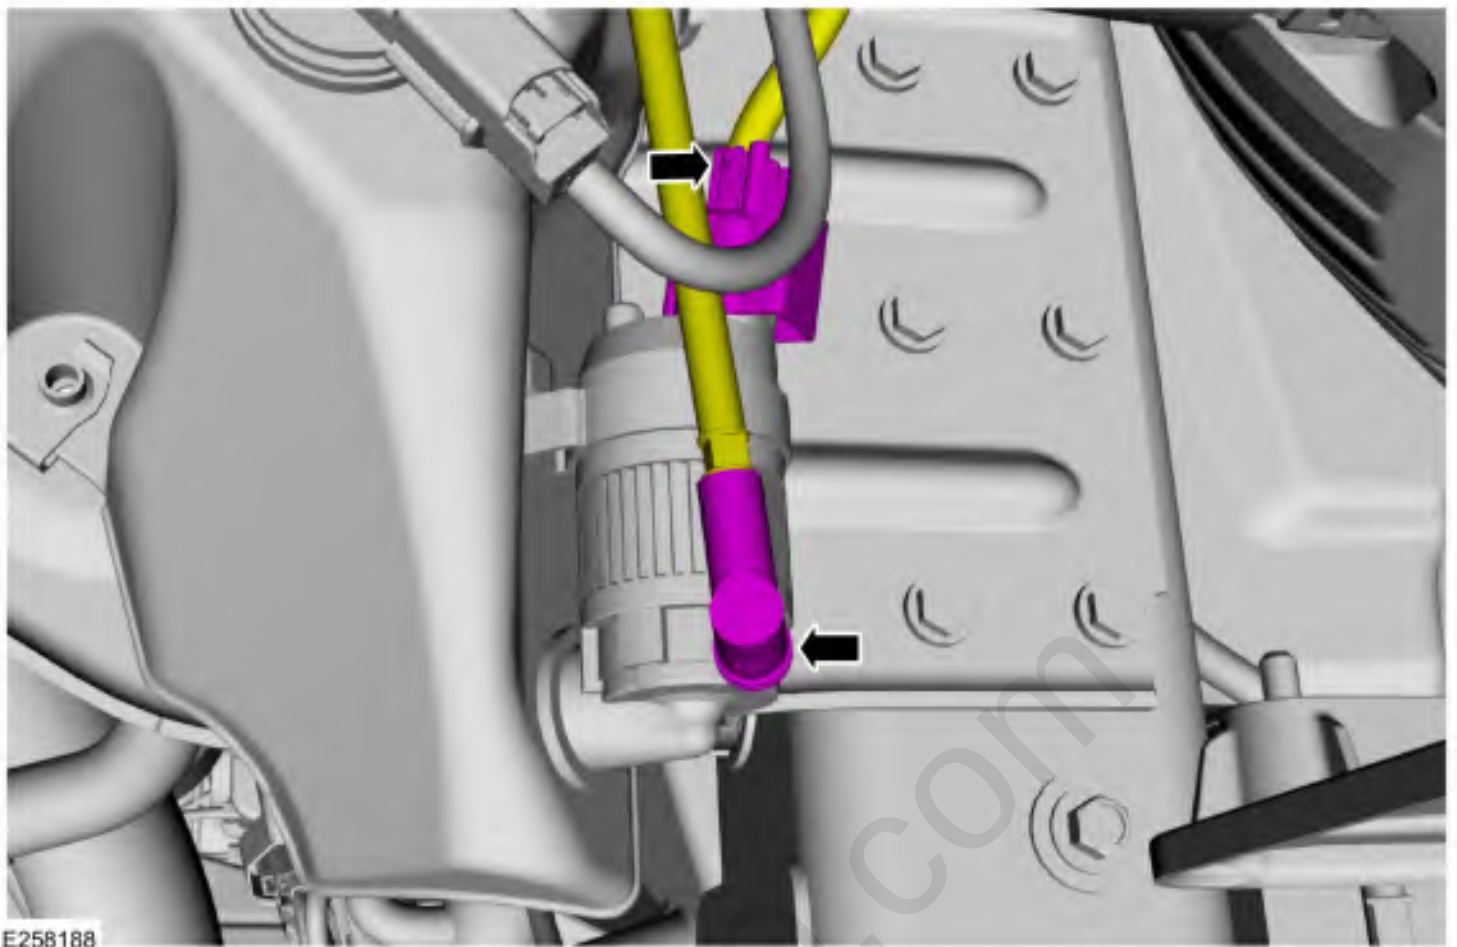

4. Remove the washer pump.

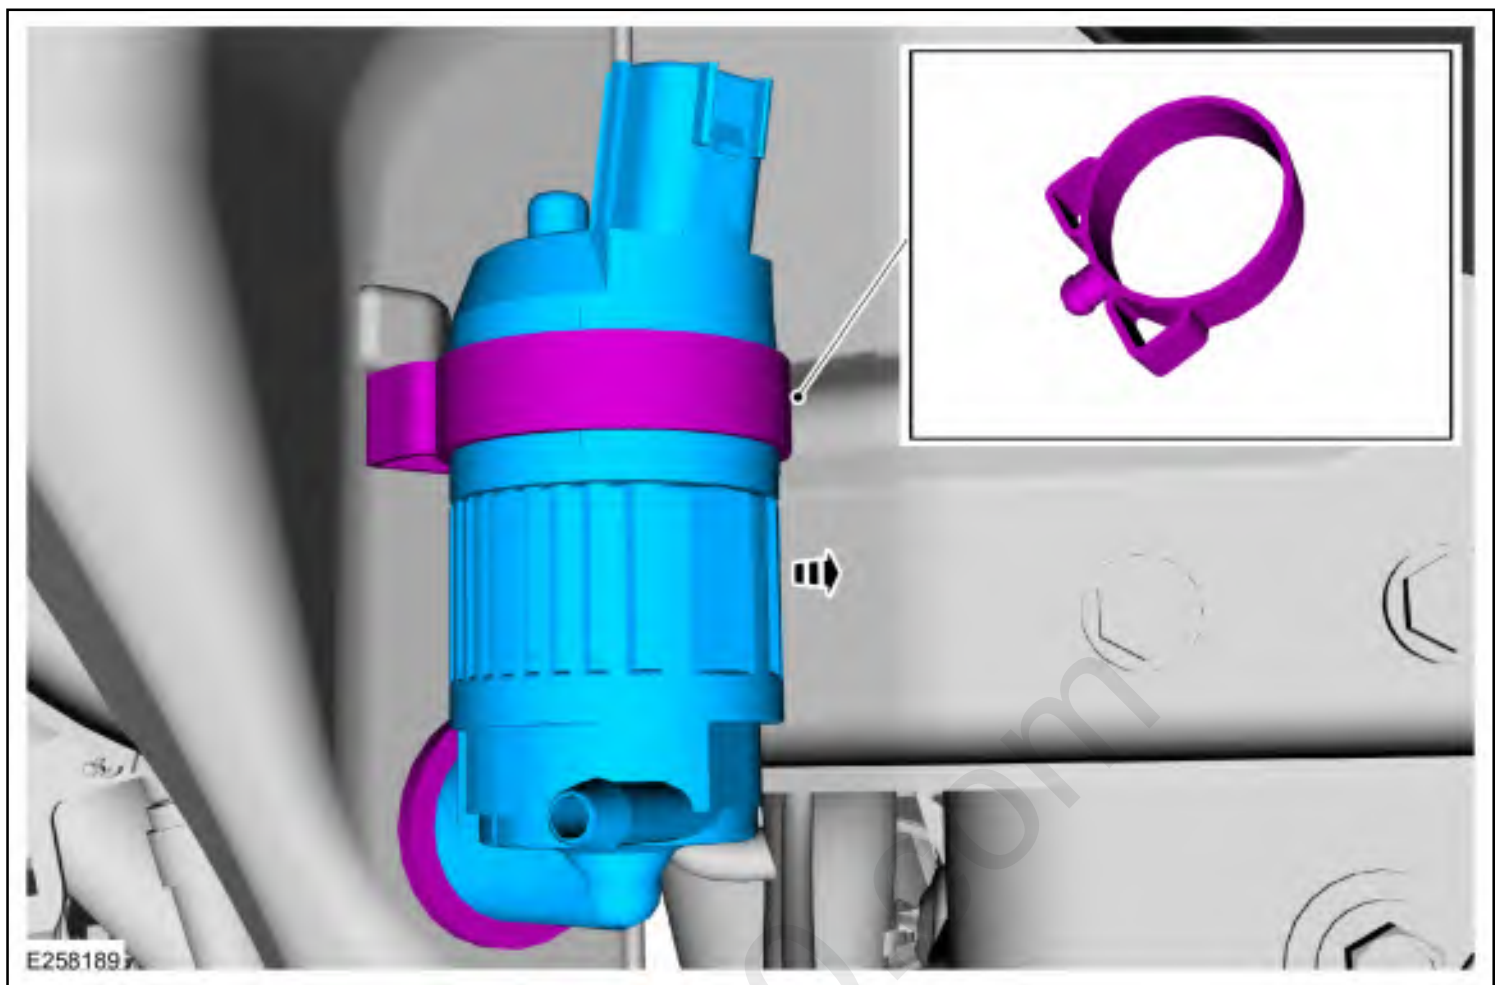

Installation

NOTICE: Do not operate the washer pump prior to filling the windshield washer reservoir. Failure to follow this instruction may result in premature pump failure.

1. To install, reverse the removal procedure.

Material: Motorcraft® Premium Windshield Wash Concentrate with Bitterant / ZC-32-B2 (WSS-M14P19-A)