


Wiper Linkage Assembly

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: The hood is removed in this procedure for clarity.


1. Remove the cowl panel.
Refer to: [Cowl Panel](#) (501-02 Front End Body Panels, Removal and Installation).
1. Disconnect the windshield wiper motor electrical connector.
2. If equipped, detach the windshield electrical connector retainer.

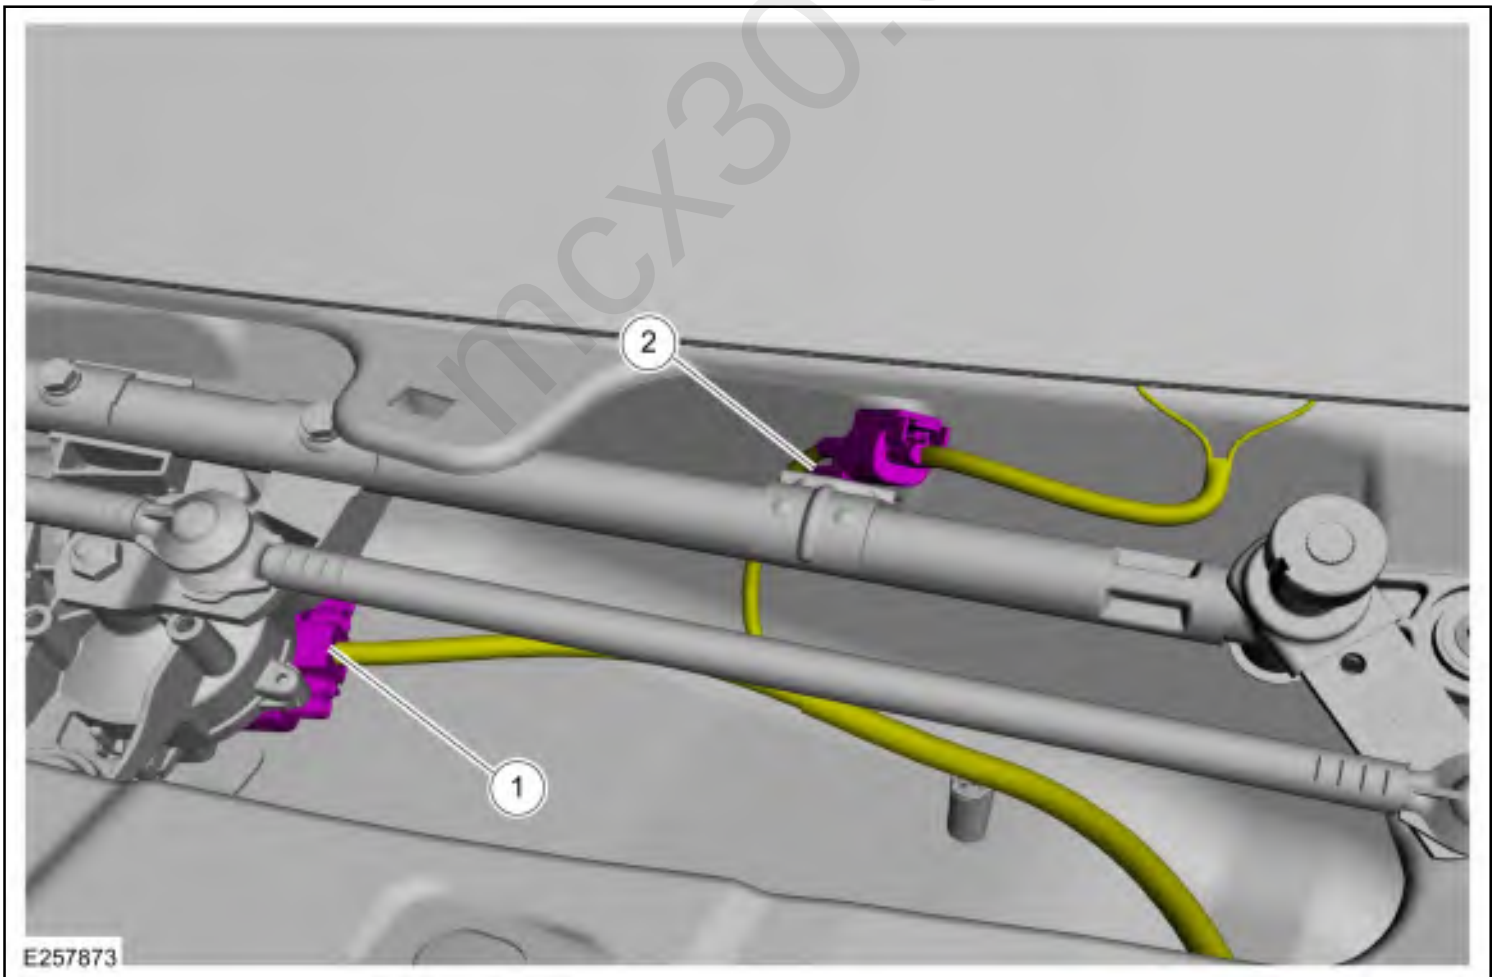

3. Remove the wiper linkage assembly bolts.
Torque: 71 lb.in (8 Nm)

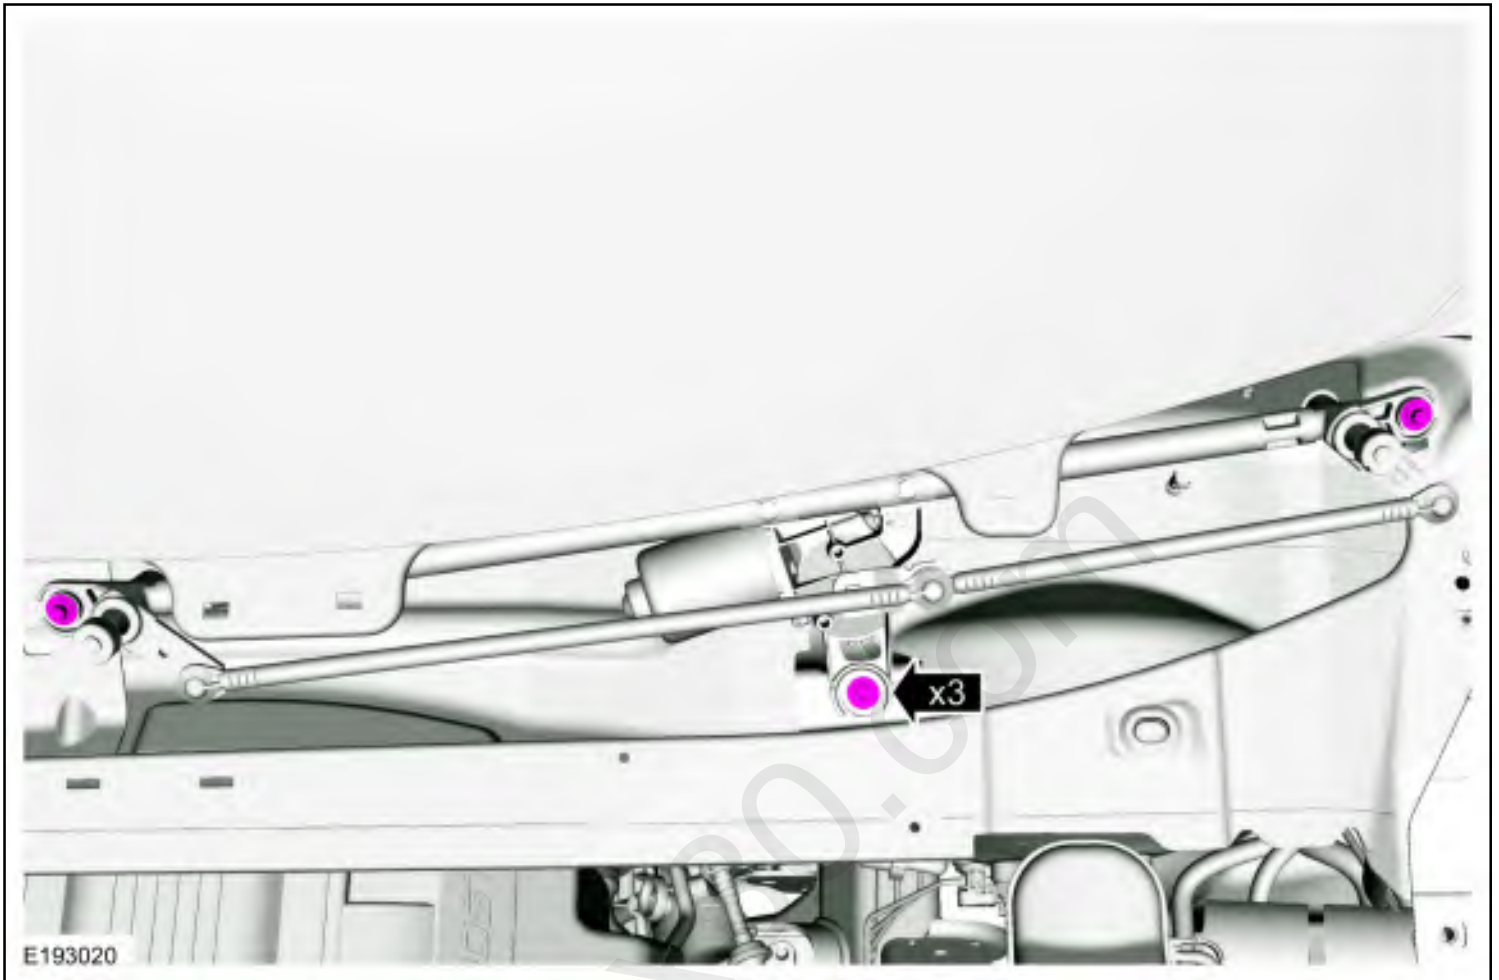


4. Remove the wiper linkage assembly.

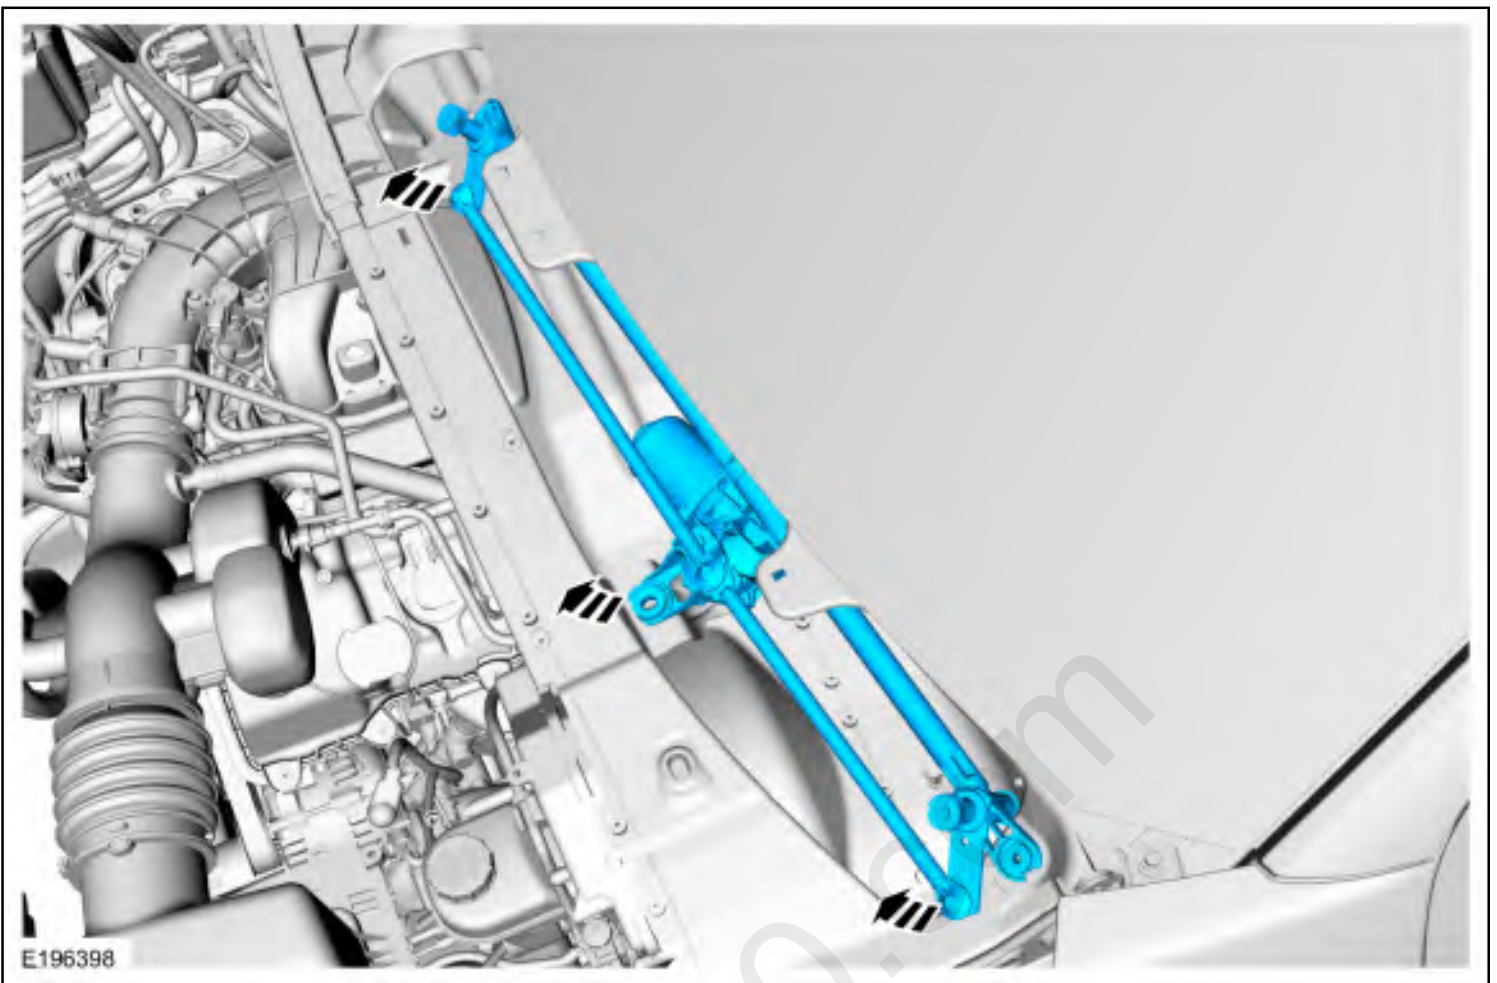

5. **NOTICE:** Be careful not to damage the link seals during removal. Failure to follow this instruction may result in poor windshield wiper performance.

Detach the RH windshield wiper link from the windshield wiper motor crank.


1. Detach the link.
2. Position the link aside.

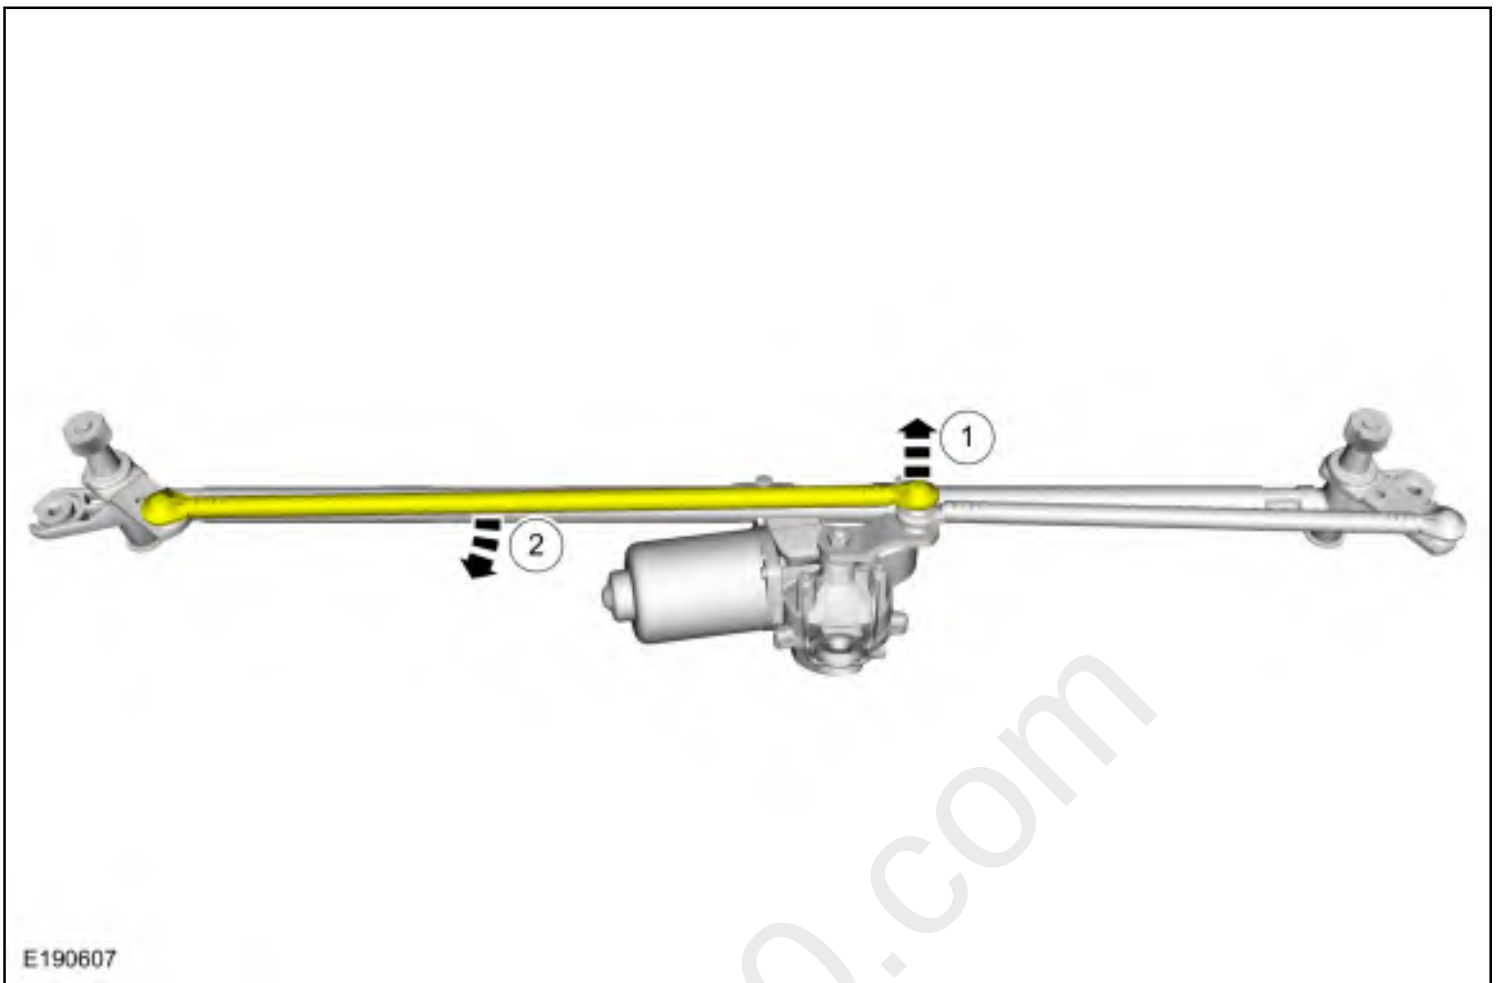

6. **NOTICE: Be careful not to damage the link seals during removal. Failure to follow this instruction may result in poor windshield wiper performance.**


Detach the LH windshield wiper link from the windshield wiper motor crank.

1. Detach the link.
2. Position the link aside.

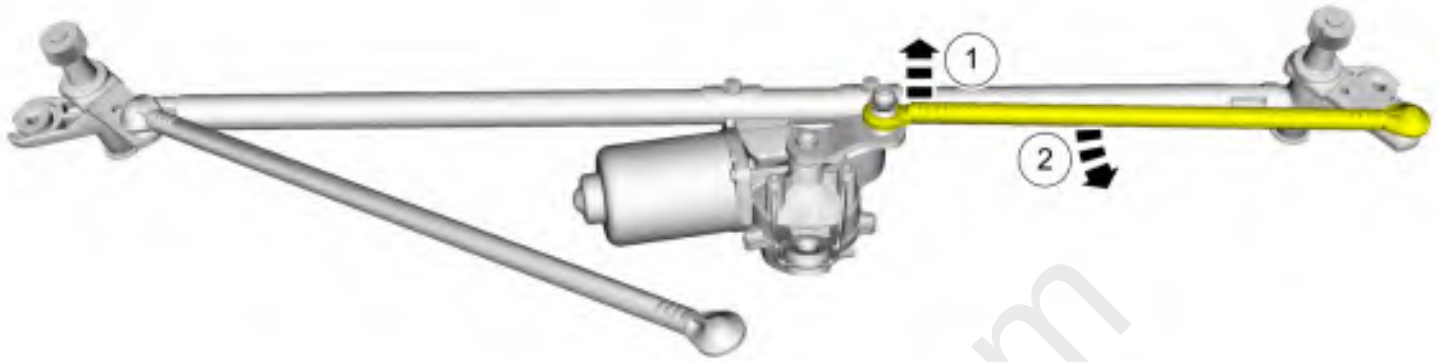

E190608


7. Remove the windshield wiper motor bolts and motor clamp plates.
Torque: 89 lb.in (10 Nm)

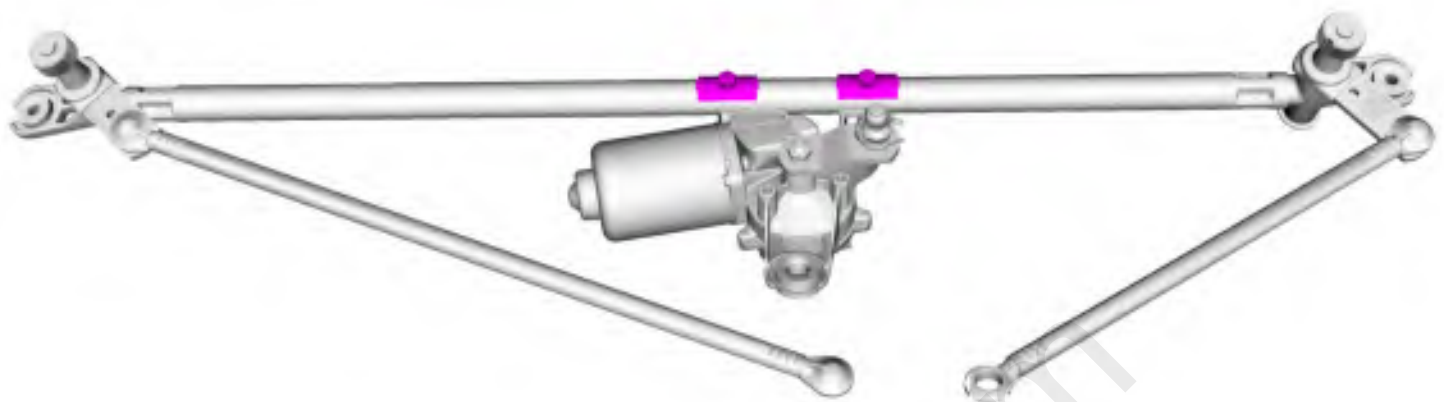

E190609



8. Remove the wiper linkage assembly.

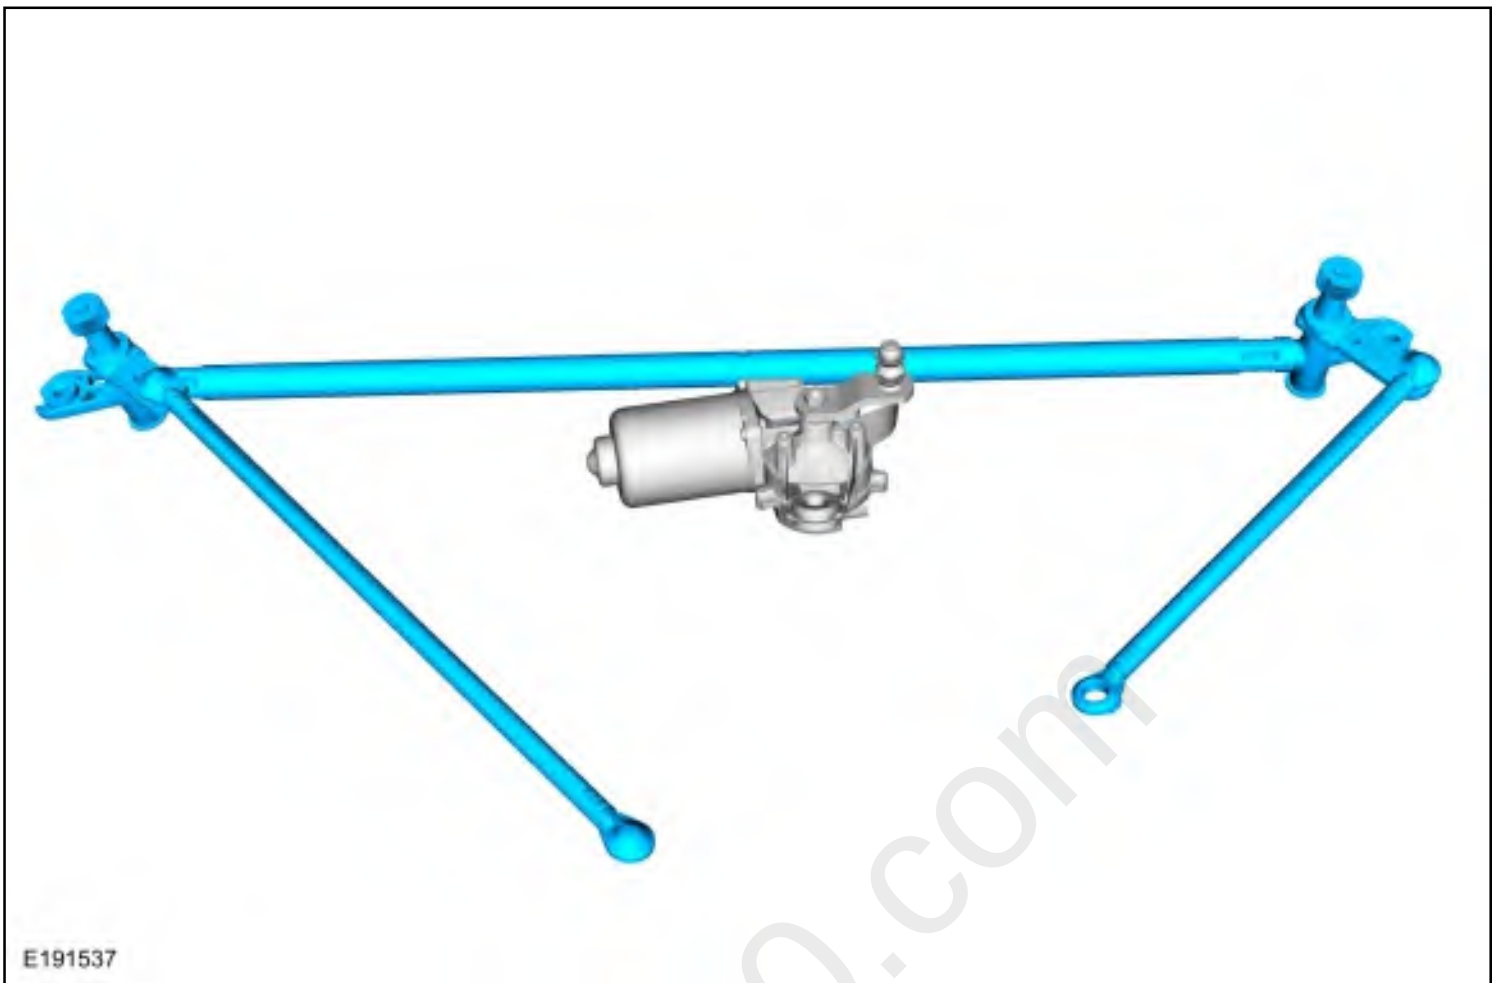

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company
