


Windshield Wiper Pivot Arm

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Raise the windshield wiper pivot arms into the SERVICE-UP position.

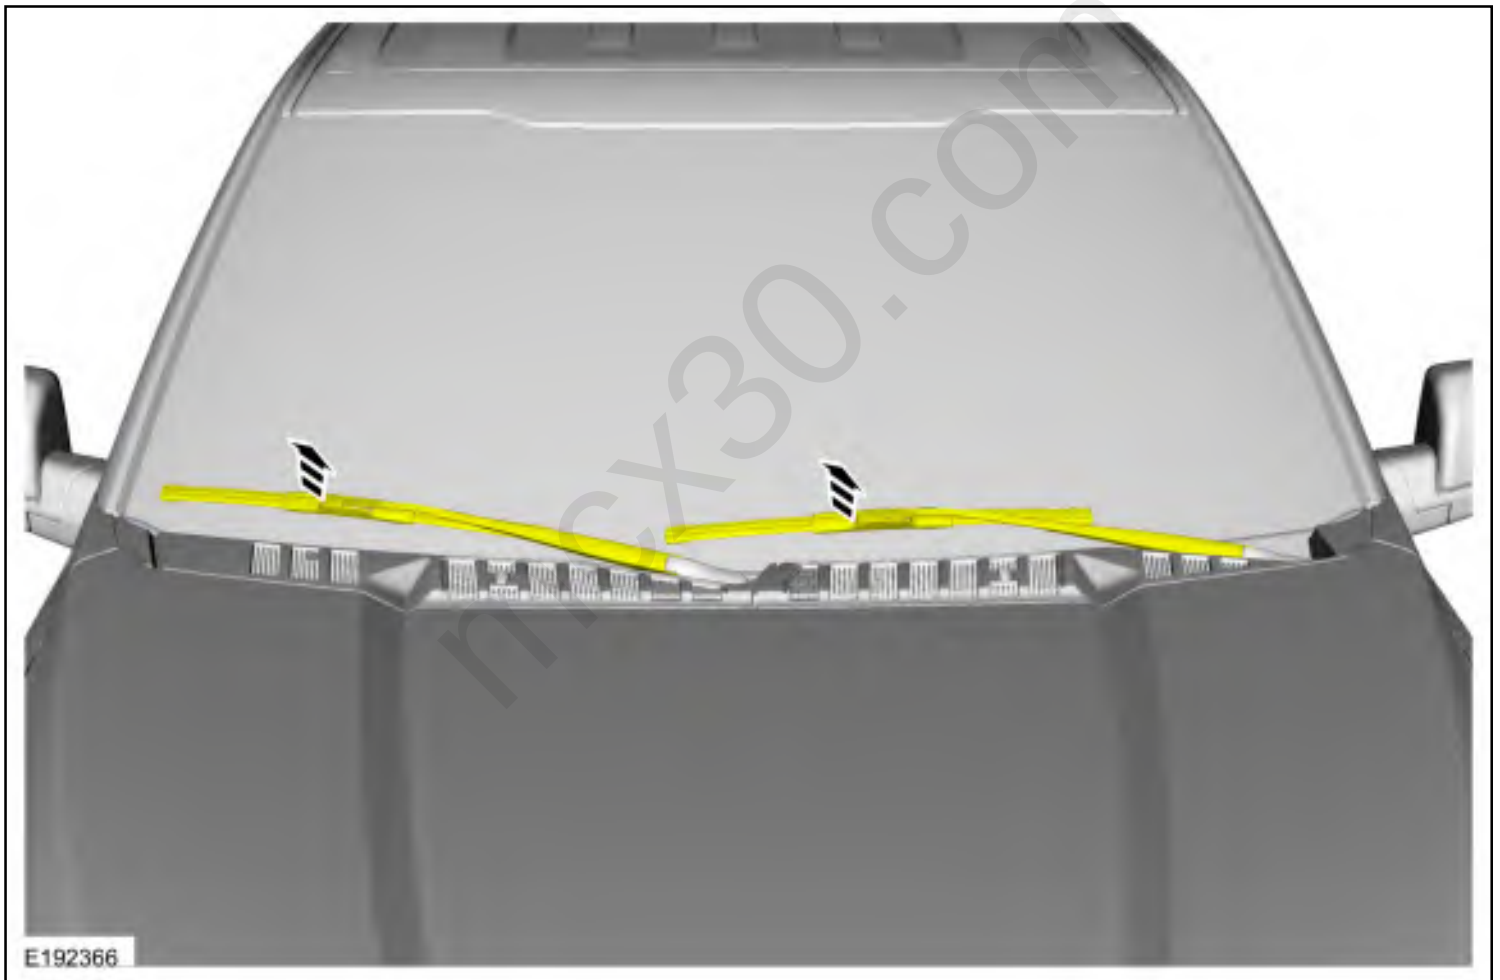

2. **NOTE:** During installation, it is necessary to fully release the windshield wiper pivot arm latch and hold while installing the pivot arm onto the wiper linkage assembly.

Remove the windshield wiper pivot arms.

1. Release the windshield wiper pivot arm latch.
2. Remove the windshield wiper pivot arm.

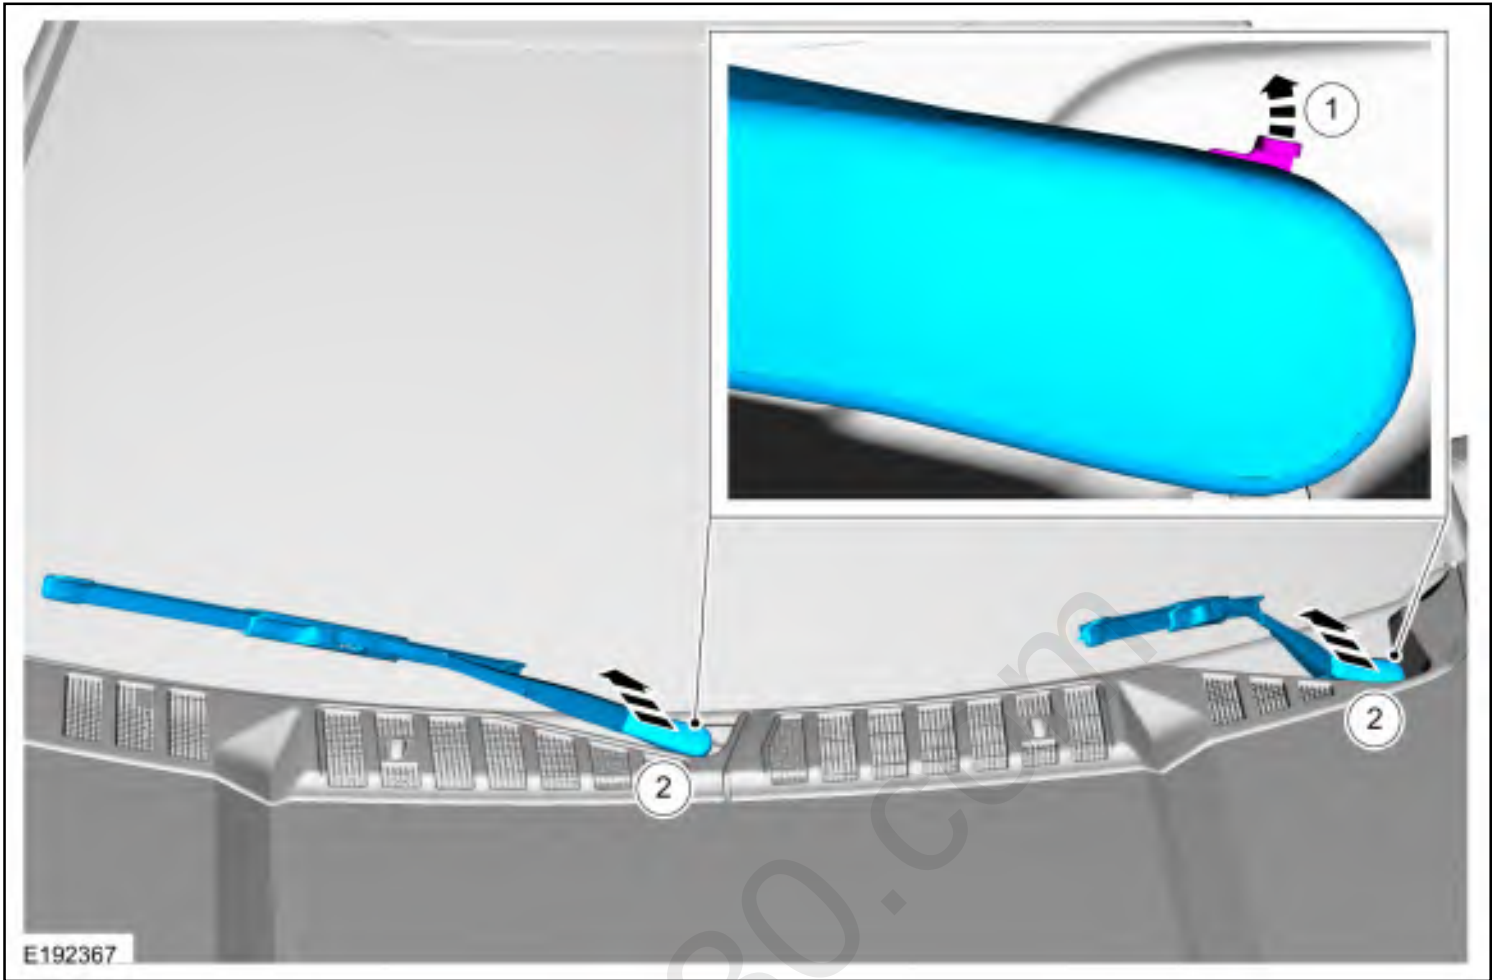

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company