


Rain Sensor


Removal

1. Remove the interior rear view mirror.
Refer to: [Interior Rear View Mirror](#) (501-09 Rear View Mirrors, Removal and Installation).
2. Remove the rain sensor.
 1. Disconnect the electrical connector and position aside.
 2. Release the retainers.
 3. Remove the rain sensor.

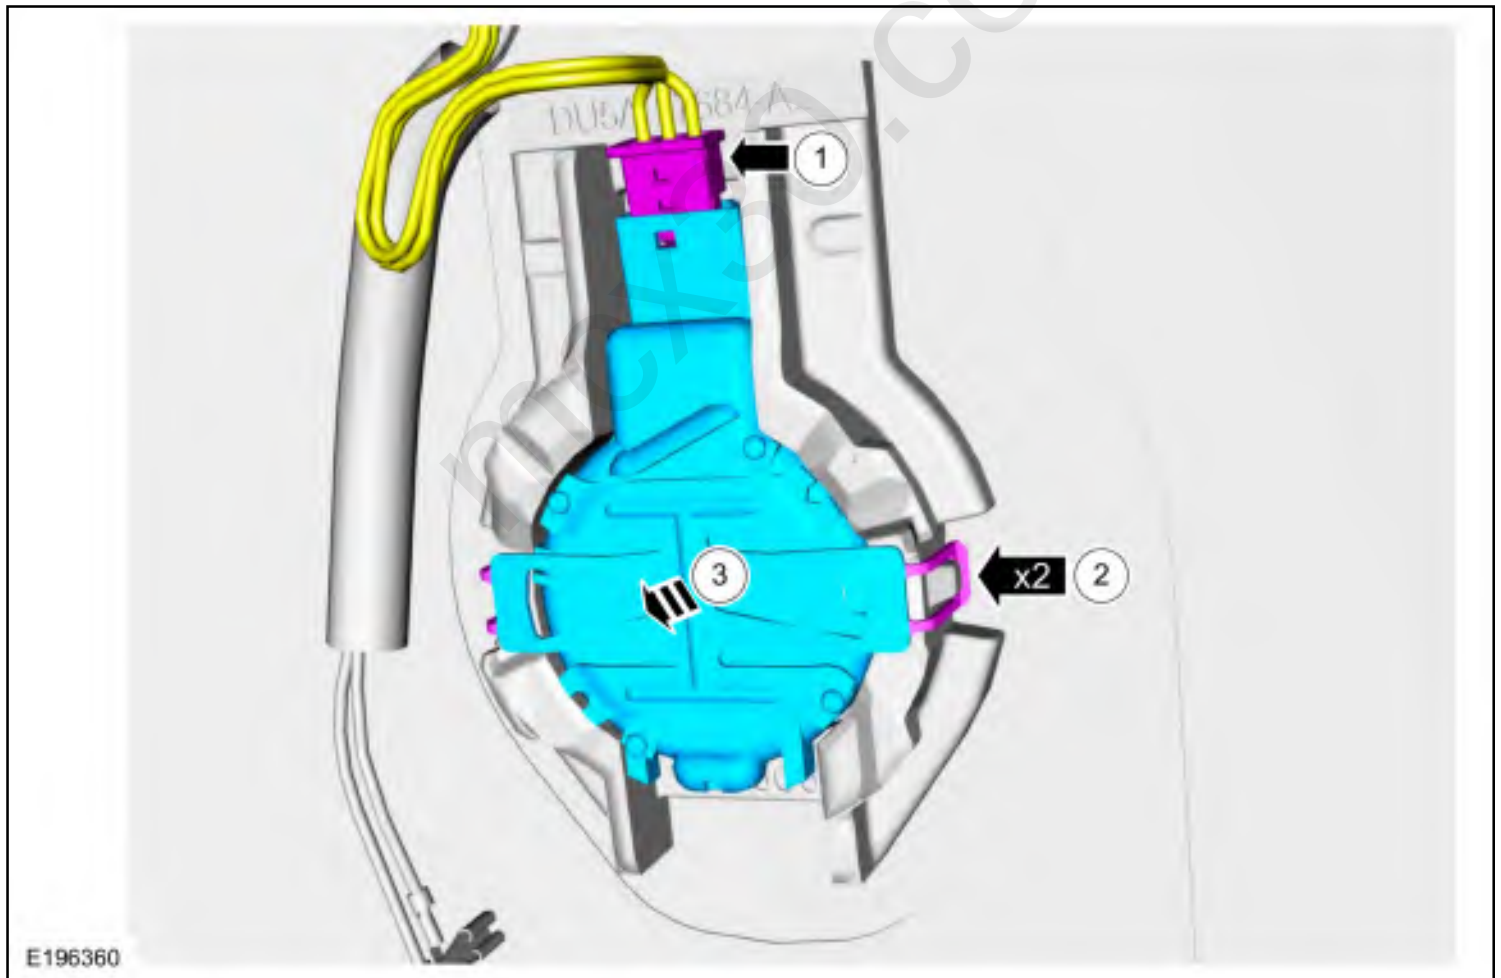


Installation

1. Clean the windshield glass area of foreign materials.

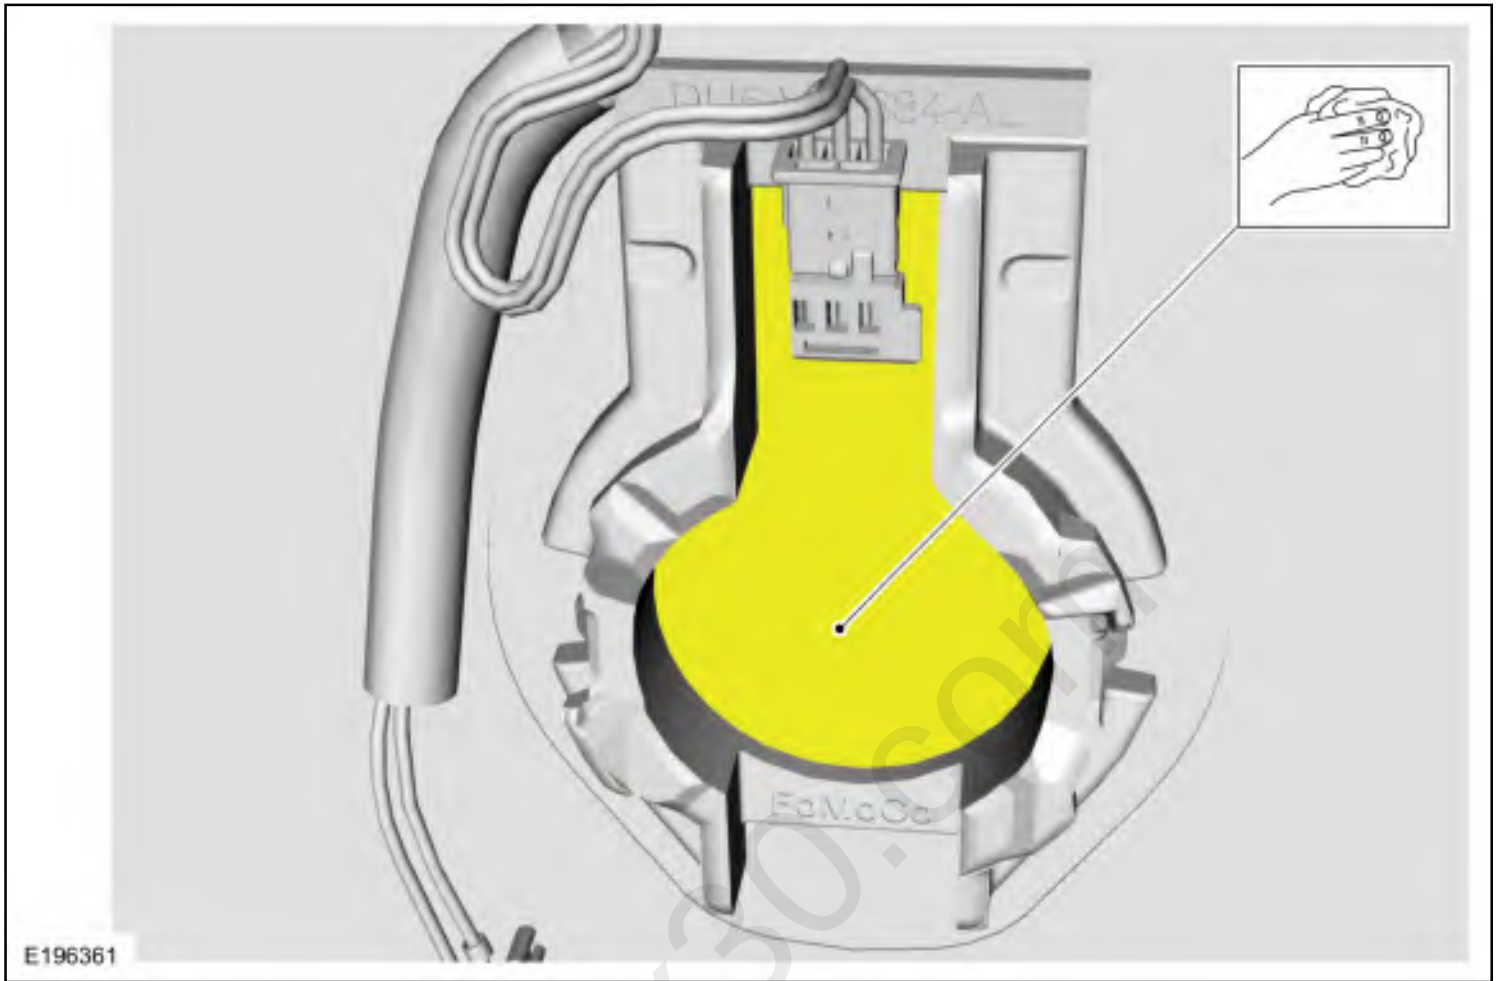


2. **NOTE:** *If the rain sensor gel pack is damaged, install a new rain sensor.*

Inspect the rain sensor gel pack for damage.

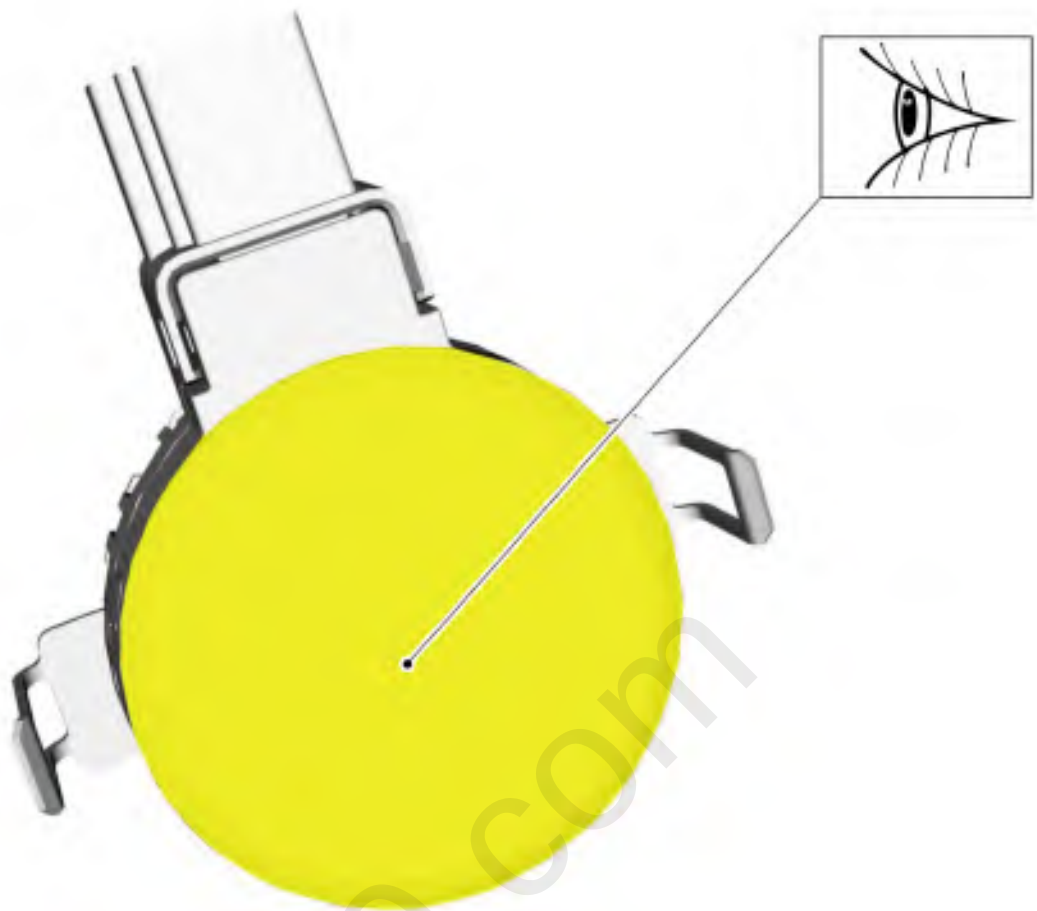

E196362

3. Install the rain sensor and connect the electrical connector.

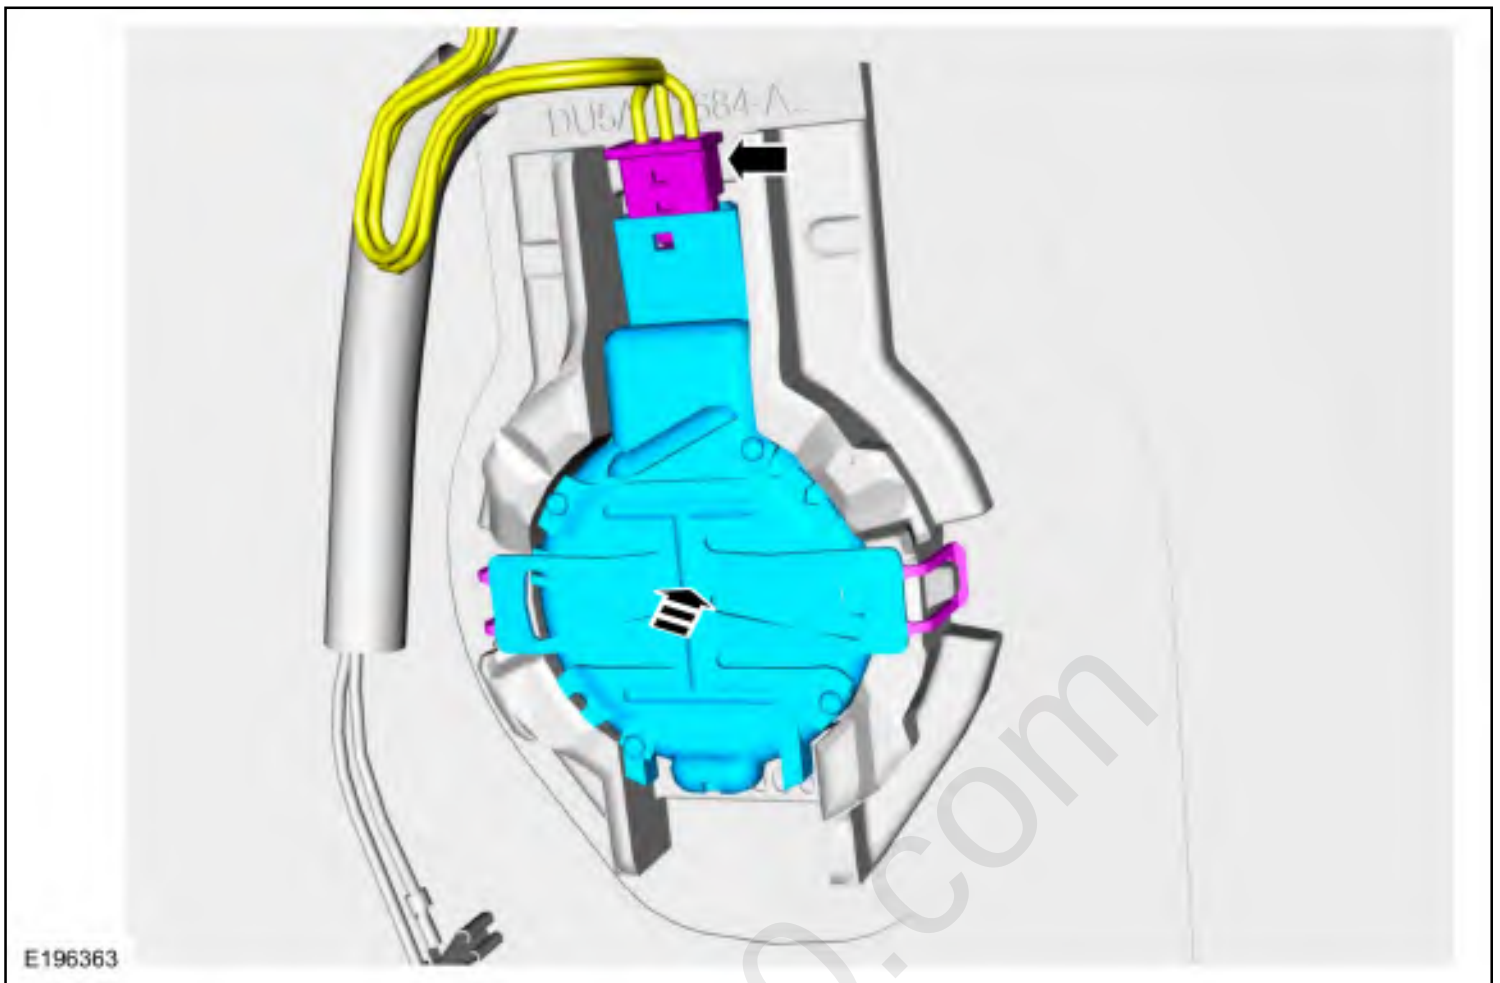

4. Install the interior rear view mirror.

Refer to: [Interior Rear View Mirror](#) (501-09 Rear View Mirrors, Removal and Installation).