


Roof Opening Panel Shield

Removal

1. Remove the roof opening panel glass.
Refer to: [Roof Opening Panel Glass](#) (501-17A Roof Opening Panel, Removal and Installation).
2. Remove the trough assembly.
Refer to: [Trough Assembly](#) (501-17A Roof Opening Panel, Removal and Installation).
3. Using the switch, place the roof opening panel glass cable mechanisms in the glass open position.
4. Slide the roof opening panel shield forward halfway.

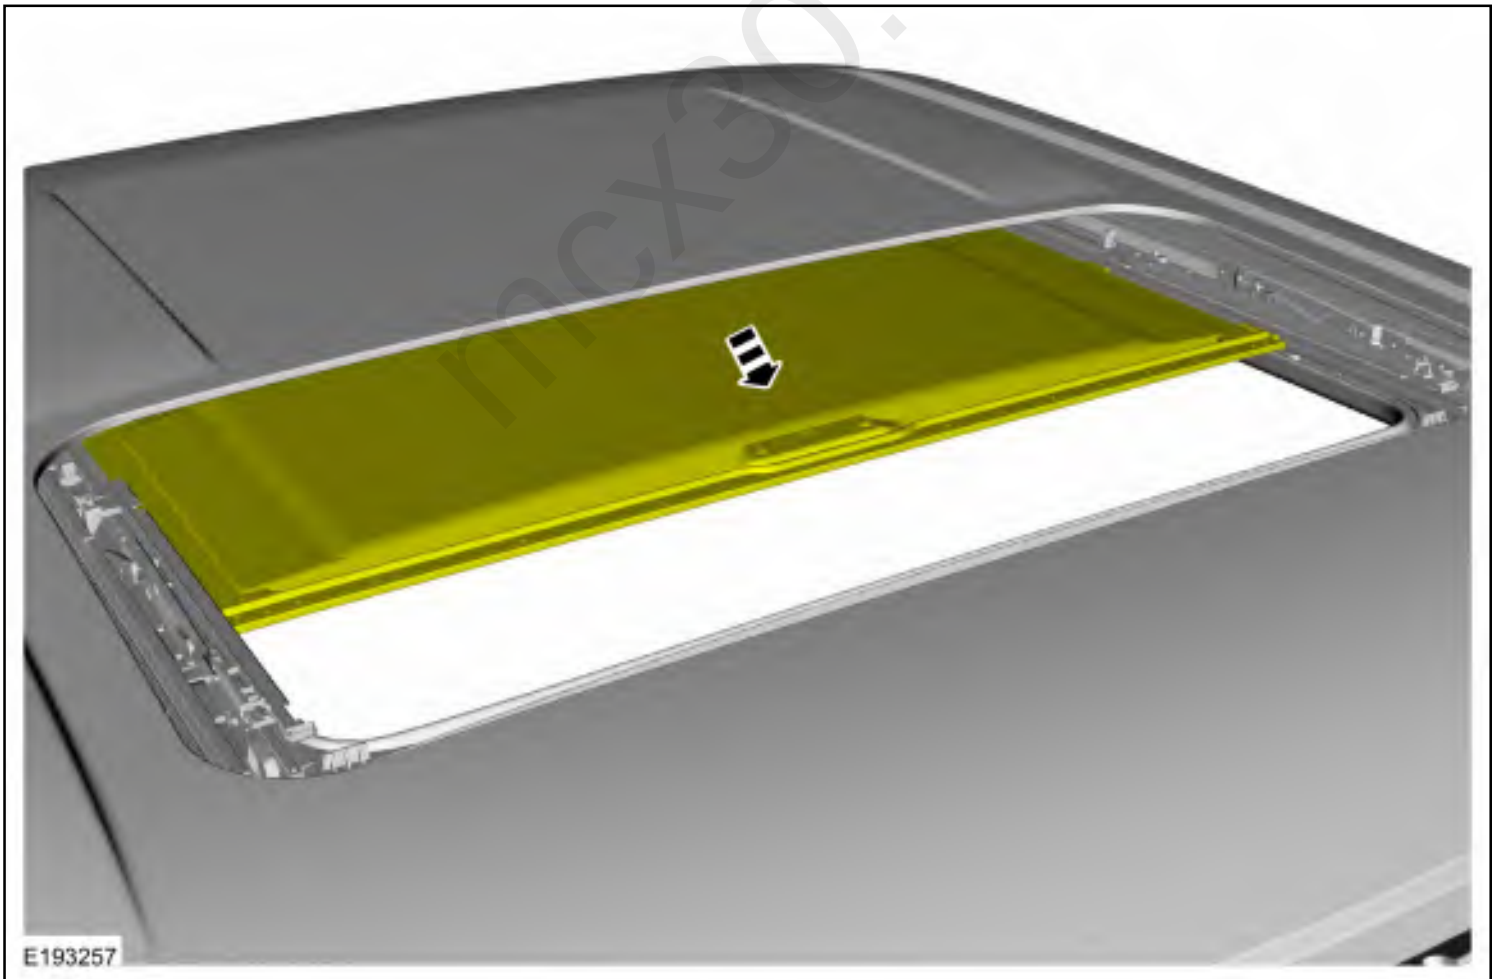


5. **NOTE:** *The sub steps should be performed together as a single step.*

Disengage the LH front corner of the roof opening panel shield from the guide track.

1. Pull up on the center of the roof opening panel shield for clearance.
2. **NOTE:** *The guide foot may remain on the roof opening panel shield or in the guide track. Reassemble as necessary for installation.*


Pull the LH front roof opening panel shield guide foot out and up from the guide rail to disengage the roof opening panel shield throughout from the track.

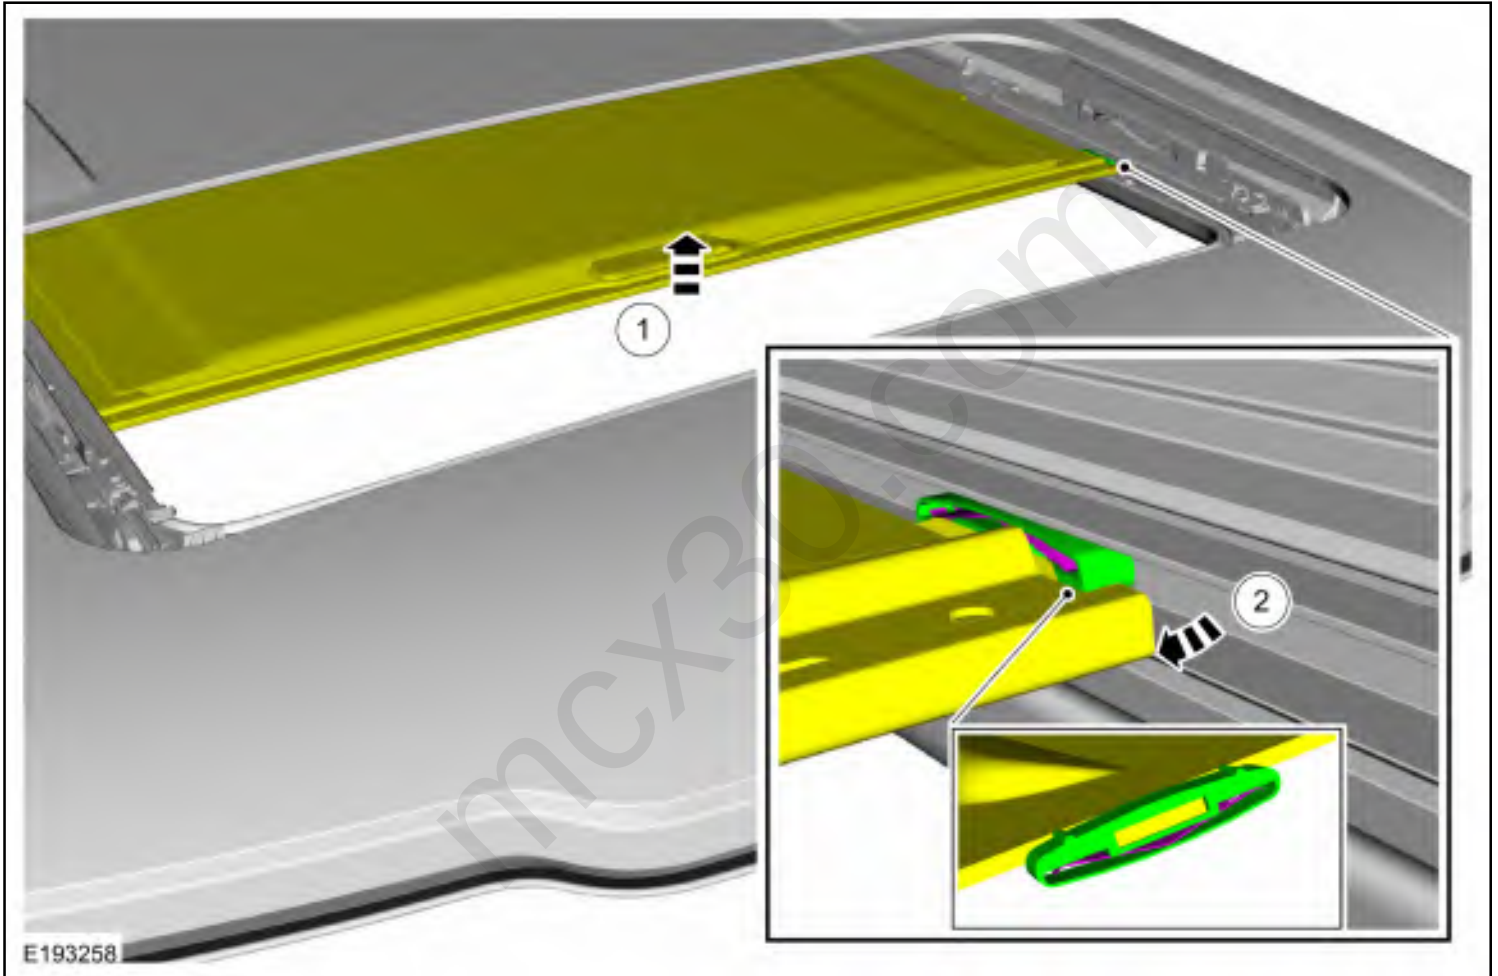

6. **NOTE:** *The sub steps should be performed as a single step.*

Remove the roof opening panel shield.

1. Pull up at the one side of the roof opening panel shield.
2. Carefully rotate the roof opening panel shield in a counter clockwise manner to disengage the remaining guide feet and remove the roof opening panel shield.

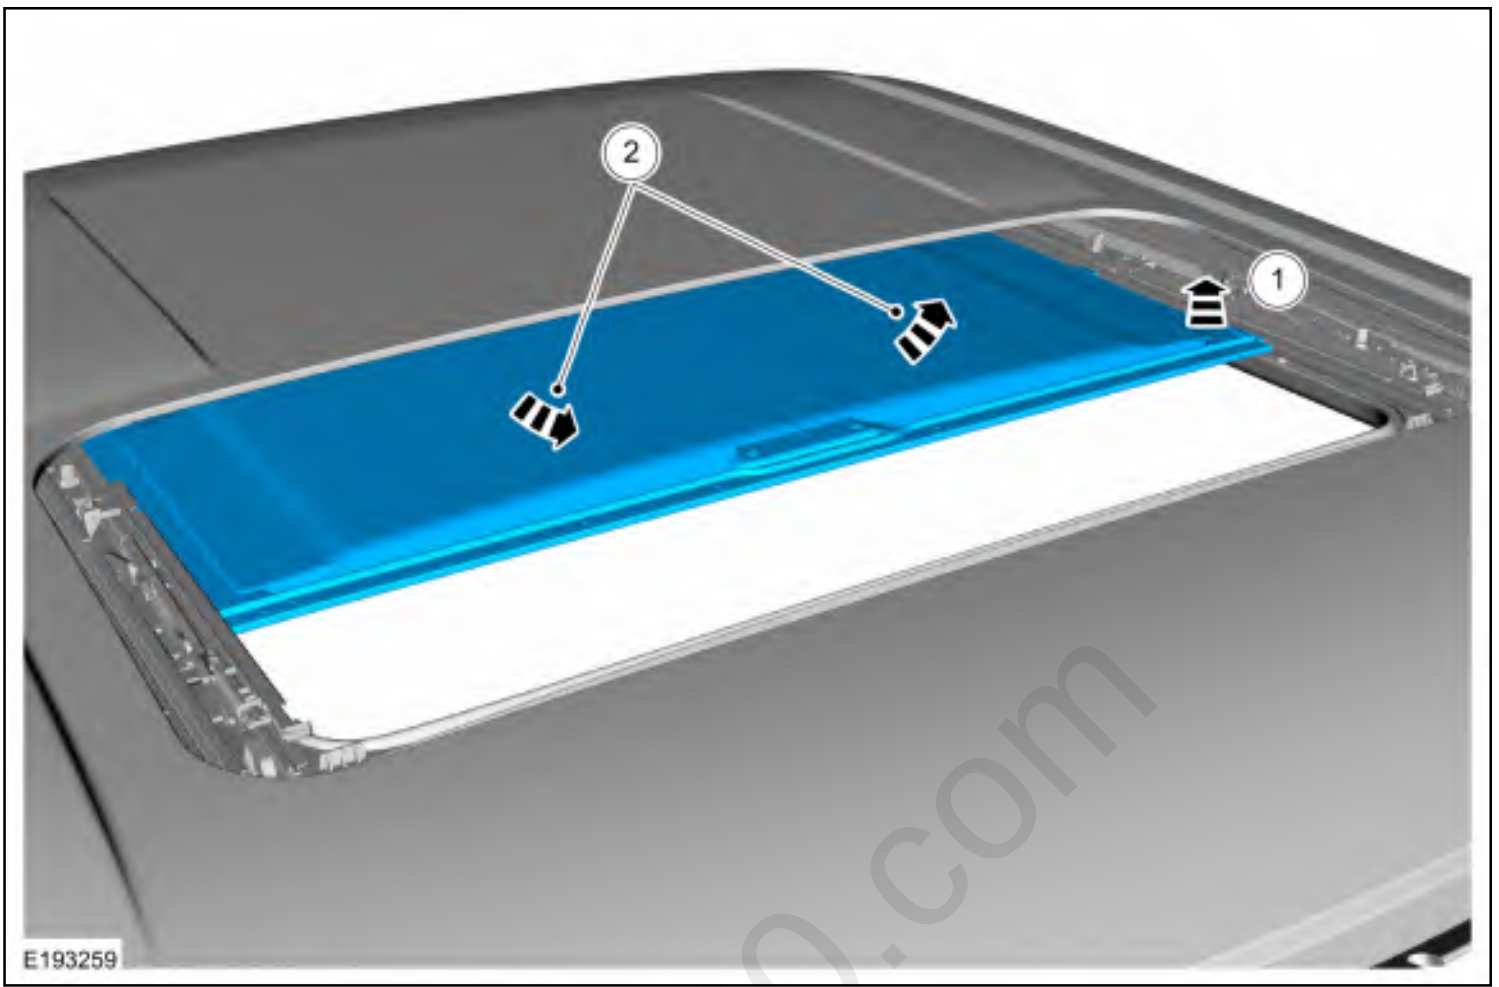

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** Use the aid of an assistant to install the roof opening panel shield. Insert the RH rear guide foot into the guide track first and then rotate the shield clockwise working from side-to-side until all guide feet and tabs are fully inserted into the guide foot tracks. Some flexing of the shield and tabs will be necessary.

Guide foot installation.

