


Roof Opening Panel Motor

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Place the roof opening panel glass to the fully CLOSE position.

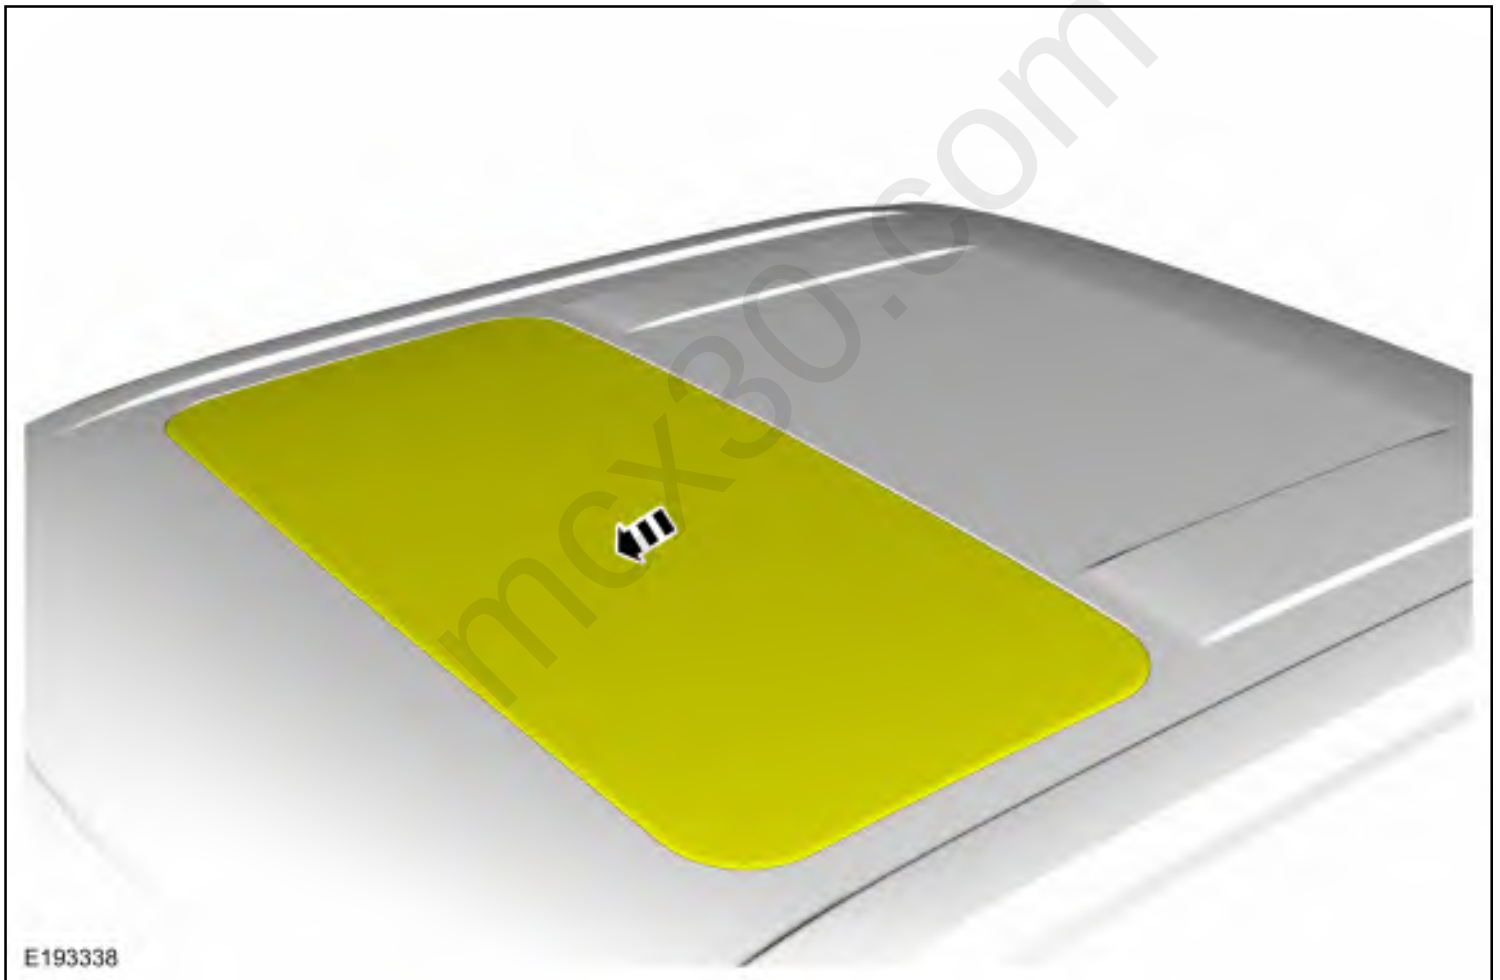

2. Place the roof opening panel shield to the fully OPEN position.



3. Lower the headliner.

Refer to: [Headliner - Lowering - SuperCab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

4. Remove the roof opening panel motor.

1. Disconnect the roof opening panel motor electrical connector.
2. Remove the roof opening panel motor to the roof opening panel frame retainers and remove the roof opening panel motor.

Torque: 31 lb.in (3.5 Nm)



Installation

1. **NOTE:** When installing the roof opening panel motor, it may be necessary to turn the roof opening panel motor slightly to engage the drive splines.

To install, reverse the removal procedure.

2. Initialize the power roof opening panel.

Refer to: [Power Roof Opening Panel Initialization](#) (501-17A Roof Opening Panel, General Procedures).