

Trough Assembly

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the roof opening panel glass.
Refer to: [Roof Opening Panel Glass](#) (501-17A Roof Opening Panel, Removal and Installation).

2. **NOTE:** LH side shown, RH side similar.


On both sides, remove the retainers.

Torque: 9 lb.in (1 Nm)

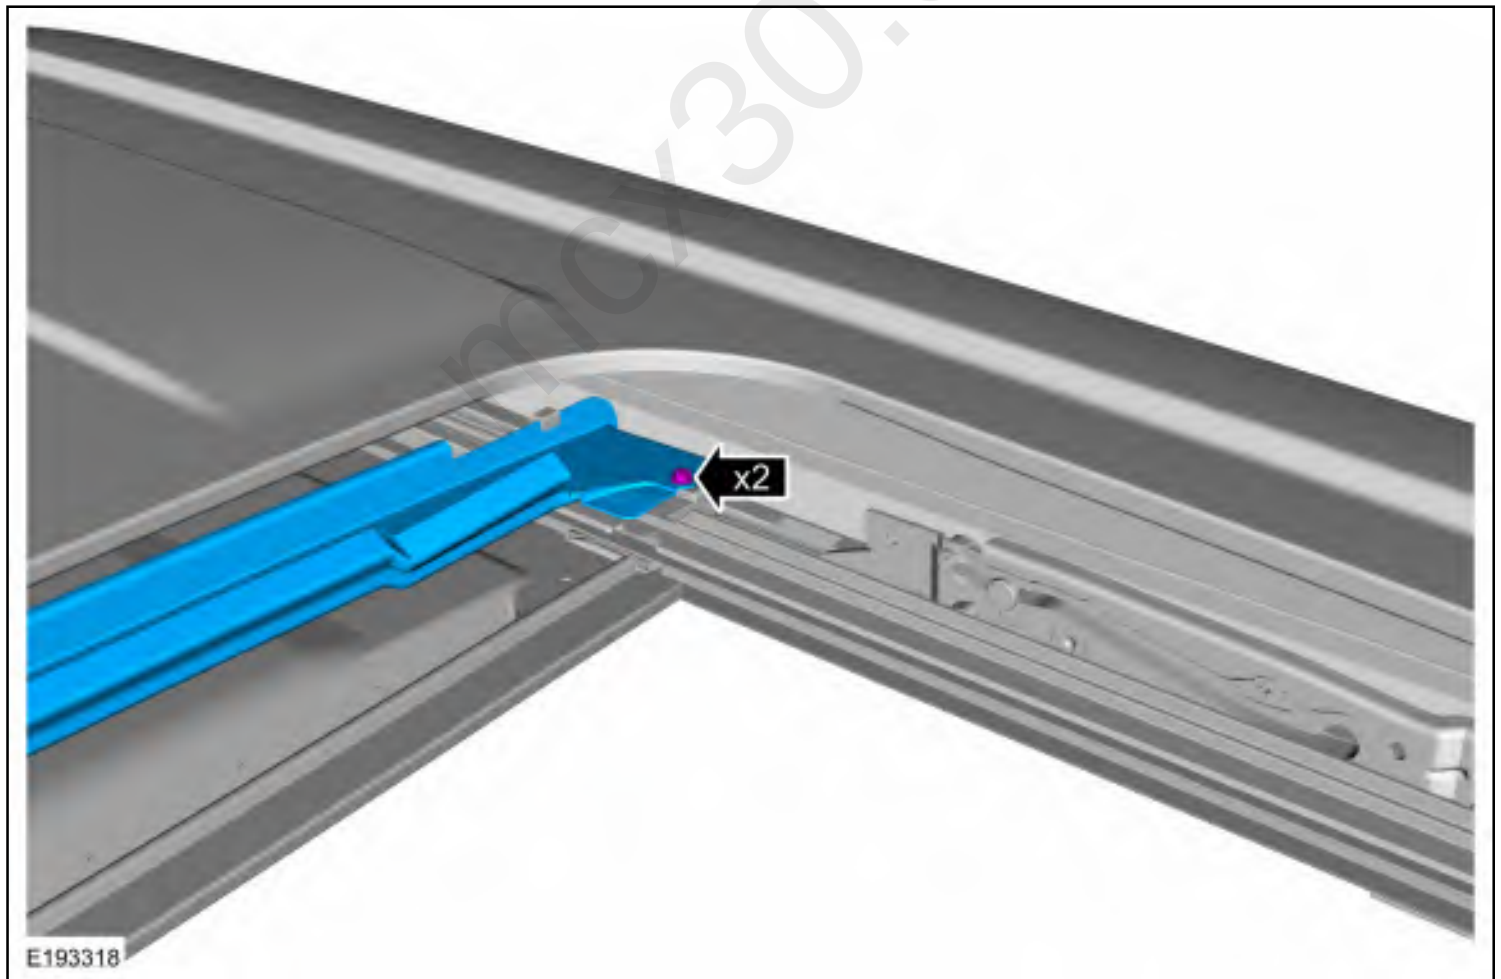

3. **NOTE:** *Inset is LH side shown, RH side similar.*

On both sides, roll the trough assembly out of the guide clips to remove.

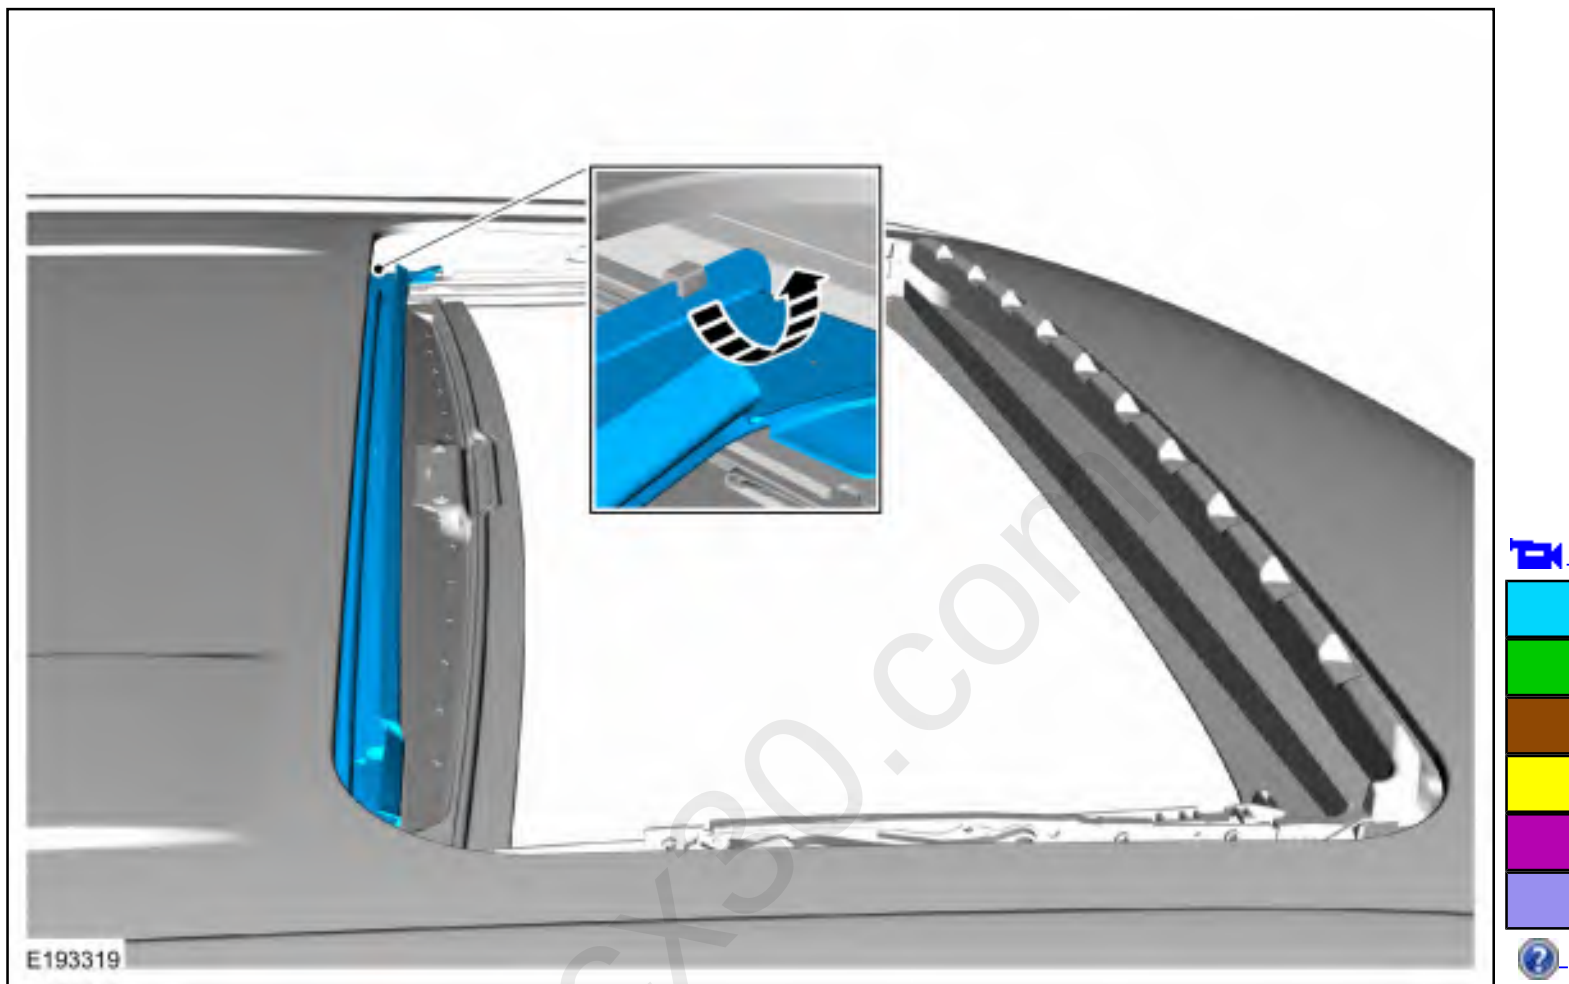

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company