

Air Deflector

Removal


1. Place the roof opening panel glass in the fully OPEN position.




2. **NOTE:** *LH side shown, RH side similar.*

On both sides, release the air deflector locking tab.

1. Depress the spring steel locating tab downward with a flat-bladed screwdriver.
2. Push the air deflector toward the rear of the vehicle.

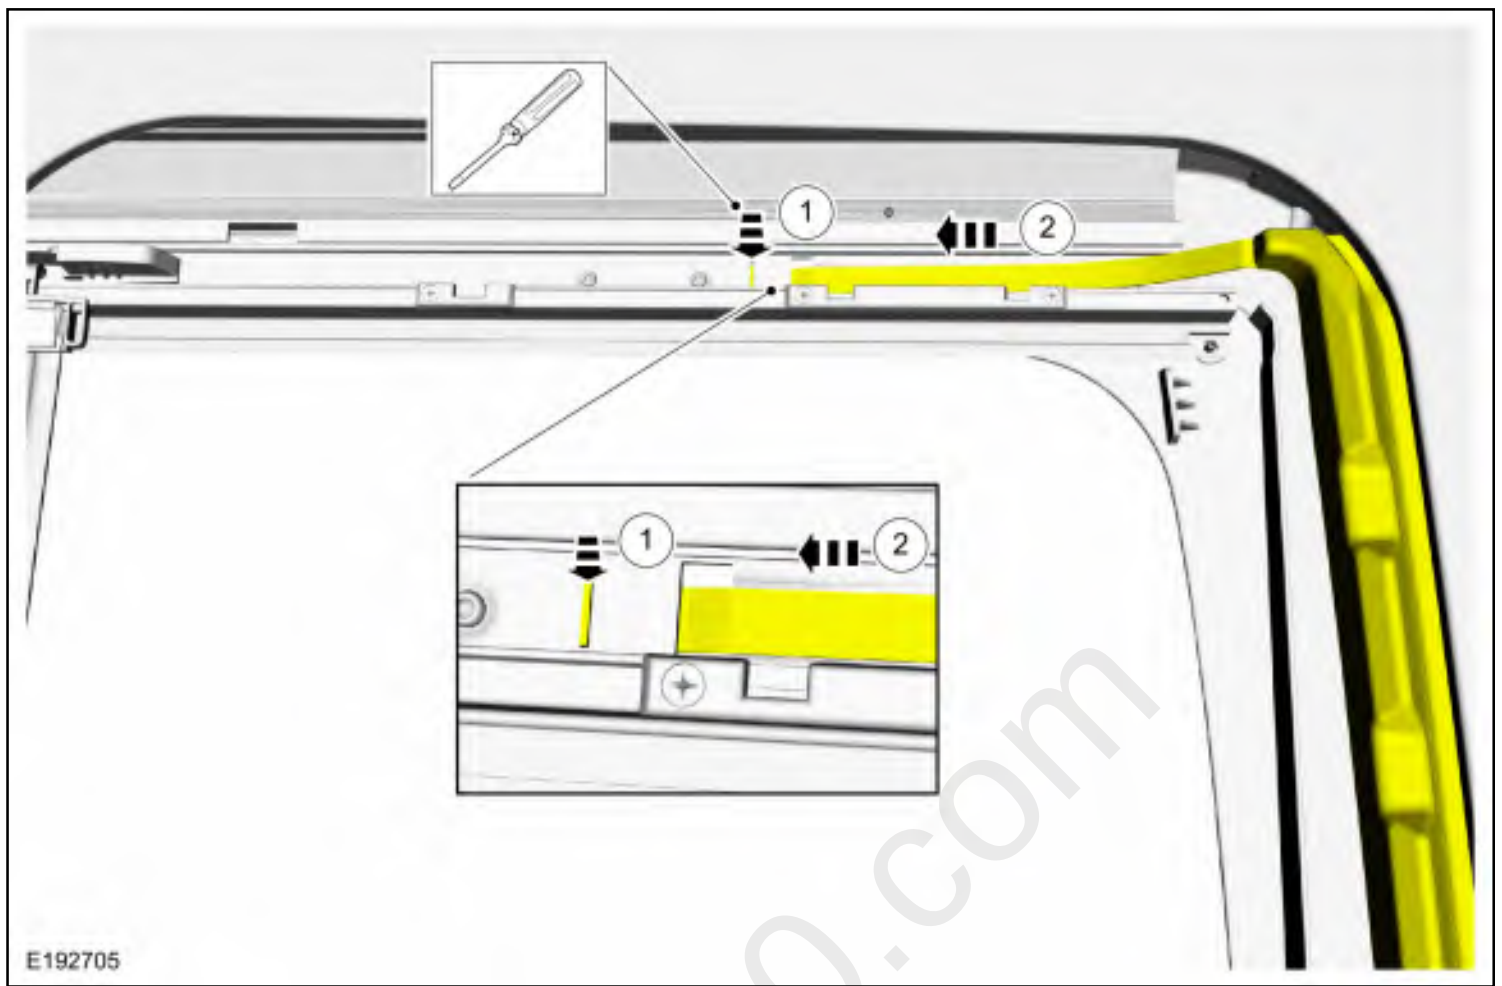

3. Remove the air deflector assembly.
 1. Tilt the air deflector assembly upward.
 2. Pull forward to remove air deflector assembly.

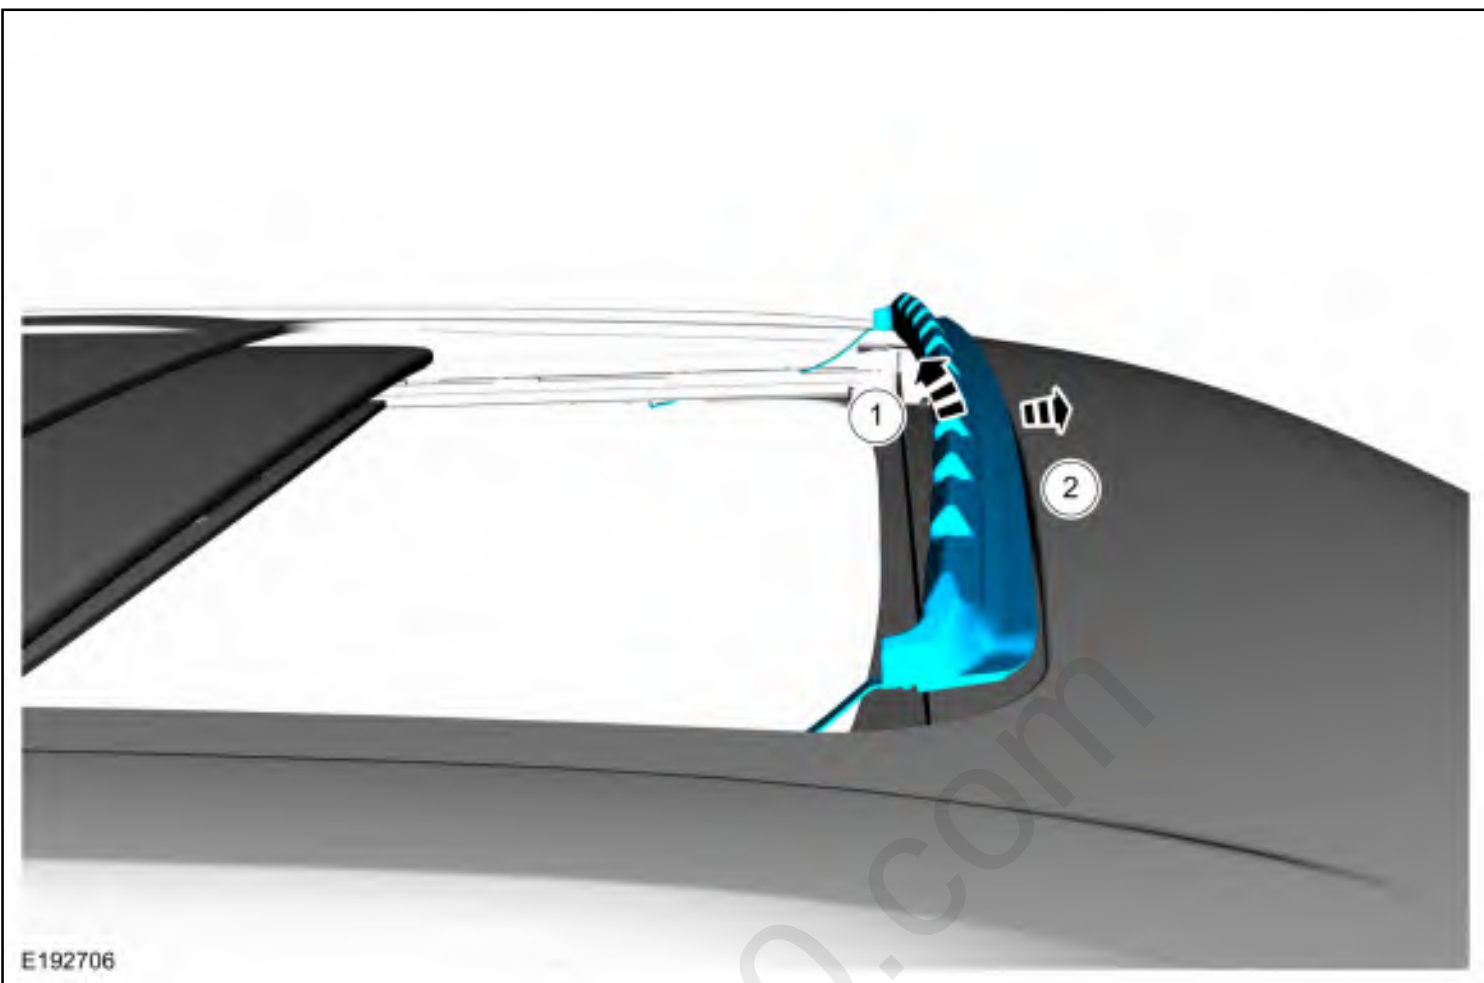

Installation

1. **NOTE:** *Make sure the air deflector locating tabs are firmly located in place.*

To install, reverse the removal procedure.