

Air Deflector


Special Tool(s) / General Equipment

Rivet Gun
Electric Drill
6 mm Drill Bit
Punch
Vacuum Cleaner

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Fully open the roof opening panel glass.

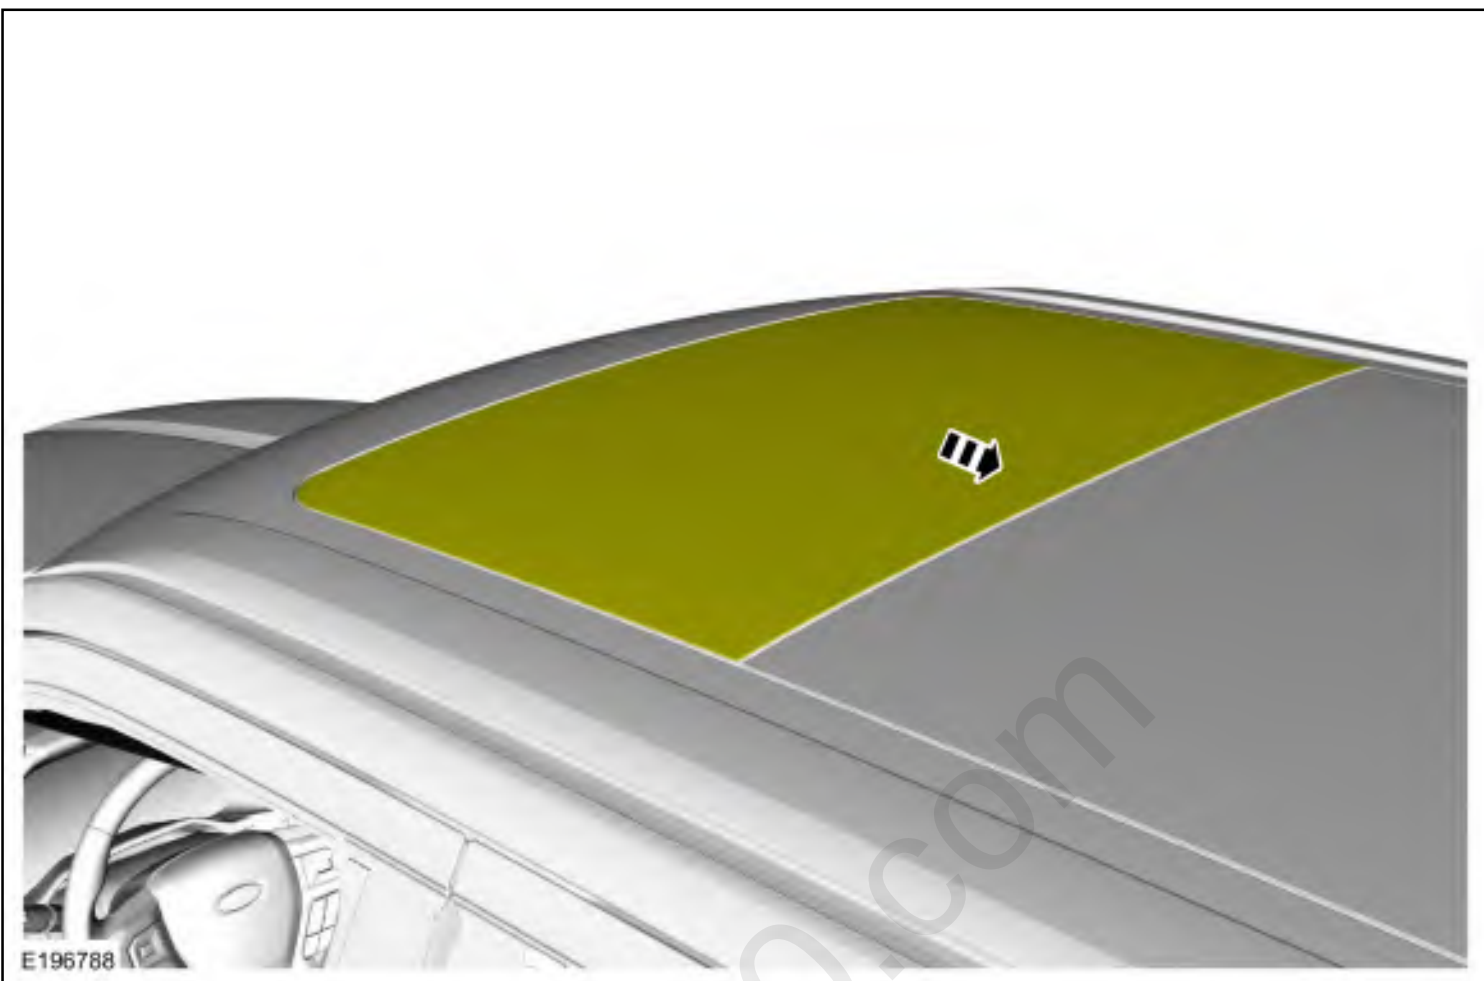


2. Remove the air deflector arm rivets on both sides.

Use the General Equipment: Electric Drill


Use the General Equipment: 6 mm Drill Bit

Use the General Equipment: Punch


Use the General Equipment: Vacuum Cleaner

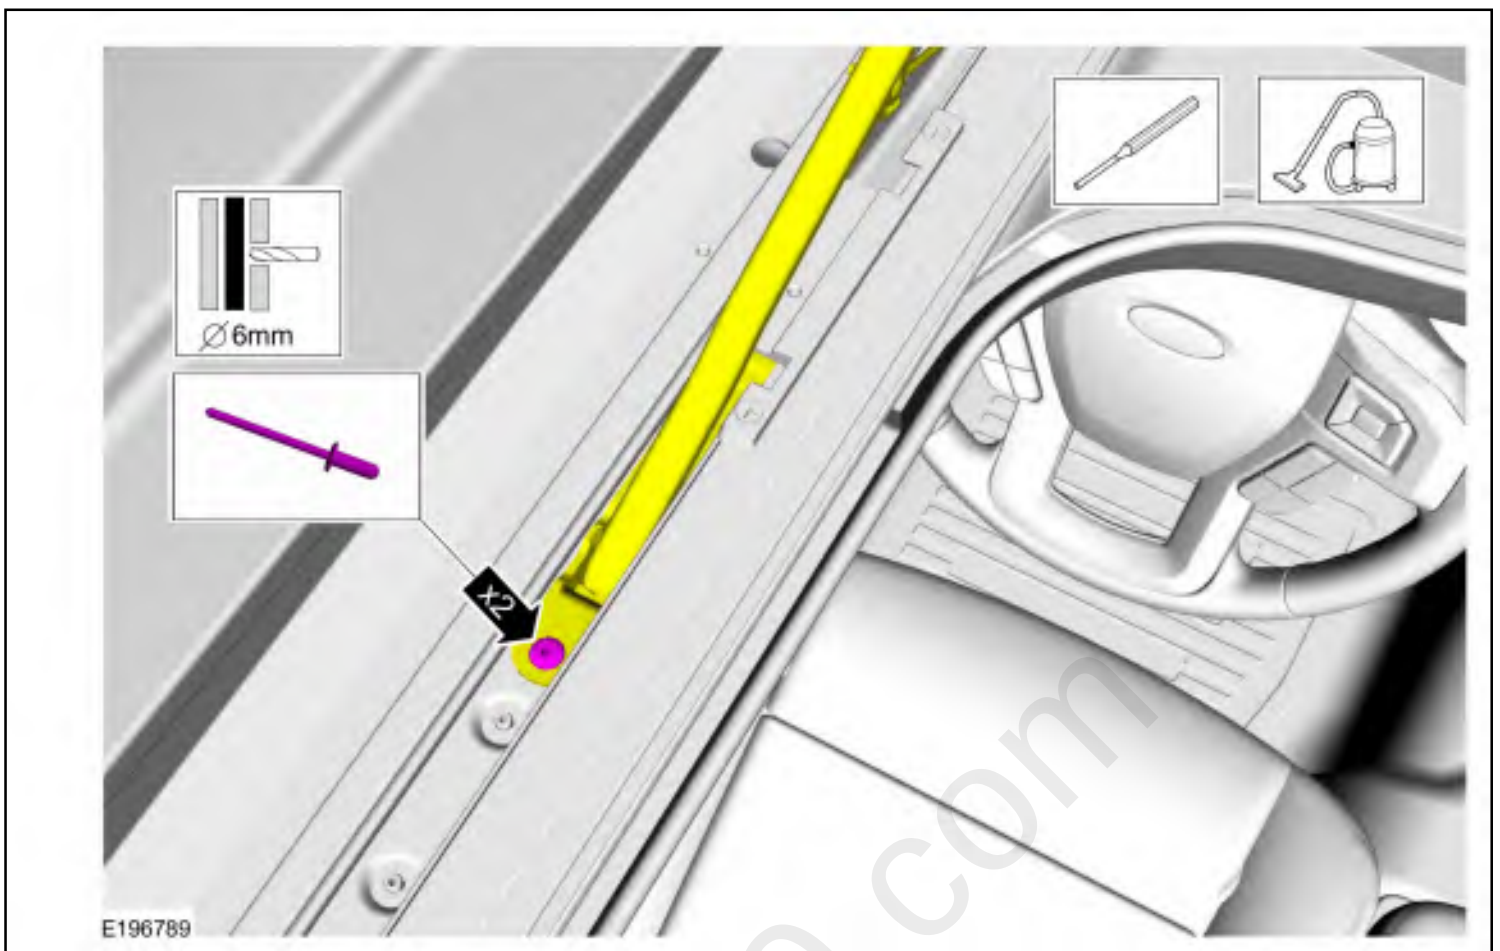

3. Push downward on the air deflector material and detach the plastic edge of the fabric material from the frame tabs.

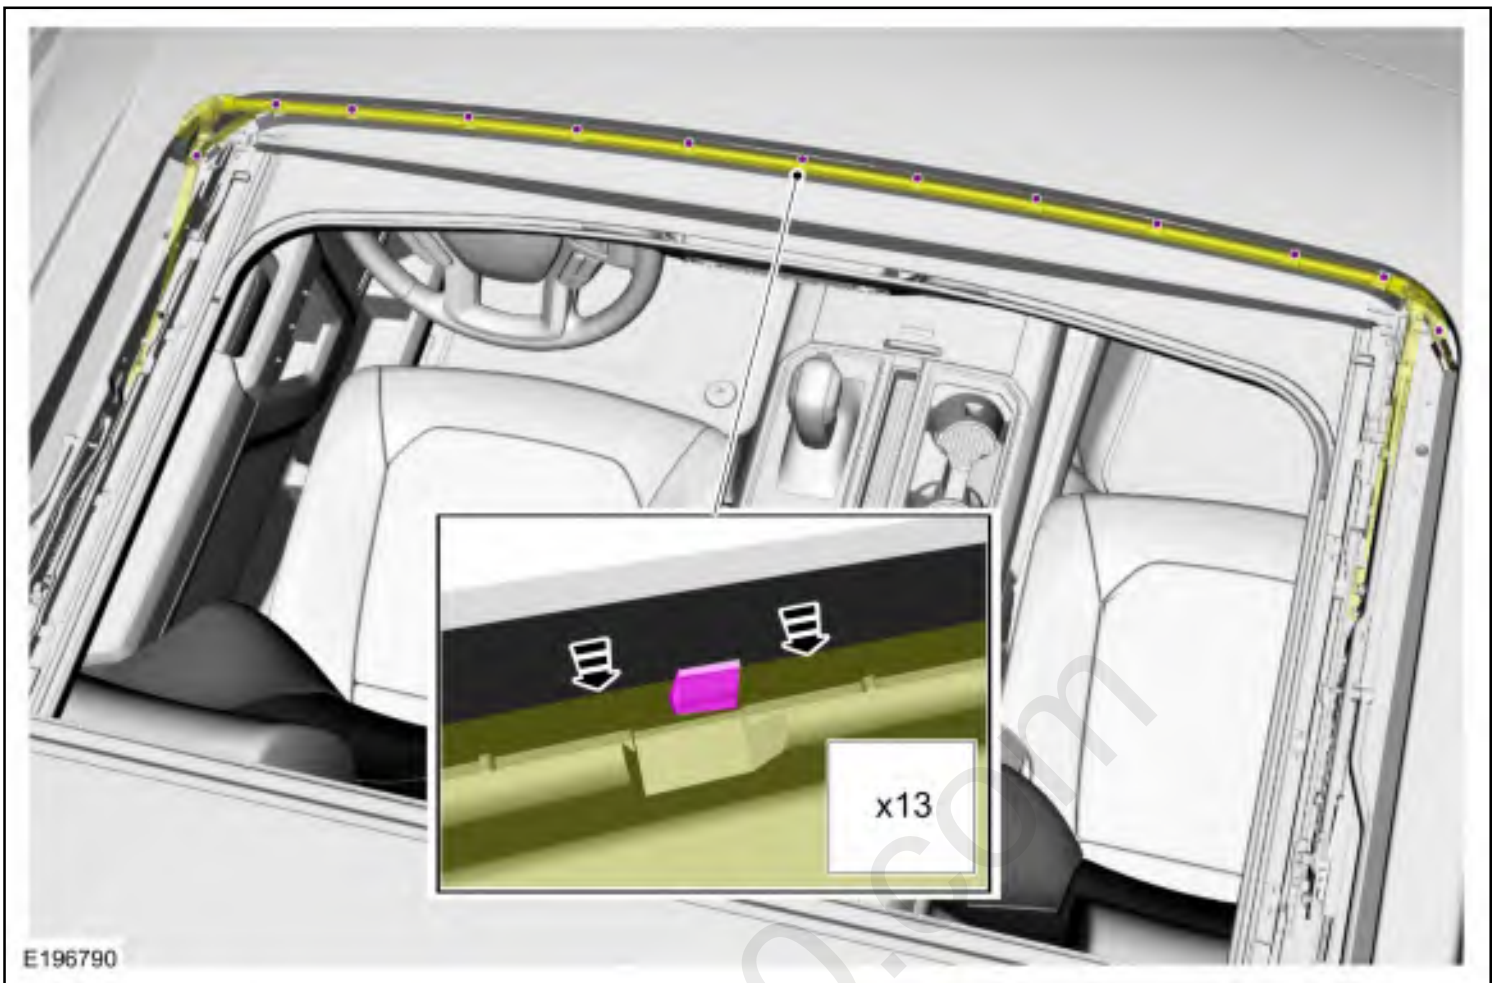


4. Slide the air deflector arms rearward in the frame rails, roll the arms out of the rails and remove the air deflector.

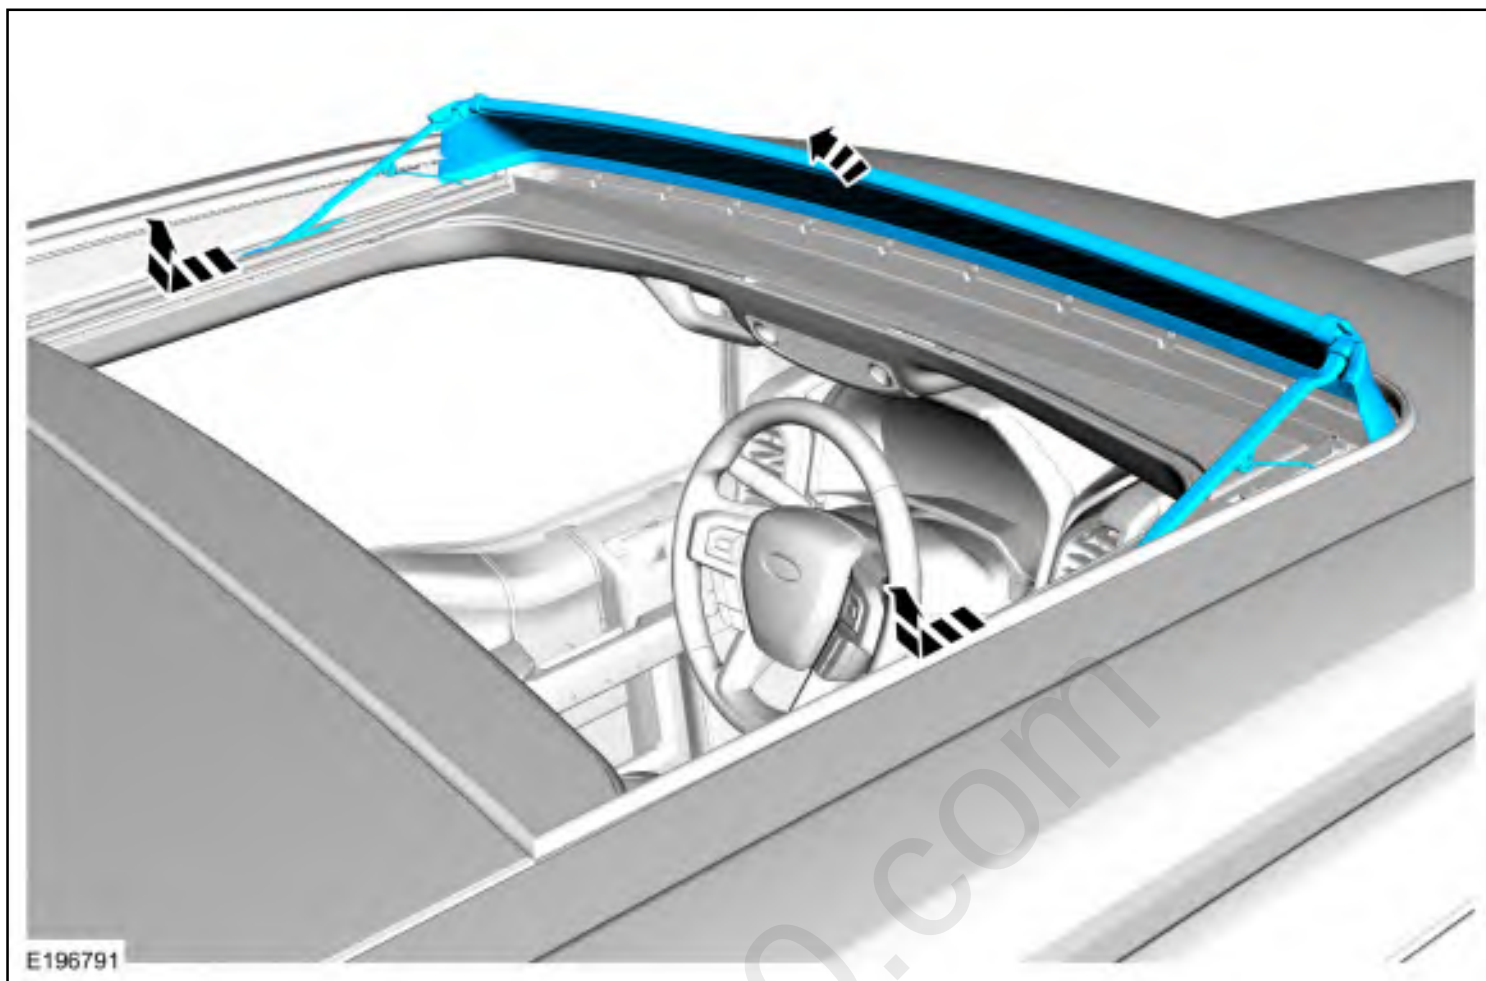


Installation

1. On both sides.
Insert the air deflector bracket to the track channel.

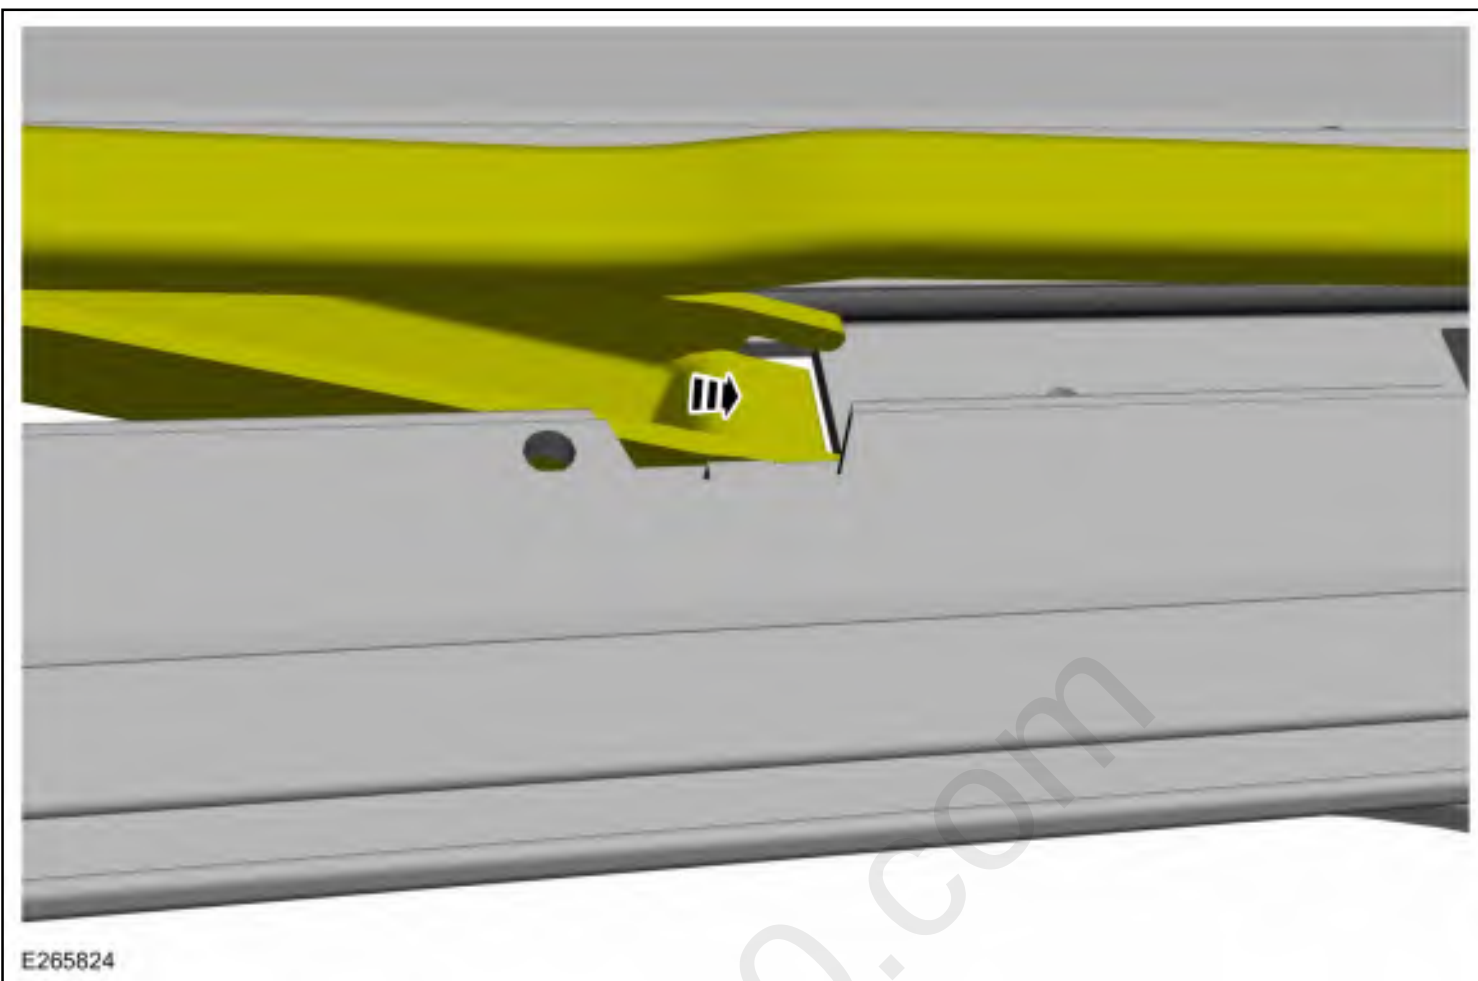

2. On both sides.

Make sure the air deflector bracket top and bottom tabs are properly fitted in place.

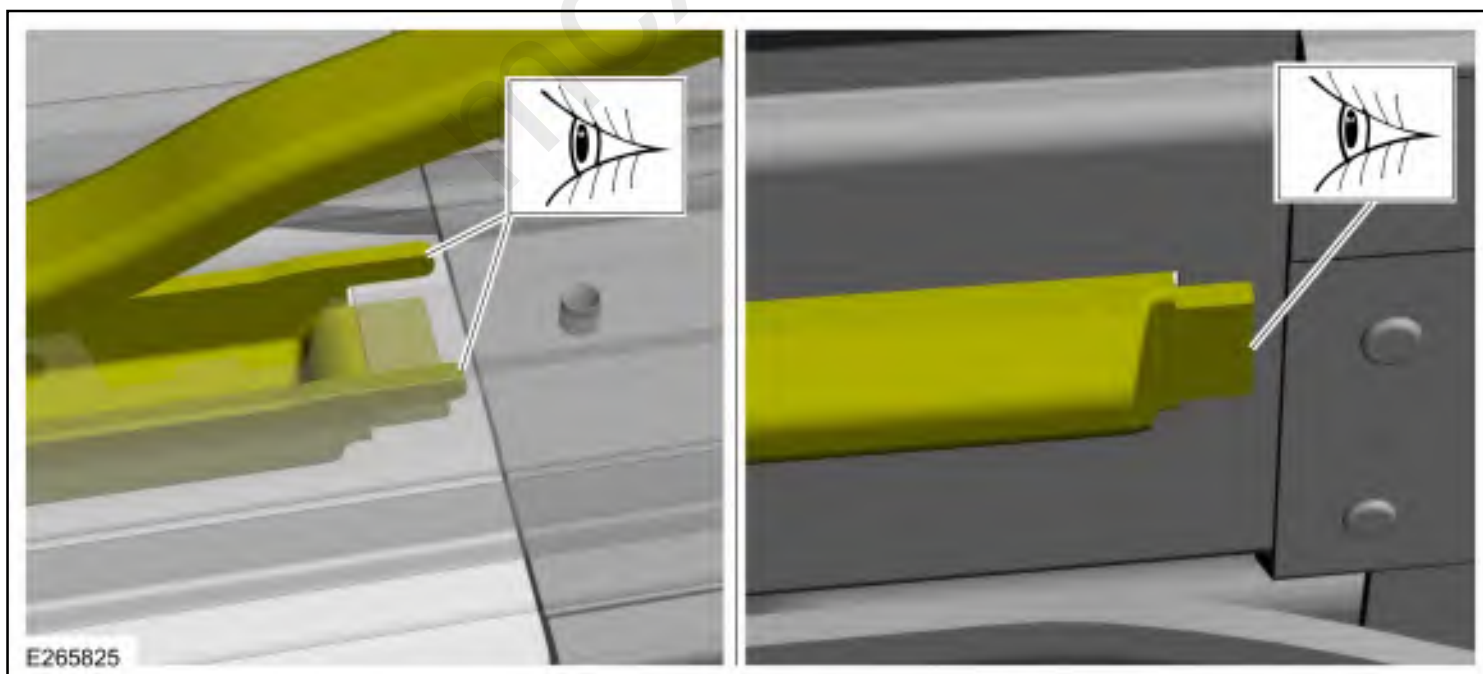


3. On both sides.


Install the air deflector arm and the rivet.

Item	Blind Rivet
1	W790368-S900


Use the General Equipment: Rivet Gun

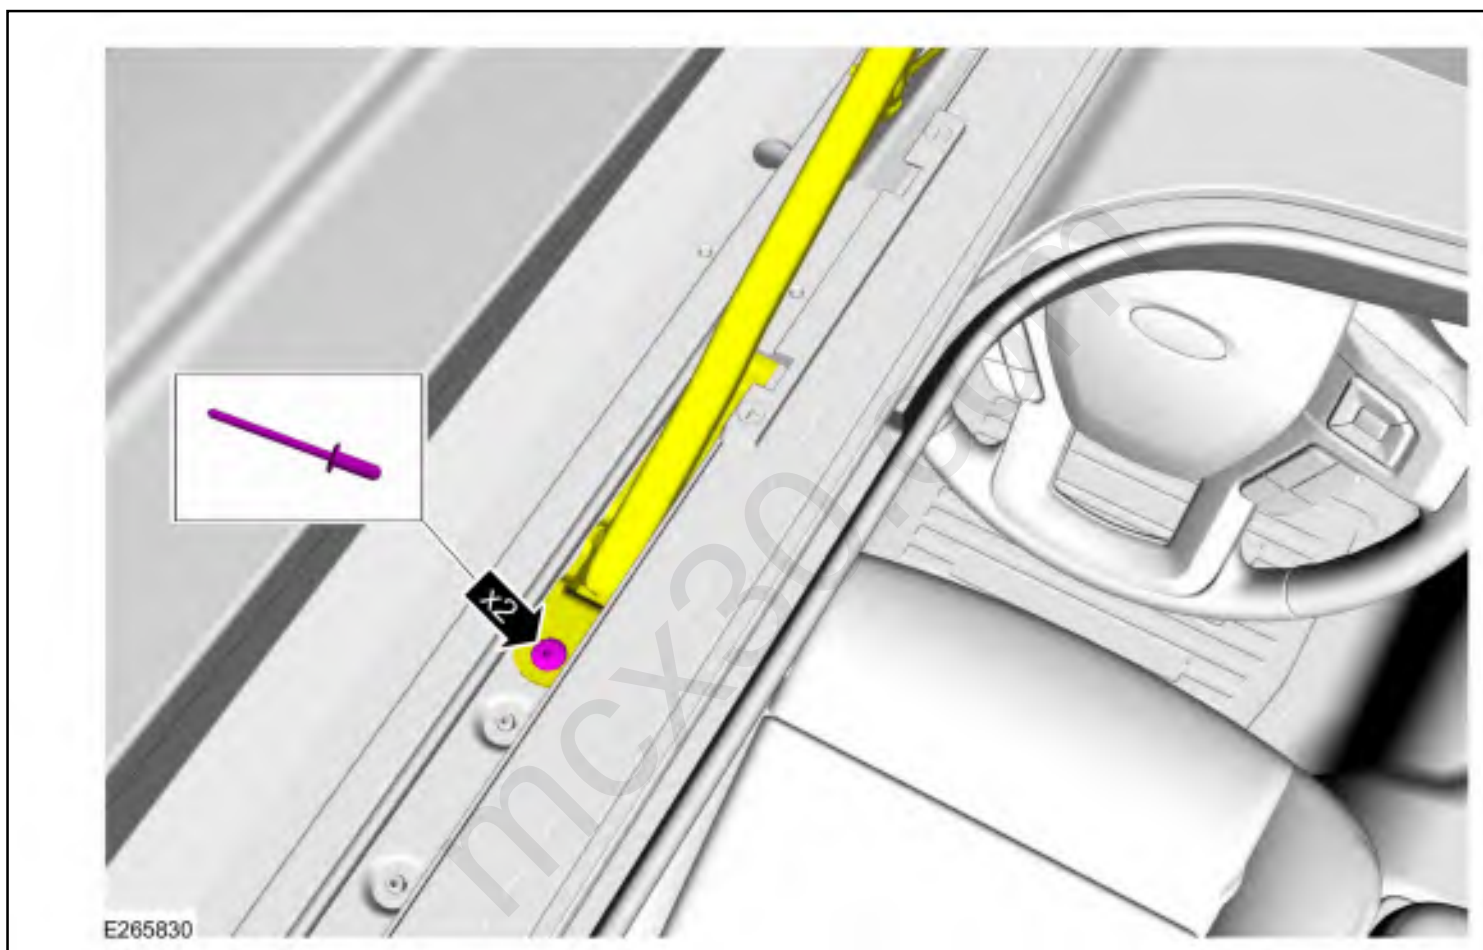

4. Position the end of the springs in the frame pocket as shown.

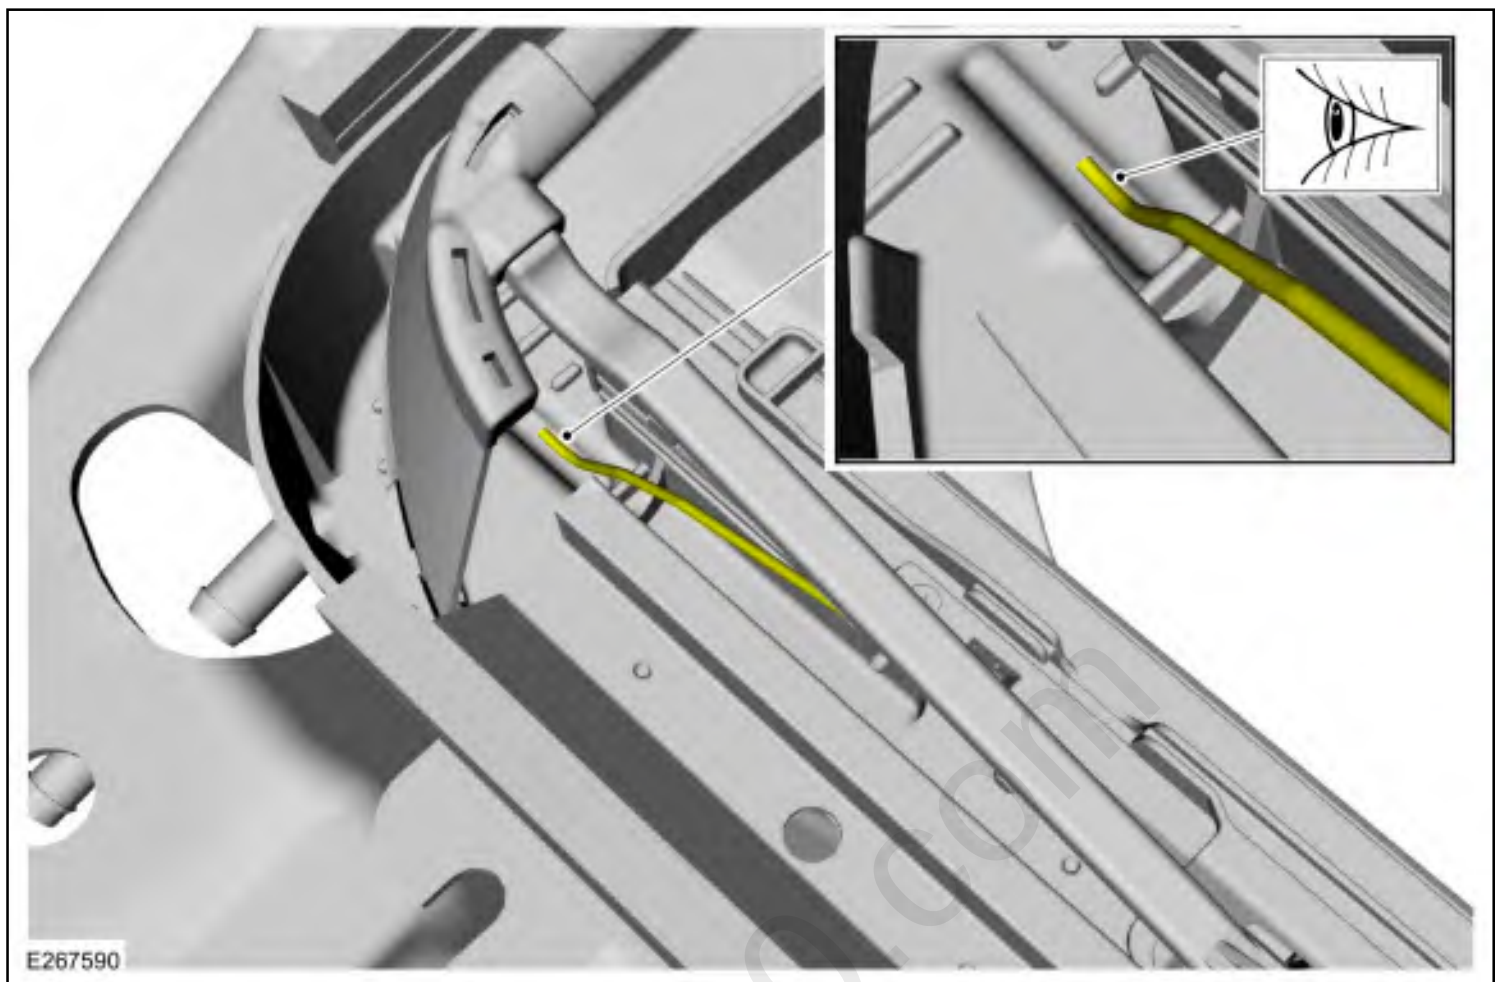


5. Attach the plastic edge of air deflector fabric material to the frame tabs.

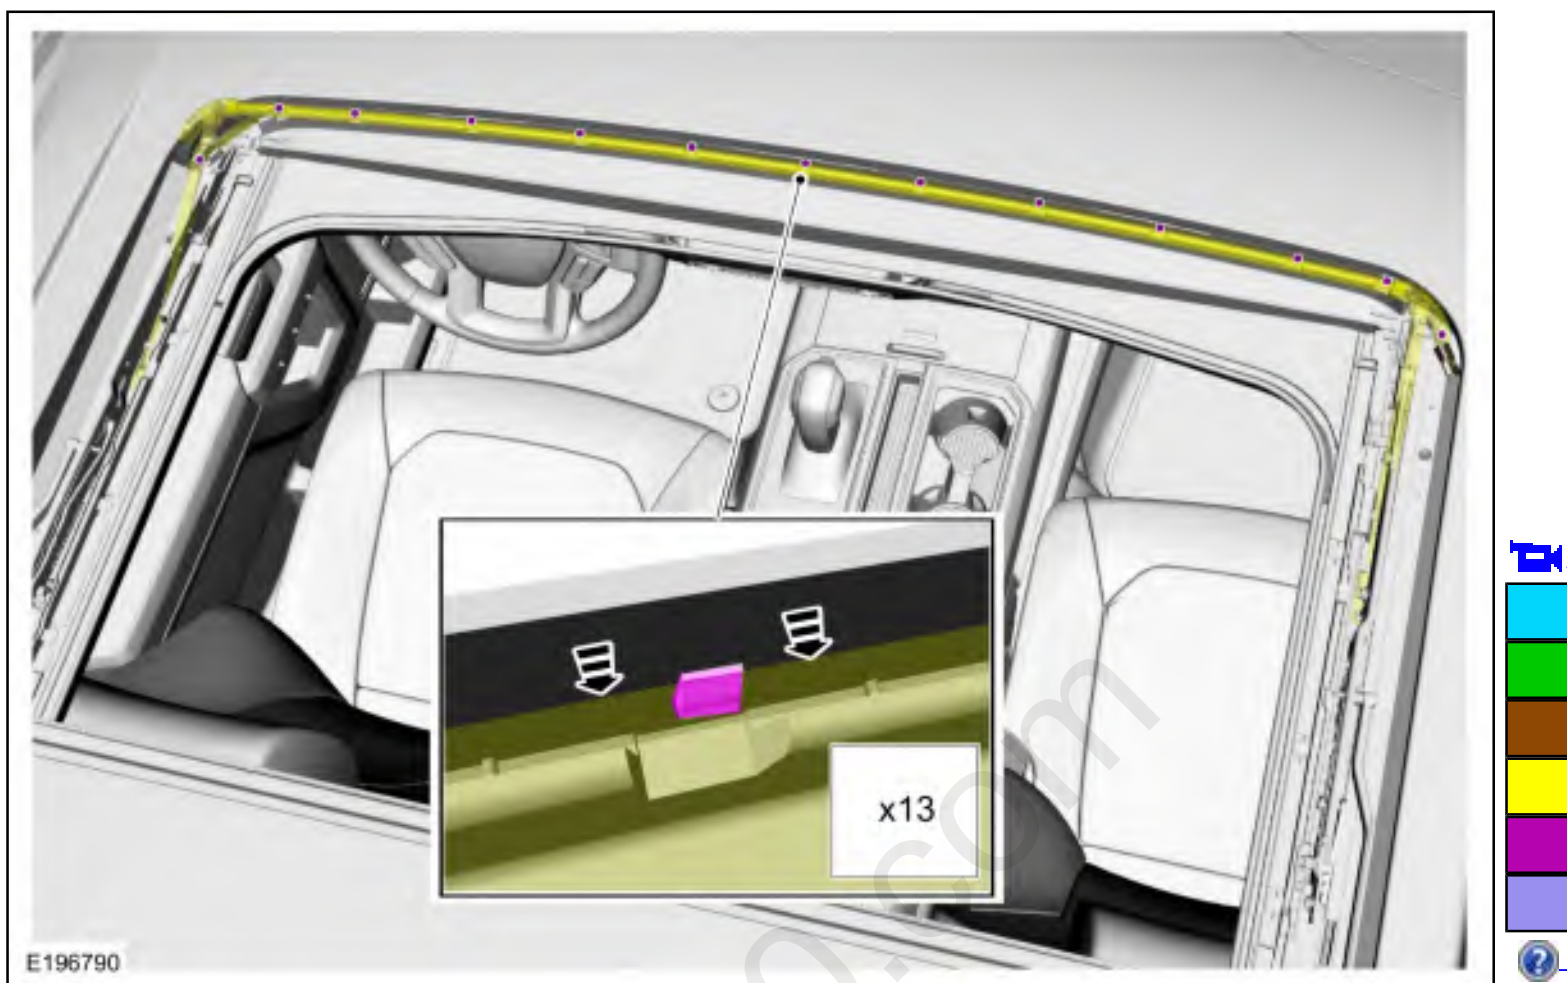

6. **NOTICE:** If the deflector fabric material is not centered, the deflector arms may make contact with the sides of the frame causing a bind and a possible bounce-back condition when closing the glass.

Make sure the alignment mark on the deflector fabric material is aligned with the center frame tab opening. Move the deflector fabric material from side-to-side as necessary.

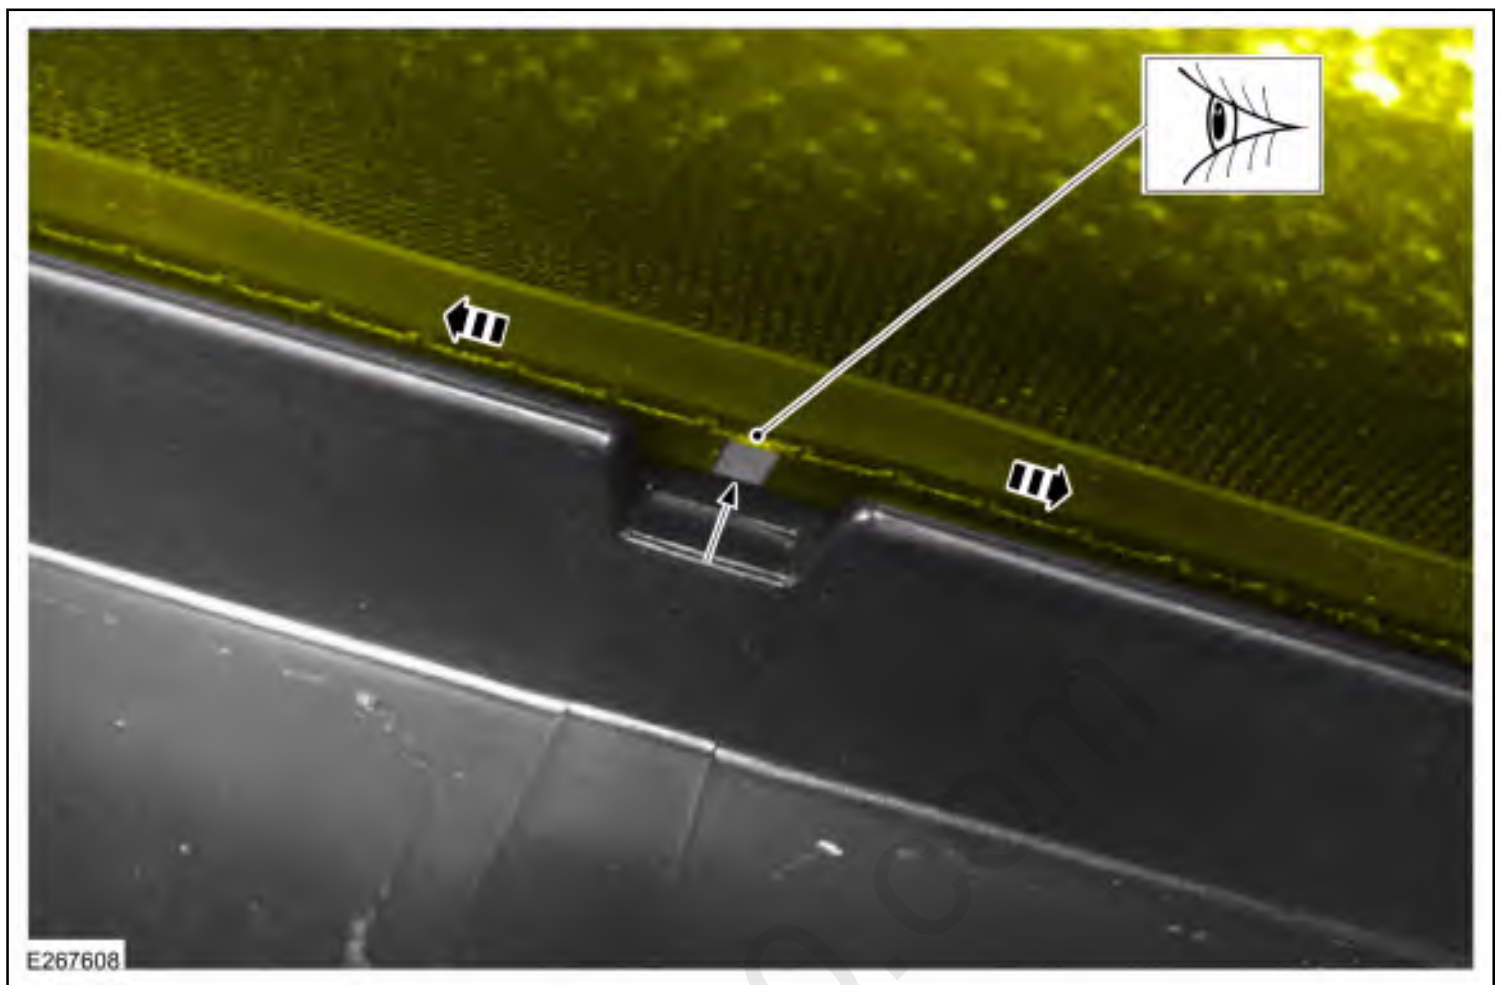

7. Carry out the roof opening panel initialization.
Refer to: [Power Roof Opening Panel Initialization](#) (501-17B Roof Opening Panel - Vehicles With: Vista Roof Opening Panel, General Procedures).