


Front Bumper

Base Part Number: Base Part Number: 17757


DISASSEMBLY

NOTE: *Disassembly steps in this procedure may contain assembly details.*


1. Remove the front bumper.
Refer to: [Front Bumper](#) (501-19 Bumpers, Removal and Installation).
2. On both sides.
Remove the scrivenets, release the clips and remove the front bumper side valence panel.

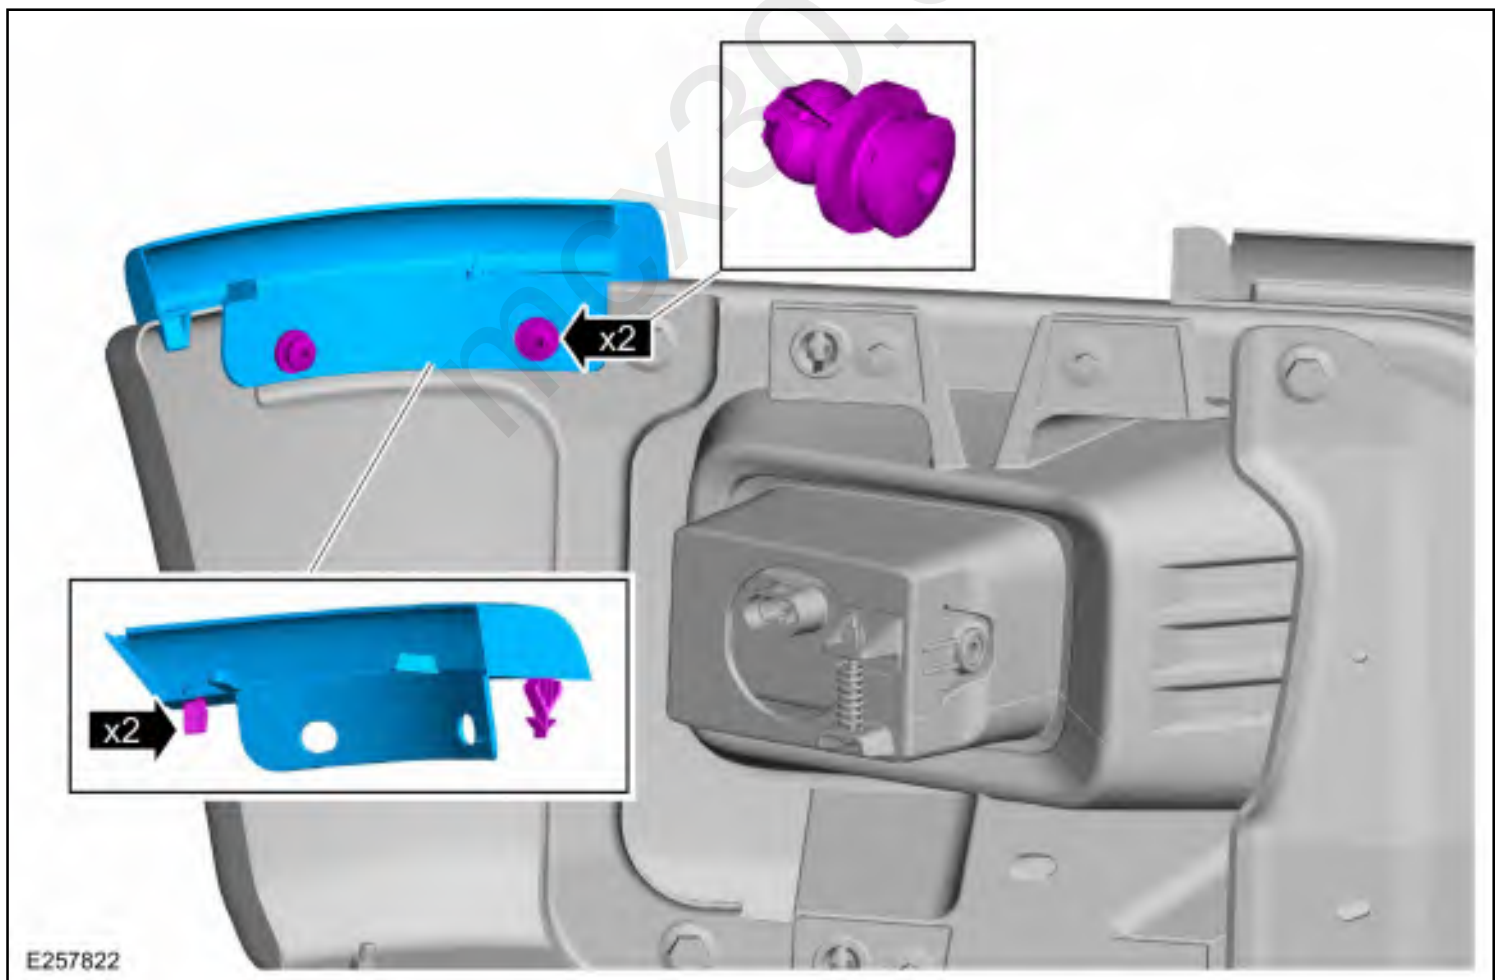


3. Remove the scrivenets, release the clips and remove the front bumper upper valence panel.

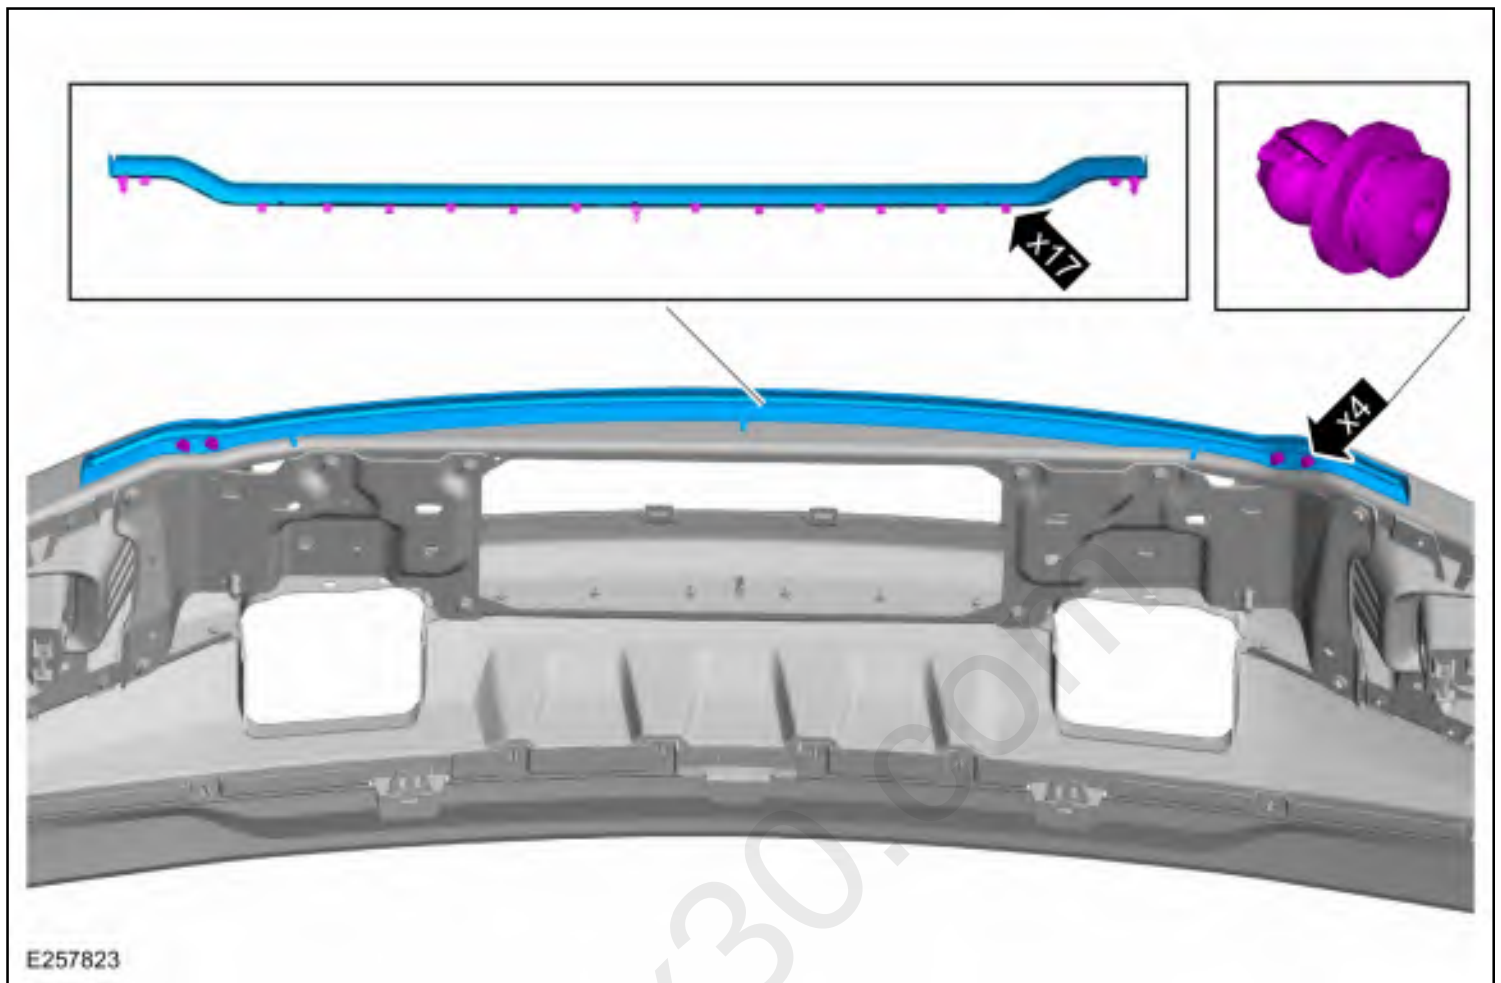


4. On both sides.
Remove the bolts and the front bumper bracket.
Torque: 18 lb.ft (25 Nm)

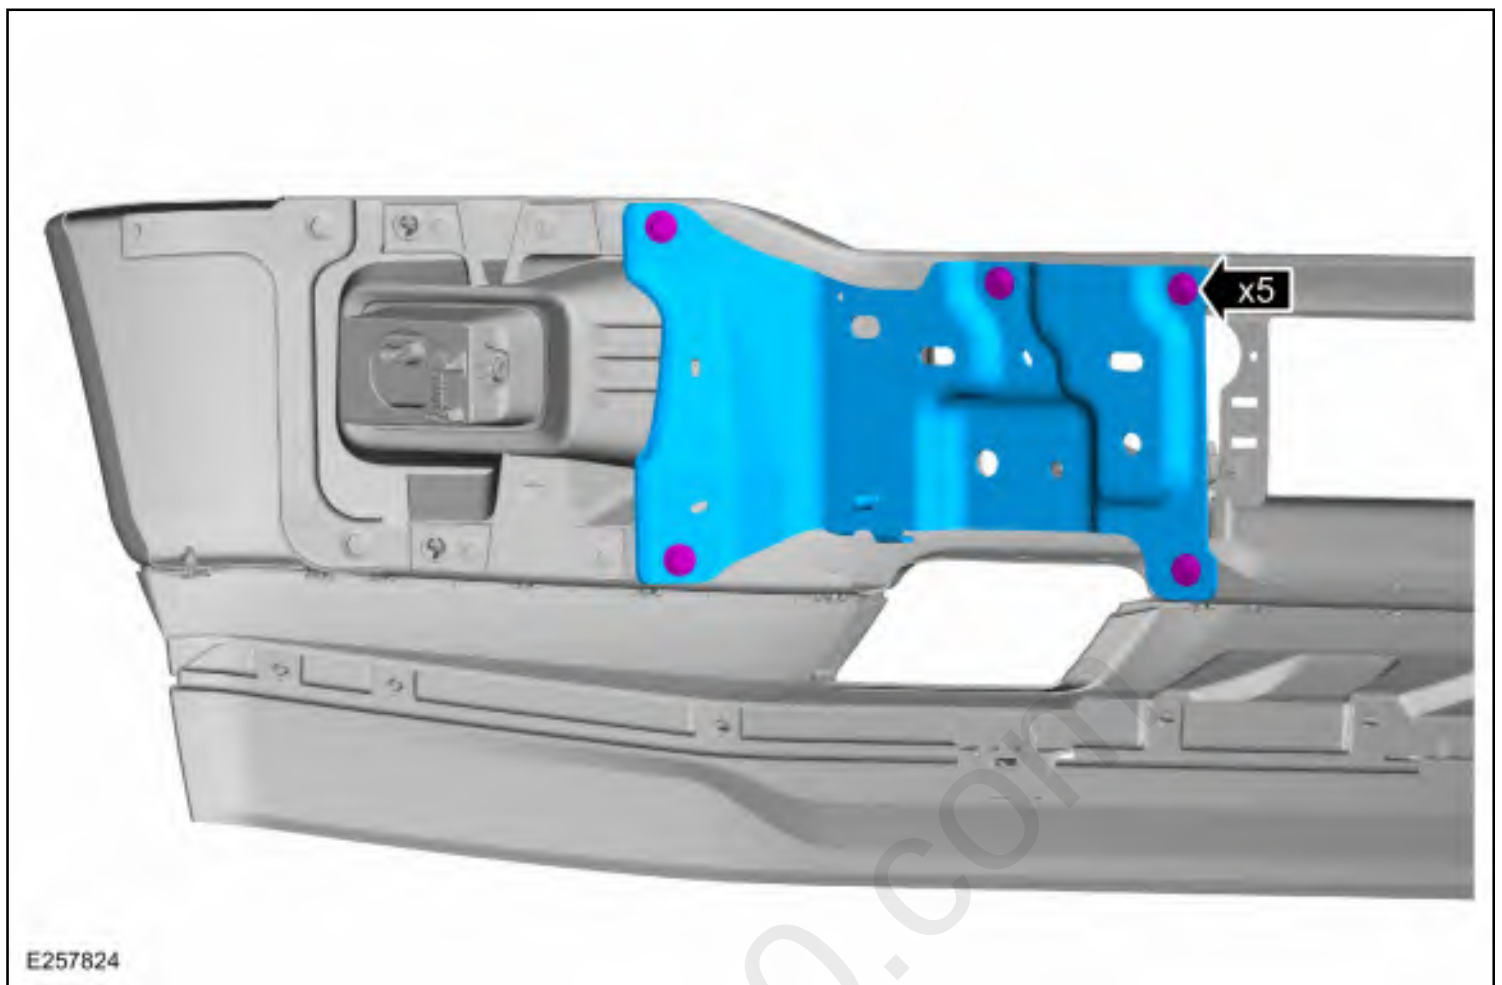


5. Remove the bolts and the CCM bracket.
Torque: 42 lb.in (4.8 Nm)

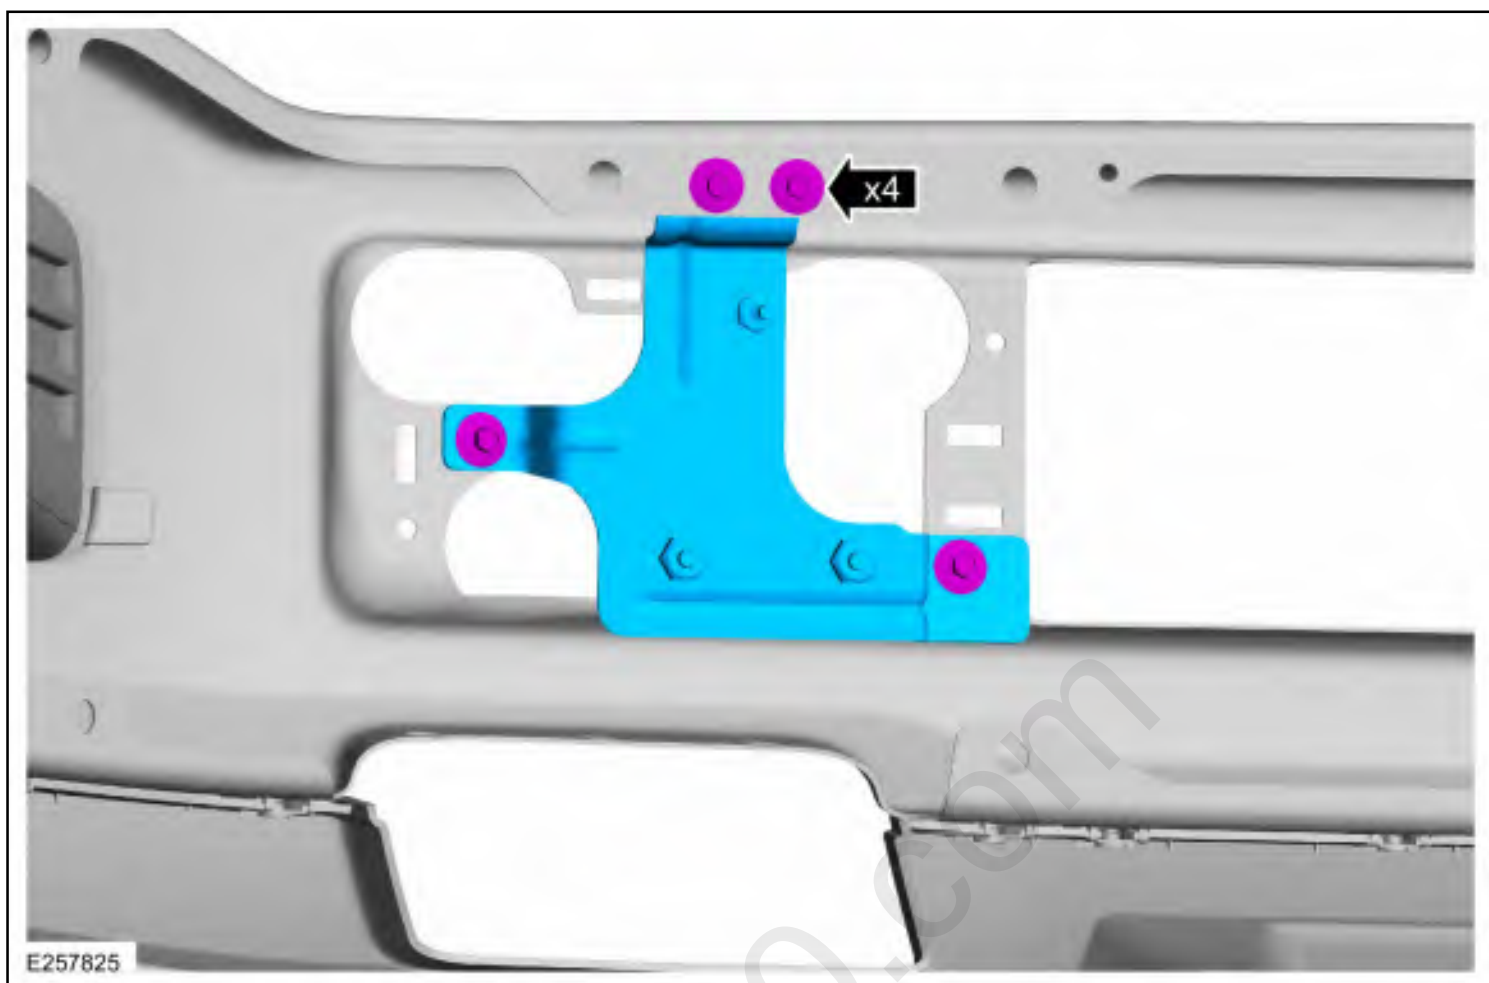


6. On both sides.
Remove the bolts, push pins and the fog lamp assembly.
Torque: 48 lb.in (5.4 Nm)

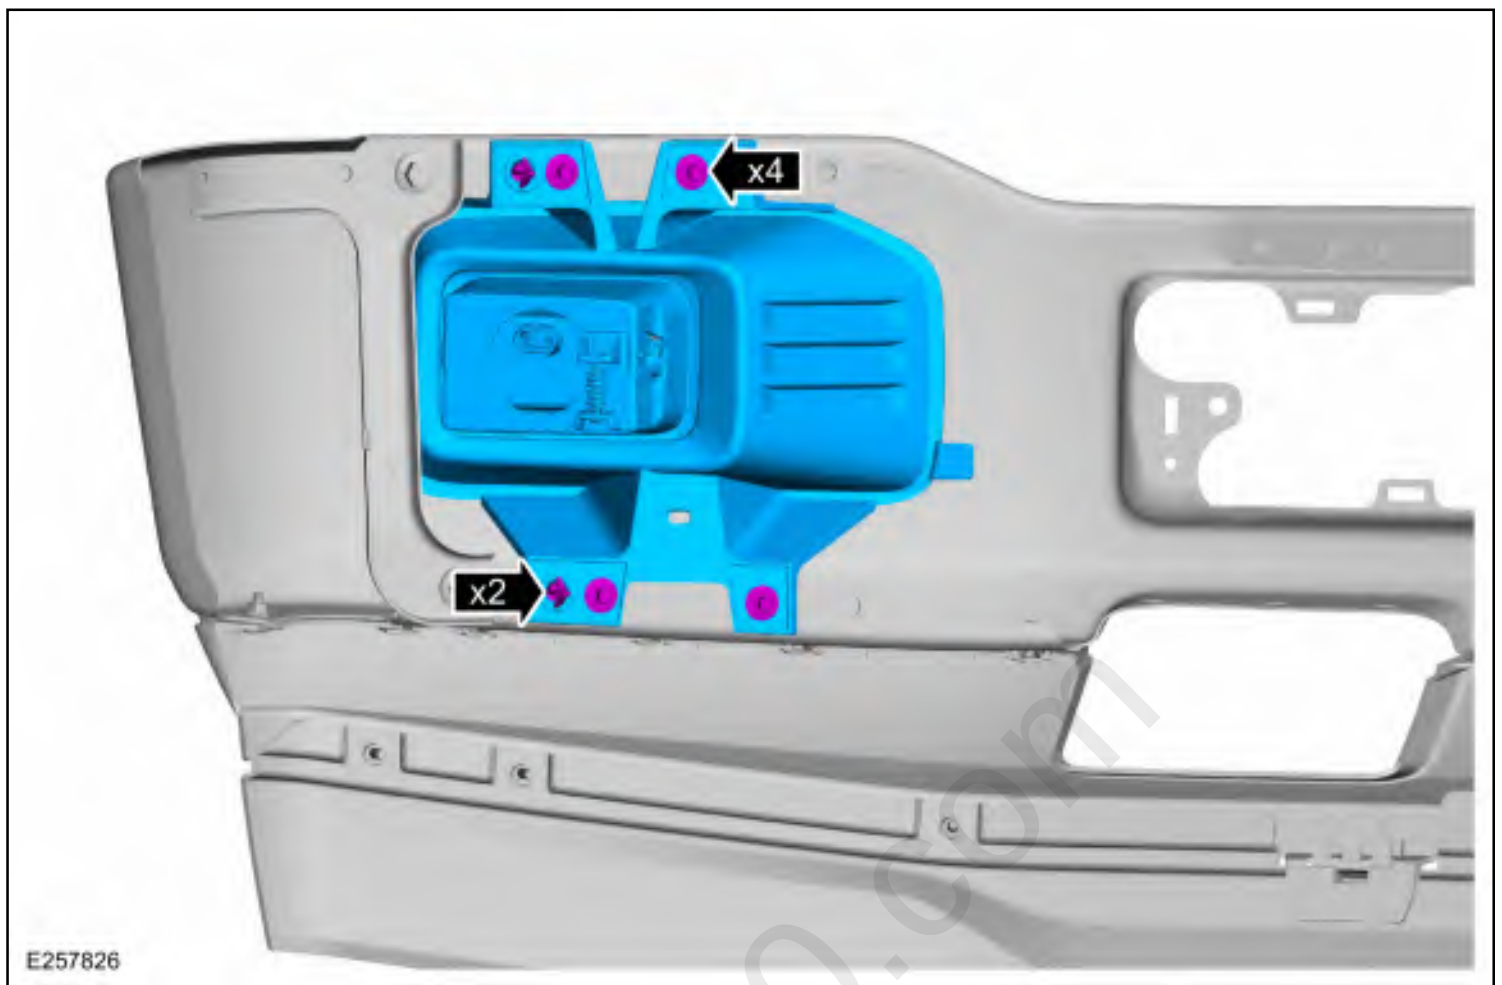

7. On both sides.
Remove the bolts and the front bumper outer bracket.
Torque: 18 lb.ft (25 Nm)

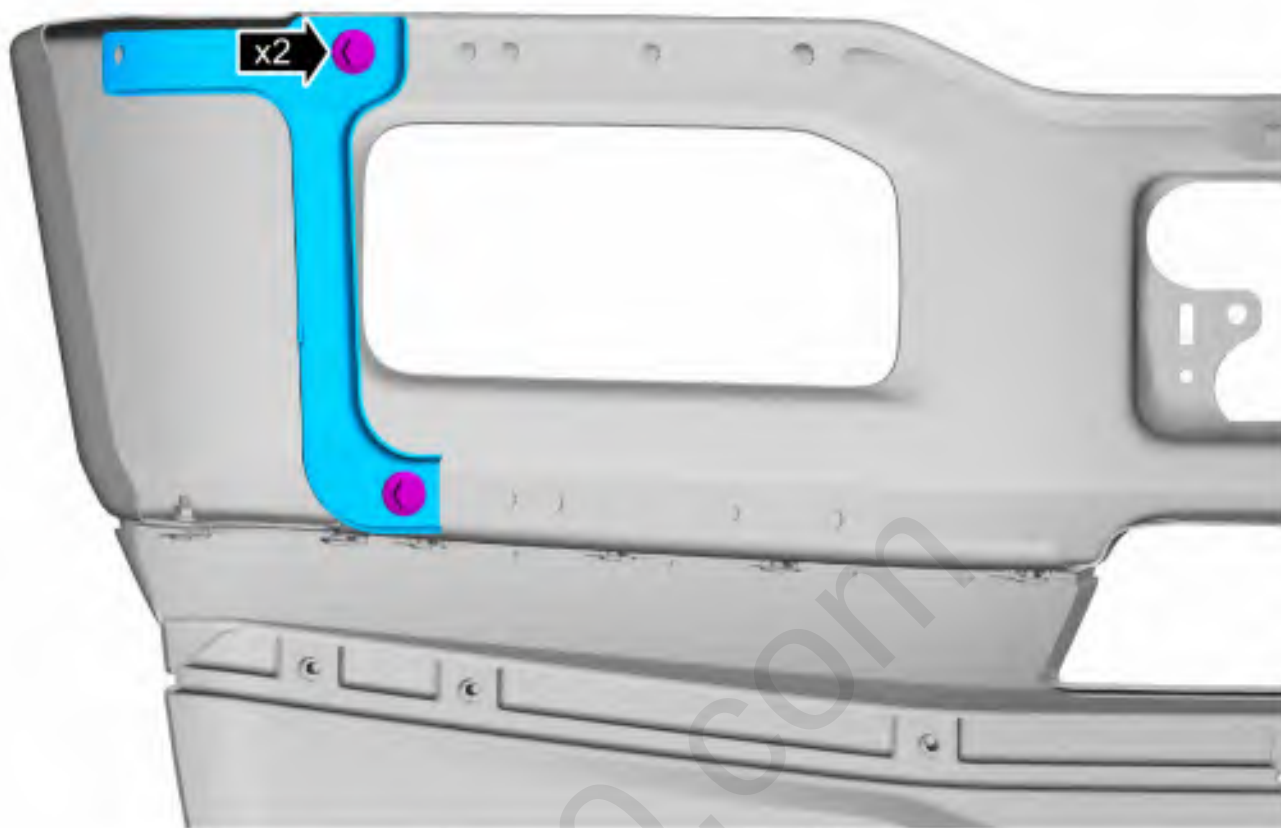


8. Remove the bolts and the front bumper lower valence panel.
Torque: 28 lb.in (3.2 Nm)

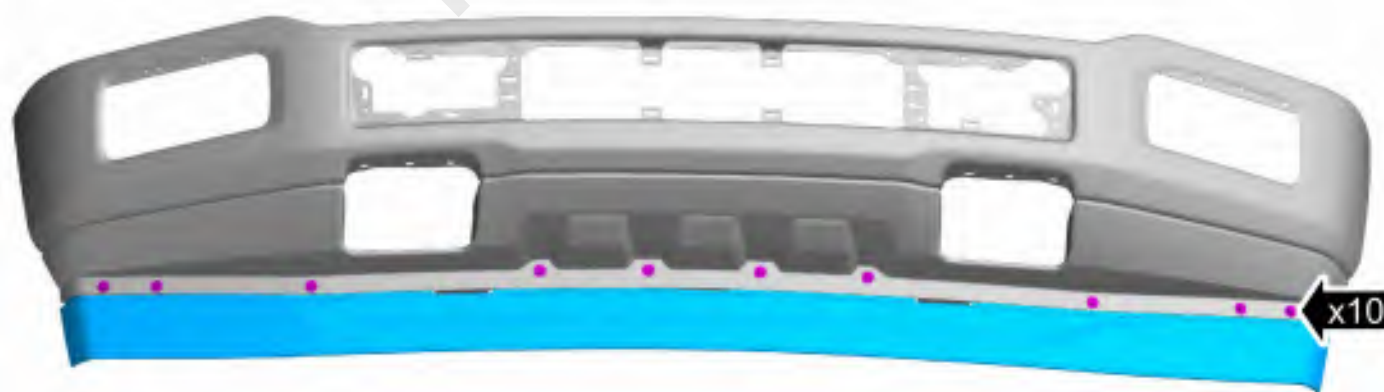

9. Remove the nuts, push pins and the front bumper valence.

Torque: 28 lb.in (3.2 Nm)

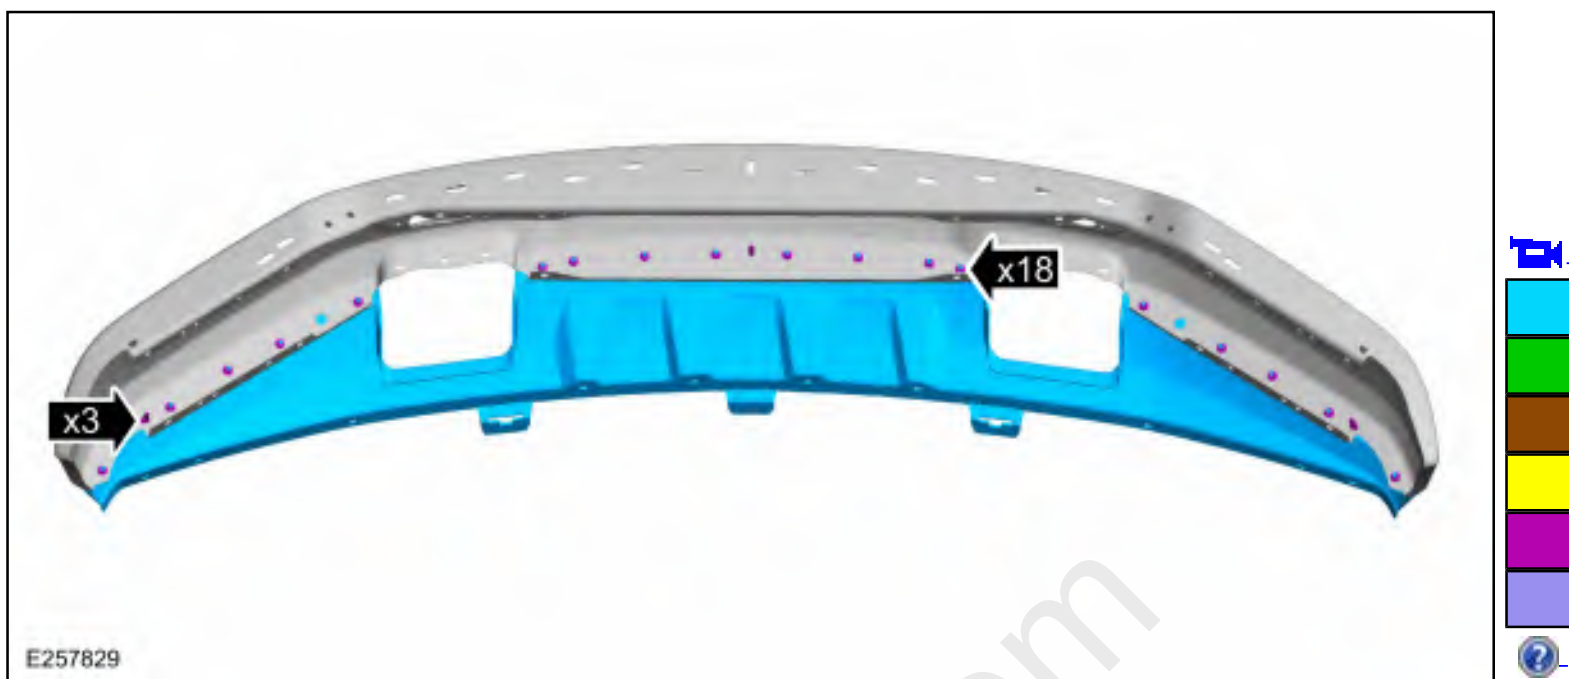

ASSEMBLY

1. To assemble, reverse the disassembly procedure.

Copyright © 2018 Ford Motor Company