


Front Bumper


Base Part Number: Base Part Number: 17757

Removal


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. On both sides.
Disconnect the fog lamp electrical connector, detach the wiring harness retainer and position the wiring harness aside.

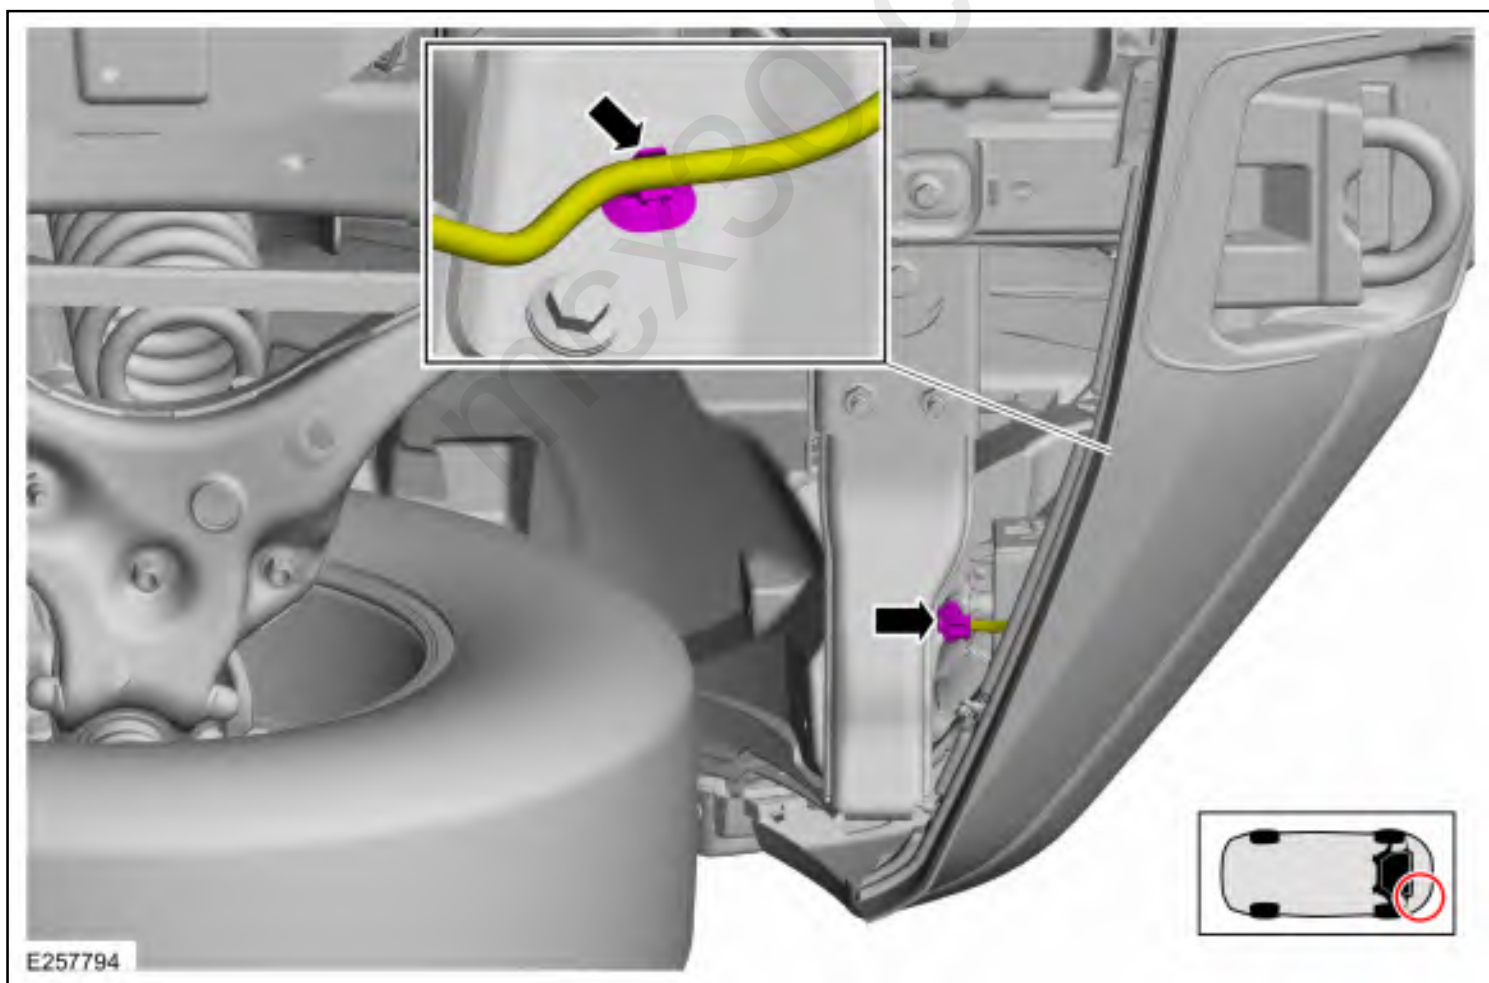

3. On both sides.
Remove the front bumper nut.
Torque: 76 lb.ft (103 Nm)

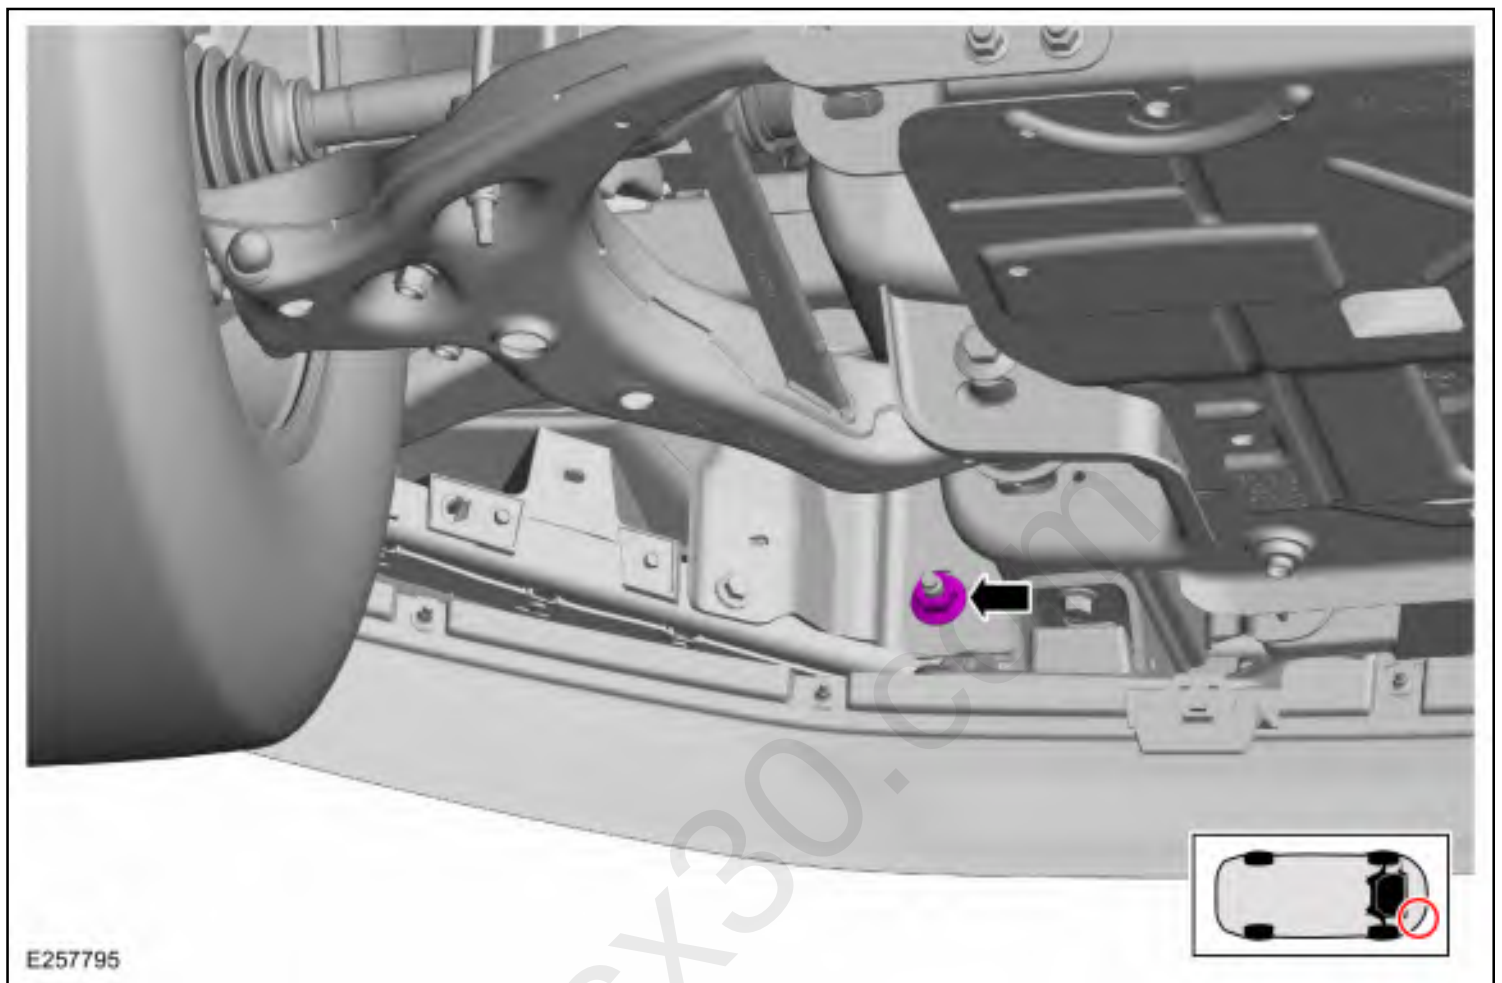


4. Release the tabs and remove the license plate bracket.

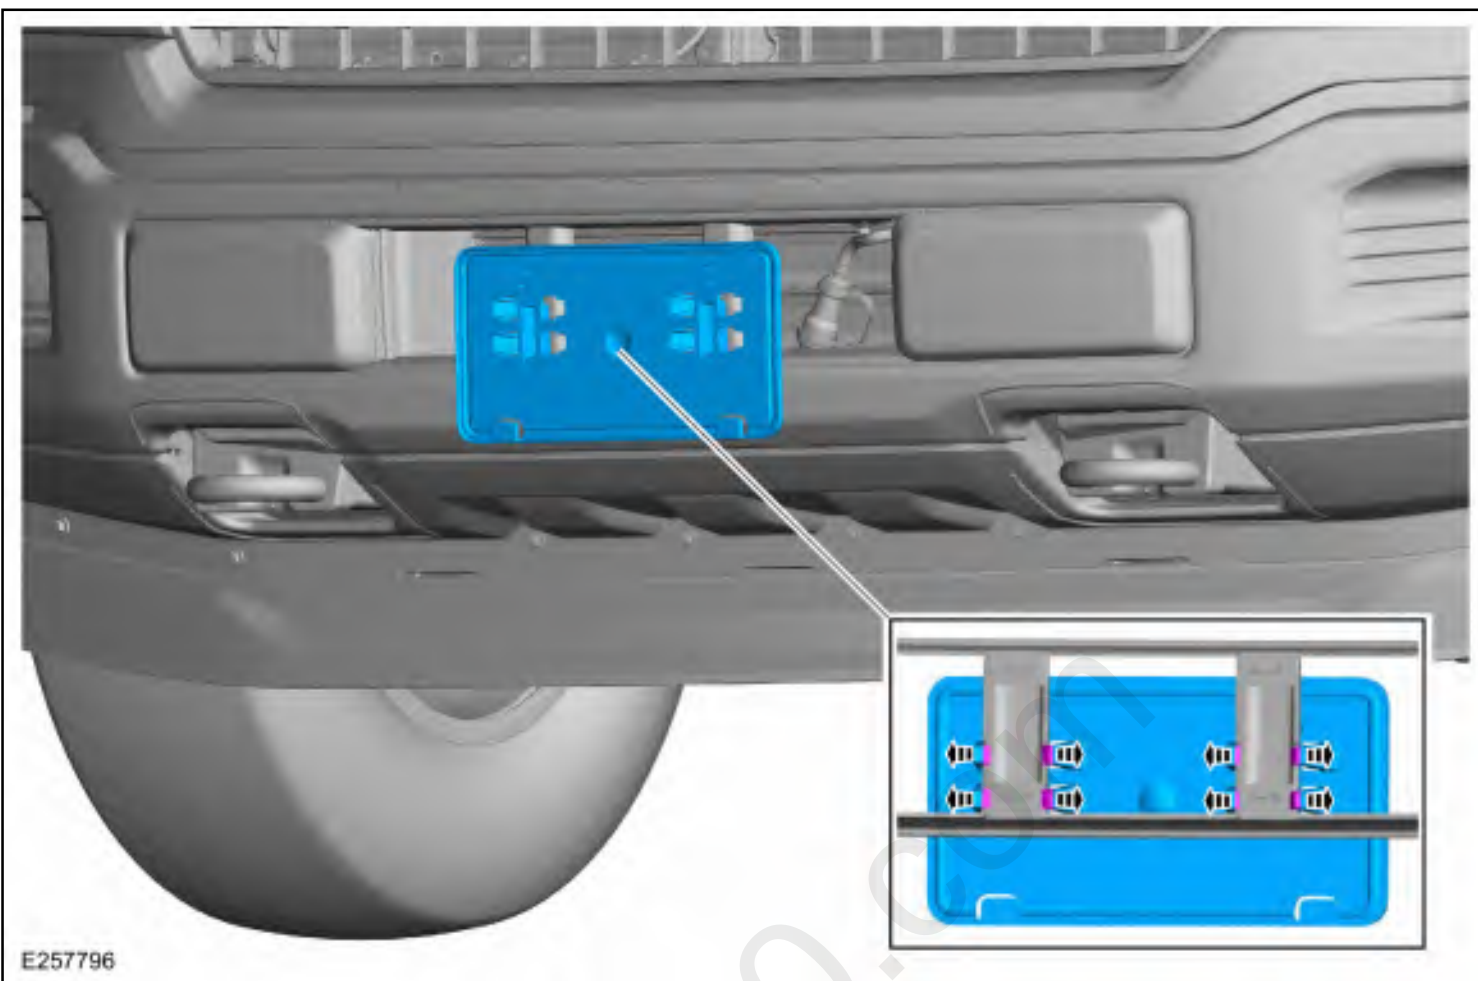

5. Release the clips and remove the front bumper trim panel.



6.
 1. Detach the wiring harness retainer and position the engine block heater wiring harness aside.
 2. Release the clips and remove the front bumper grill.

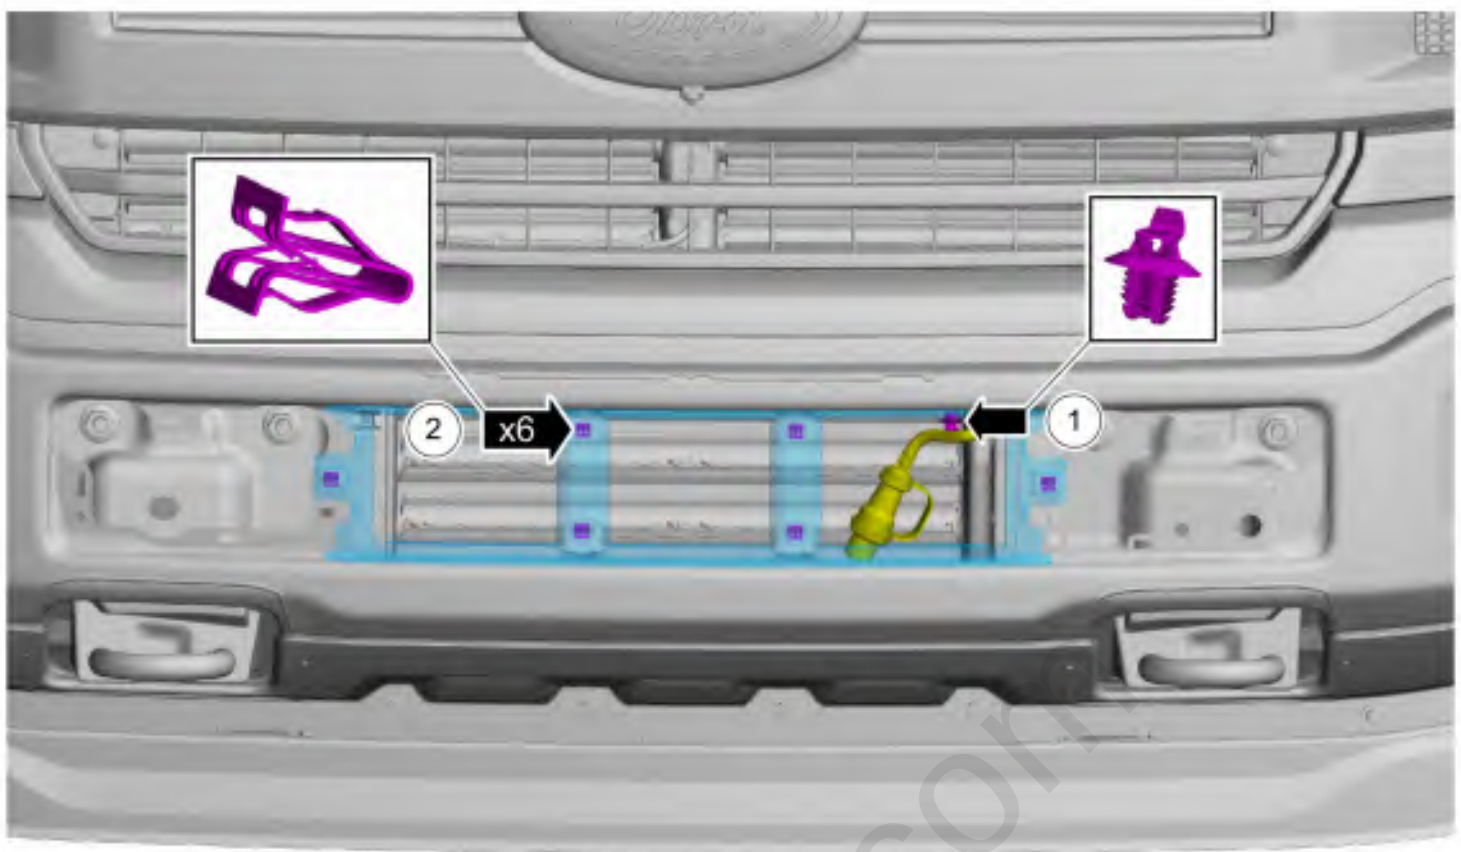

E257798

7. If equipped.
Remove the CCM.
Refer to: Cruise Control Module (CCM) (419-03B) .
8. With the help of an assistant.
Remove the nuts and the front bumper.
Torque: 76 lb.ft (103 Nm)



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company