


Rear Outer Seatbelt Lower Retractor - Vehicles With: Inflatable Seatbelts

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH shown, RH similar.


1. Remove the lower anchor bolt cover.

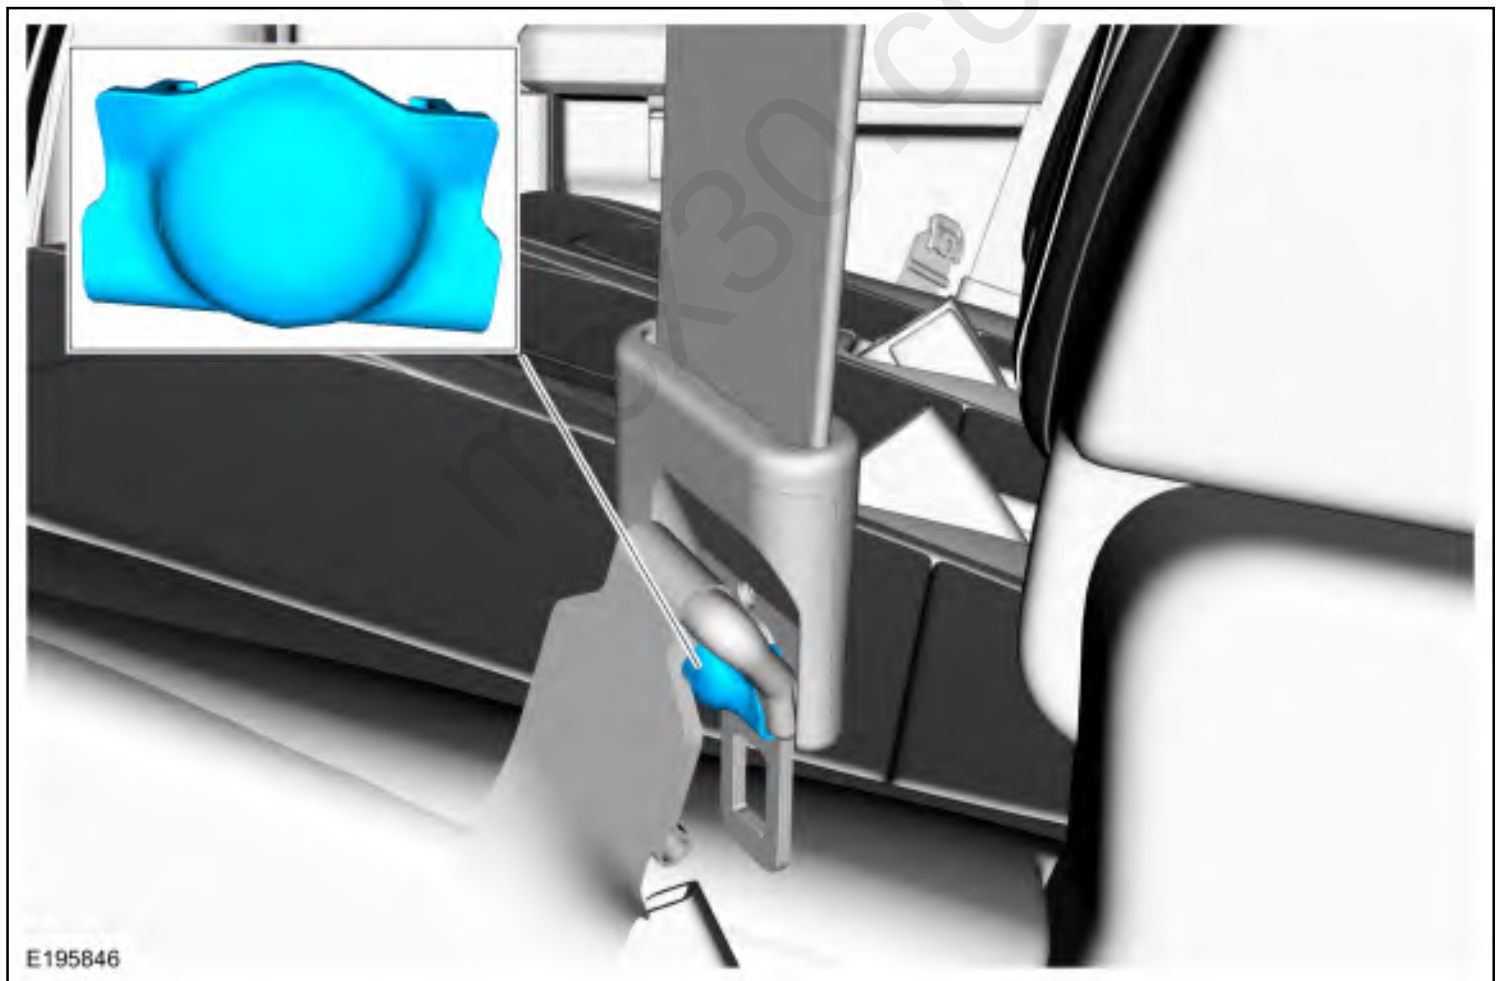


2. Remove the anchor bolt and separate the upper seatbelt from the lower seatbelt.
Torque: 71 lb.in (8 Nm)

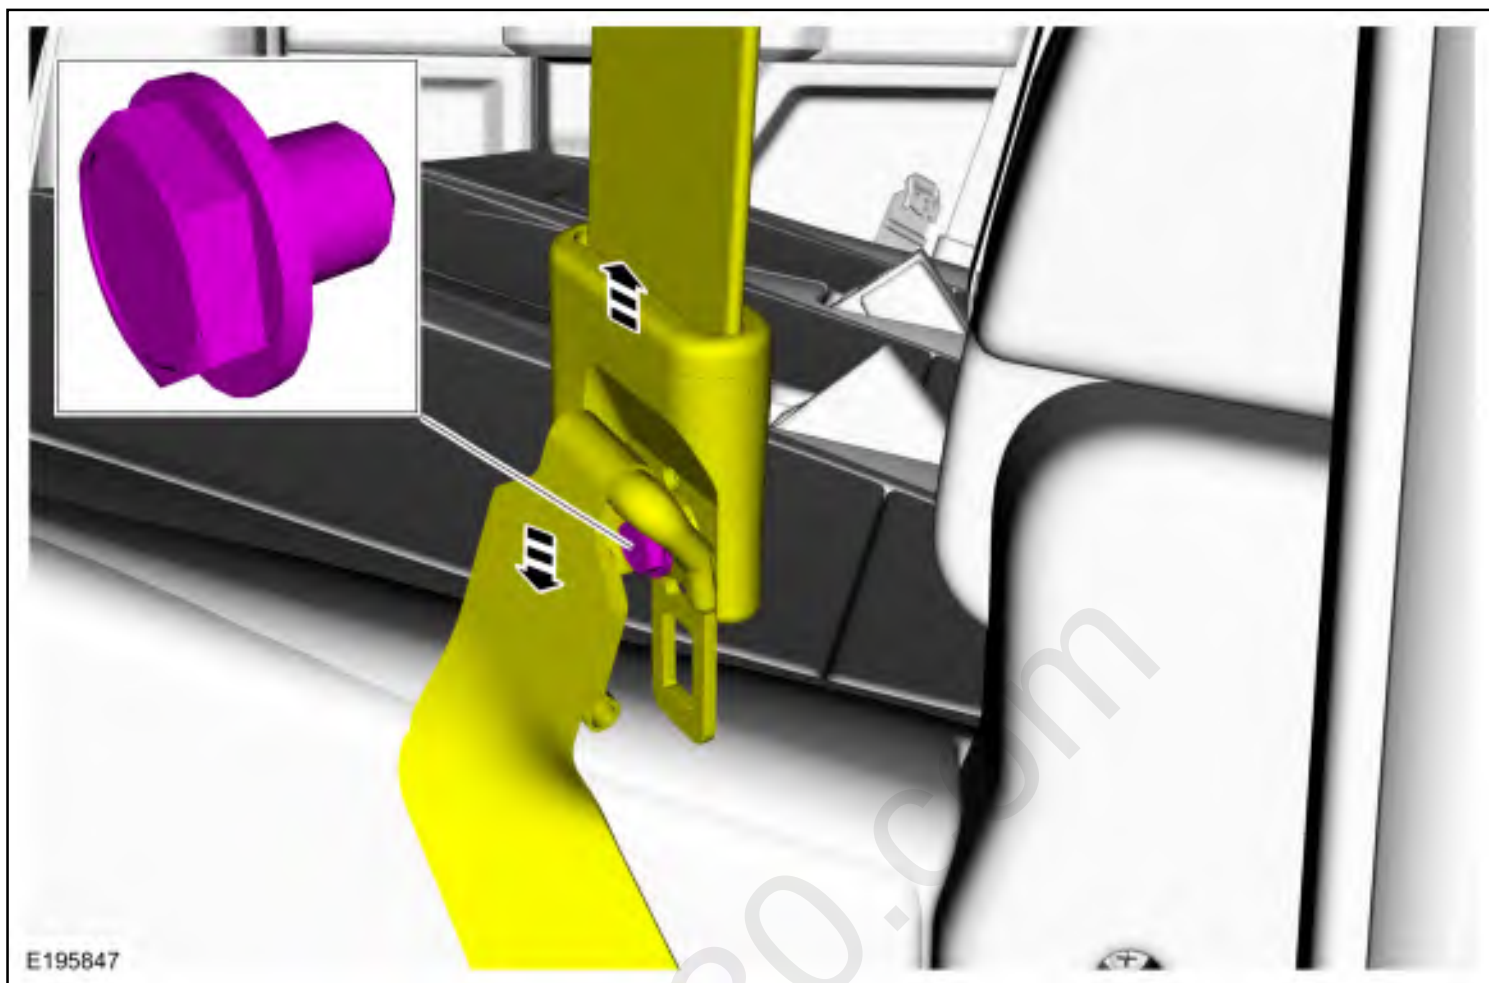


3. Lift the rear seat cushion up.

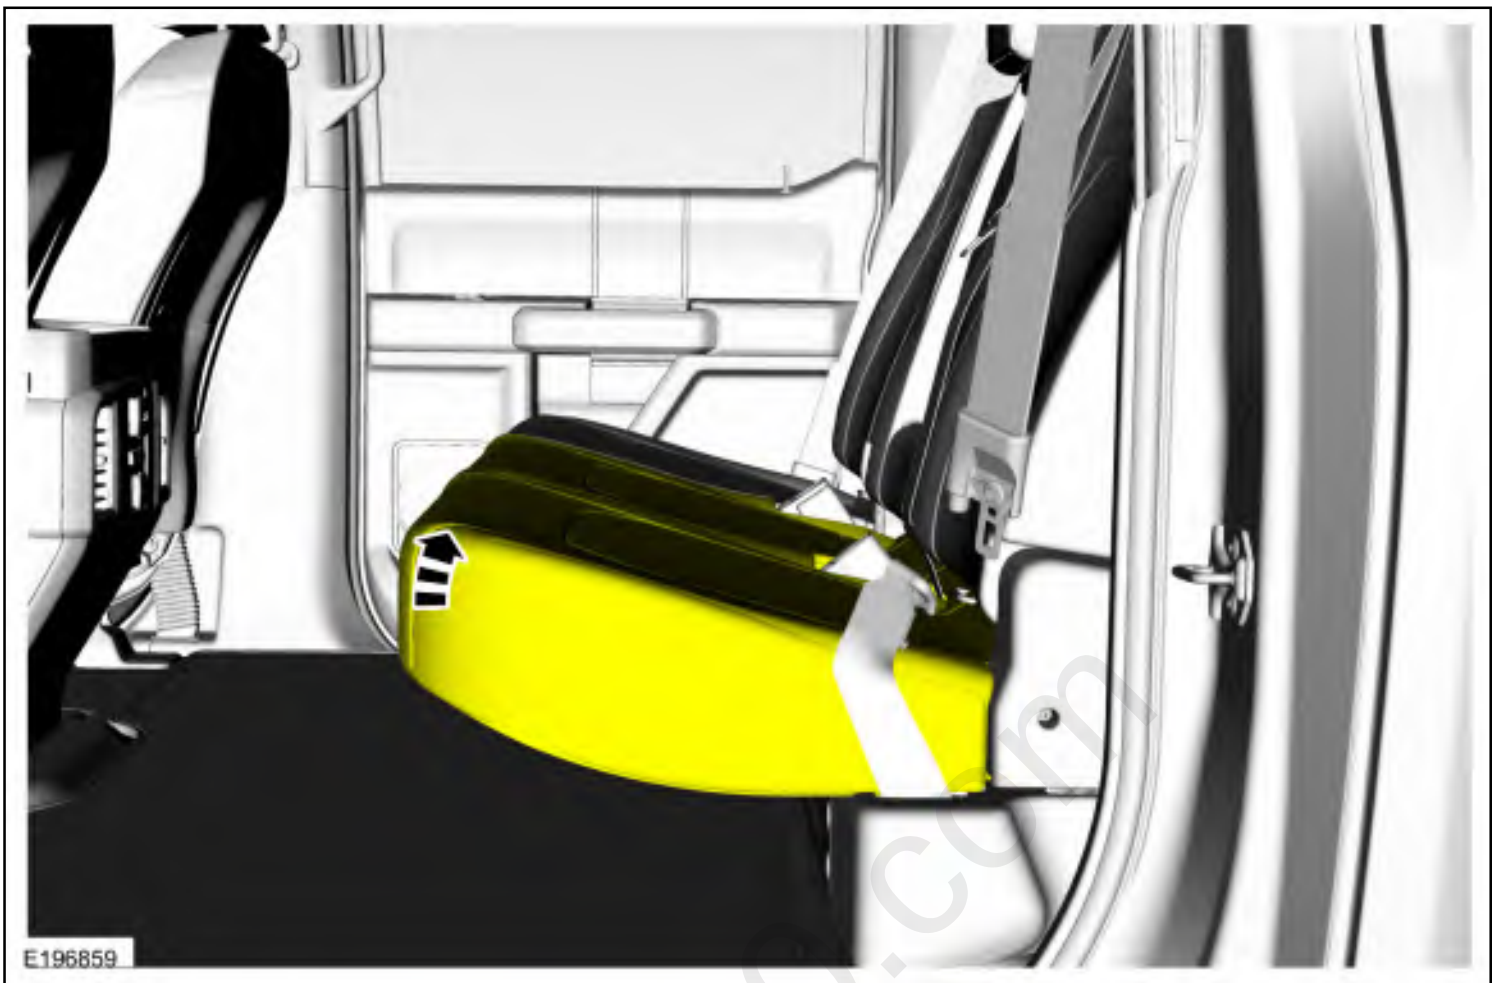

4. Remove the lower seatbelt retractor cover.
 1. Remove the screws.
 2. Remove the cover while feeding the seatbelt through the opening.

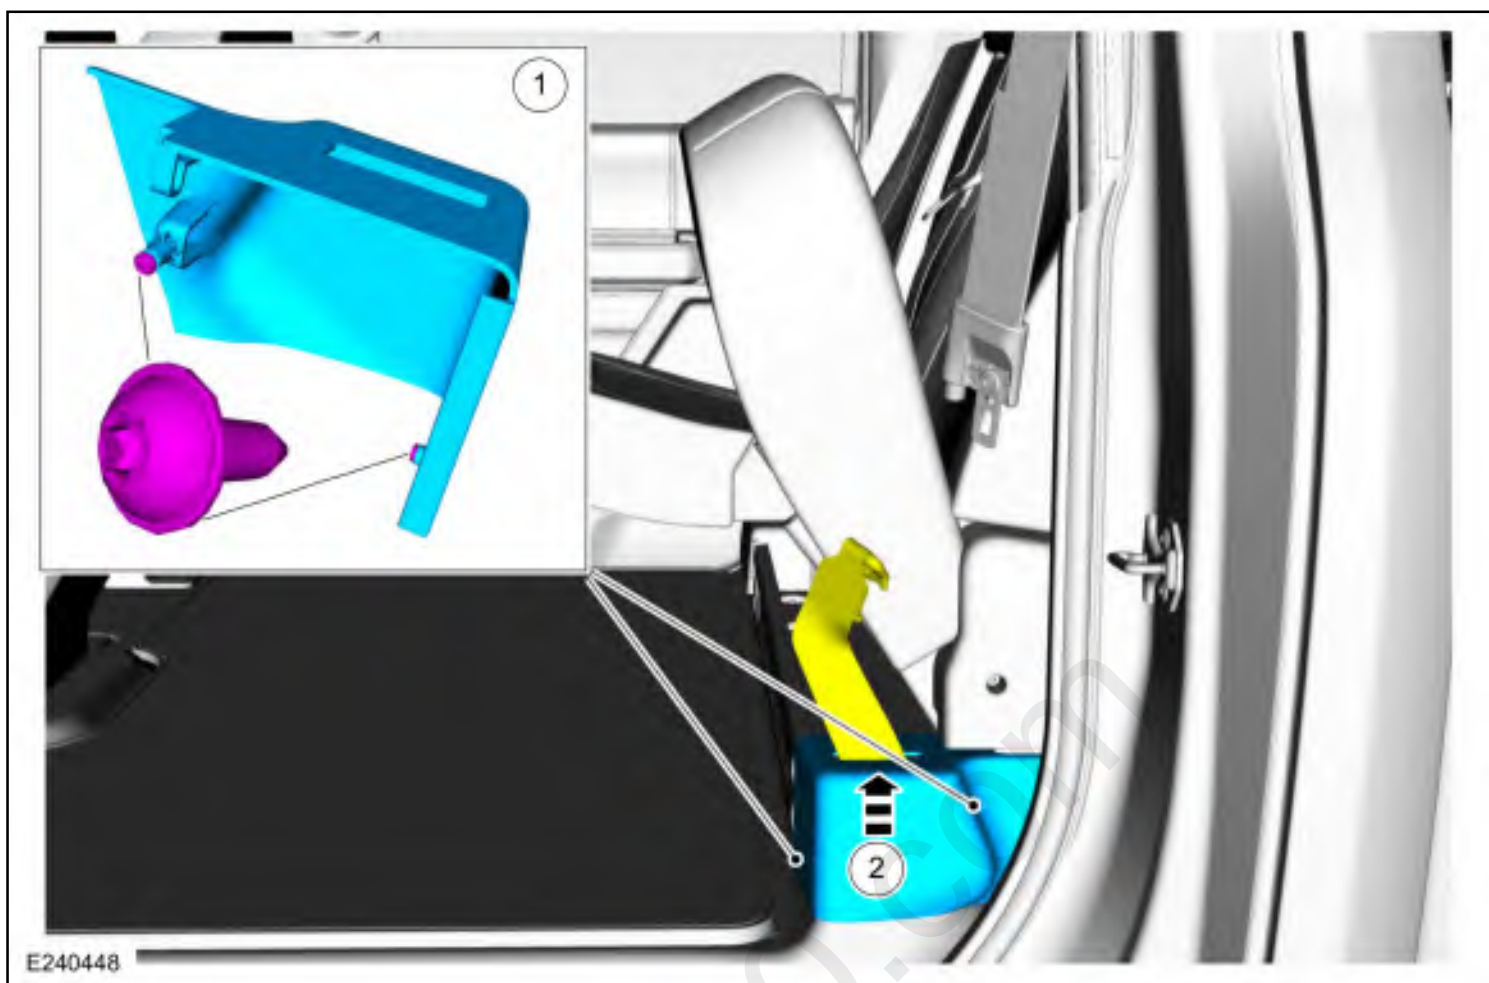

5. Remove the bolt and the lower seatbelt retractor.
Torque: 30 lb.ft (40 Nm)

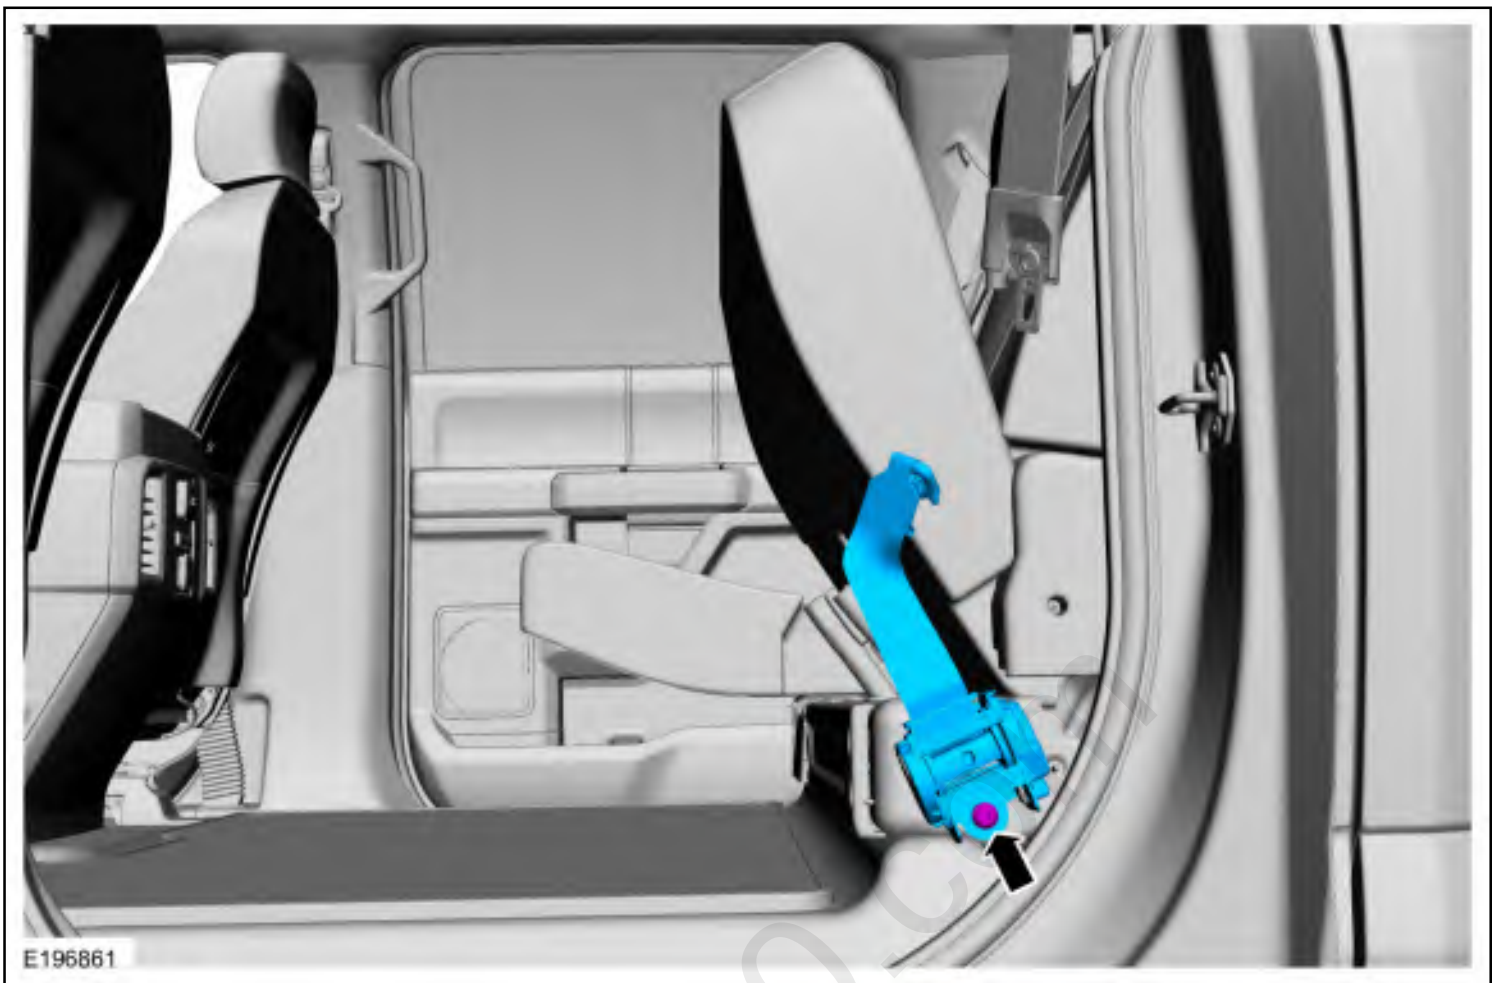

Installation

NOTE: During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.
2. Check the seatbelt system for correct operation.
Refer to: [Seatbelt Systems](#) (501-20A Seatbelt Systems, Diagnosis and Testing).