

Rear Seatbelt Buckle RH

Base Part Number: Base Part Number: 60044

Removal

NOTE: *Removal steps in this procedure may contain installation details.*

1. Remove the RH rear seat.
Refer to: [Rear Seat RH - SuperCab](#) (501-10B Rear Seats, Removal and Installation).
Refer to: [Rear Seat RH - SuperCrew](#) (501-10B Rear Seats, Removal and Installation).
2. Remove the bolt and the safety belt buckle.
Torque: 30 lb.ft (40 Nm)



E195392



Installation

NOTE: During installation, make sure the safety belt webbing is not twisted and the safety belts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.
2. Check the active restraint system for correct operation.
Refer to: [Seatbelt Systems](#) (501-20A Seatbelt Systems, Diagnosis and Testing).

Copyright © 2018 Ford Motor Company
