


Front Seatbelt Retractor and Pretensioner - Regular Cab

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH shown, RH similar.


1. Depower the SRS.
Refer to: [Supplemental Restraint System \(SRS\) Depowering](#) (501-20B Supplemental Restraint System, General Procedures).
2. Remove the B-pillar lower trim panel.
Refer to: [B-Pillar Trim Panel - Regular Cab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
3. Remove the D-ring cover.

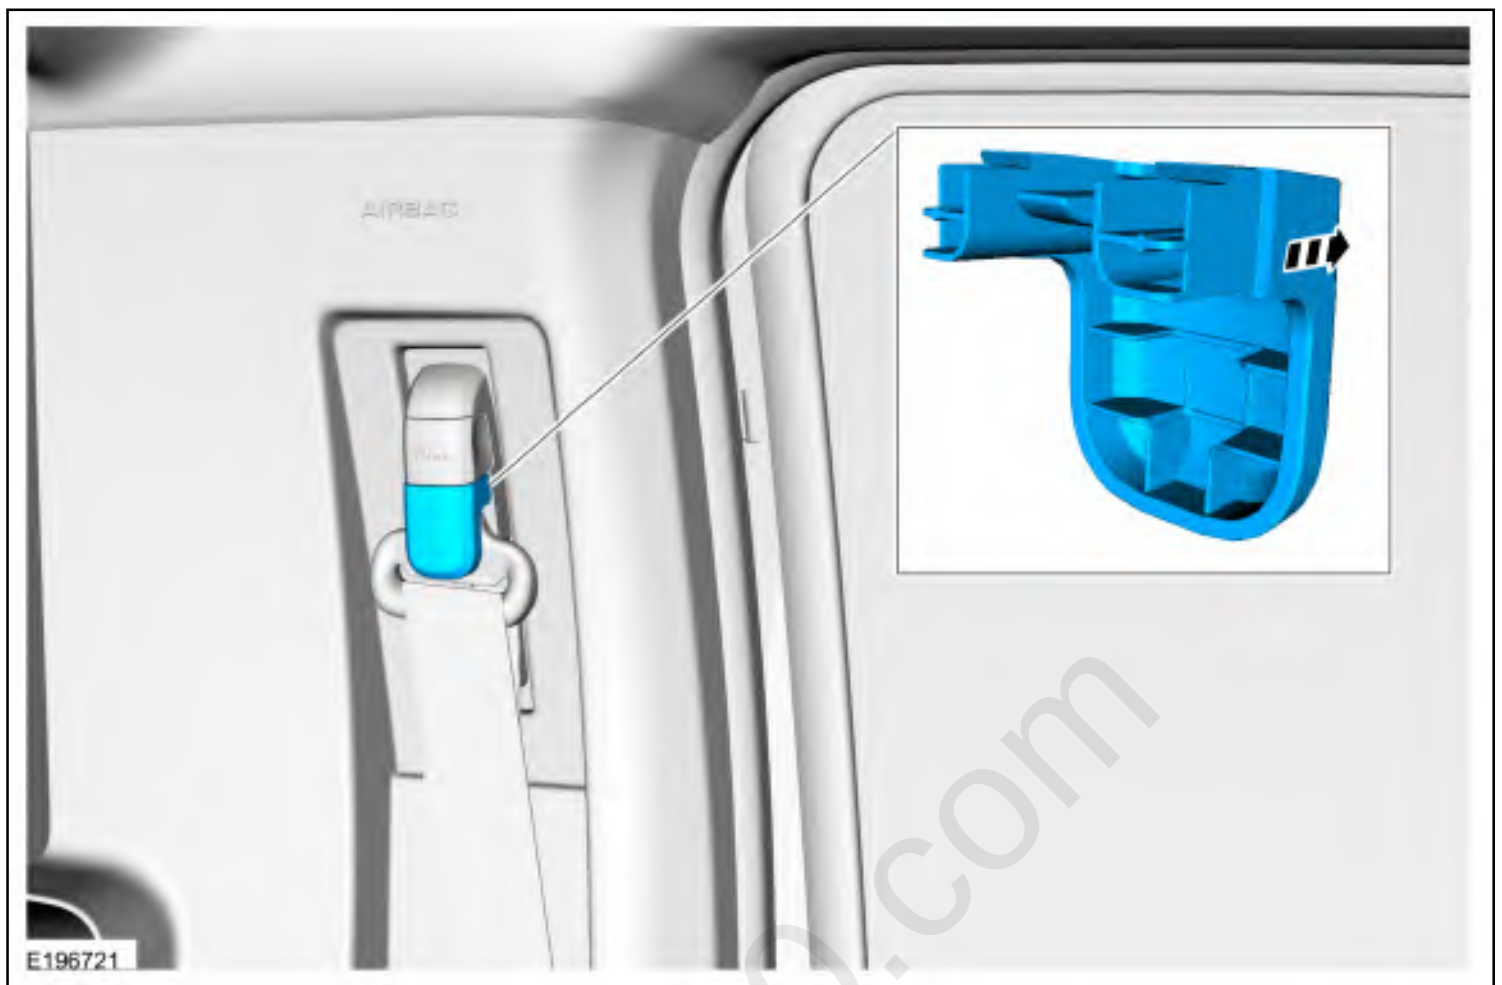


4. Remove the bolt and position the safety belt aside.
Torque: 30 lb.ft (40 Nm)

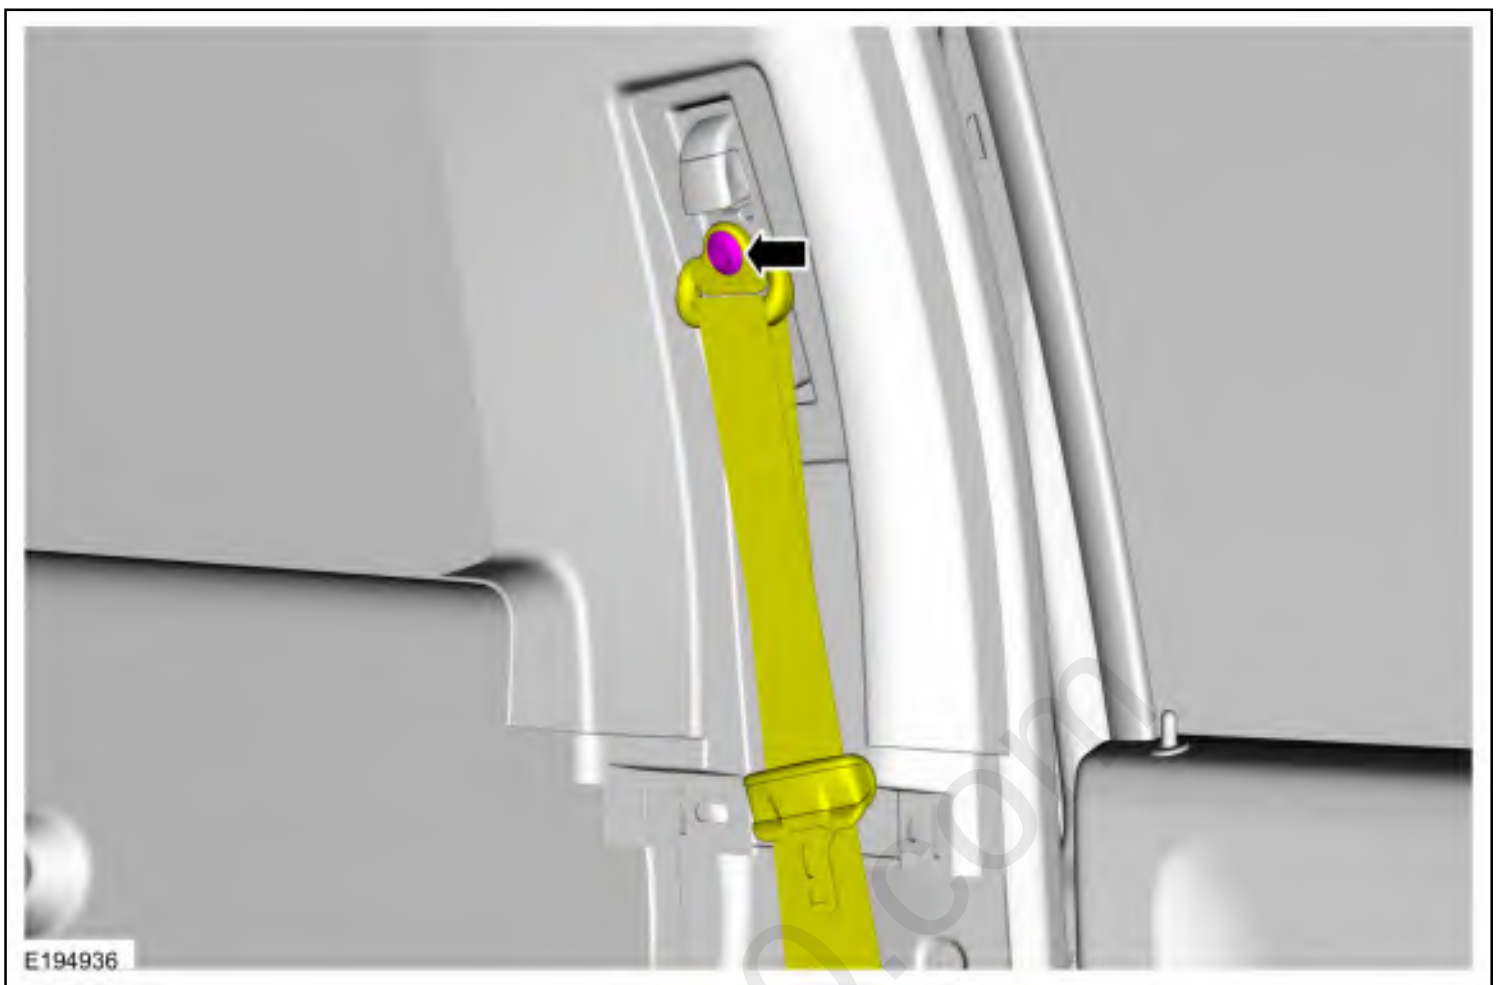

5. Disconnect the pretensioner electrical connectors and position aside.

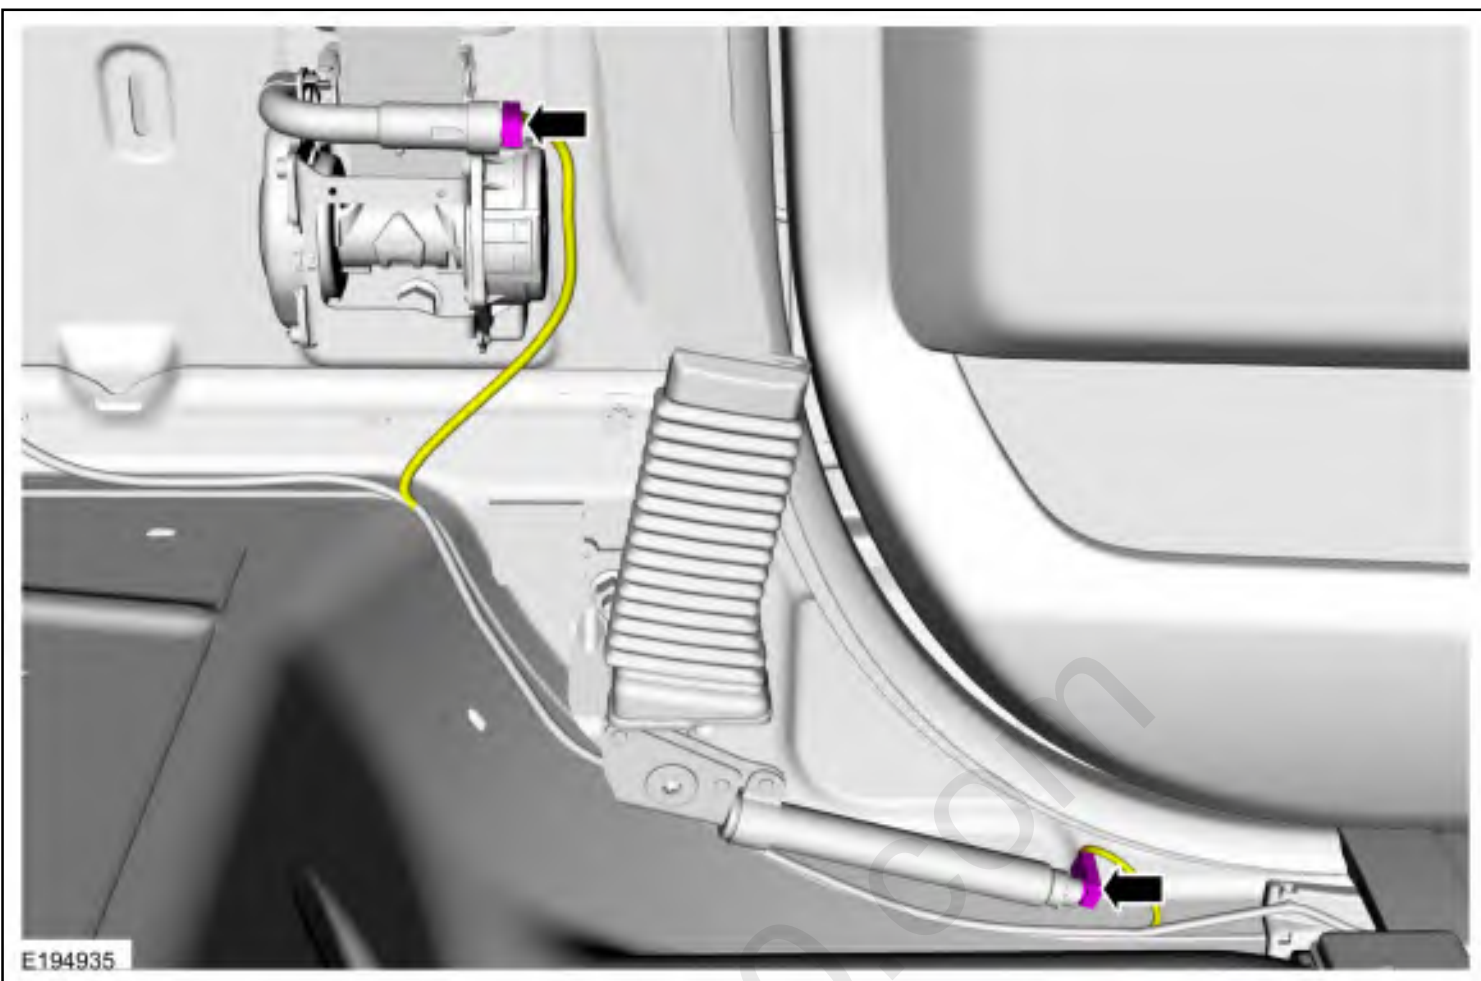

6. Remove the weather seal and discard.

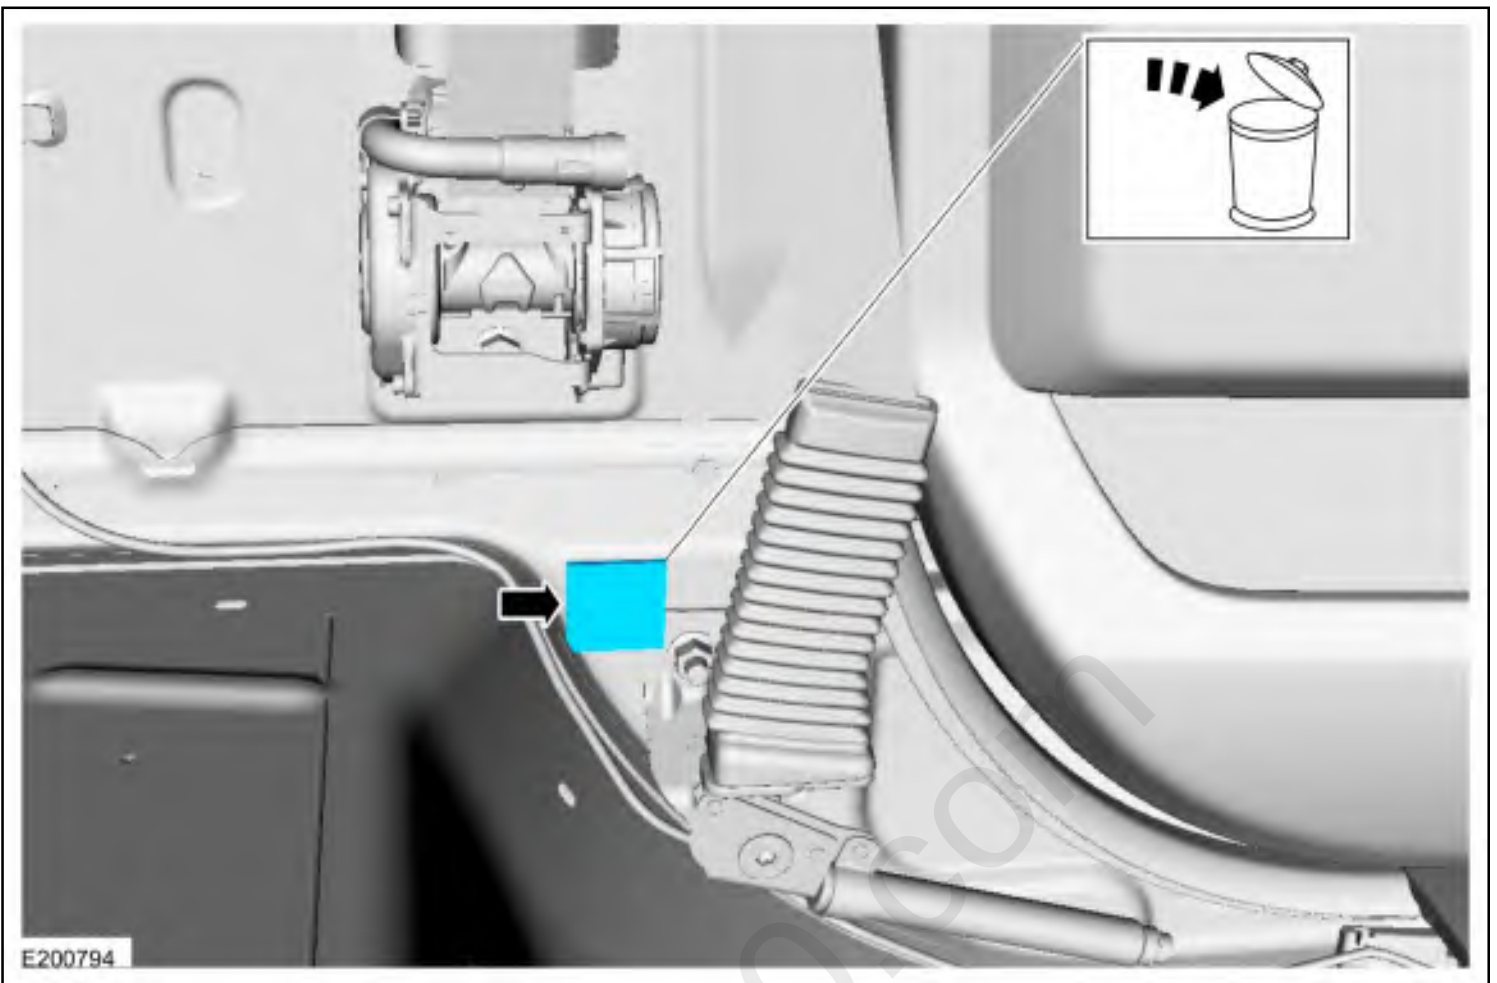

7. Remove the safety belt retractor and anchor pretensioner.

1. Remove the nut.

Torque: 30 lb.ft (40 Nm)

2. Remove the bolt and the safety belt retractor and anchor pretensioner.

Torque: 30 lb.ft (40 Nm)

