

Rear Center Seatbelt Retractor


Base Part Number: Base Part Number: 611B08

Removal


NOTE: *SuperCrew shown, all others similar.*

NOTE: *Removal steps in this procedure may contain installation details.*


1. Remove the load space trim panel.
Refer to: [Loadspace Trim Panel - SuperCab/SuperCrew](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the nut and position the rear center safety belt/buckle anchor aside.
Torque: 59 lb.ft (80 Nm)

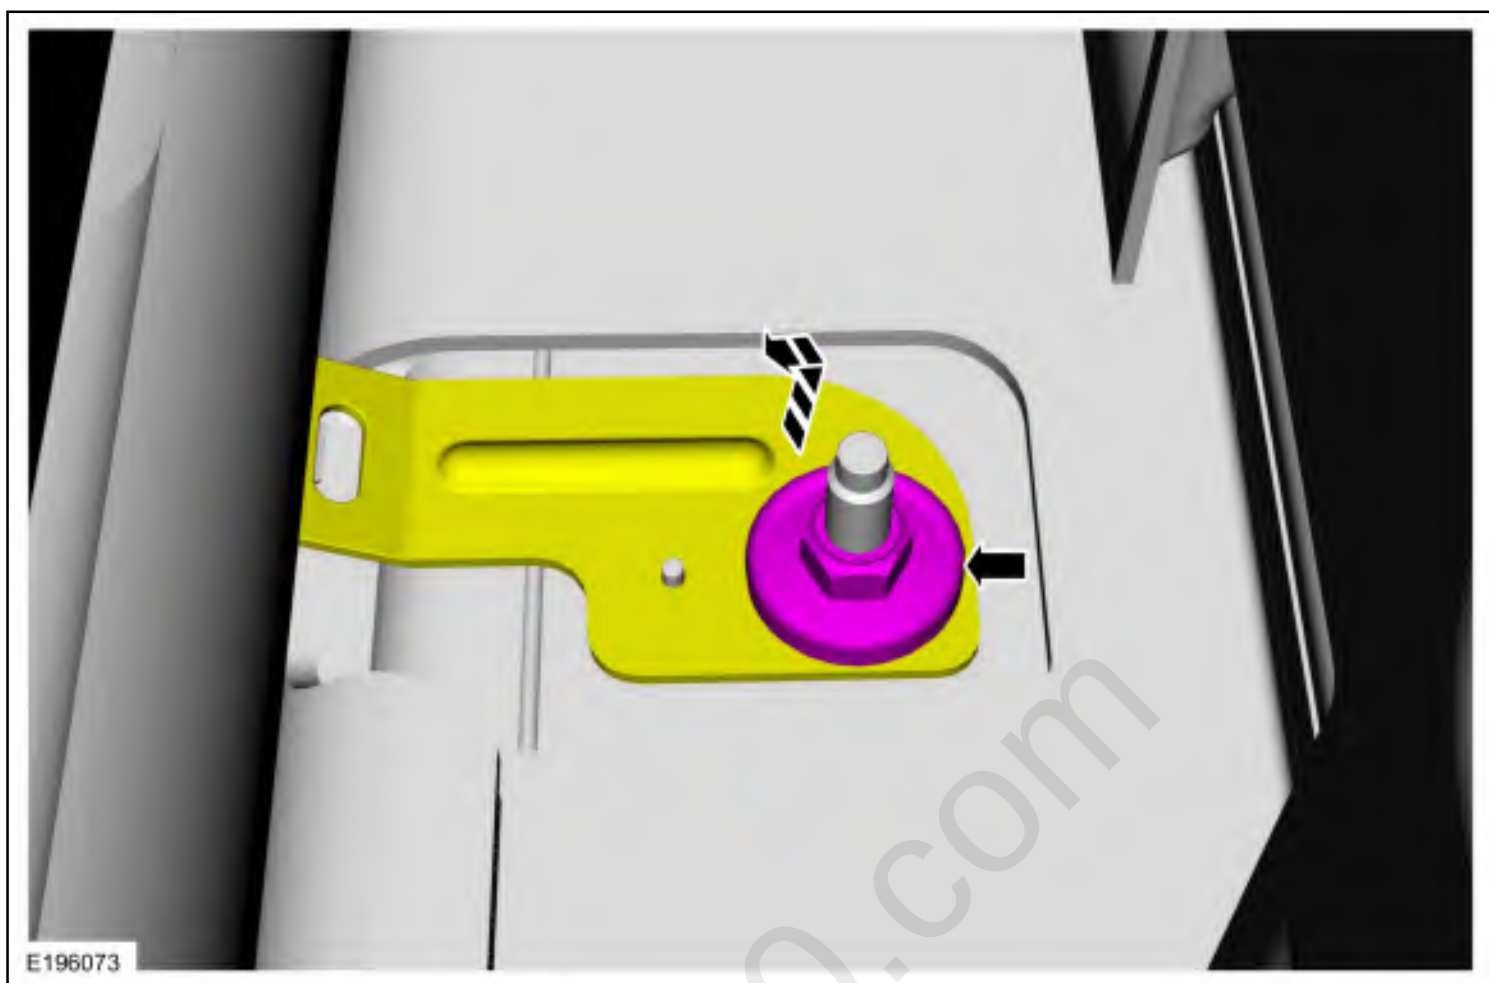


3. Lift the rear seat backrest up.

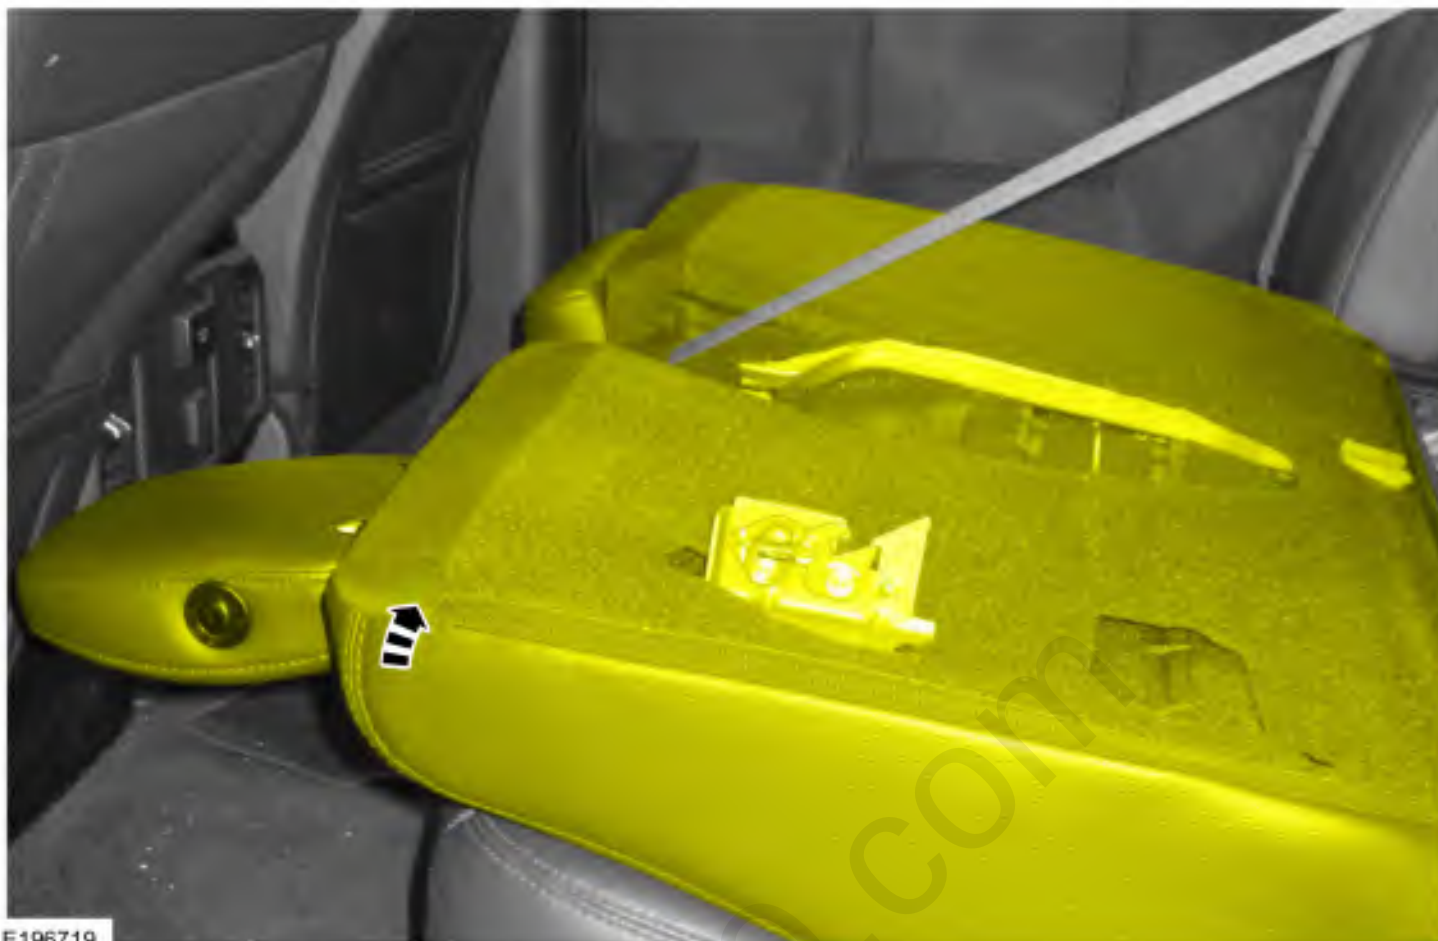


4. Pull the rear center safety belt/buckle through the seat cushion.

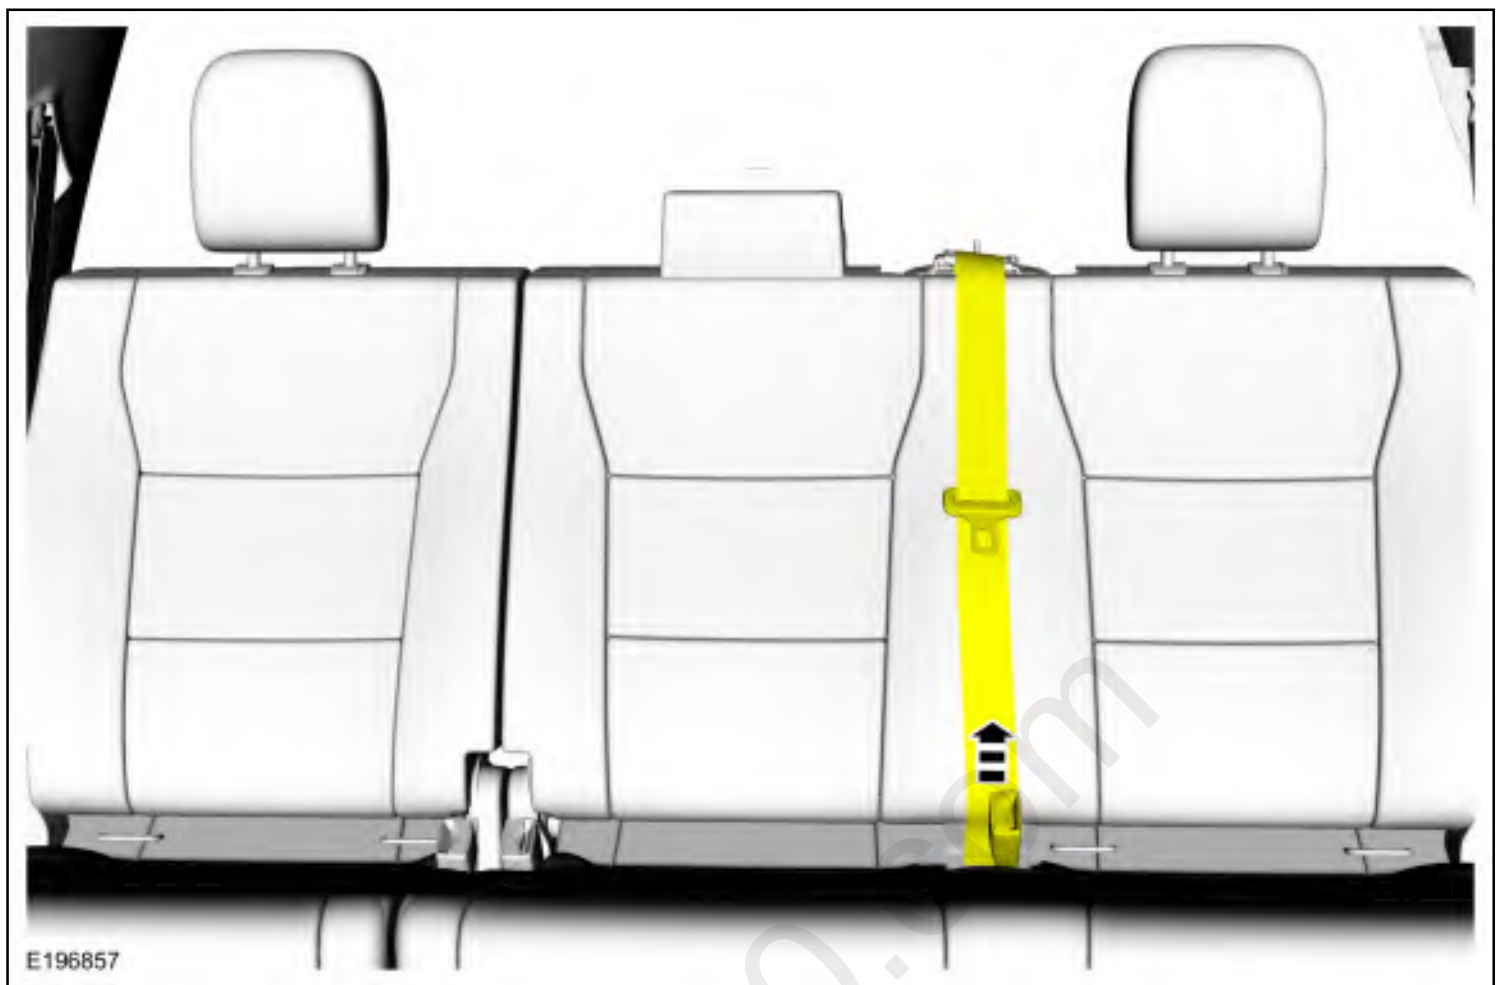

5. Remove the bolts and position the safety belt guide aside.
Torque: 30 lb.ft (40 Nm)

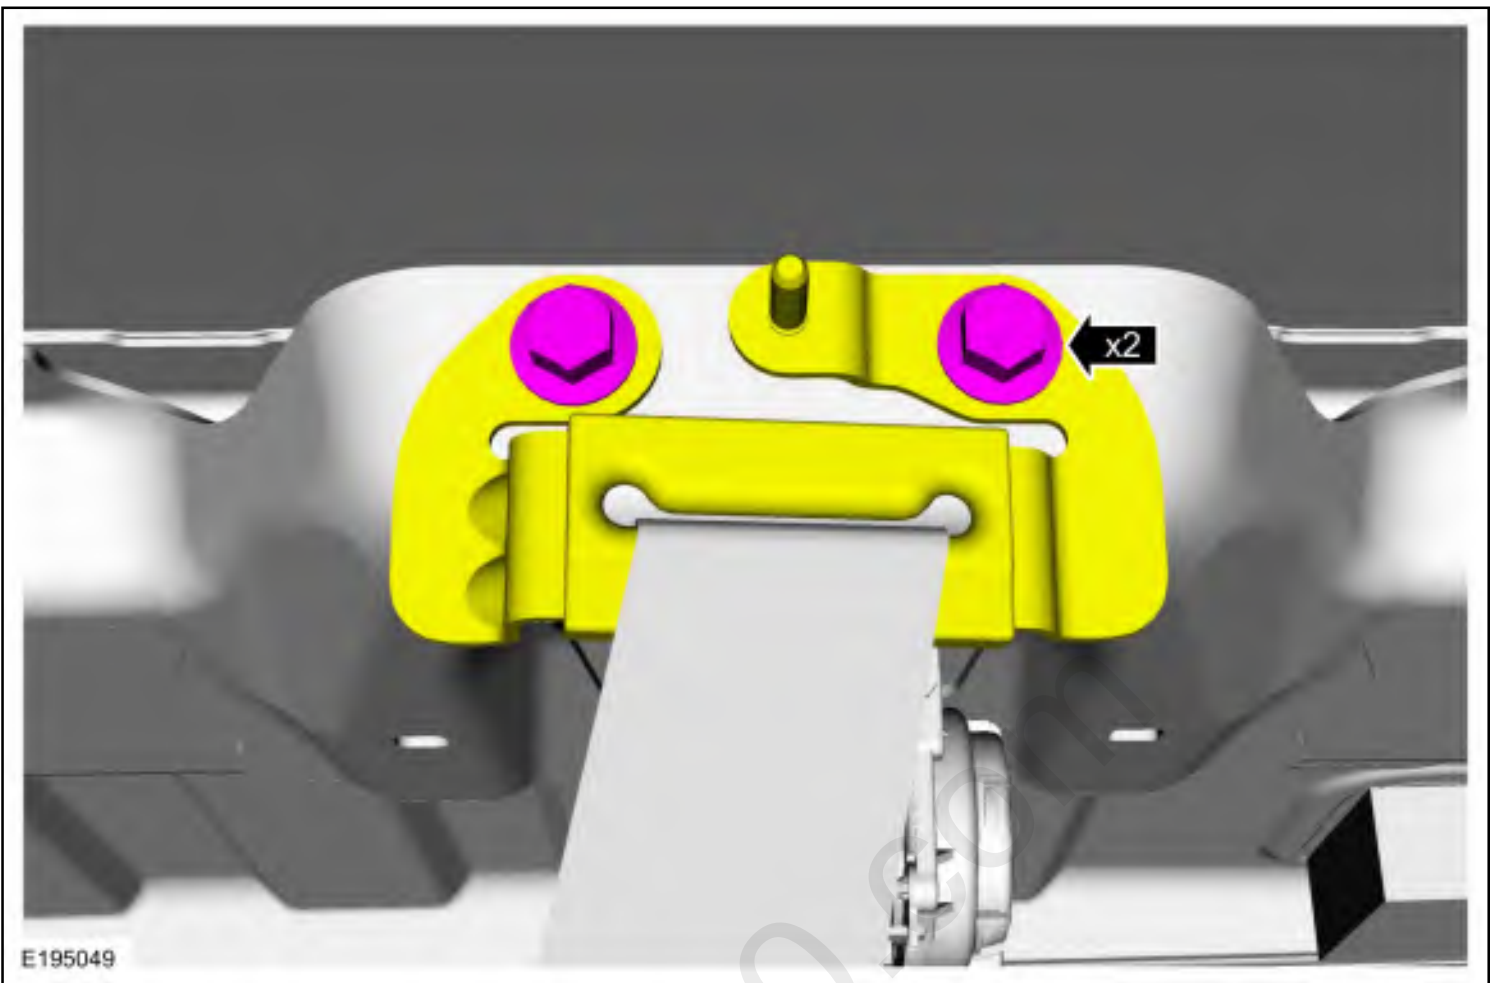

6. Remove the bolt and the safety belt retractor.
Torque: 30 lb.ft (40 Nm)

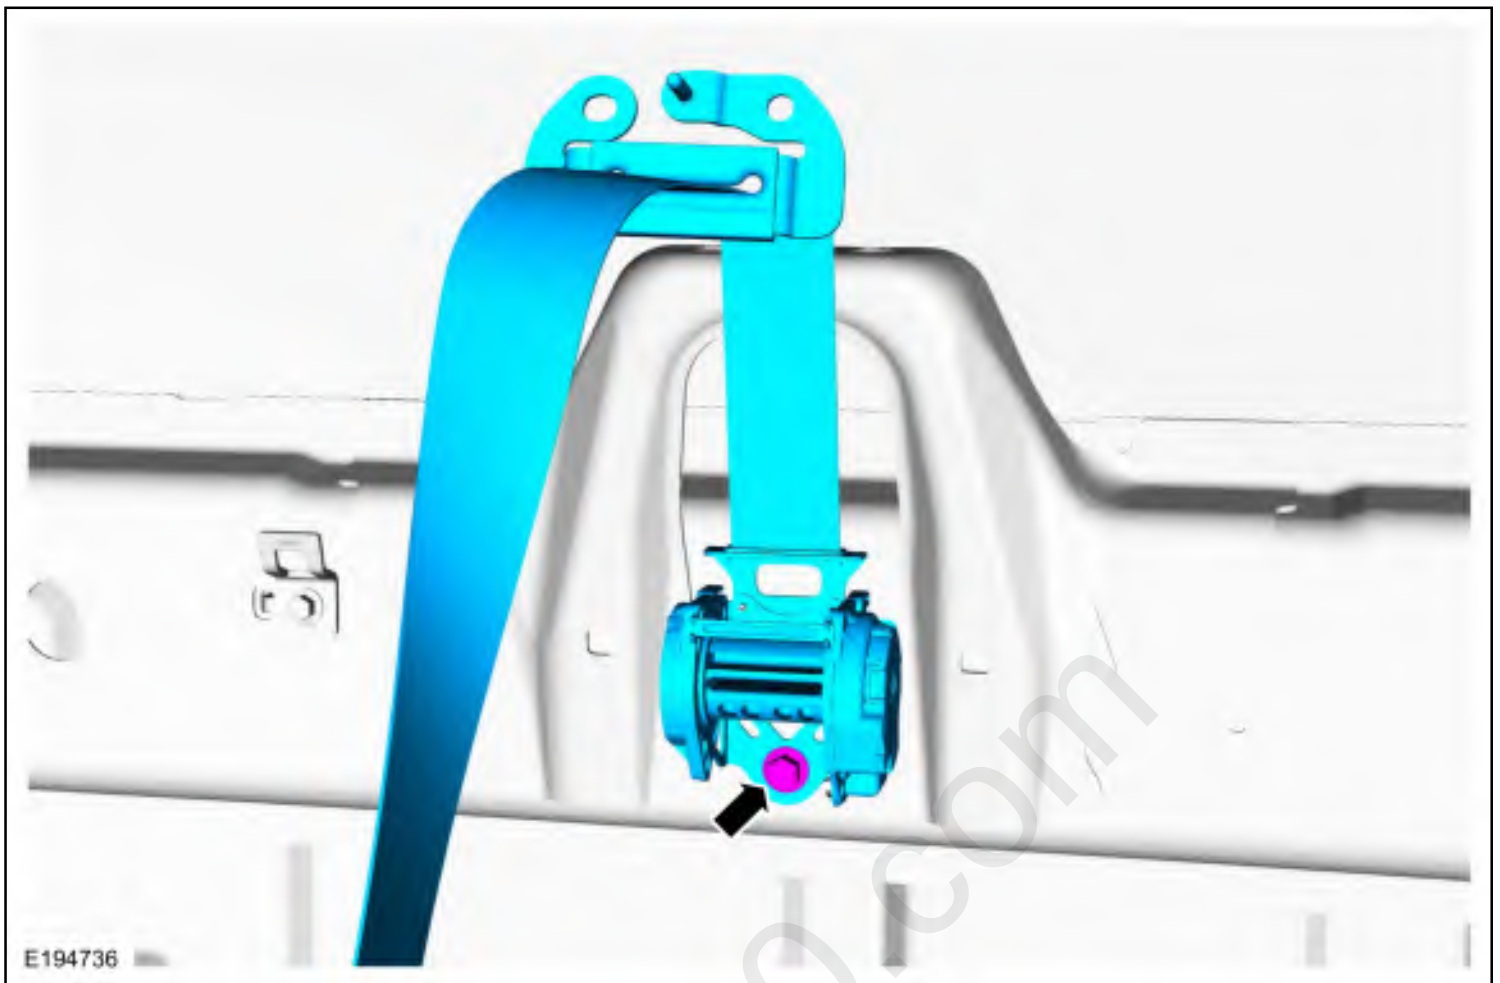

Installation

NOTE: During installation, make sure the safety belt webbing is not twisted and the safety belts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.
2. Check the active restraint system for correct operation.
Refer to: [Seatbelt Systems](#) (501-20A Seatbelt Systems, Diagnosis and Testing).