


Front Center Seatbelt Retractor - Regular Cab

Base Part Number: Base Part Number: 611B08

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Press the locking tab and disconnect the safety belt from the detachable safety belt anchor.

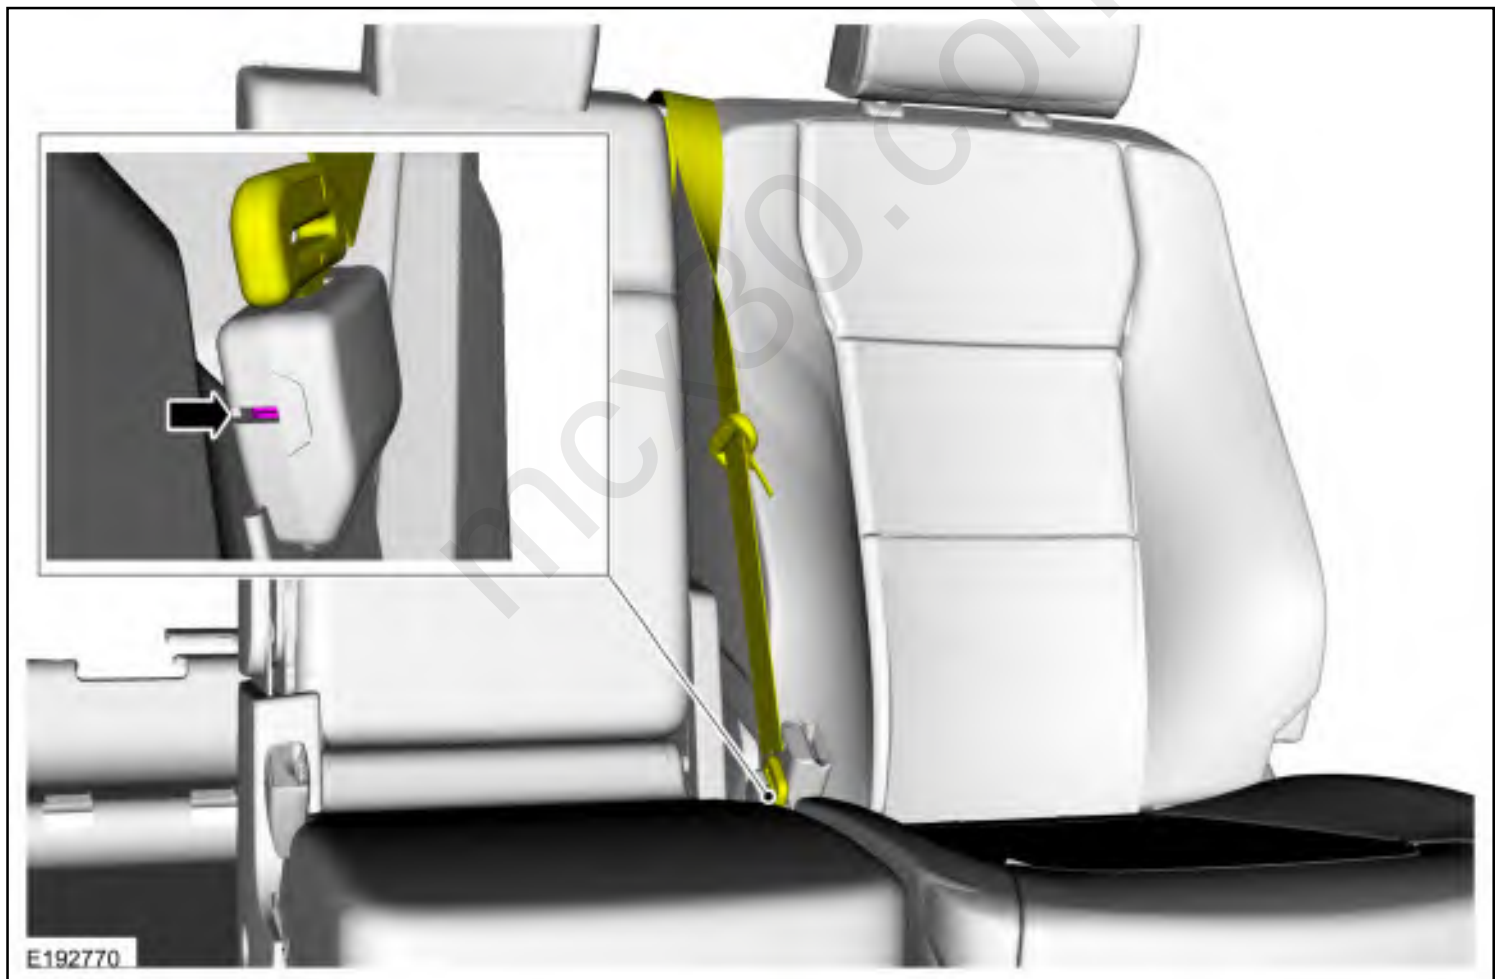


2. Remove the load space trim panel.
Refer to: [Loadspace Trim Panel - Regular Cab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

3. Remove the bolts and position the safety belt guide aside.
Torque: 30 lb.ft (40 Nm)



4. Remove the bolt and the safety belt retractor.
Torque: 30 lb.ft (40 Nm)

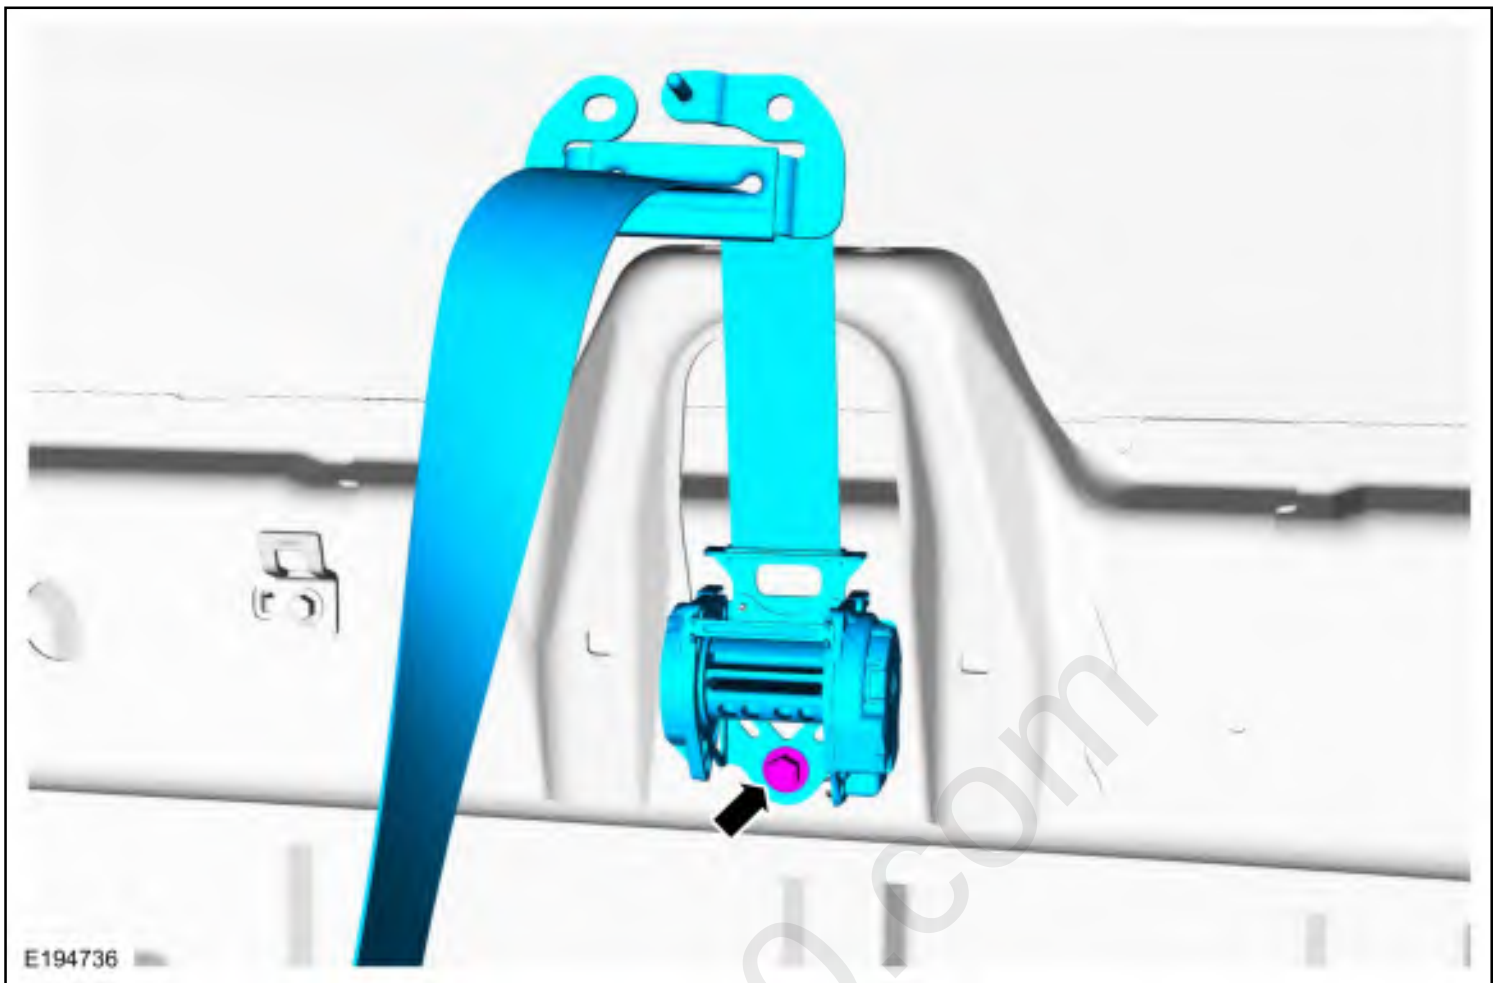

Installation

NOTE: During installation, make sure the safety belt webbing is not twisted and the safety belts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.
2. Check the active restraint system for correct operation.
Refer to: [Seatbelt Systems](#) (501-20A Seatbelt Systems, Diagnosis and Testing).