

Rear Seatbelt Retractor

Base Part Number: Base Part Number: 611B64

Removal

NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH shown, RH similar.

SuperCab


1. Remove the B-pillar trim panel.
Refer to: [B-Pillar Trim Panel - SuperCab](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

SuperCrew


2. Remove the C-pillar trim panel.
Refer to: [C-Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

SuperCab and SuperCrew

3. Remove the bolt and position the safety belt aside.
Torque: 30 lb.ft (40 Nm)

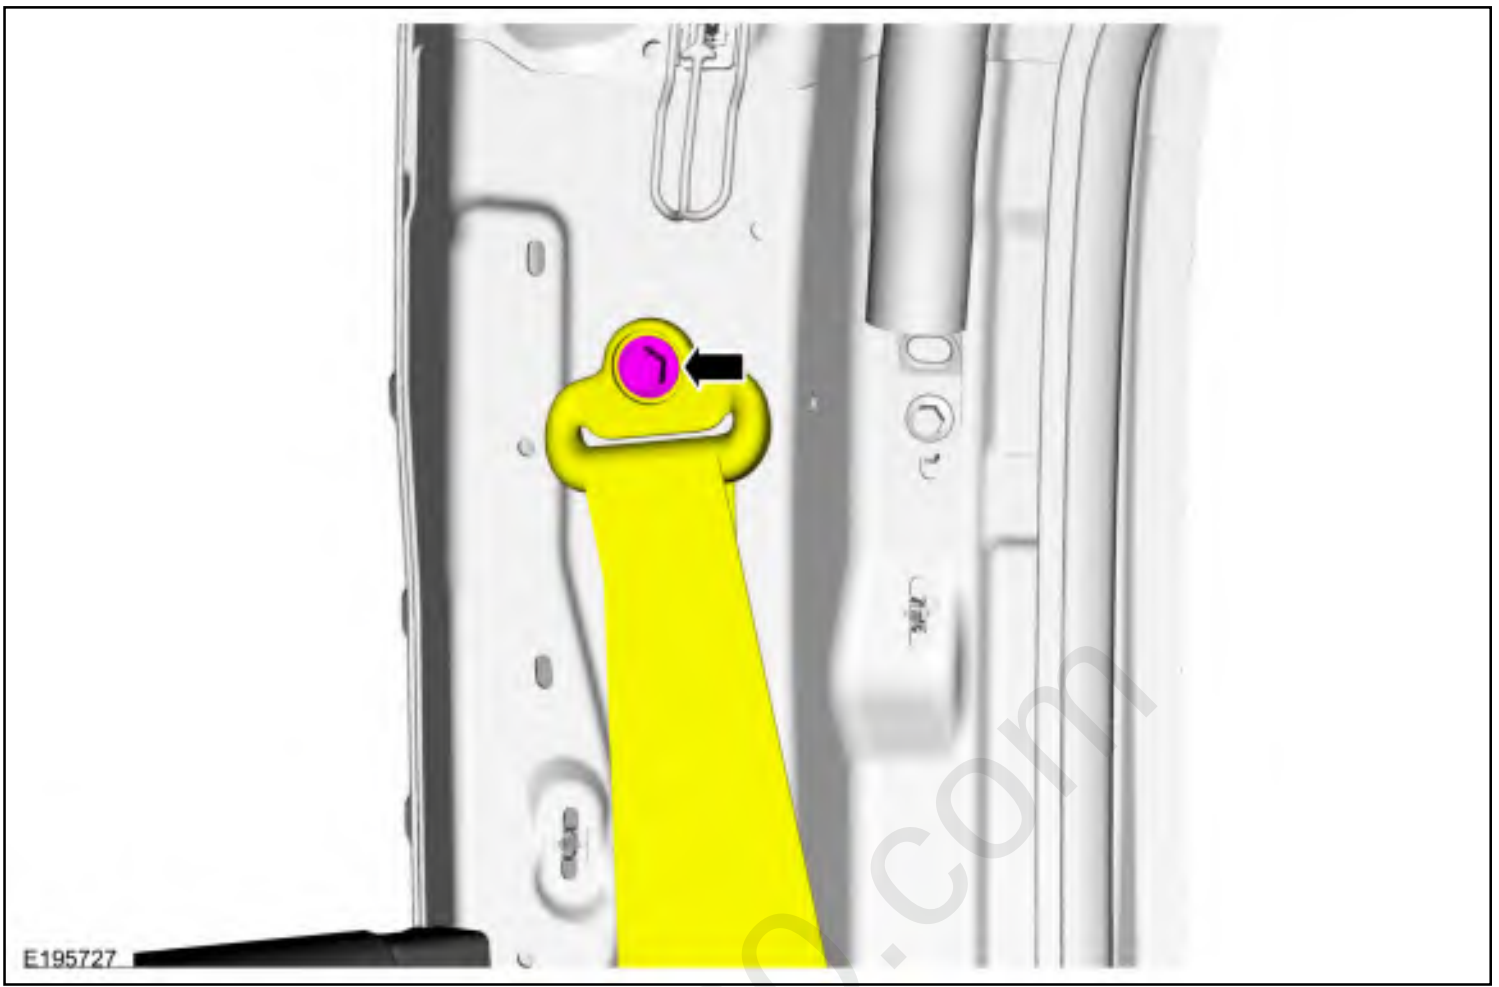

4. Remove the bolt and the safety belt retractor.
Torque: 30 lb.ft (40 Nm)

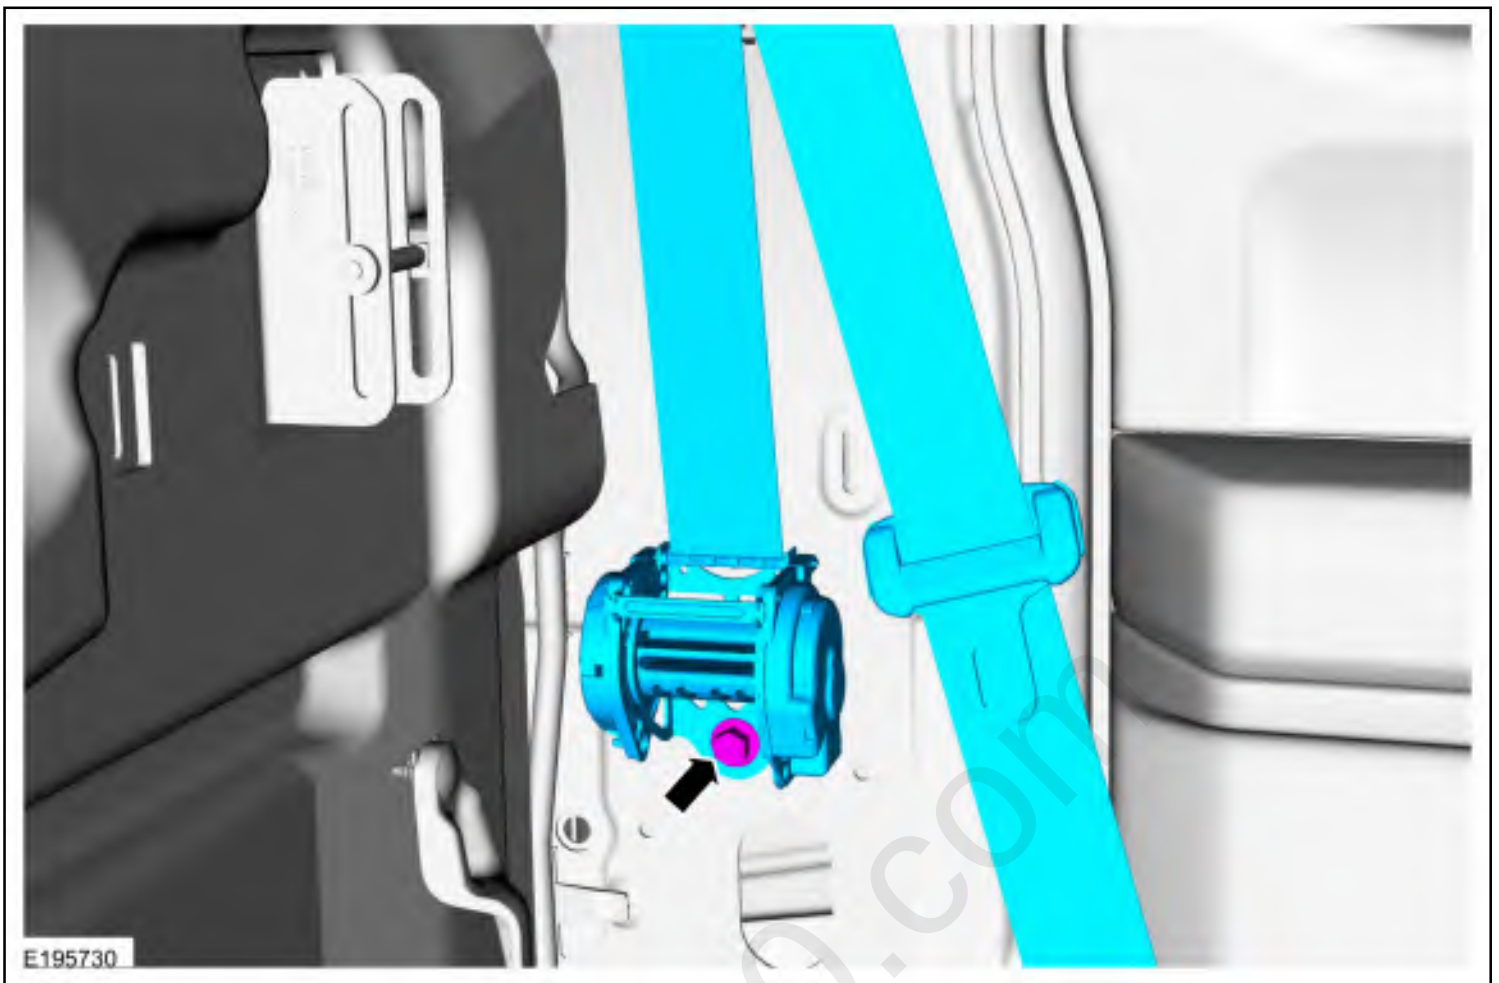

Installation

NOTE: During installation, make sure the safety belt webbing is not twisted and the safety belts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.
2. Check the active restraint system for correct operation.
Refer to: [Seatbelt Systems](#) (501-20A Seatbelt Systems, Diagnosis and Testing).