


Rear Outer Seatbelt Upper Retractor - Vehicles With: Inflatable Seatbelts

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH shown, RH similar.

1. Remove the C-pillar trim panel.
Refer to: [C-Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the bolt and position the safety belt aside.
Torque: 30 lb.ft (40 Nm)

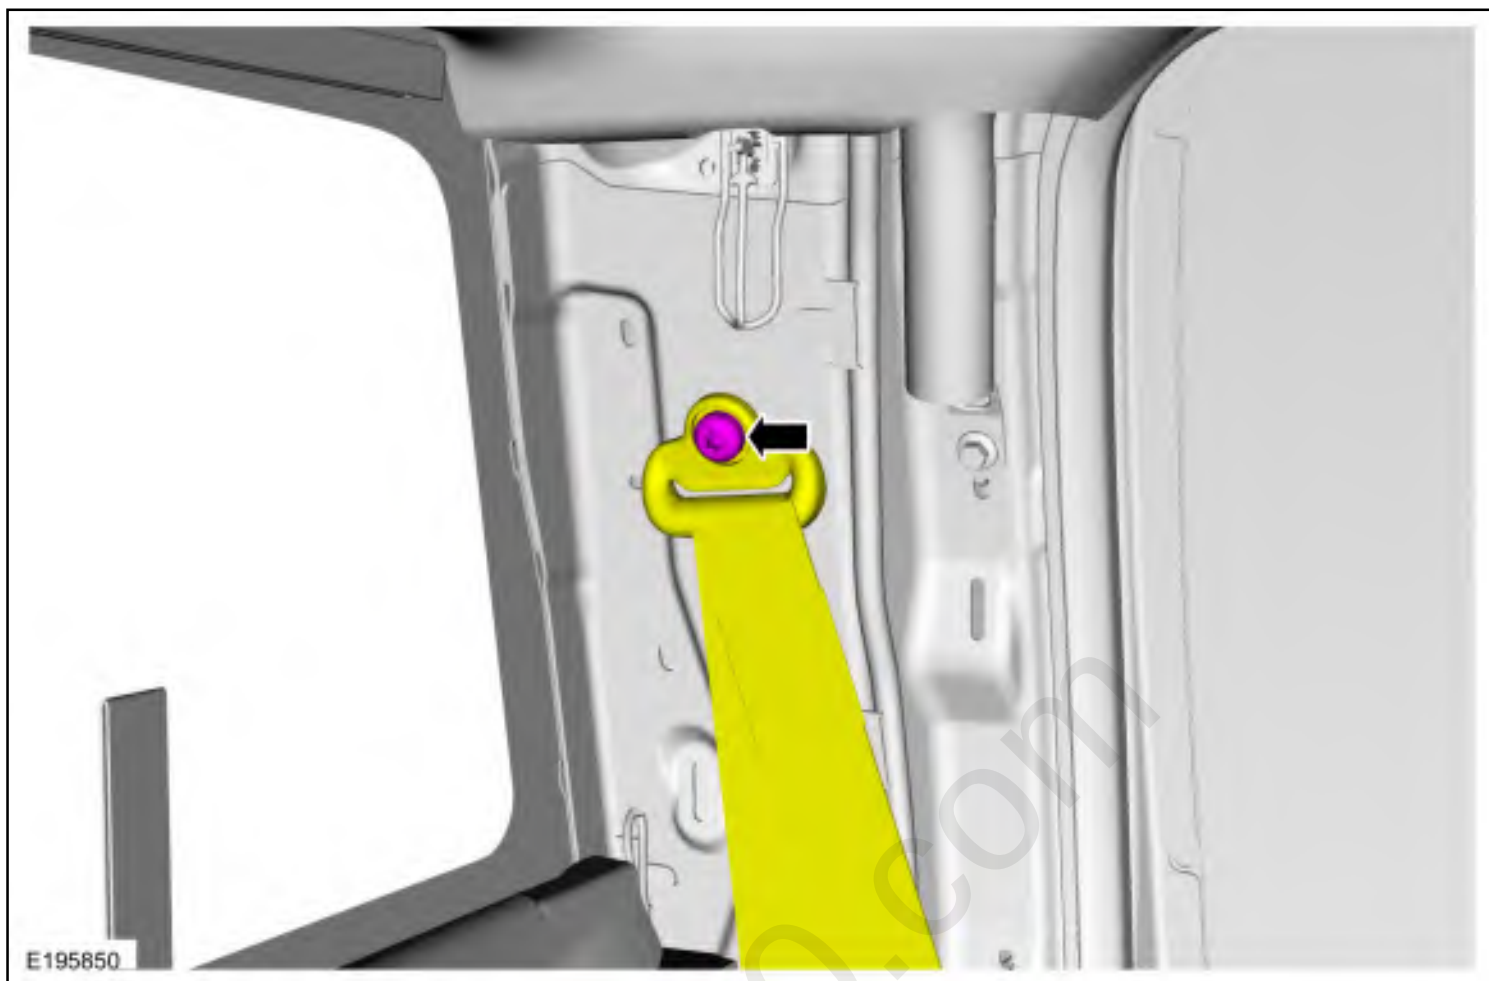

3. Remove the bolt and the upper safety belt retractor.
Torque: 30 lb.ft (40 Nm)

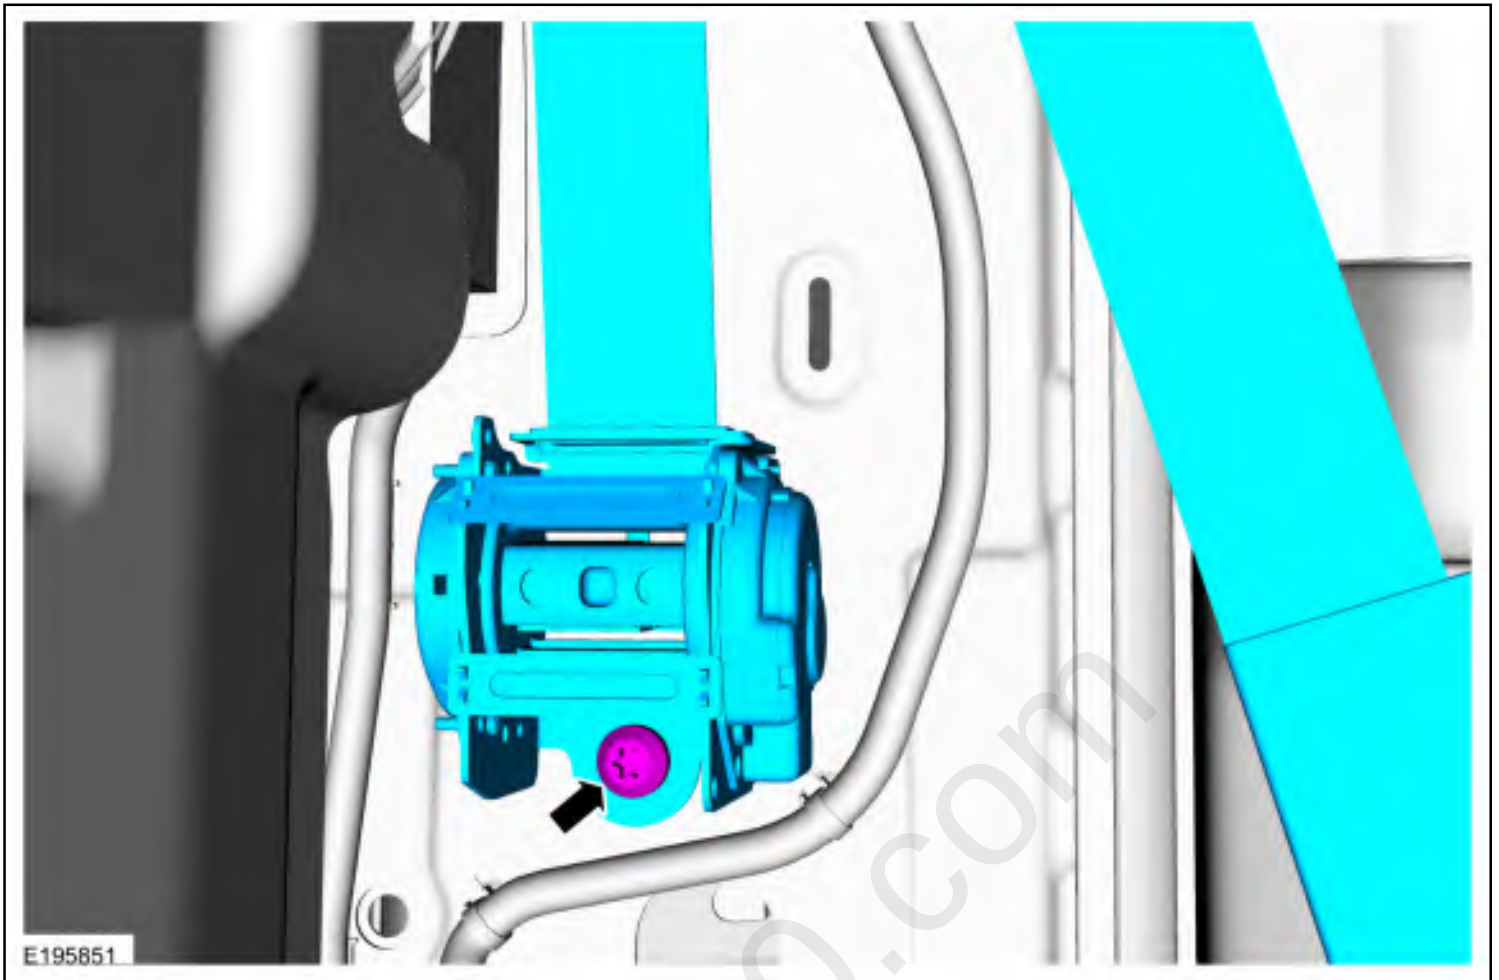

Installation

1. To install, reverse the removal procedure.
2. Check the active restraint system for correct operation.
Refer to: [Seatbelt Systems](#) (501-20A Seatbelt Systems, Diagnosis and Testing).