

Rear Seatbelt Buckle LH - Vehicles With: Inflatable Seatbelts

Base Part Number: Base Part Number: 60044

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Depower the SRS.
Refer to: [Supplemental Restraint System \(SRS\) Depowering](#) (501-20B Supplemental Restraint System, General Procedures).
2. **NOTE:** The seat backrest latch is only accessible when the seat cushion is raised.


NOTE: The striker should be in its lowest position for the latch to engage.

Fold the LH rear seat backrest down.


1. Raise the seat cushion.
2. Release the seat latch.
3. Fold the seat backrest down.

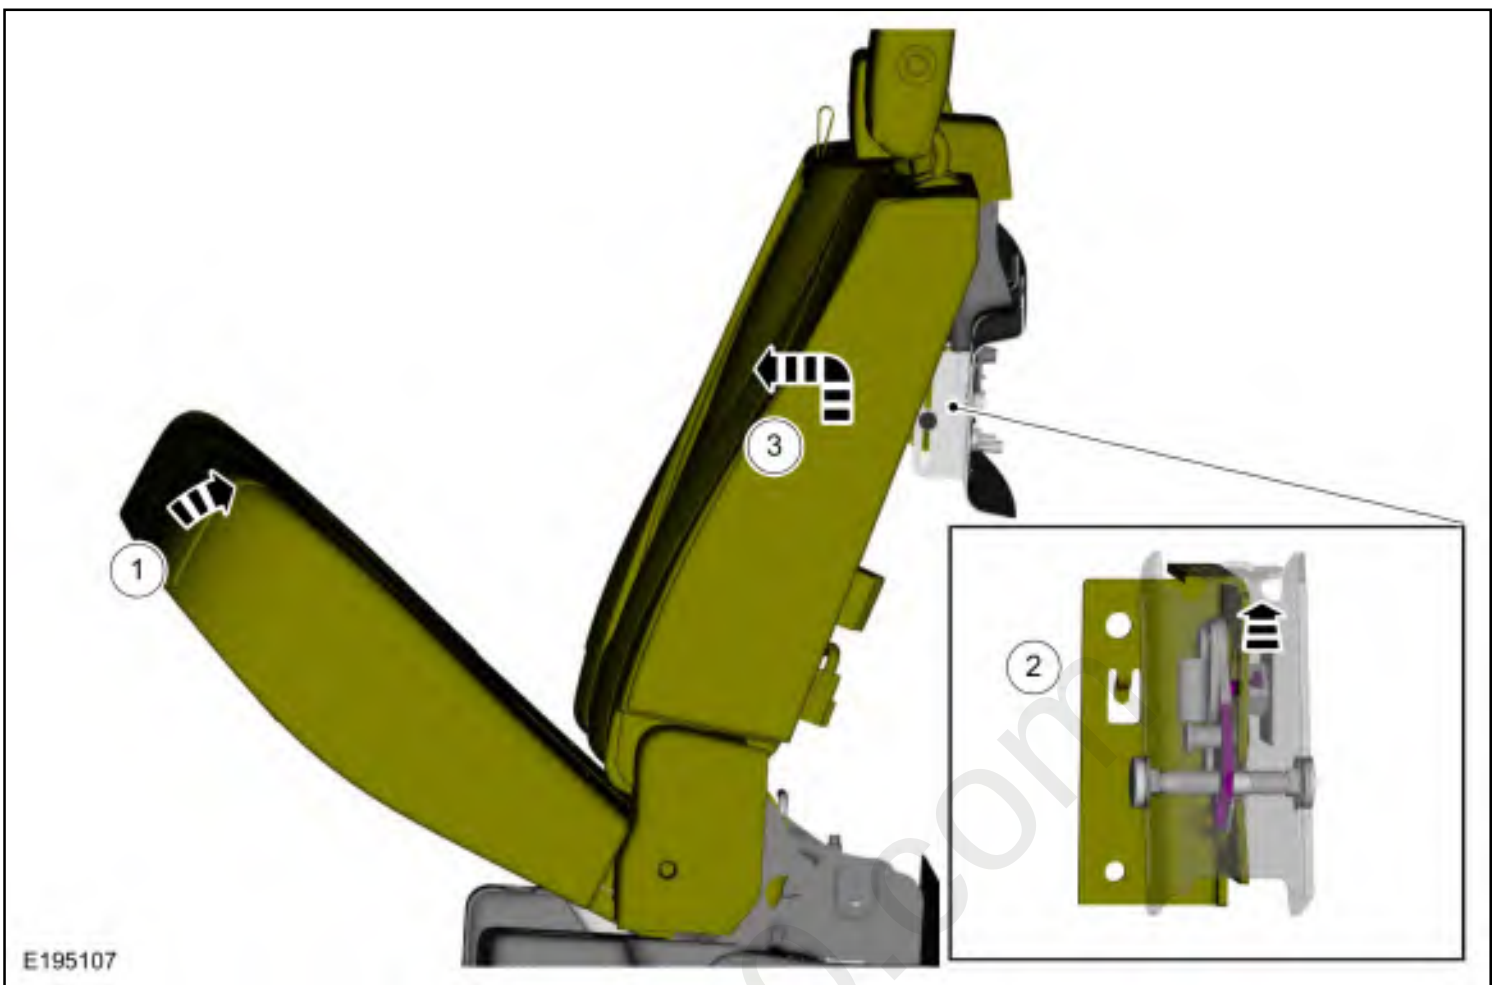


3. If equipped, remove the subwoofer.
 1. Disconnect the electrical connector.
 2. Remove the bolt.
Torque: 62 lb.in (7 Nm)
 3. Remove the nuts.
Torque: 62 lb.in (7 Nm)

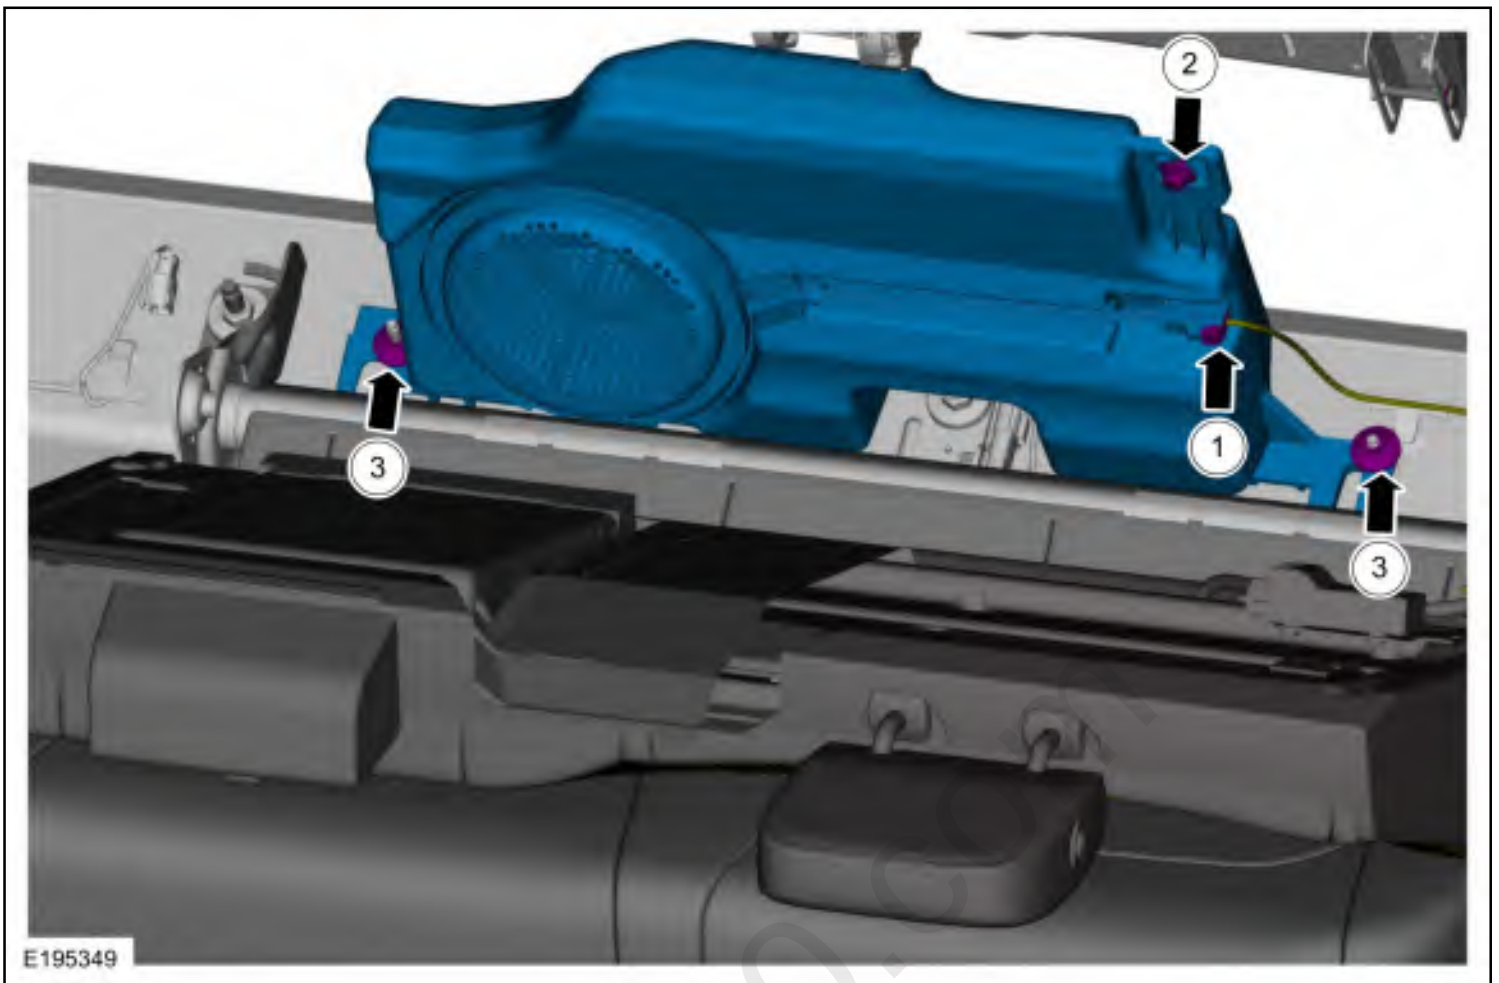

4. Remove the nut and position the rear center safety belt anchor aside.
Torque: 59 lb.ft (80 Nm)

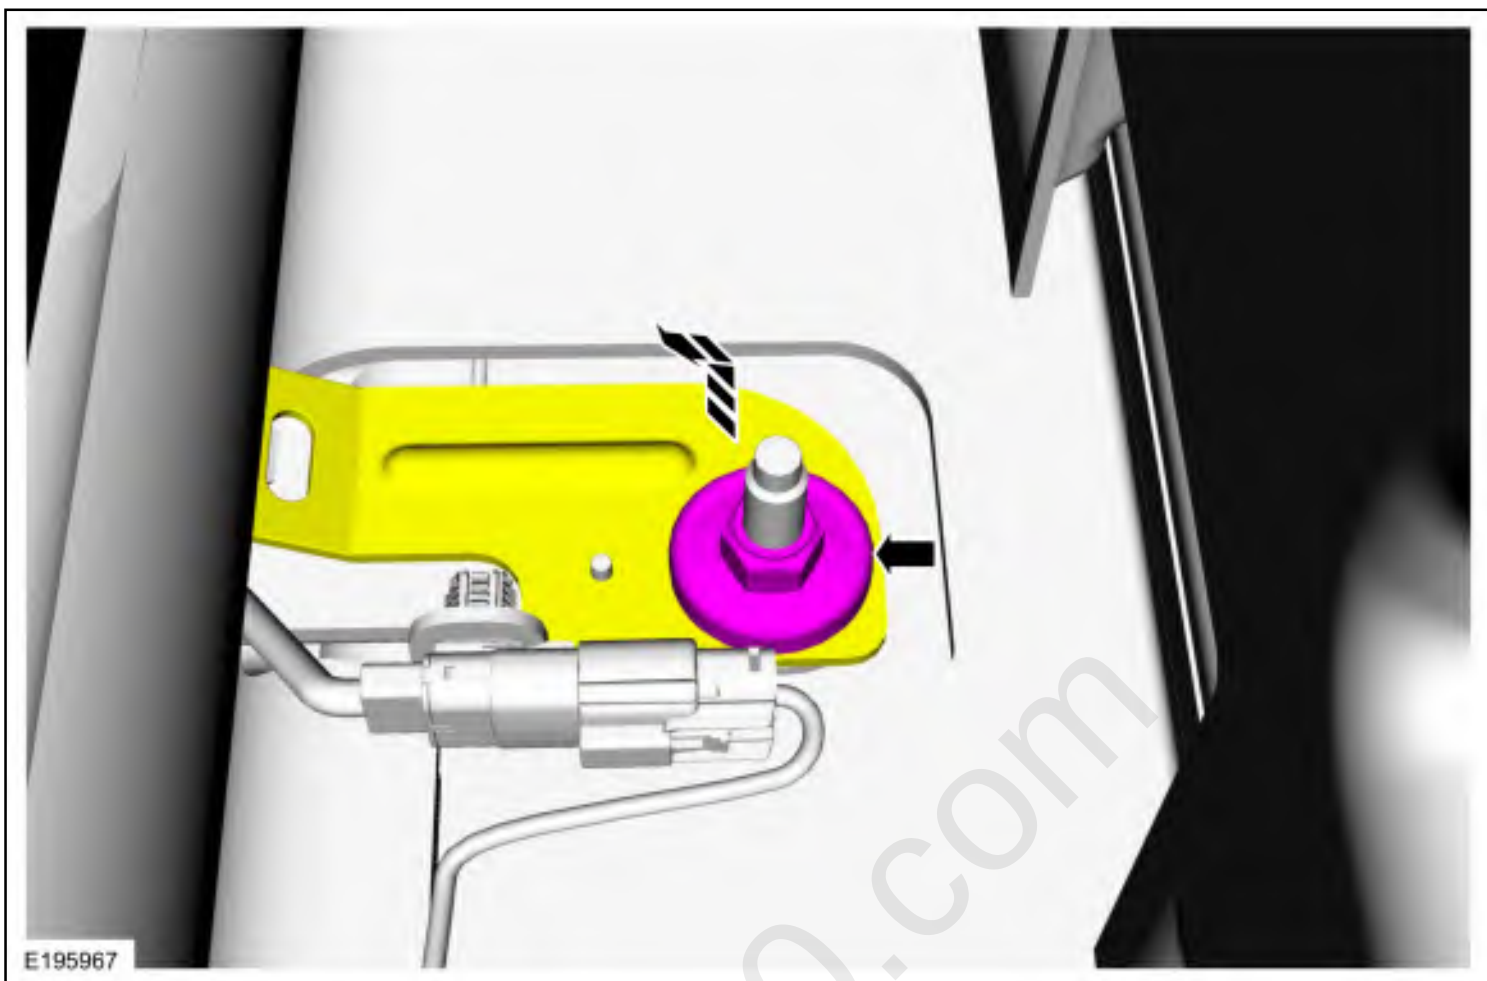


5. Disconnect the safety belt buckle electrical connector.

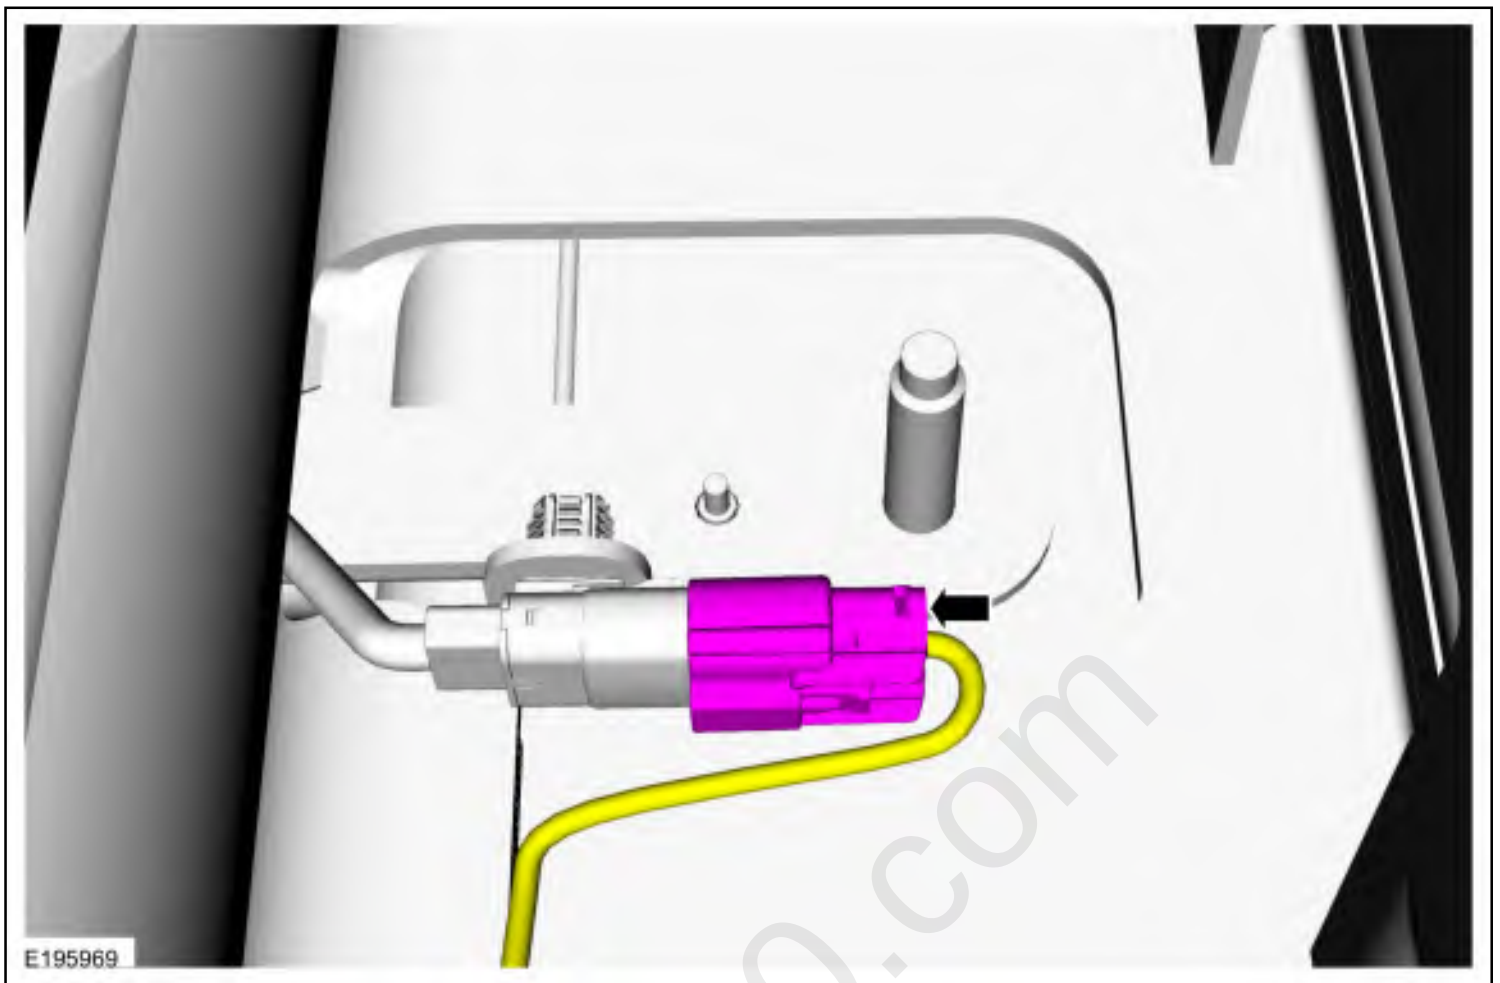


6. Lift the rear seat backrest up.



7. Lift the rear seat cushion up.

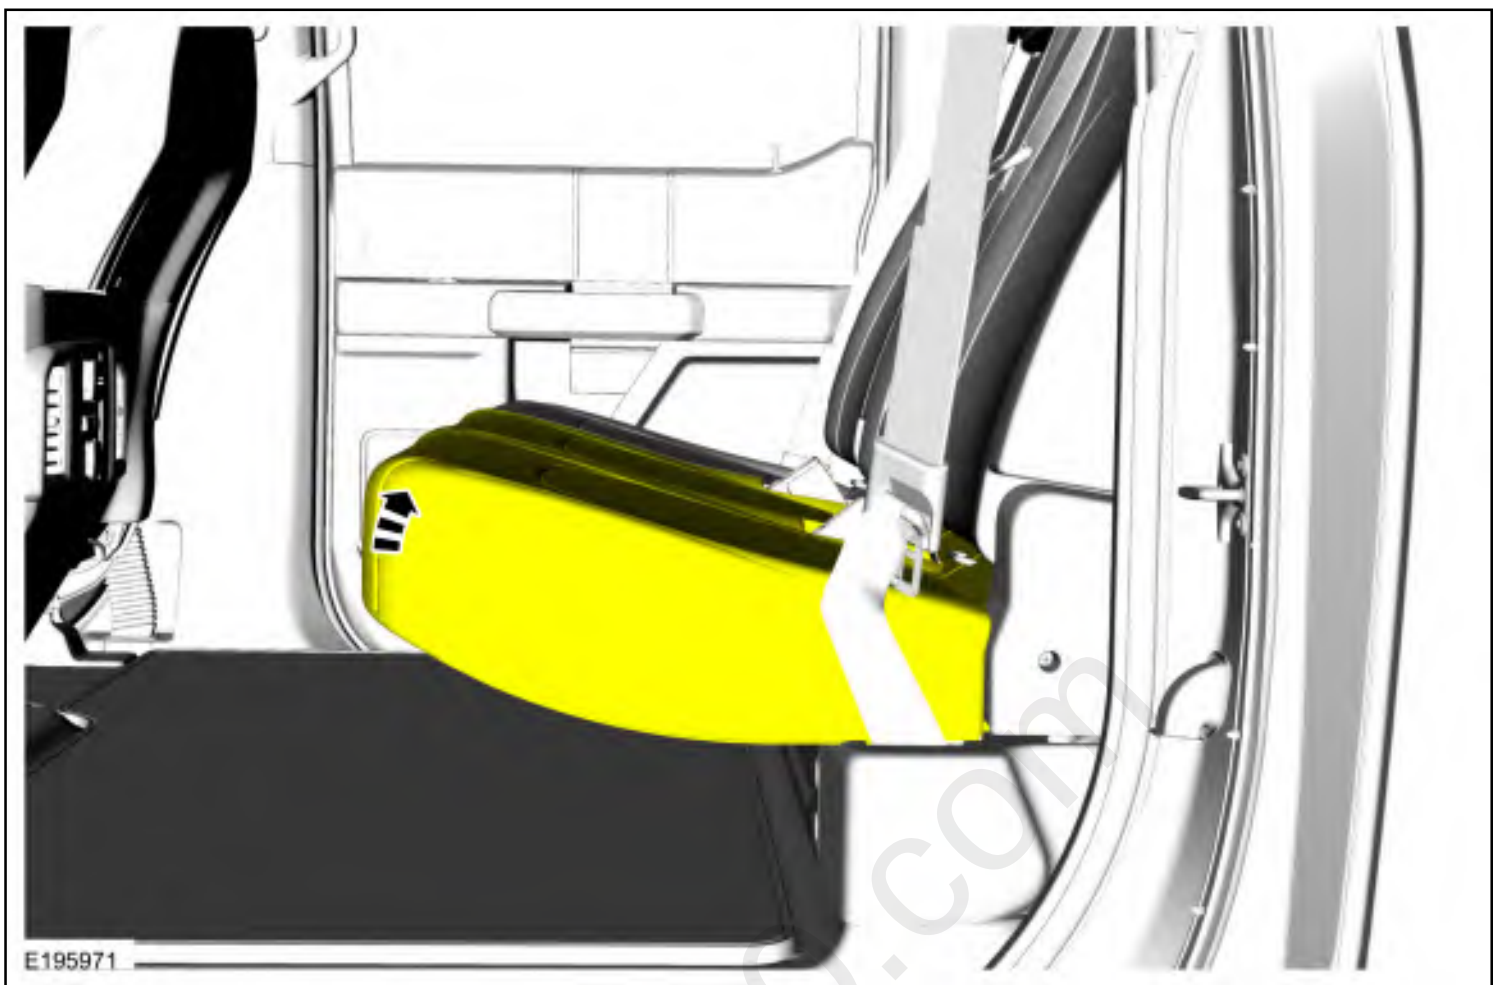

8. Remove the safety belt buckle.

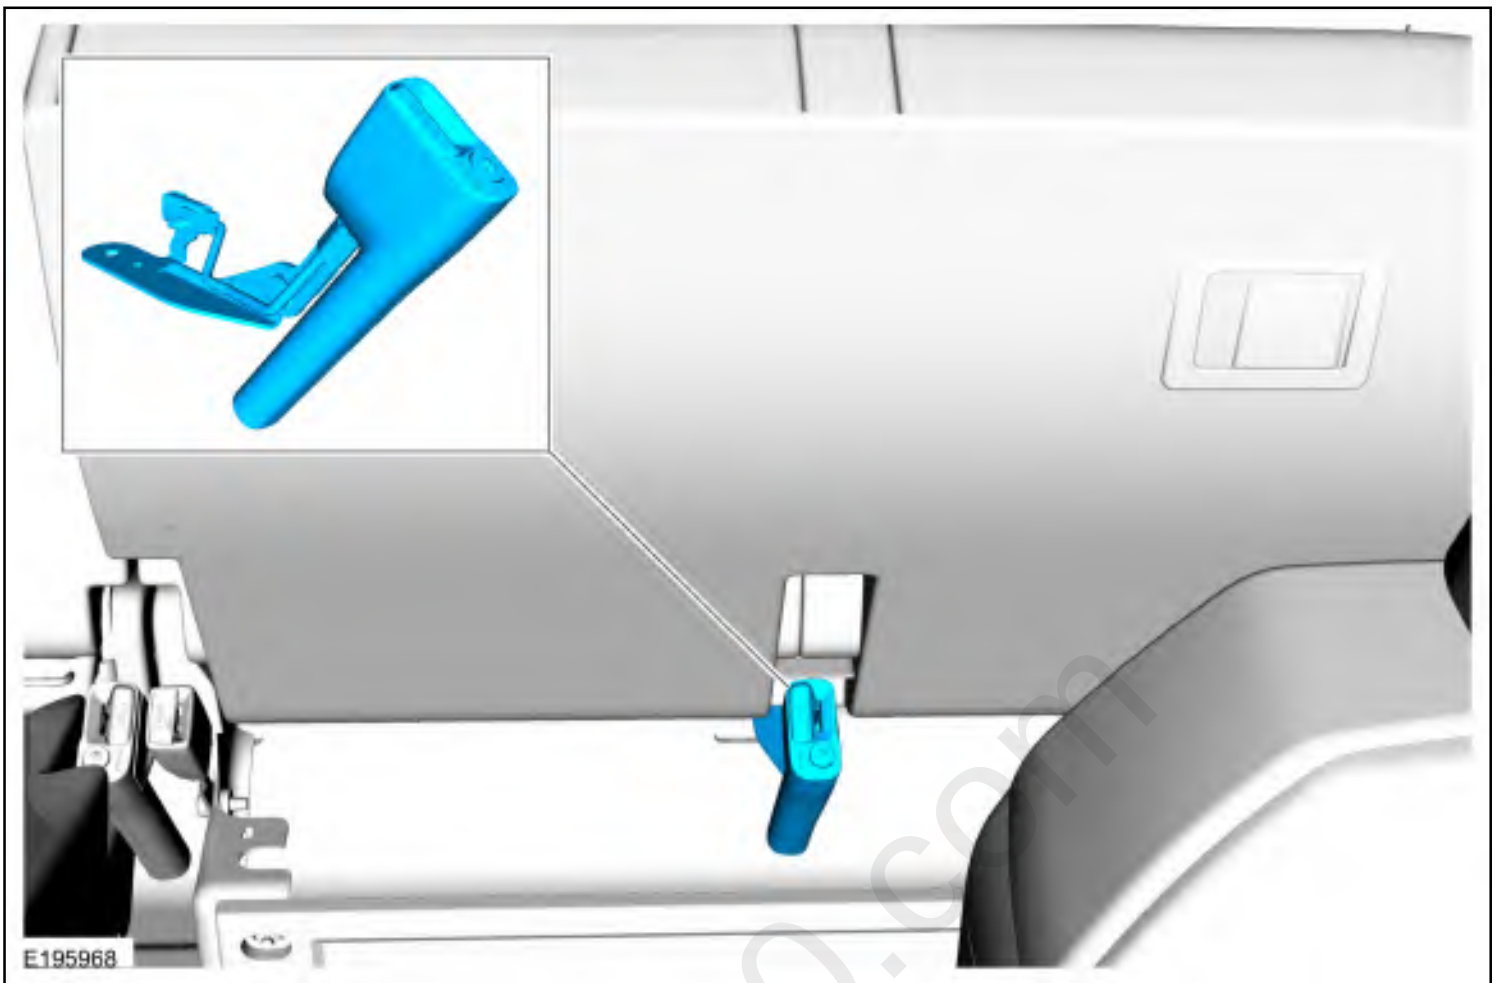

Installation

1. To install, reverse the removal procedure.
2. Repower the SRS.
Refer to: [Supplemental Restraint System \(SRS\) Repowering](#) (501-20B Supplemental Restraint System, General Procedures).
3. Check the active restraint system for correct operation.
Refer to: [Seatbelt Systems](#) (501-20A Seatbelt Systems, Diagnosis and Testing).