



Airbag and Seatbelt Pretensioner Supplemental Restraint System (SRS) - Component Location

NOTE: Early build shown, late build similar.

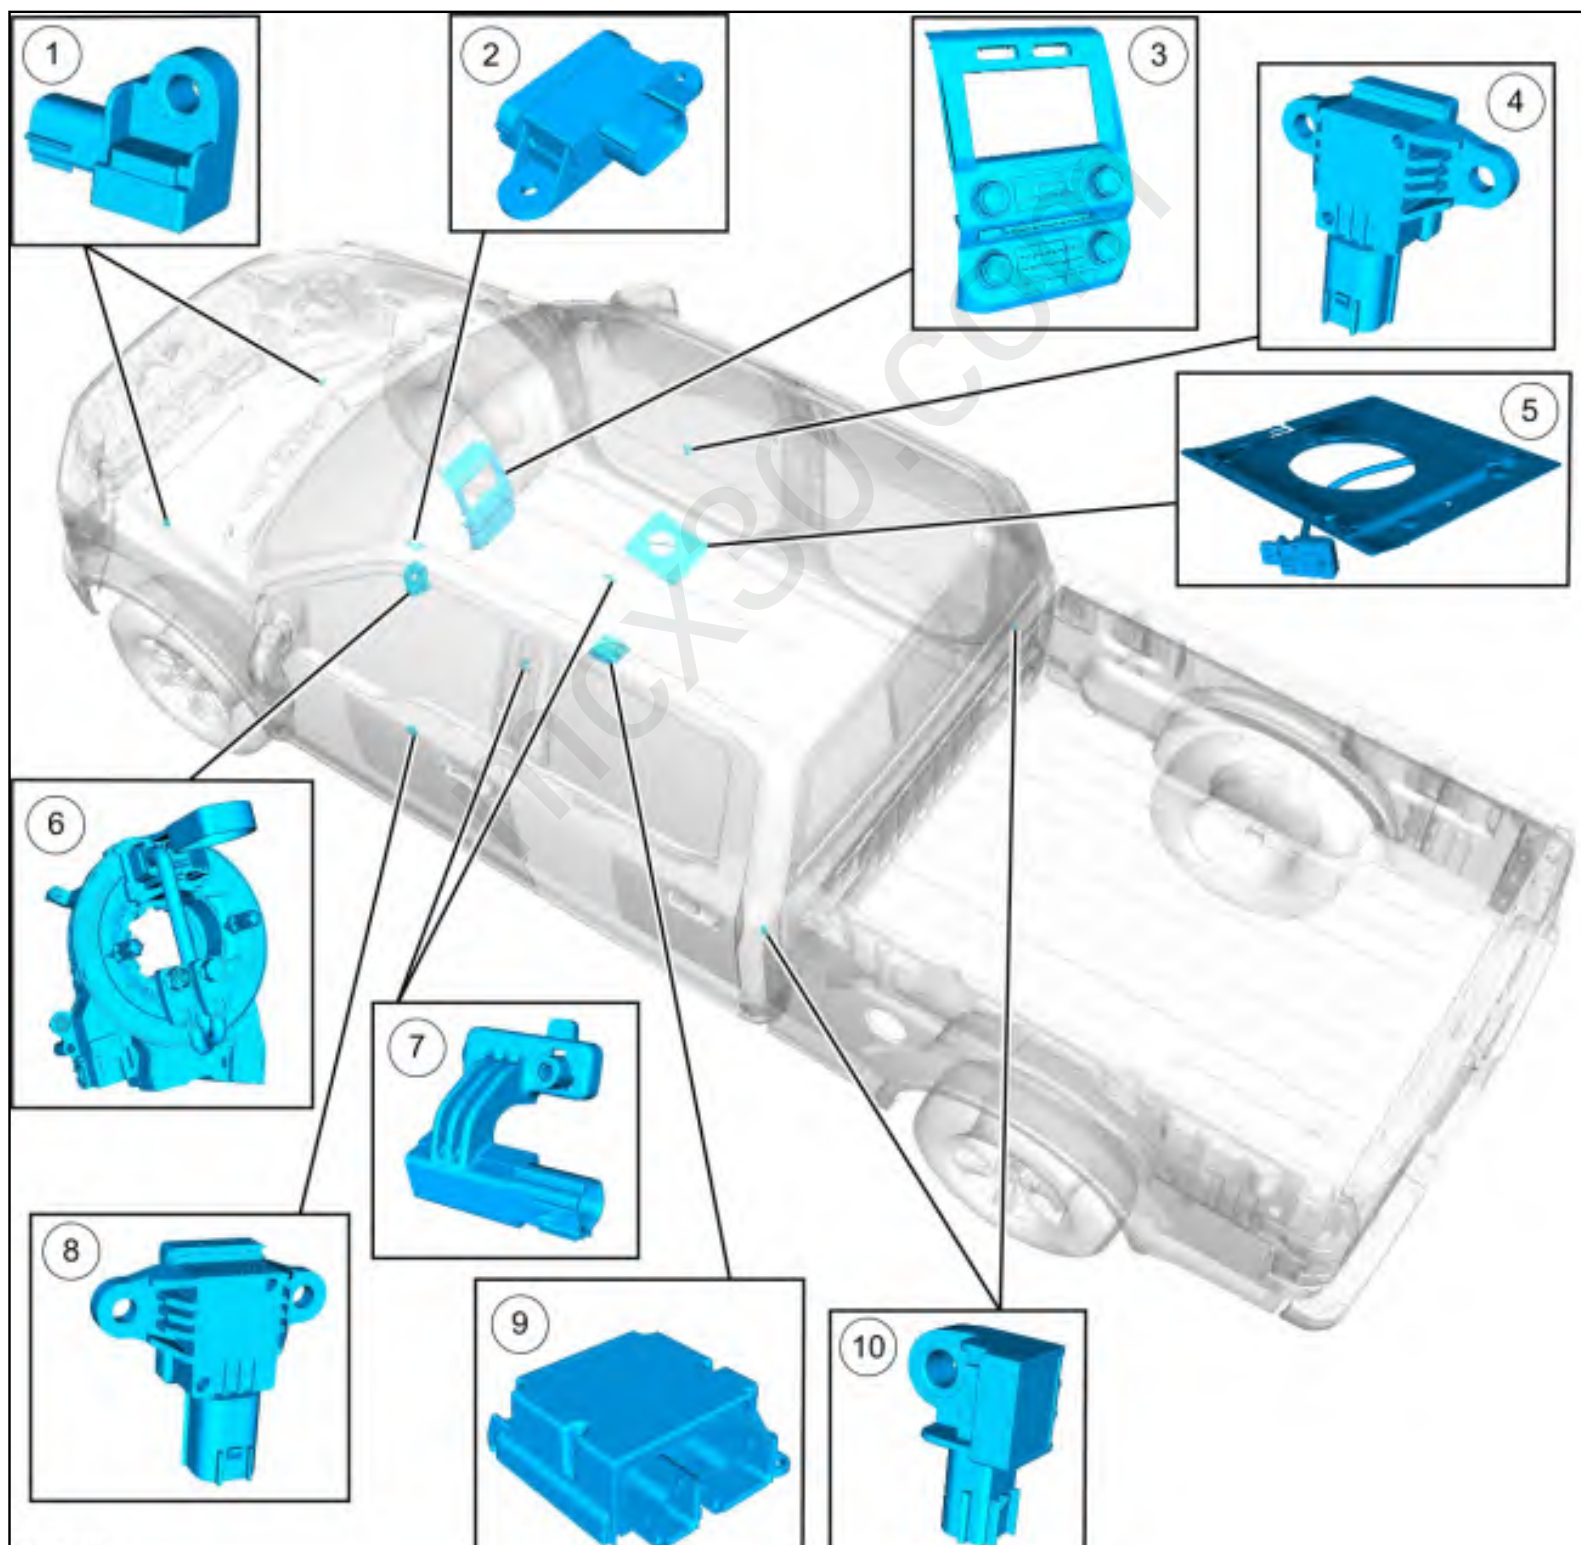




Item	Description
1	LH and RH front impact severity sensors
2	BECMB
3	FCIM (includes PAD indicator)
4	Passenger front door side impact sensor
5	OCSM (includes OCS sensor and gel-filled bladder)
6	Clockspring
7	Seat position sensors
8	Driver front door side impact sensor
9	RCM
10	LH and RH B-pillar side impact sensors (SuperCab) / LH and RH C-pillar side impact sensors (SuperCrew)

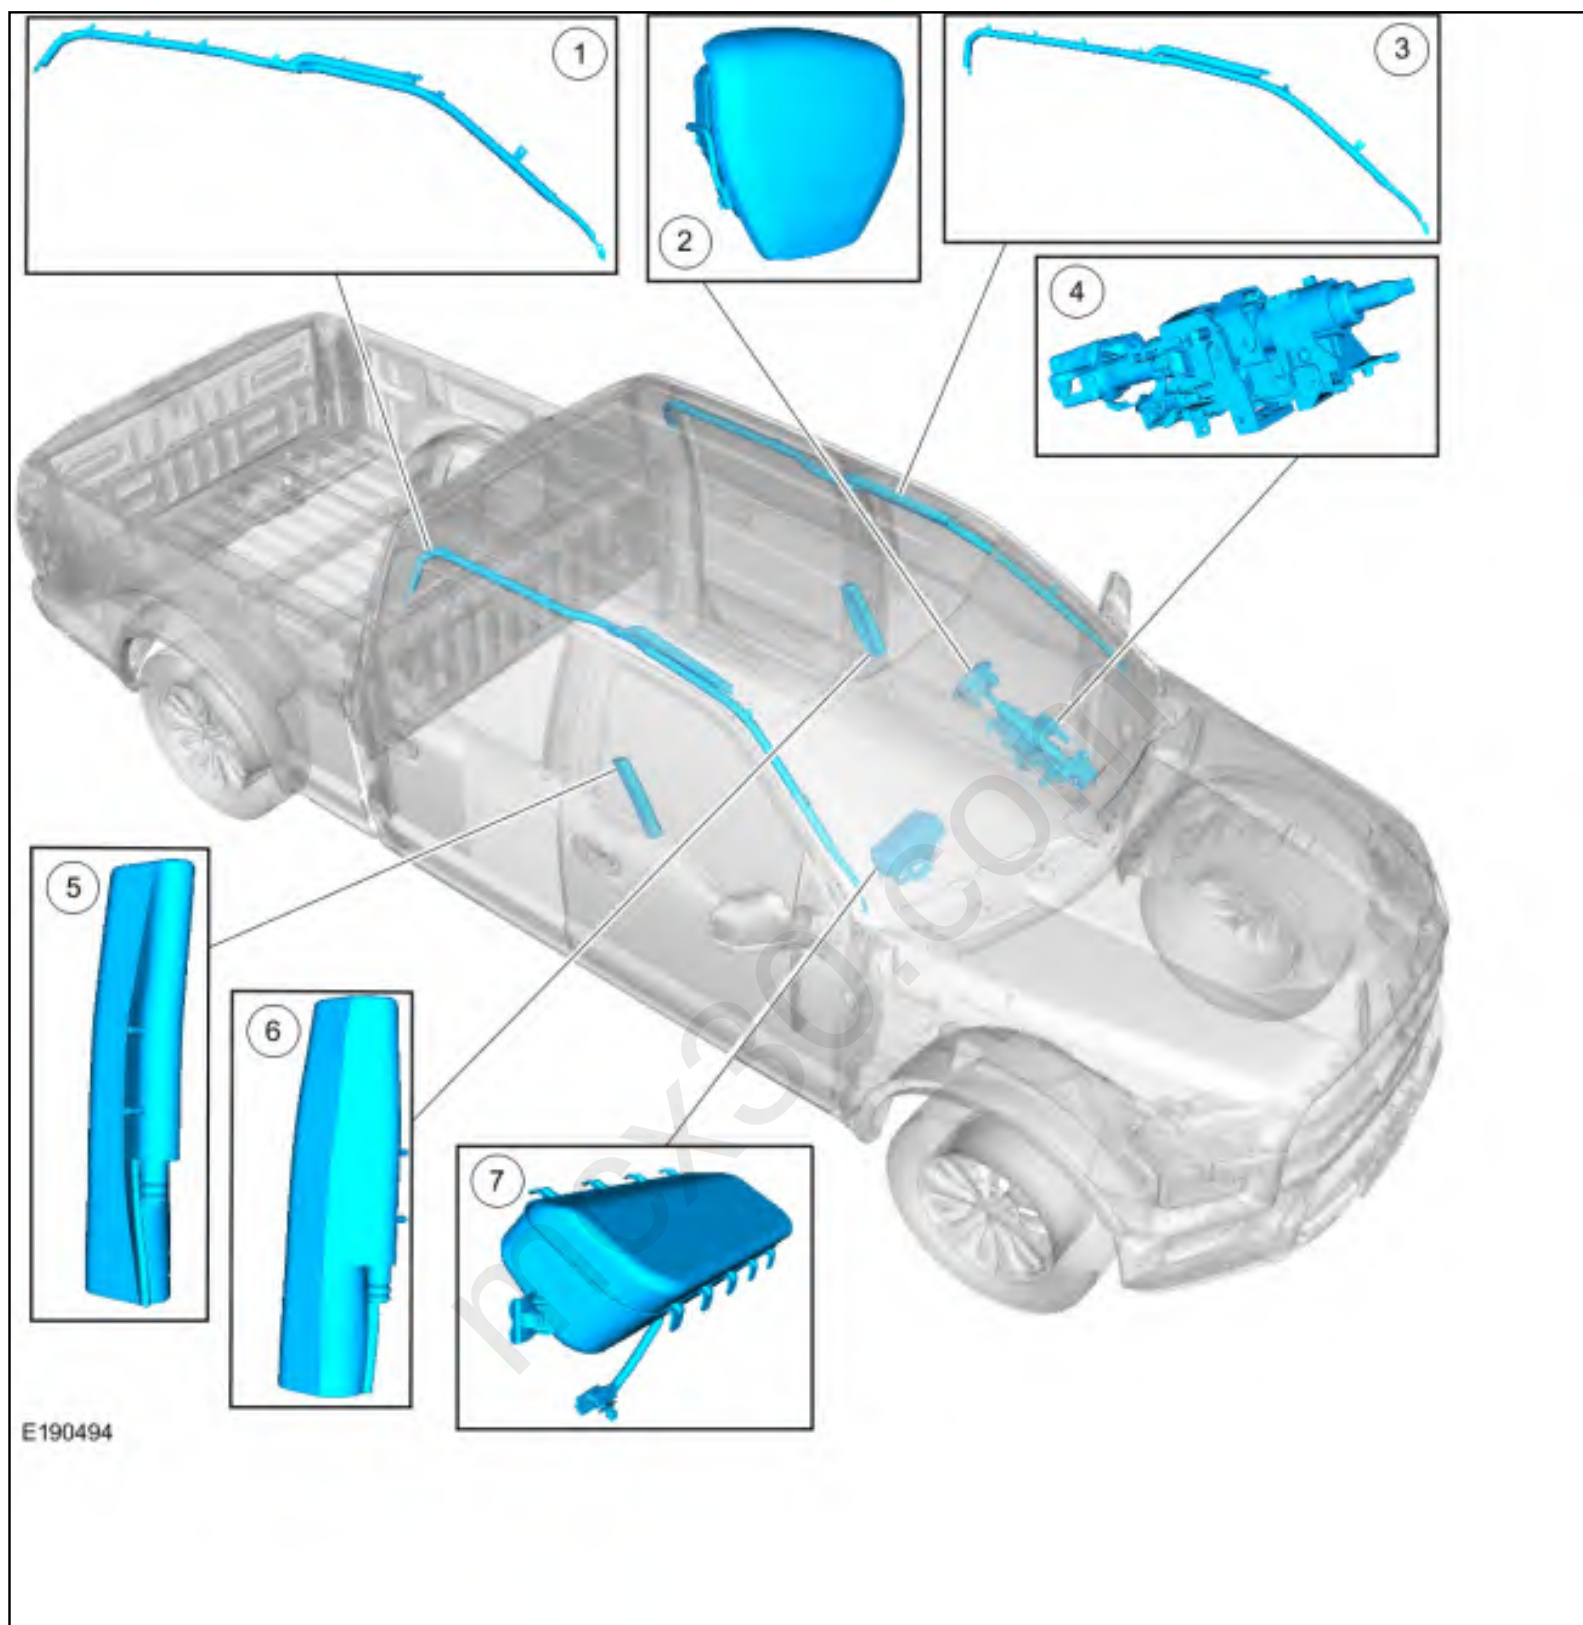

Item	Description
1	RH side air curtain
2	Driver airbag
3	LH side air curtain
4	Deployable steering column

5	Passenger side airbag
6	Driver side airbag
7	Passenger airbag (includes canister vent)

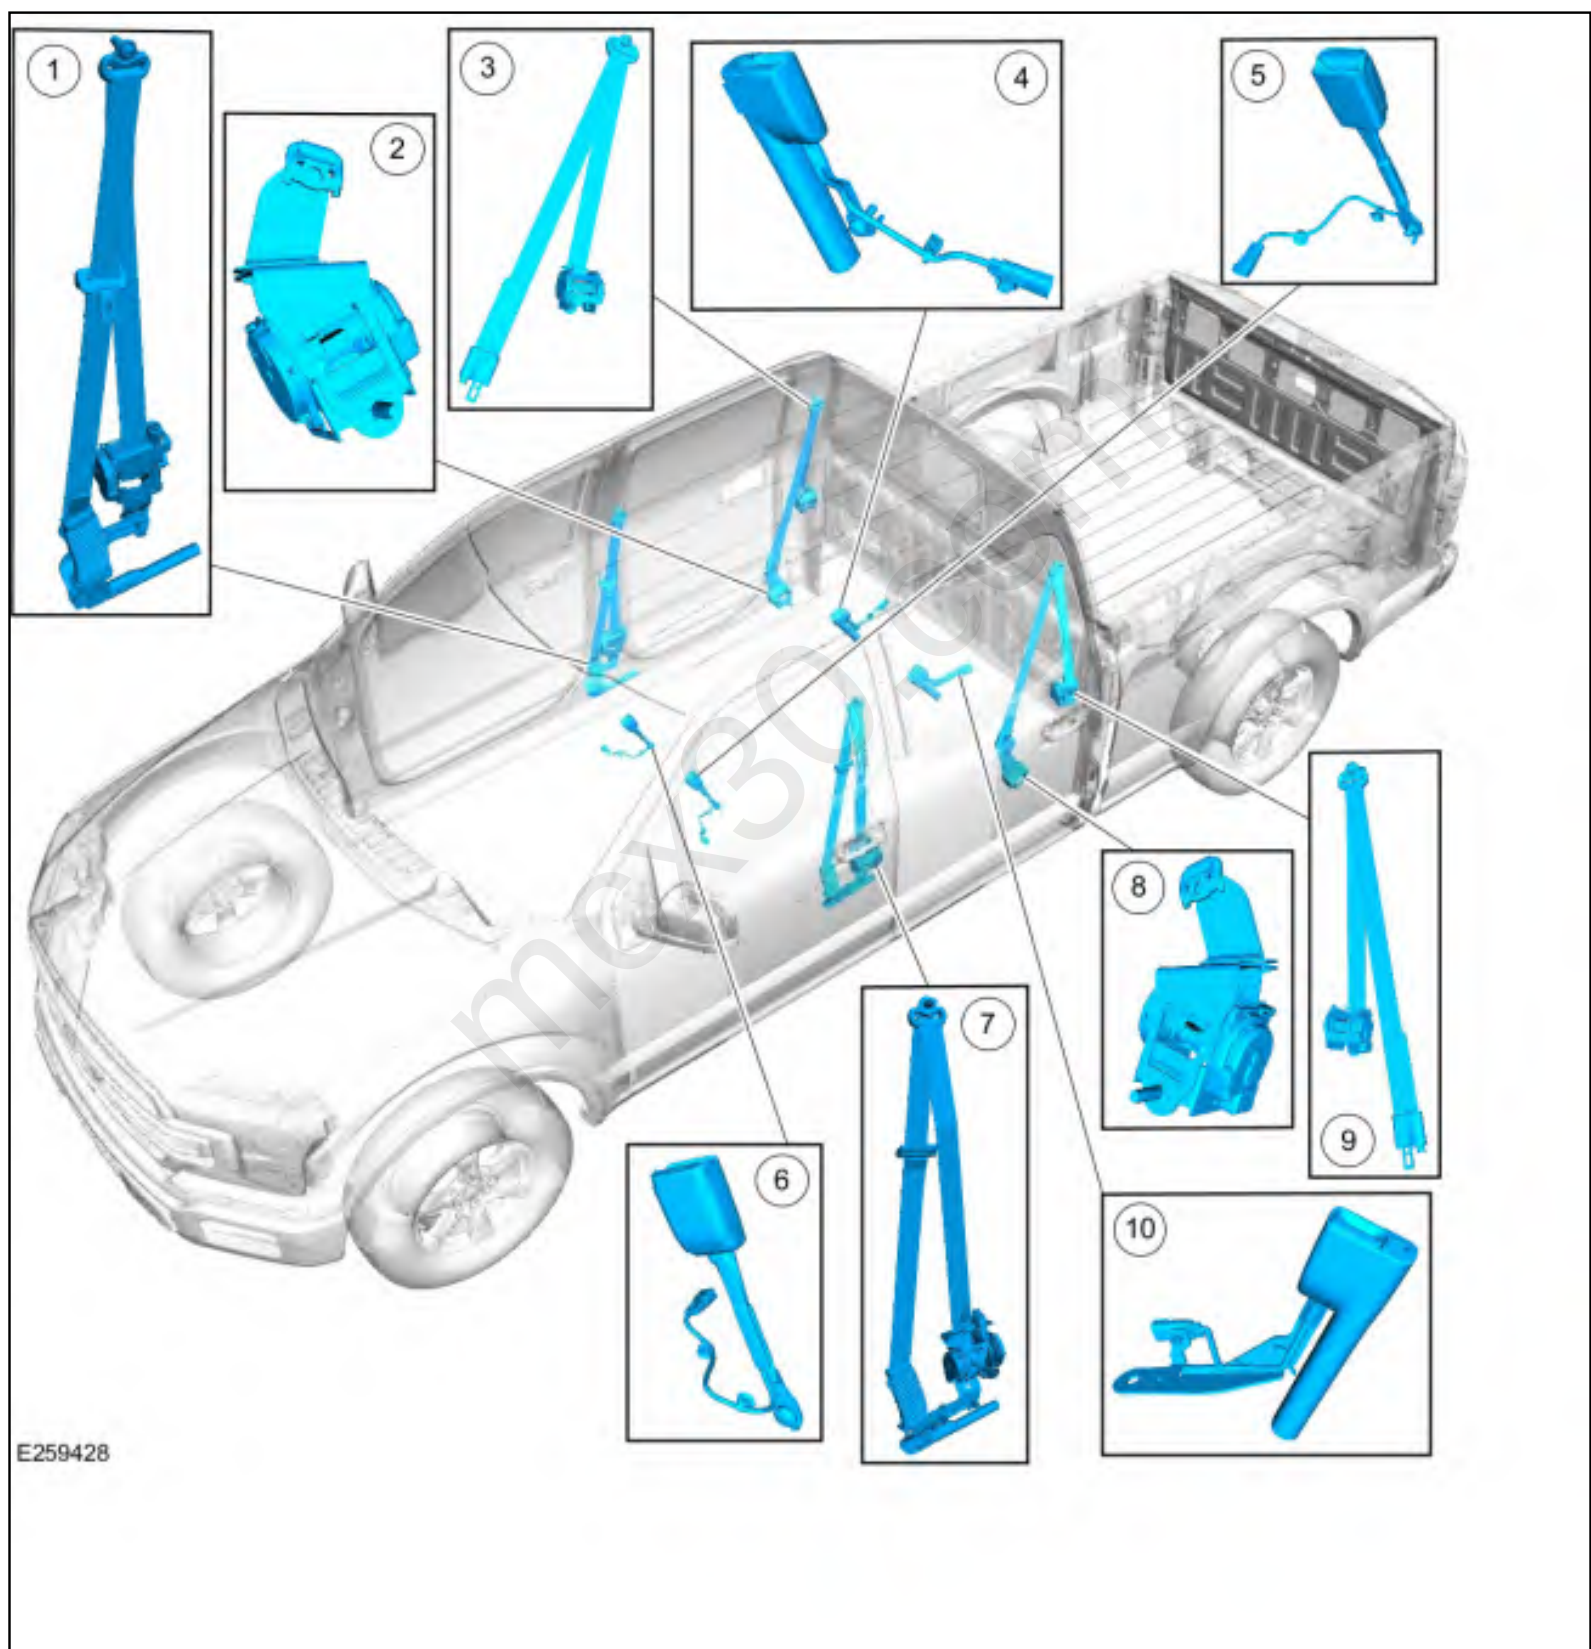

Item	Description
1	Front passenger seatbelt retractor (includes retractor pretensioner and anchor pretensioner) (SuperCrew shown, other body styles similar)
2	RH rear outer seatbelt lower retractor (SuperCrew only, if equipped with inflatable seatbelts)
3	RH rear outer seatbelt upper retractor (SuperCrew only, if equipped with inflatable seatbelts)
4	RH rear outer seatbelt buckle assembly (SuperCrew only, if equipped with inflatable seatbelts) (includes seatbelt buckle, buckle switch and seatbelt inflator)
5	Driver seatbelt buckle (includes buckle switch)
6	Front passenger seatbelt buckle (includes buckle switch)
7	Driver seatbelt retractor (includes retractor pretensioner and anchor pretensioner) (SuperCrew shown, other body styles similar)
8	LH rear outer seatbelt lower retractor (SuperCrew only, if equipped with inflatable seatbelts)
9	LH rear outer seatbelt upper retractor (SuperCrew only, if equipped with inflatable seatbelts)
10	LH rear outer seatbelt buckle assembly (SuperCrew only, if equipped with inflatable seatbelts) (includes seatbelt buckle, buckle switch and seatbelt inflator)