

Pinpoint Test - DTC: AR

U0112:00

Normal Operation and Fault Conditions

The RCM uses information contained in messages from the BECMB sent on the HS-CAN2.

DTC Fault Trigger Conditions

DTC	Description	Fault Trigger Conditions
U0112:00	Lost Communication With Battery Energy Control Module "B": No Sub Type Information	This DTC sets if the RCM does not receive an expected message from the BECMB.

Possible Sources

- Network traffic
- BECMB
- RCM

PINPOINT TEST A : U0112:00



WARNING: Do not handle, move or change the original horizontal mounting position of the Restraints Control Module (RCM) while the Restraints Control Module (RCM) is connected and the ignition switch is ON. Failure to follow this instruction may result in the accidental deployment of the Safety Canopy® and cause serious personal injury or death.

NOTE: Most faults are due to connector and/or wiring concerns. Carry out a thorough inspection and verification before proceeding with the pinpoint test.

NOTE: SRS components should only be disconnected or reconnected when instructed to do so within a pinpoint test step. Failure to follow this instruction may result in incorrect diagnosis of the SRS.

NOTE: Always make sure the correct SRS component is being installed. Parts released for other vehicles may not be compatible even if they appear physically similar. Check the part number listed in the Ford parts catalog to make sure the correct component is being installed. If an incorrect SRS component is installed, Diagnostic Trouble Codes (DTCs) may set.

NOTE: The SRS must be fully operational and free of faults before releasing the vehicle to the customer.

A1 CHECK THE COMMUNICATION NETWORK

-  **WARNING:** Before beginning any service procedure in this section, refer to Safety Warnings in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.

REFER to: [Pyrotechnic Device Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

- Ignition ON.
- Using a diagnostic scan tool, carry out a network test.

Does the BECMB pass the network test?

Yes	GO to A2
No	To diagnose no communication with the BECMB, REFER to: Communications Network (418-00 Module Communications Network, Diagnosis and Testing).

A2 CHECK THE RCM (RESTRAINTS CONTROL MODULE) CONTINUOUS MEMORY DIAGNOSTIC TROUBLE CODES (CMDTCS)

- Using a diagnostic scan tool, perform RCM self-test.
- Using a diagnostic scan tool, clear RCM Diagnostic Trouble Codes (DTCs).
- Wait 10 seconds.
- Using a diagnostic scan tool, perform RCM self-test.

Is DTC U0112:00 retrieved again?

Yes	GO to A3
No	The system is operating correctly at this time. The DTC may have been set due to high network traffic or an intermittent fault condition.

A3 RETRIEVE THE RECORDED DIAGNOSTIC TROUBLE CODES (DTCs) FROM THE RCM (RESTRAINTS CONTROL MODULE) SELF-TEST

- Check the recorded Diagnostic Trouble Codes (DTCs) from the RCM self-test.

Is DTC U3003:16 or U3003:17 recorded?

Yes	REFER to: Pinpoint Test - DTC: JJ (501-20B) .
No	CHECK OASIS for any applicable Technical Service Bulletins (TSBs). If a TSB exists for this concern, DISCONTINUE this test and FOLLOW TSB instructions. If no Technical Service Bulletins (TSBs) address this concern, INSTALL a new BECMB. REFER to: Battery Energy Control Module B (BECMB) (501-20B) . REPEAT the RCM self-test. If DTC U0112:00 returns, INSTALL a new RCM. REFER to: Restraints Control Module (RCM) (501-20B) .