

Front Impact Severity Sensor


Base Part Number: Base Part Number: 14B004

Removal

 **WARNING:** The following procedure prescribes critical repair steps required for correct restraint system operation during a crash. Follow all notes and steps carefully. Failure to follow step instructions may result in incorrect operation of the restraint system and increases the risk of serious personal injury or death in a crash.

NOTE: Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting - Overview](#) (100-02 Jacking and Lifting, Description and Operation).
2. Depower the SRS.
Refer to: [Supplemental Restraint System \(SRS\) Depowering](#) (501-20B Supplemental Restraint System, General Procedures).
 1. Remove the bolt.
Torque: 93 lb.in (10.5 Nm)
 2. Disconnect the electrical connector.
 3. Remove the front impact severity sensor.

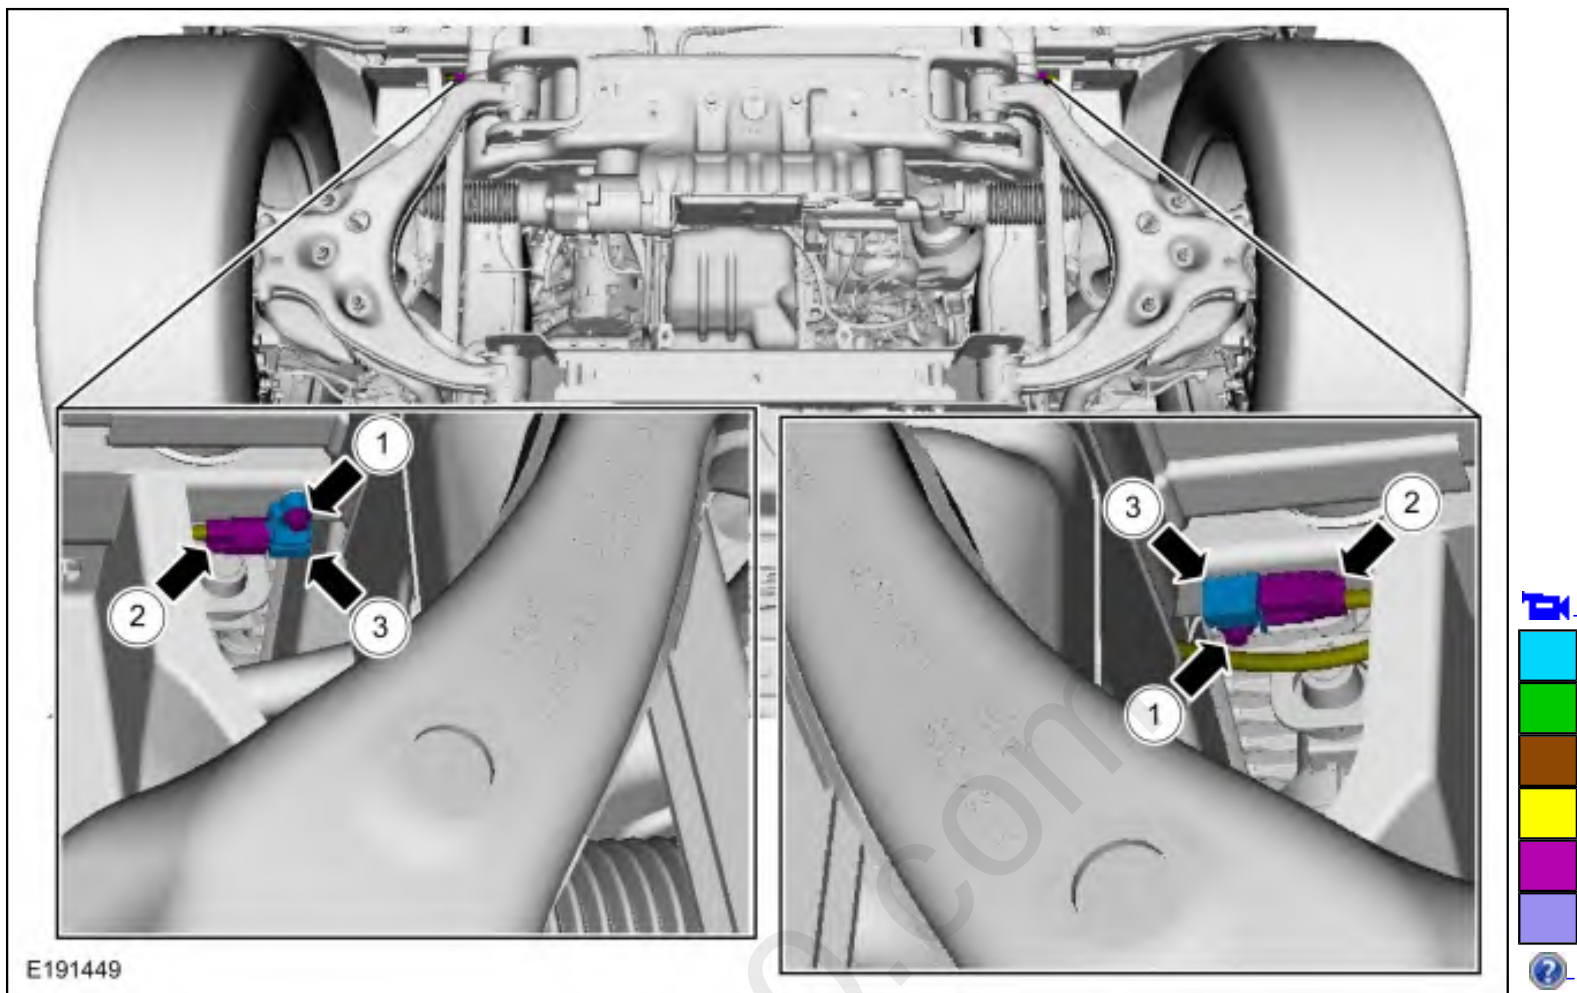

E191449

Installation

1. **NOTE:** *The impact sensor mating surfaces must be smooth and allow for a flush attachment to each other.*

To install, reverse the removal procedure.

2. Repower the SRS.

Refer to: [Supplemental Restraint System \(SRS\) Repowering](#) (501-20B Supplemental Restraint System, General Procedures).