

Side Panel - Regular Cab

Special Tool(s) / General Equipment

6.5 mm Drill Bit
Scraper for Straight Edges
Spherical Cutter
Polydrive Bit Socket
Self-Piercing Rivet (SPR) Remover/Installer
Belt Sander
Blind Rivet Gun
Hot Air Gun
Air Body Saw
MIG/MAG Welding Equipment
Locking Pliers

Materials

Name	Specification
Metal Bonding Adhesive TA-1, TA-1-B, 3M™ 08115, LORD Fusor® 108B	-
Seam Sealer TA-2-B, 3M™ 08308, LORD Fusor® 805DTM	-
Roof Ditch Sealer 3M™ 08307, LORD Fusor® 122EZ	-
Flexible Foam Repair 3M™ 08463, LORD Fusor® 121	-

Removal

NOTICE: Body side sectioning is prohibited within 50 mm of door hinge, door striker and restraints anchoring points.

NOTE: *Partial outer panel replacement is possible and reasonable depending on damage. The following procedure assumes full outer panel replacement. Removal and installation steps may be adjusted according to damage as necessary.*

1. Possible sectioning points.

Refer to: [Body Panel Sectioning](#) (501-26 Body Repairs - Vehicle Specific Information and Tolerance Checks, General Procedures).

2. Depower the SRS.

Refer to: [Supplemental Restraint System \(SRS\) Depowering](#) (501-20B Supplemental Restraint System, General Procedures).

3. Remove the fender.

Refer to: [Fender](#) (501-02 Front End Body Panels, Removal and Installation).

4. Remove the door.

Refer to: [Front Door - Regular Cab/SuperCrew](#) (501-03 Body Closures, Removal and Installation).

5. Remove the pickup box.


Refer to: [Pickup Bed](#) (501-04 Pickup Bed and Platform Body, Removal and Installation).

6. Remove the A and C-pillar trim.


Refer to: [A-Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [C-Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).


7. Remove the door hinges and striker.

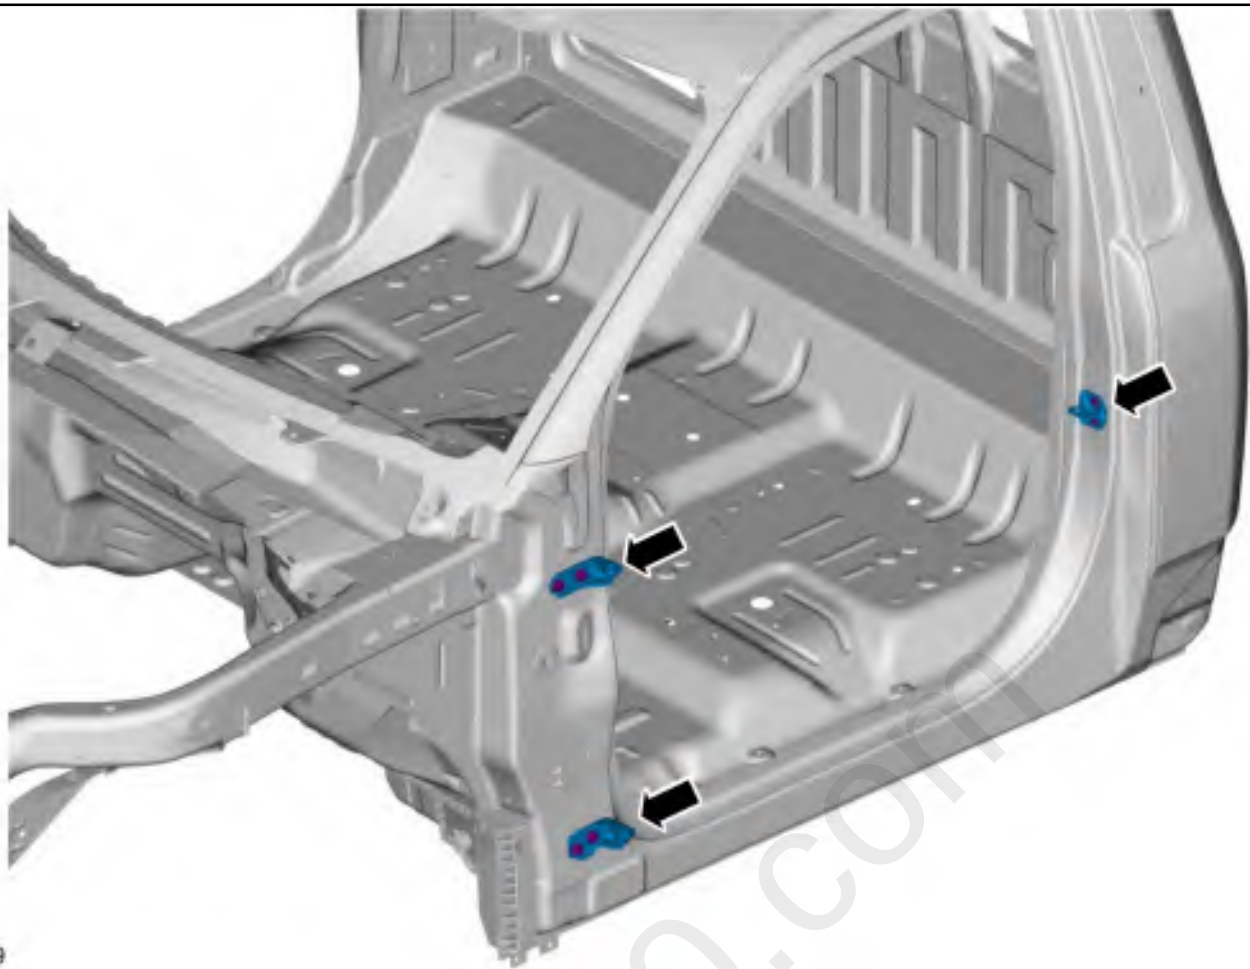


8. Remove the windshield and rear window glass.
Refer to: [Fixed Glass](#) (501-11 Glass, Frames and Mechanisms, General Procedures).
9. Remove the outer cab trim.
Refer to: [Roof Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
Refer to: [Bodyside Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
Refer to: [Front Door Upper Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
Refer to: [Rear Quarter Panel Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
10. Remove the door opening scuff plate and weather strips.
11. Remove the side curtain air bag.
Refer to: [Side Curtain Airbag - Regular Cab](#) (501-20B Supplemental Restraint System, Removal and Installation).
12. Remove the roof ditch sealer.
Use the General Equipment: Scraper for Straight Edges
Use the General Equipment: Hot Air Gun

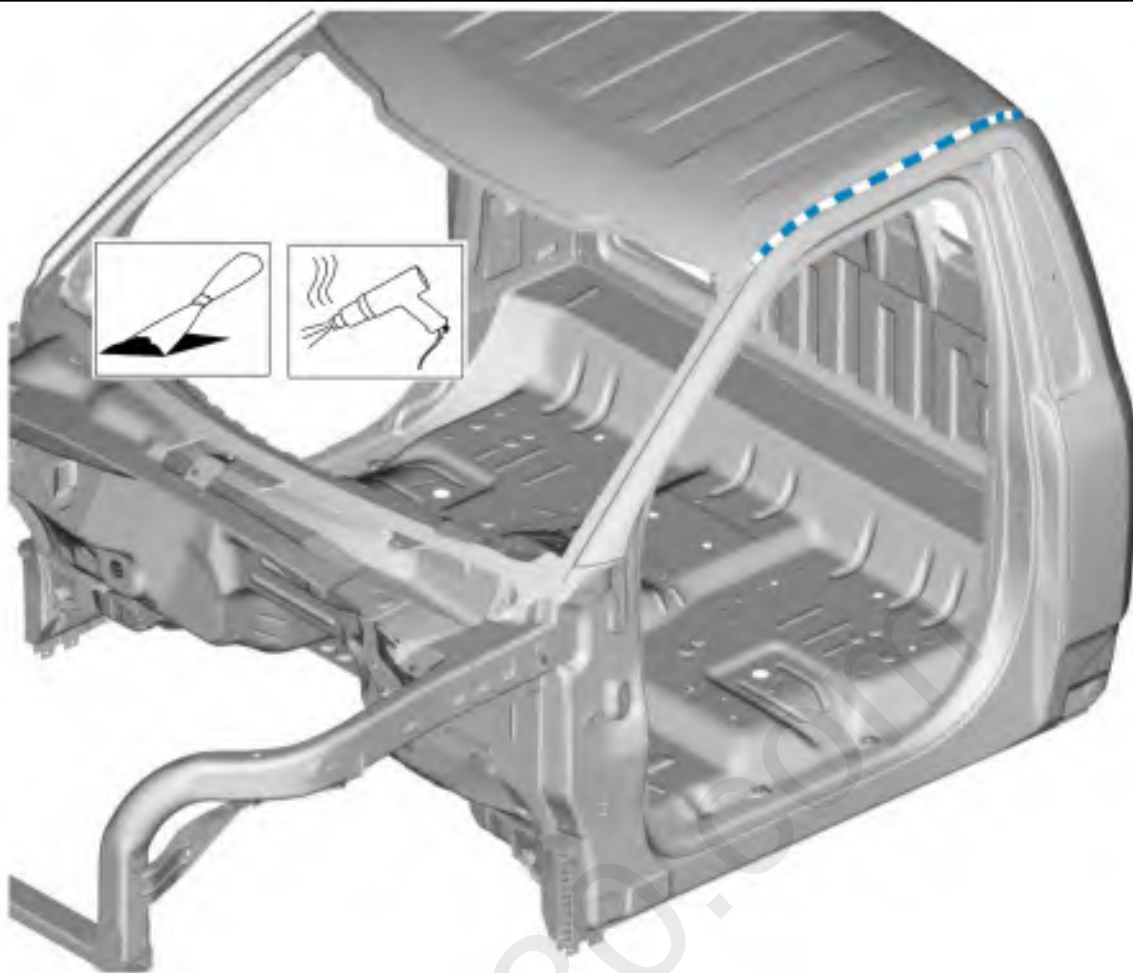


13. Remove and discard the FDS fasteners.
Use the General Equipment: Polydrive Bit Socket

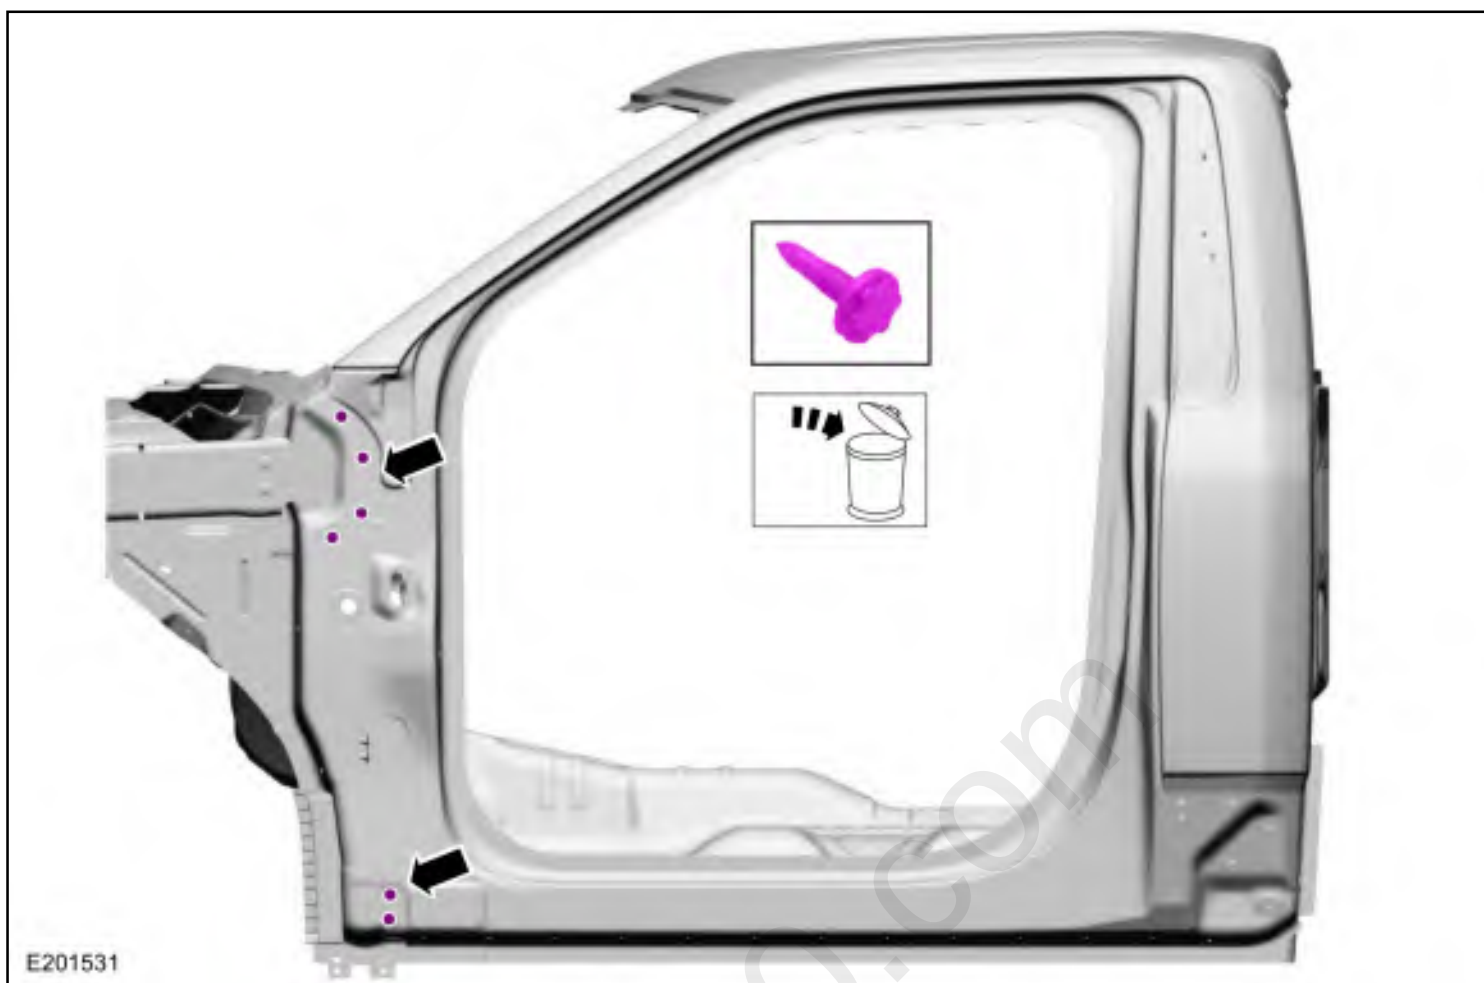


14. Remove the body side SPR fasteners.
Use the General Equipment: Self-Piercing Rivet (SPR) Remover/Installer
Use the General Equipment: Belt Sander

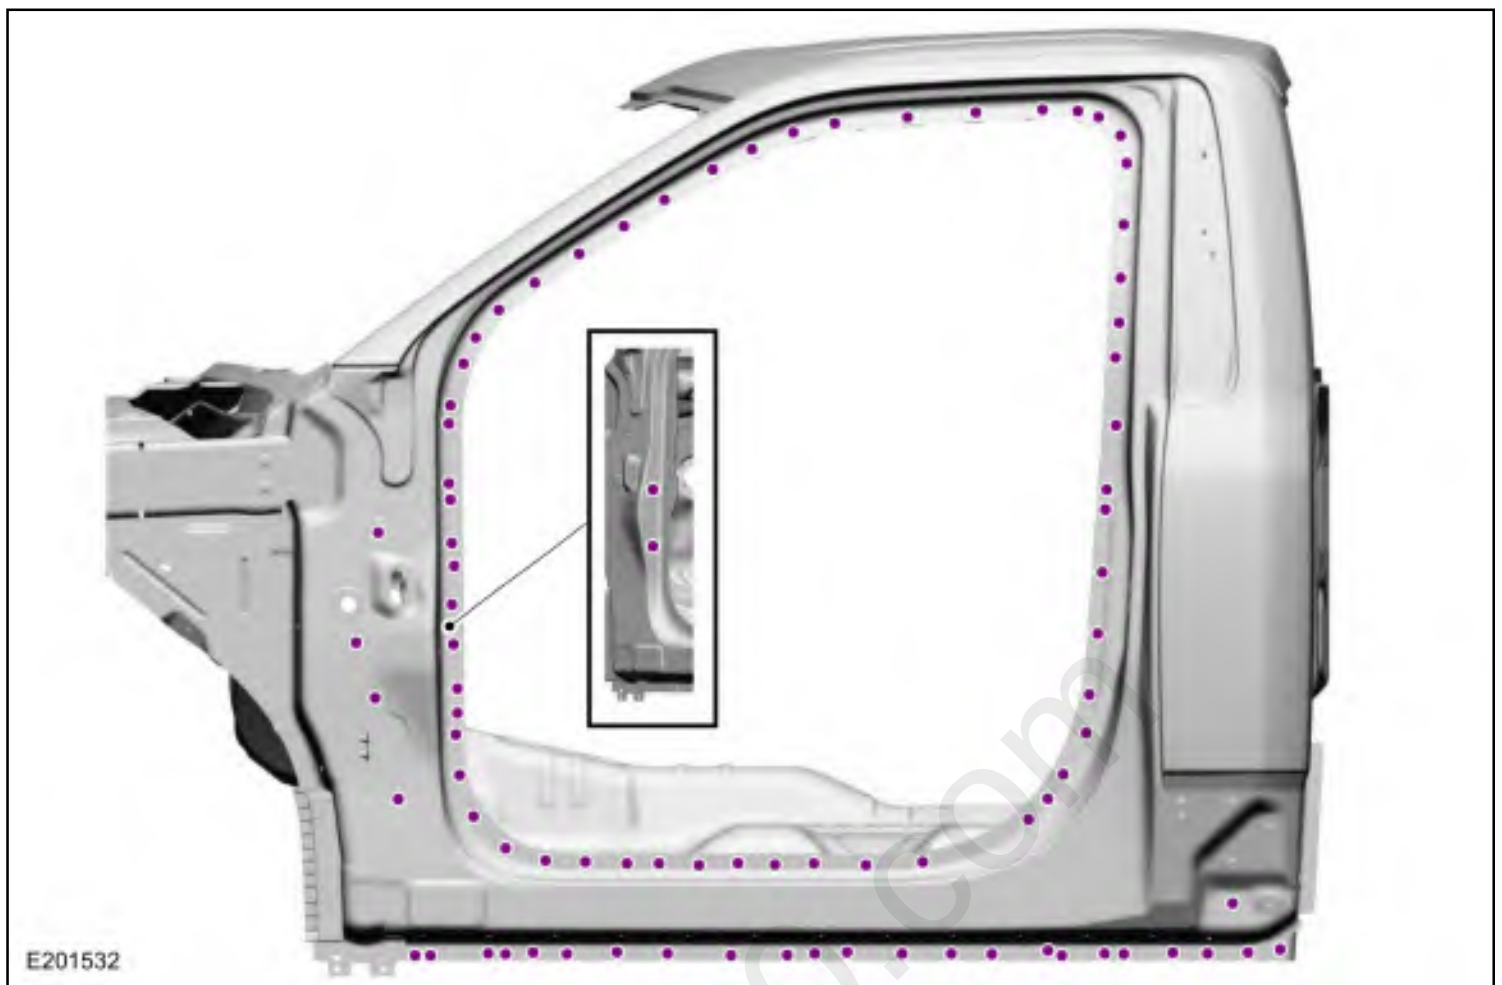

15. Remove the windshield opening channel SPR fasteners.
Use the General Equipment: Self-Piercing Rivet (SPR) Remover/Installer
Use the General Equipment: Belt Sander

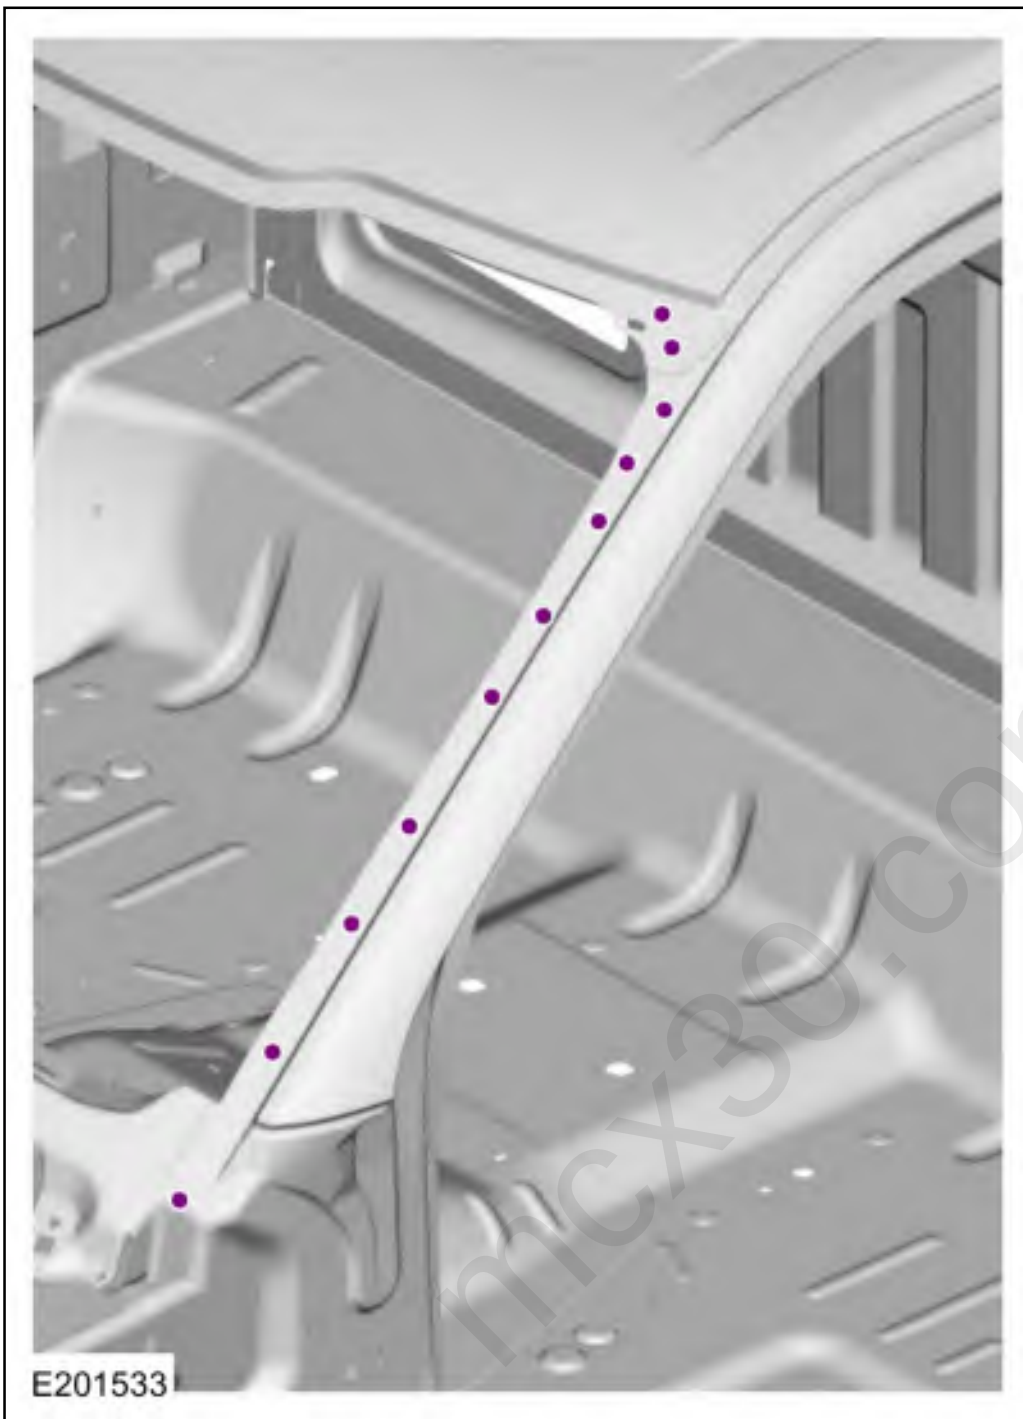


16. Remove the cab back seam sealer.
Use the General Equipment: Scraper for Straight Edges
Use the General Equipment: Hot Air Gun

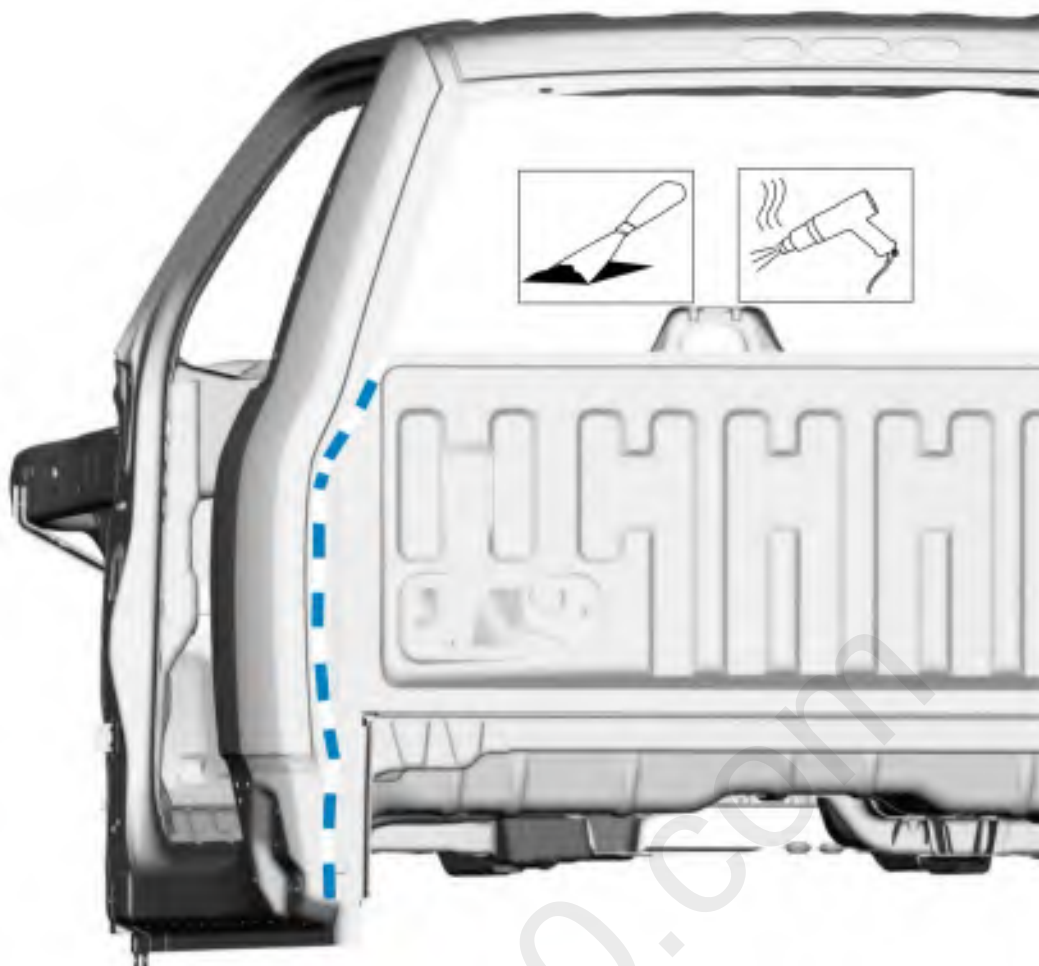

E201534


17. Remove the cab back SPR fasteners.
Use the General Equipment: Self-Piercing Rivet (SPR) Remover/Installer
Use the General Equipment: Belt Sander

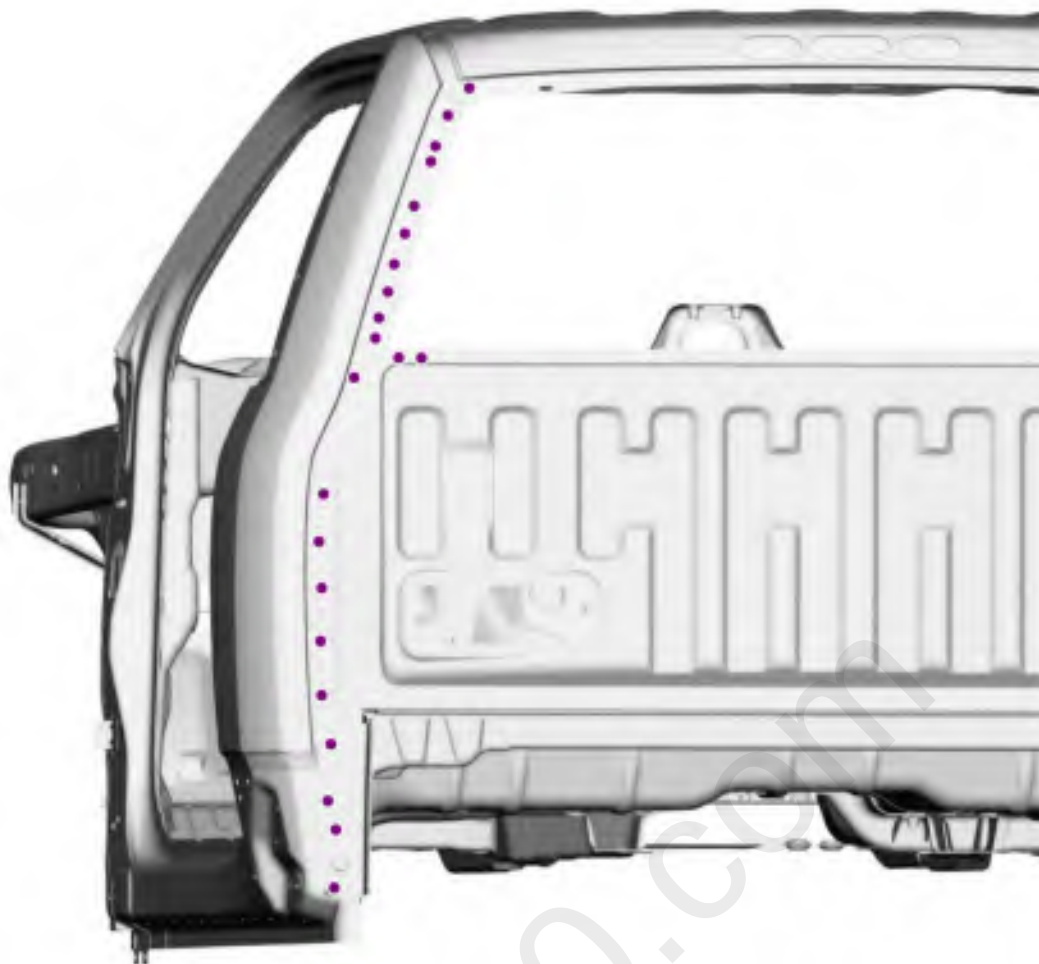

E201535




18. Carefully cut **the outer panel only**.
Use the General Equipment: Air Body Saw
Use the General Equipment: Spherical Cutter

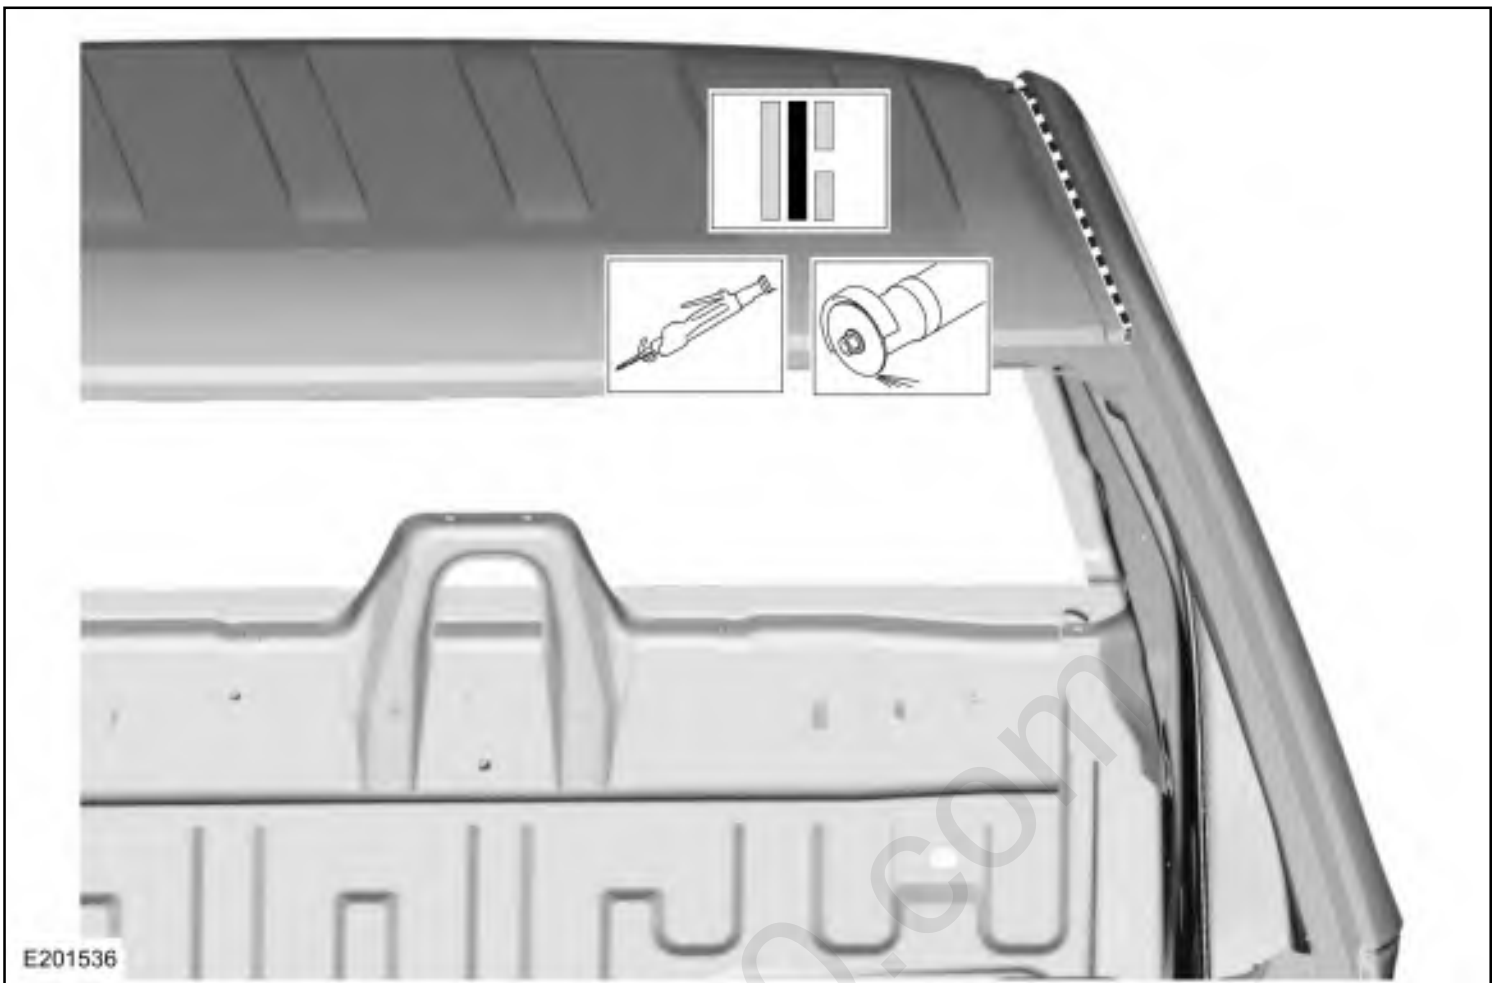

19. **NOTE:** Aluminum body panels are highly receptive to heat transfer. With the extensive use of structural adhesives and non-structural sealers used in vehicle construction, the potential of heat transfer could impact adhesives and sealers in non-associated panels during the repair process. Many repairs areas that utilize structural adhesive may be separated after fastener removal by using a panel chisel along the joint/flange. Using heat not exceeding 425° F to loosen a bonded panel should only be done when **all panels in the joint** will be replaced and new adhesive applied.

NOTE: Pay particular attention to NVH baffle and foam locations to aid in assembly.

Break the adhesive bond and remove the body side panel.
Use the General Equipment: Hot Air Gun

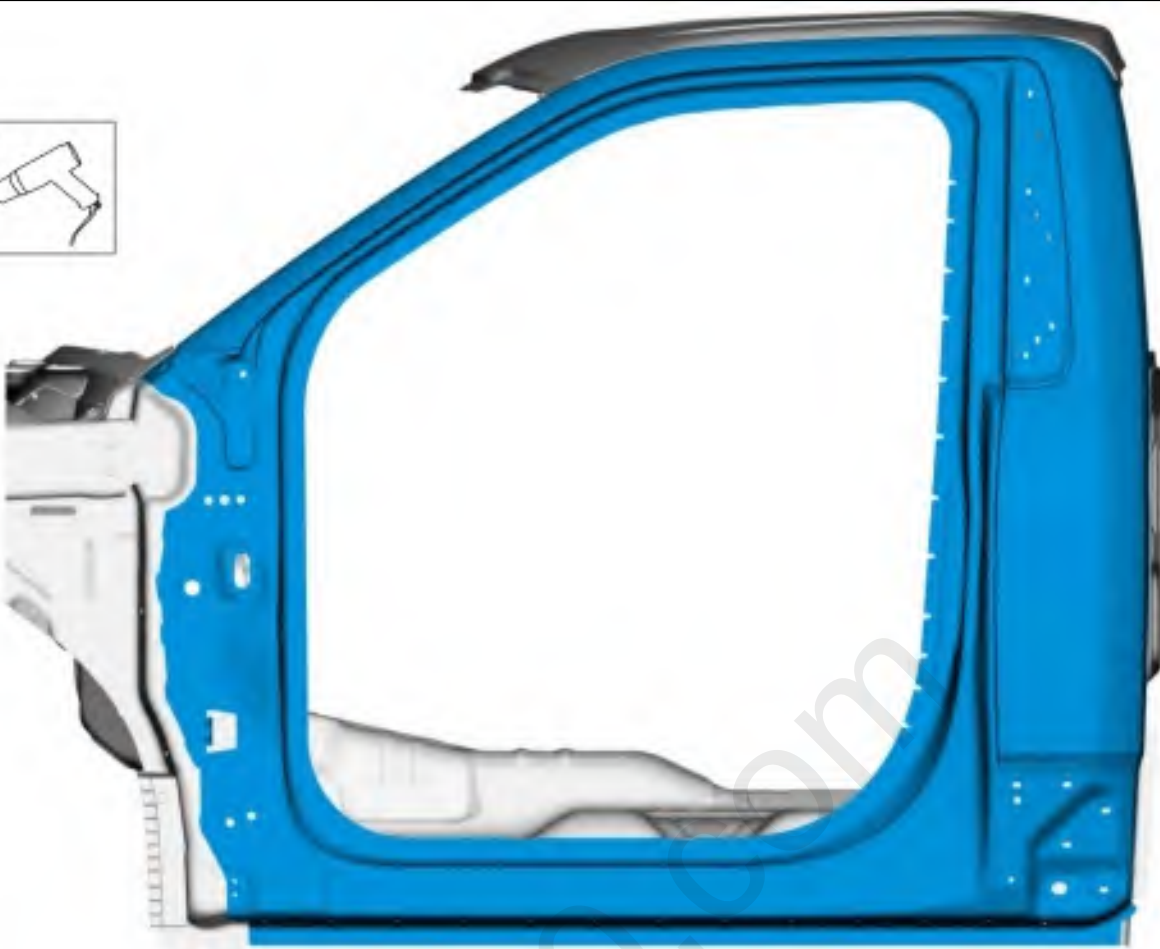

E201537



Installation

NOTICE: Body side sectioning is prohibited within 50 mm of door hinge, door striker and restraints anchoring points.


NOTE: *SPR fasteners may not be placed directly over original SPR location. They must be placed adjacent to original location matching original quantity.*

NOTE: *Blind or solid rivet fasteners may be used in place of SPR fasteners after enlarging holes to 6.5 mm.*

NOTE: *The use of a backer panel when creating butt welds will produce a stronger and more uniform repair.*

1. **Partial panel replacement:** Determine repair and trim service panel accordingly.
2. In butt-weld area(s), create a backer panel from unused portion(s) of the service panel and attach to the vehicle using a MIG welder set up for aluminum repair.
Refer to: [Joining Techniques](#) (501-25 Body Repairs - General Information, General Procedures).
Use the General Equipment: MIG/MAG Welding Equipment

3. 80-120 grit sand paper.
Sand to remove old adhesive and clean.

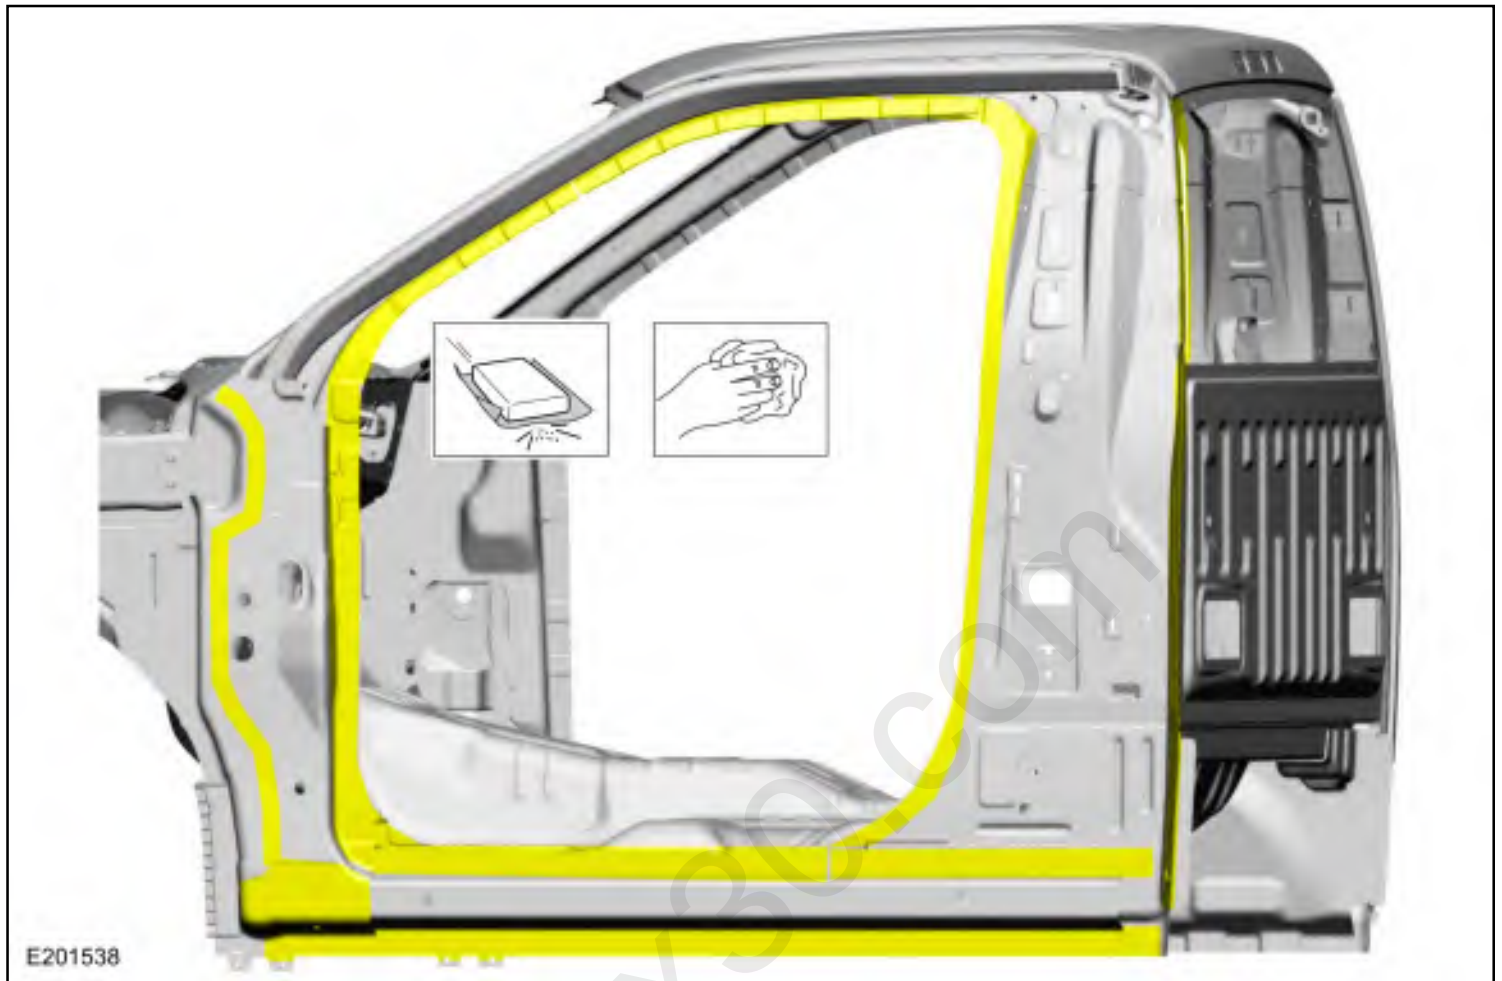


4. 80-120 grit sand paper
Sand to remove e-coat and clean.




5. Install NVH baffles noted during removal.

6. Apply adhesive.

Material: Metal Bonding Adhesive / TA-1, TA-1-B, 3M™ 08115, LORD Fusor® 108B

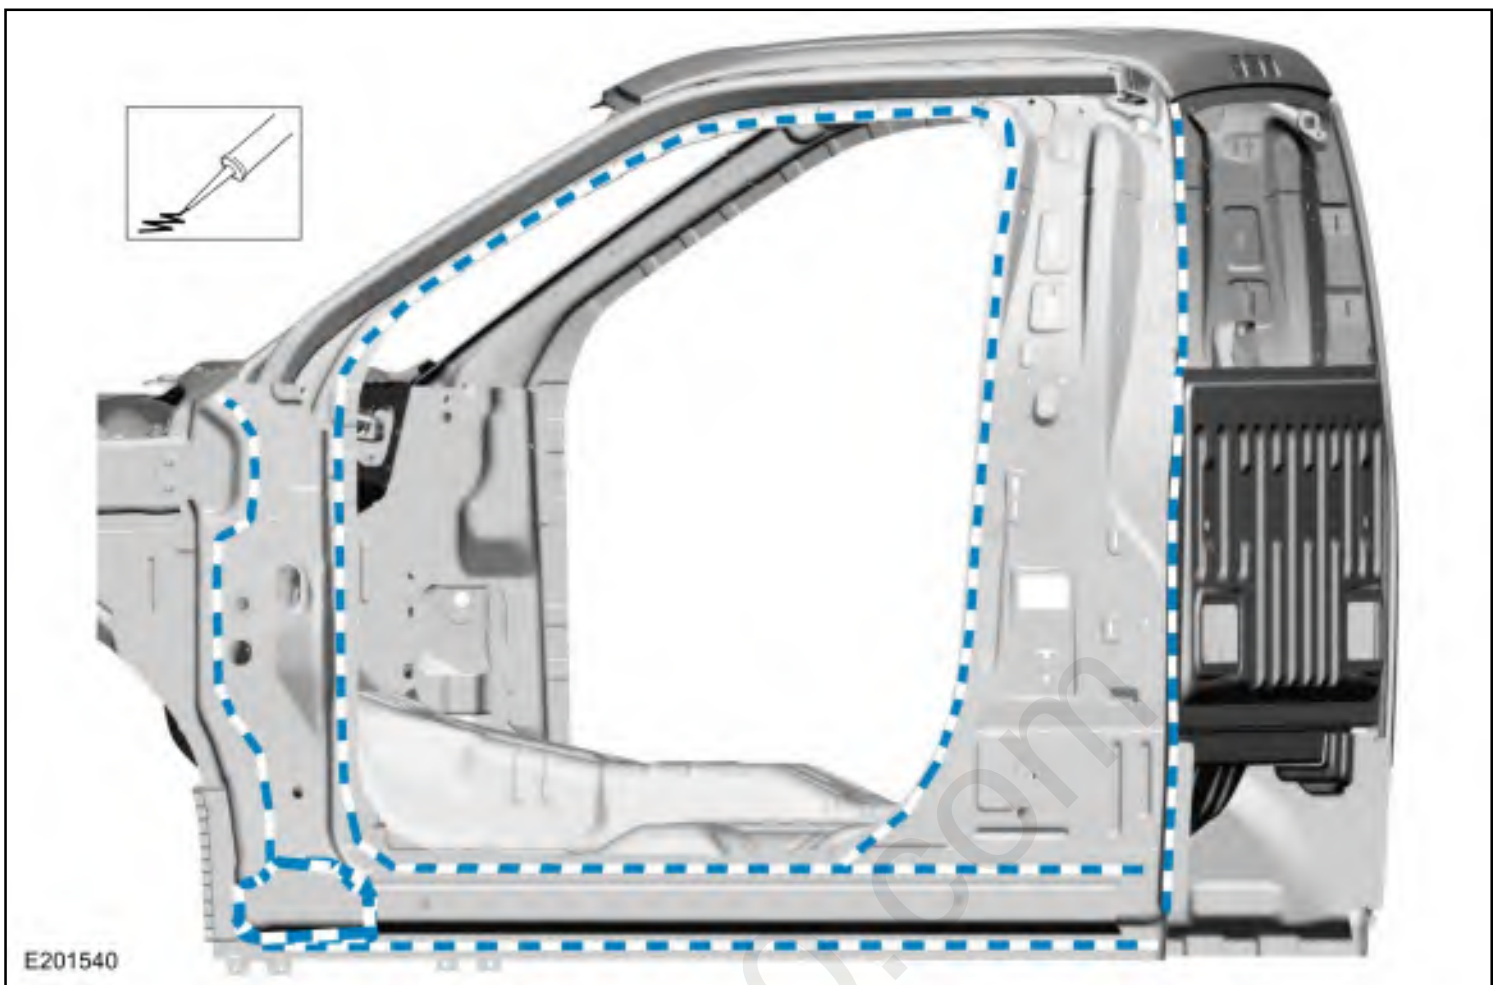



7. Install the body side panel and clamp in position.
Use the General Equipment: Locking Pliers

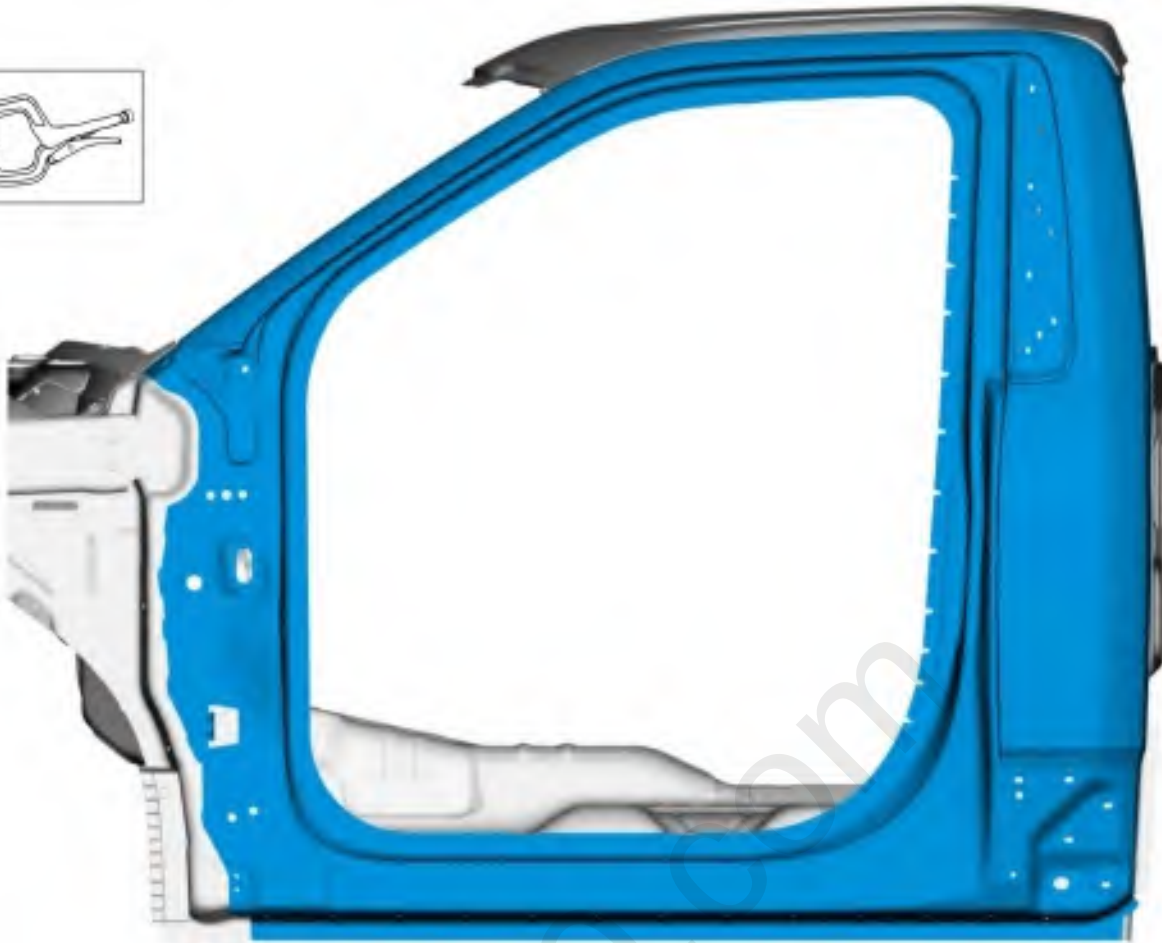

E201541



8. **Partial panel replacement:** Complete joining of backer plates to body side panel using a MIG welder set up for aluminum repair.
Refer to: [Joining Techniques](#) (501-25 Body Repairs - General Information, General Procedures).
Use the General Equipment: MIG/MAG Welding Equipment
9. Drill 6.5 mm holes for blind rivet fastener installation.
Use the General Equipment: 6.5 mm Drill Bit

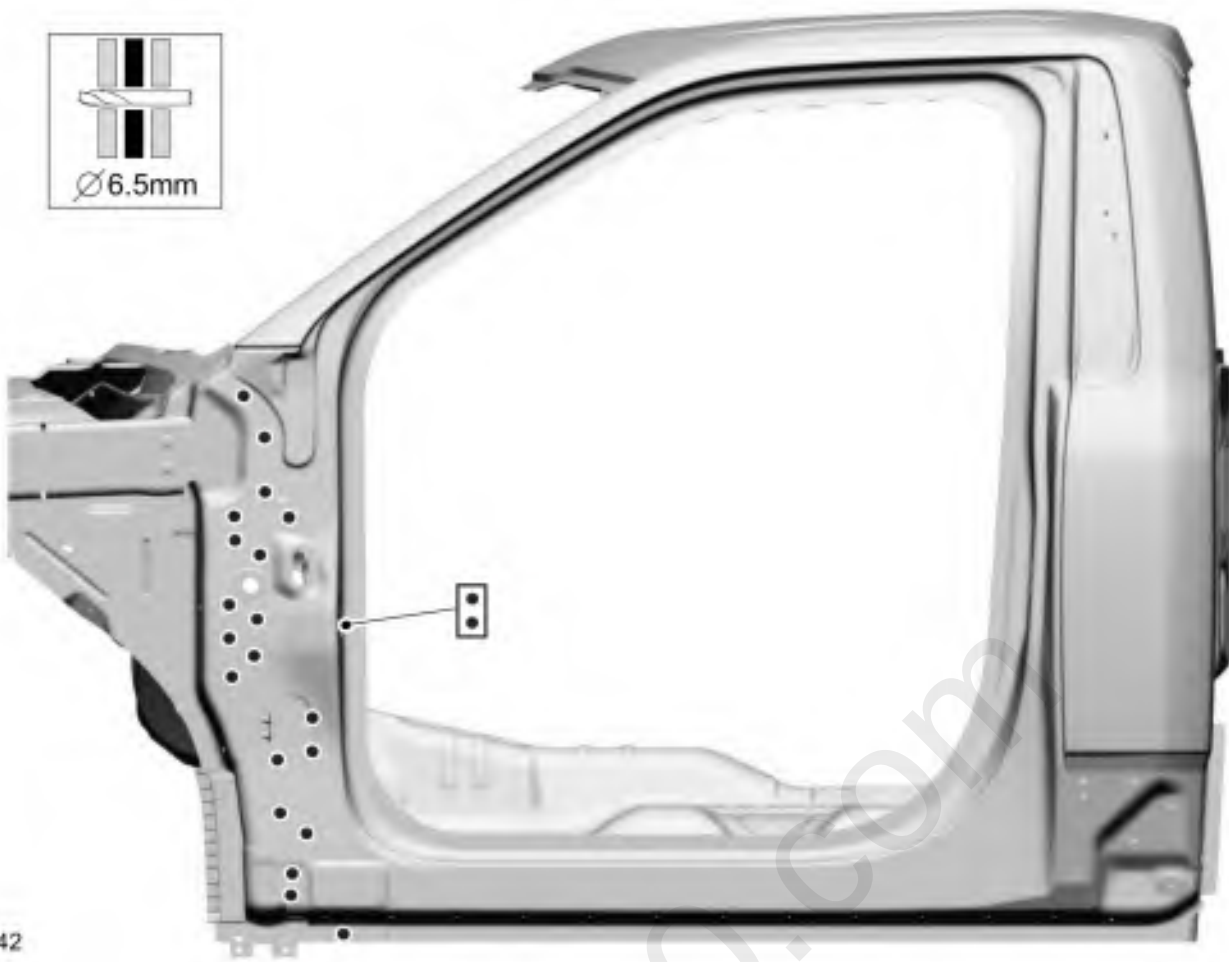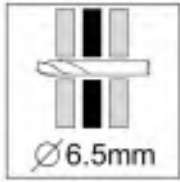

E201542




10. **NOTE:** Blind or solid rivet fasteners may be used in place of SPR fasteners after enlarging holes to 6.5 mm.

Install fasteners.

Item	SPR Number	SPR Code	Henrob® Mandrel	Pro-Spot® Mandrel	Blind Rivet	Solid Rivet	Rivnut®
1	-	-	-	-	W708777-S900C	-	-
2	-	-	-	-	W707638-S900C	-	-
3	-	-	-	-	W702554-S900C	-	-

Refer to: [Joining Techniques](#) (501-25 Body Repairs - General Information, General Procedures).
Use the General Equipment: Blind Rivet Gun

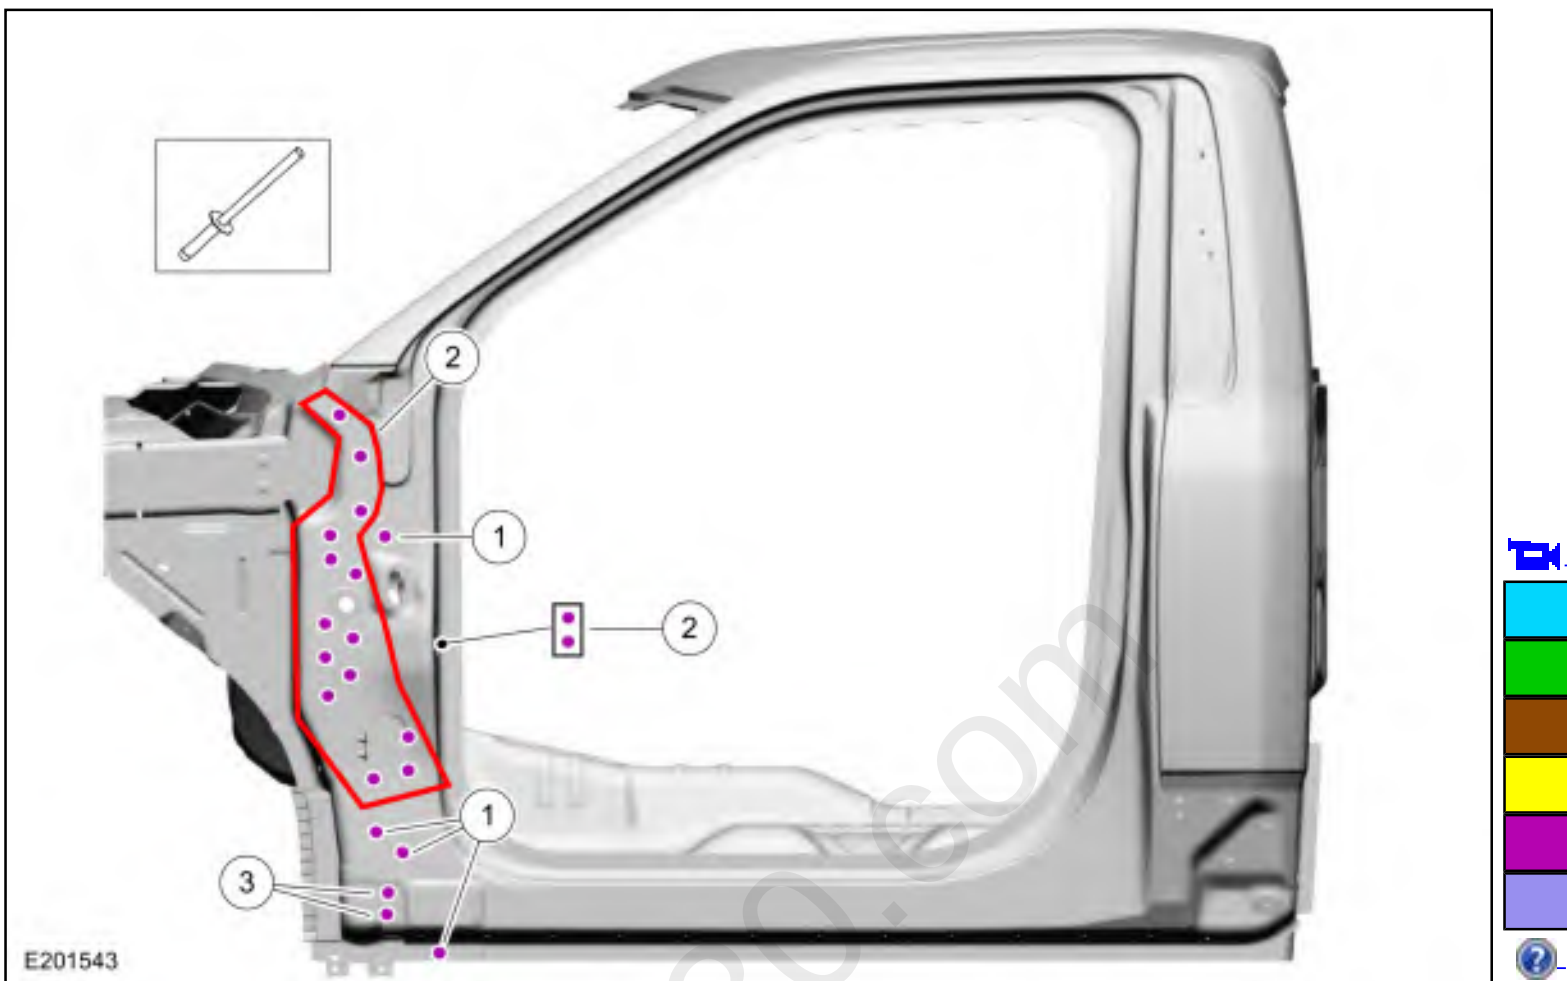

11. **NOTE:** SPR fasteners may not be placed directly over original SPR location. They must be adjacent to original location matching original quantity.


NOTE: Blind or solid rivet fasteners may be used in place of SPR fasteners after enlarging holes to 6.5 mm.

Install fasteners.

Item	SPR Number	SPR Code	Henrob® Mandrel	Pro-Spot® Mandrel	Blind Rivet	Solid Rivet	Rivnut®
1	W708713-S900	AS	DZ09-025/H	SA-0400/ SA-0401	-	W790376-S900	-
2	W708713-S900	AS	DP11-200/H	SA-0400/ SA-0402	-	W790377-S900	-
3	W717186-S900	EN	DG11-220/H	SA-0400/ SA-0402	-	W790377-S900	-

4	W717186-S900	EN	DP11-200/H	SA-0400/ SA-0402	-	W790377-S900	-
5	W708717-S900	AW	DP11-200/H	SA-0400/ SA-0402	-	W790377-S900	-
6	W717185-S900	EL	DG11-220/H	SA-0400/ SA-0402	-	W790377-S900	-
7	W710246-S900	BN	DP10-200/H	SA-0400/ SA-0402	-	W790377-S900	-

Refer to: [Joining Techniques](#) (501-25 Body Repairs - General Information, General Procedures).
Use the General Equipment: Self-Piercing Rivet (SPR) Remover/Installer

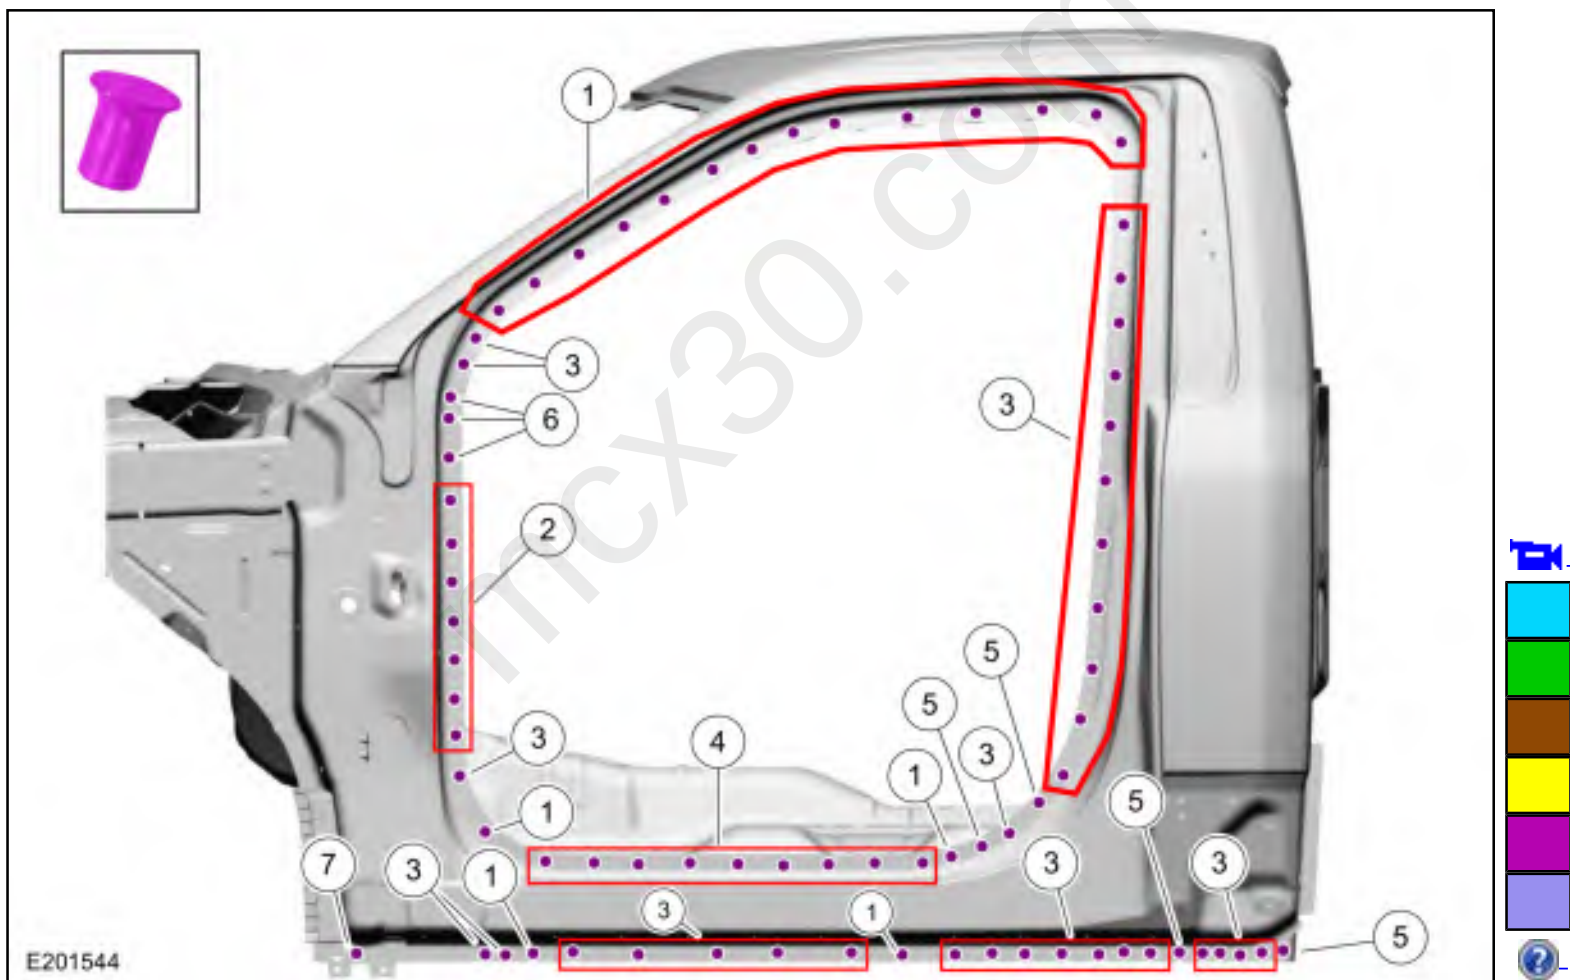



12. **NOTE:** SPR fasteners may not be placed directly over original SPR location. They must be adjacent to original location matching original quantity.

NOTE: Blind or solid rivet fasteners may be used in place of SPR fasteners after enlarging holes to 6.5 mm.

Install fasteners.

Item	SPR Number	SPR Code	Henrob® Mandrel	Pro-Spot® Mandrel	Blind Rivet	Solid Rivet	Rivnut®
1	W717186-S900	EN	DP11-200/H	SA-0400/ SA-0402	-	W790377-S900	-
2	W708713-S900	AS	DZ09-025/H	SA-0400/ SA-0402	-	W790377-S900	-

 
Refer to: [Joining Techniques](#) (501-25 Body Repairs - General Information, General Procedures).
Use the General Equipment: Self-Piercing Rivet (SPR) Remover/Installer

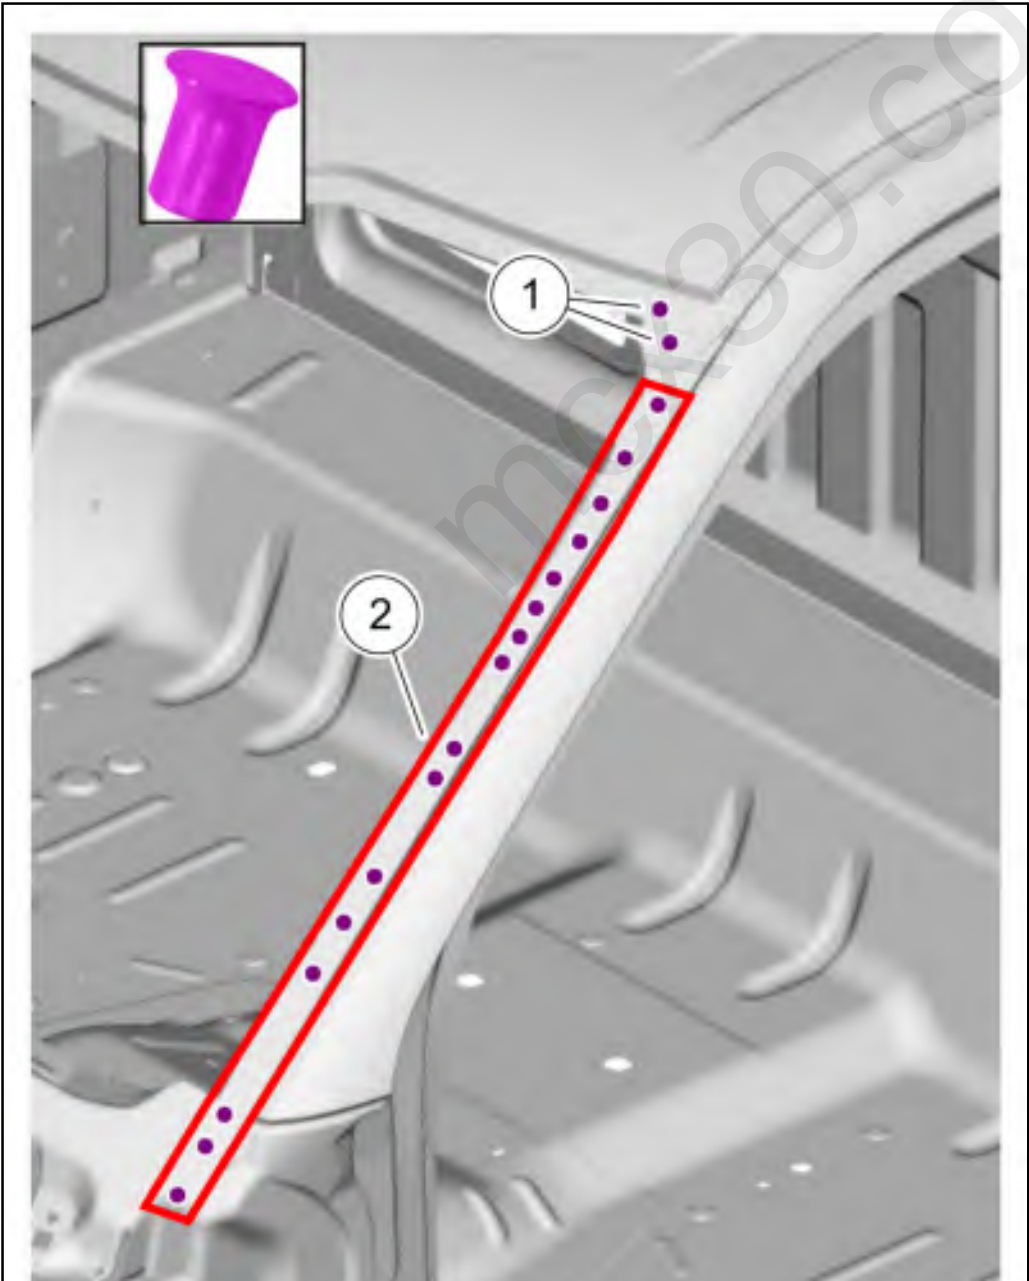



13. Drill for fasteners.

Use the General Equipment: 6.5 mm Drill Bit

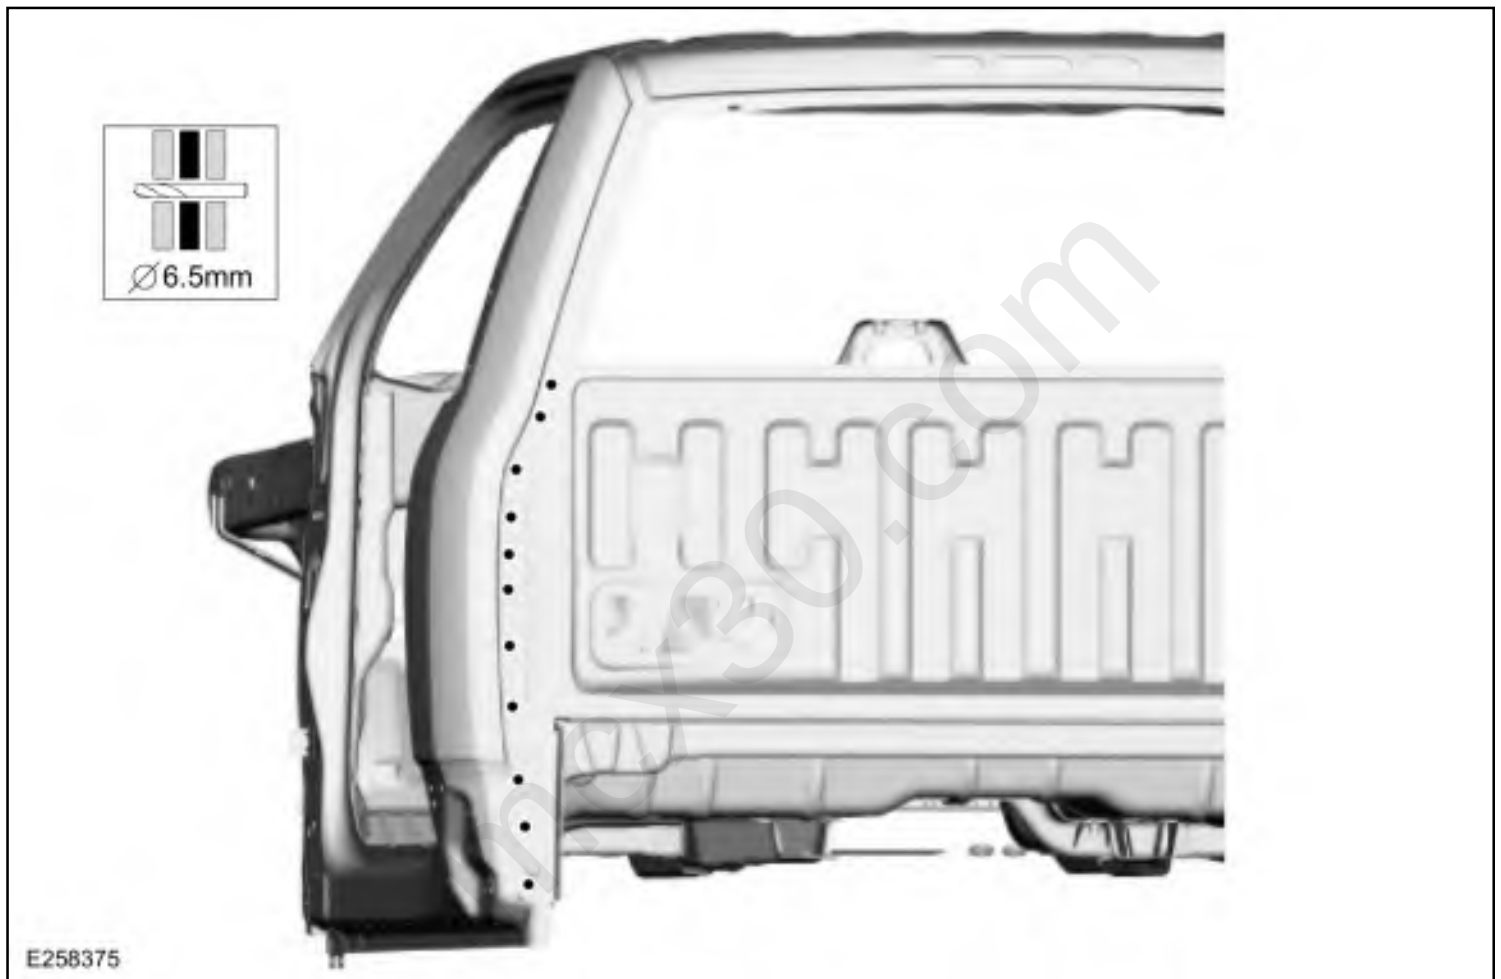

14. **NOTE:** *SPR fasteners may not be placed directly over original SPR location. They must be adjacent to original location matching original quantity.*

NOTE: *Blind or solid rivet fasteners may be used in place of SPR fasteners after enlarging holes to 6.5 mm.*


Install fasteners.

Item	SPR Number	SPR Code	Henrob® Mandrel	Pro-Spot® Mandrel	Blind Rivet	Solid Rivet	Rivnut®
1	-	-	-	-	W708777-S900C	-	-
2	W708713-S900	AS	DZ09-025/H	SA-0400/SA-0402	-	W790377-S900	-
3	W708717-S900	AW	DG10-220/H	SA-0400/SA-0402	-	W790377-S900	-

Refer to: [Joining Techniques](#) (501-25 Body Repairs - General Information, General Procedures).


Use the General Equipment: Self-Piercing Rivet (SPR) Remover/Installer

Use the General Equipment: Blind Rivet Gun

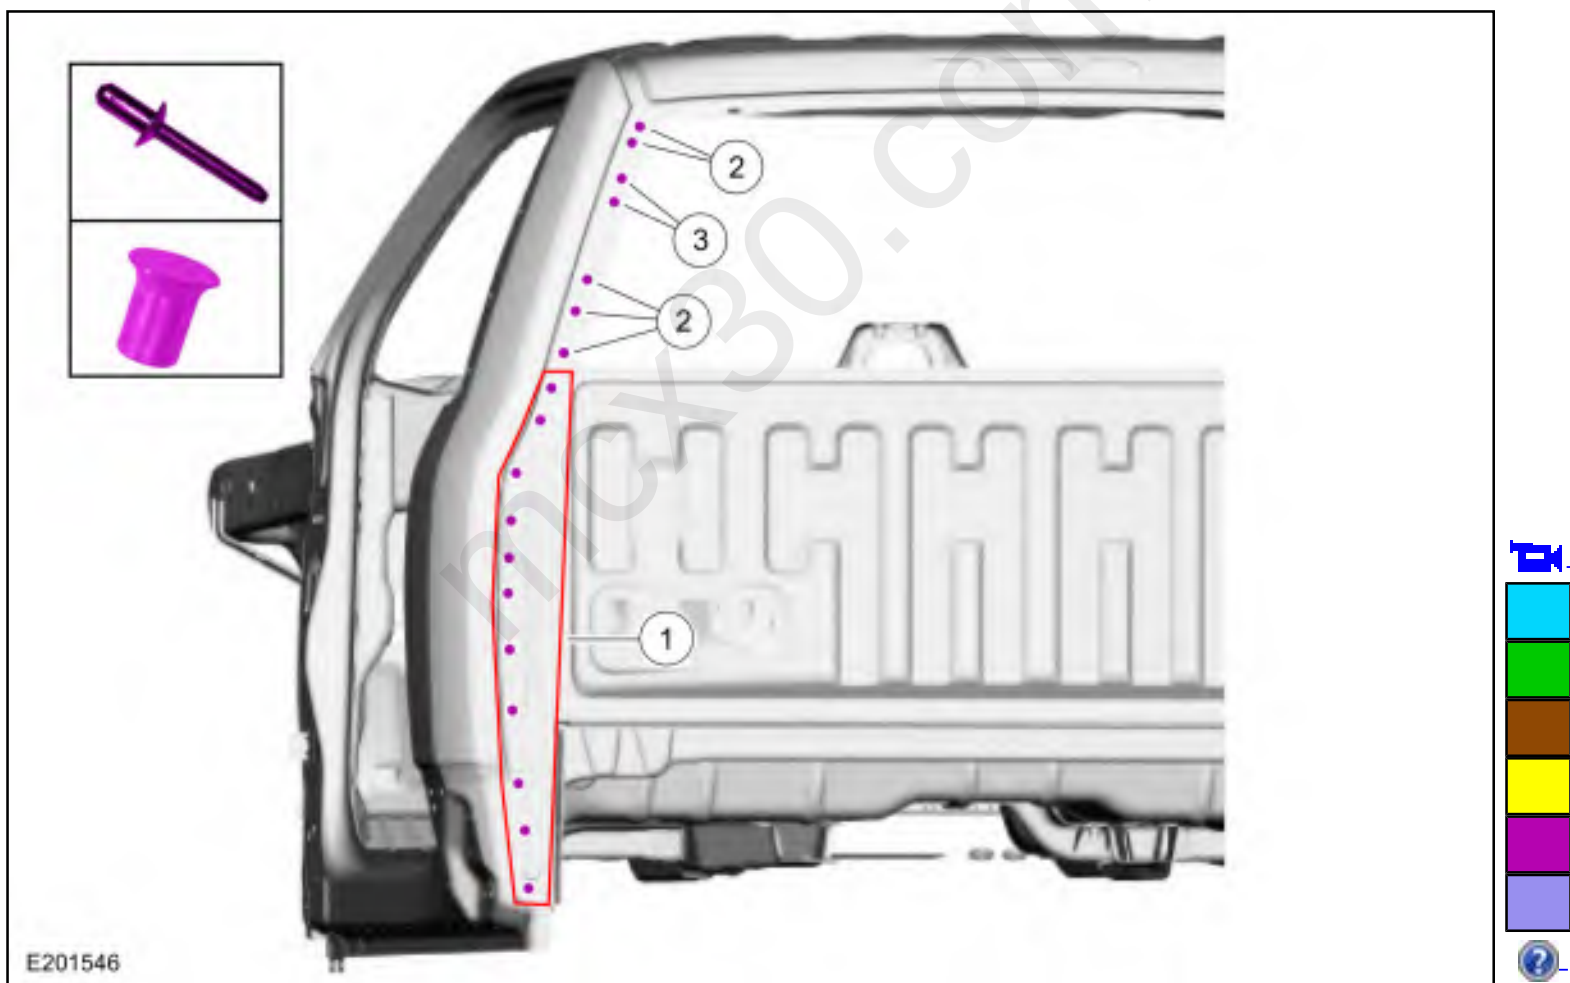

15. Seam weld the roof to body side joint using a MIG welder set up for aluminum repair.


Use the General Equipment: MIG/MAG Welding Equipment

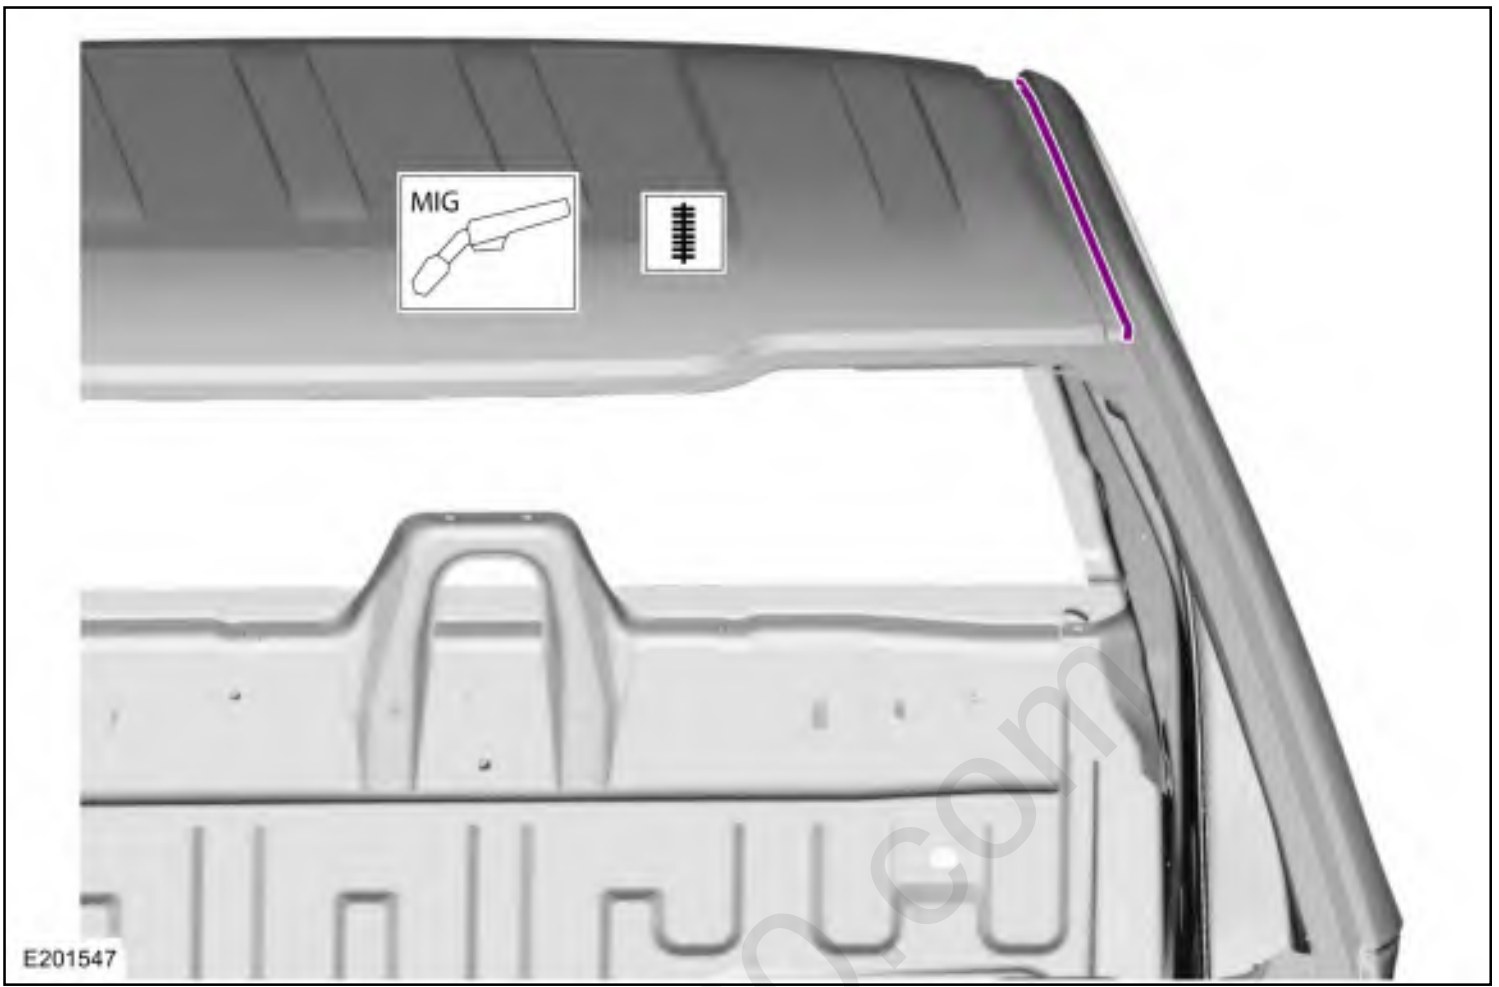


16. Metal finishing:

Metal finish all seams using typical aluminum metal finishing techniques and a fiber-based body filler. Refer to: [Special Repair Considerations for Aluminum Repairs](#) (501-25 Body Repairs - General Information, Description and Operation).


17. Apply a Ford approved epoxy-based primer to the rear window glass opening channel.

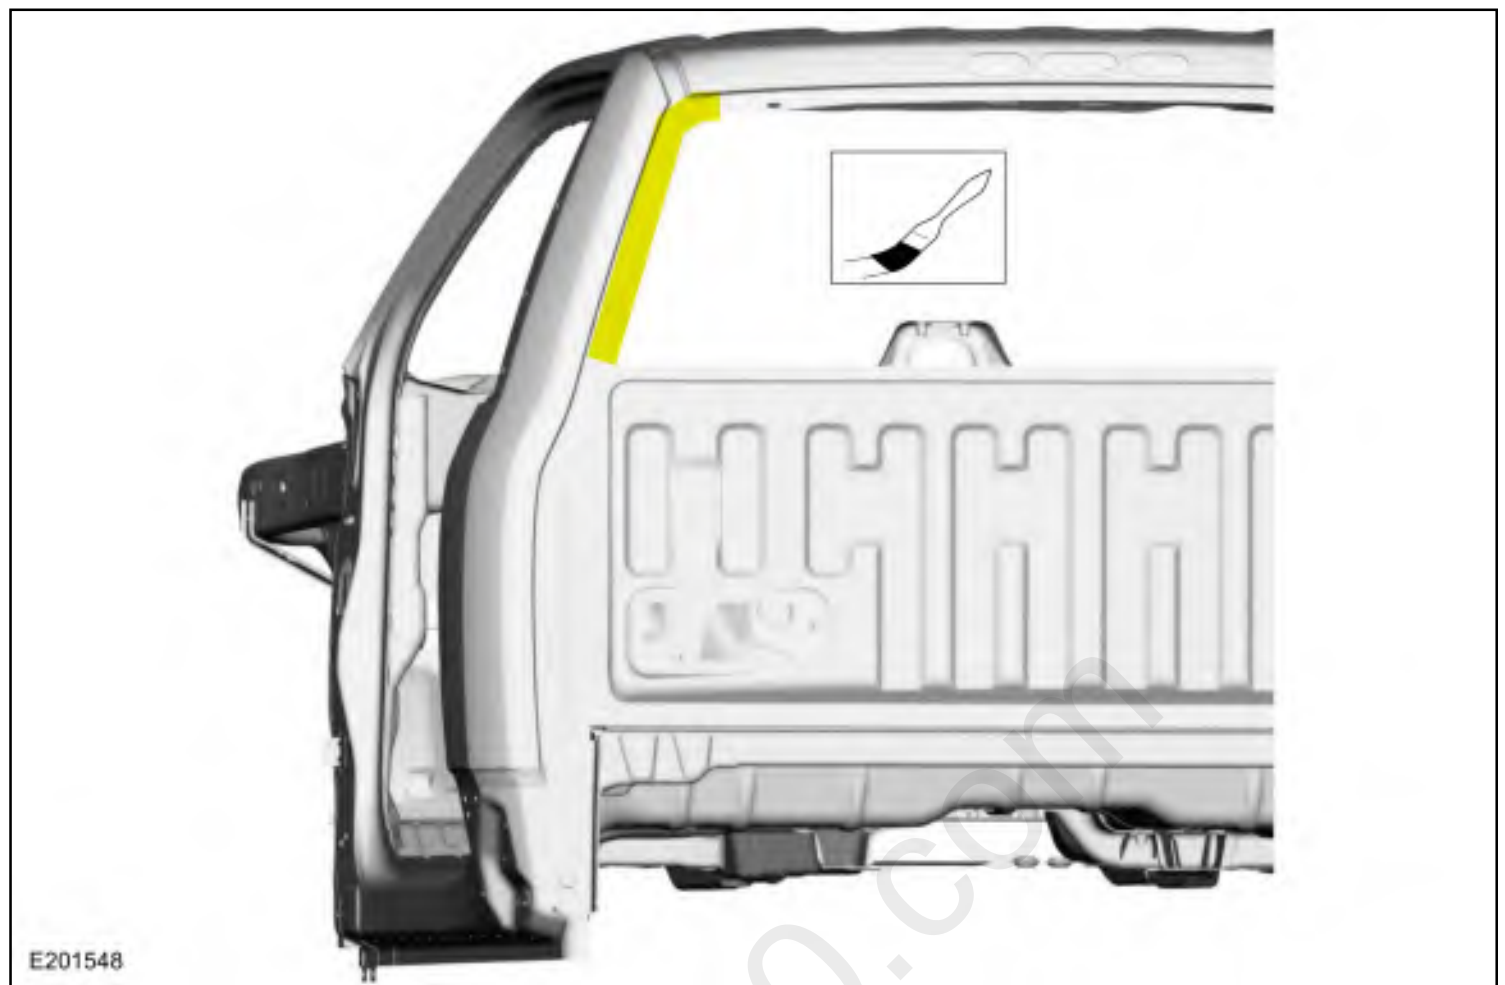


18. Apply a Ford approved epoxy-based primer to the windshield opening channel.

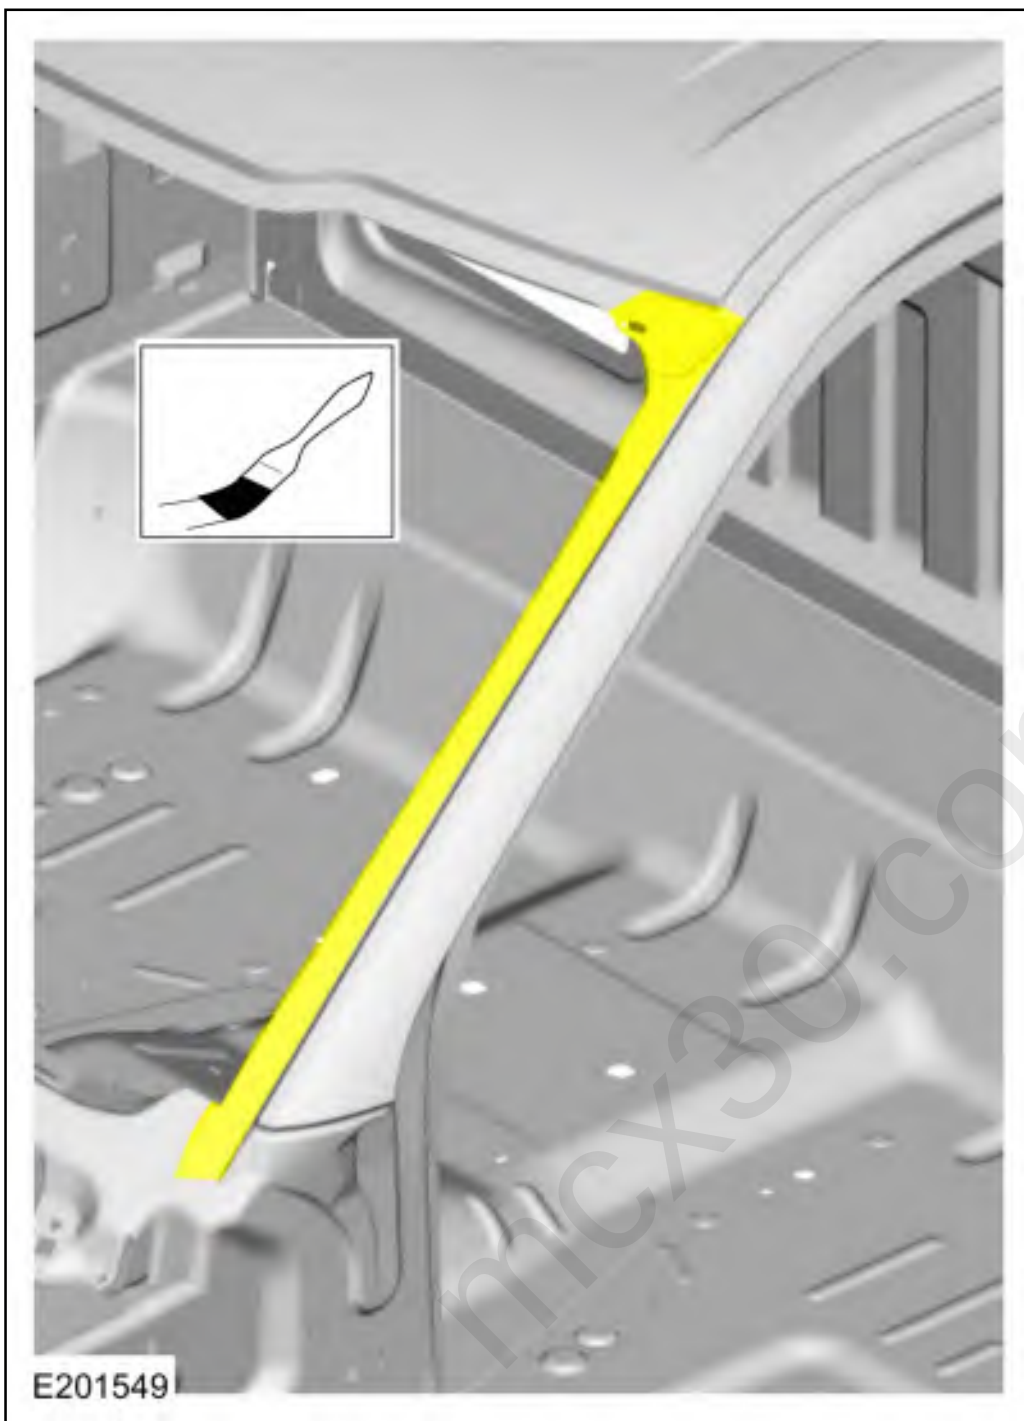


19. Mask the windshield opening channel.

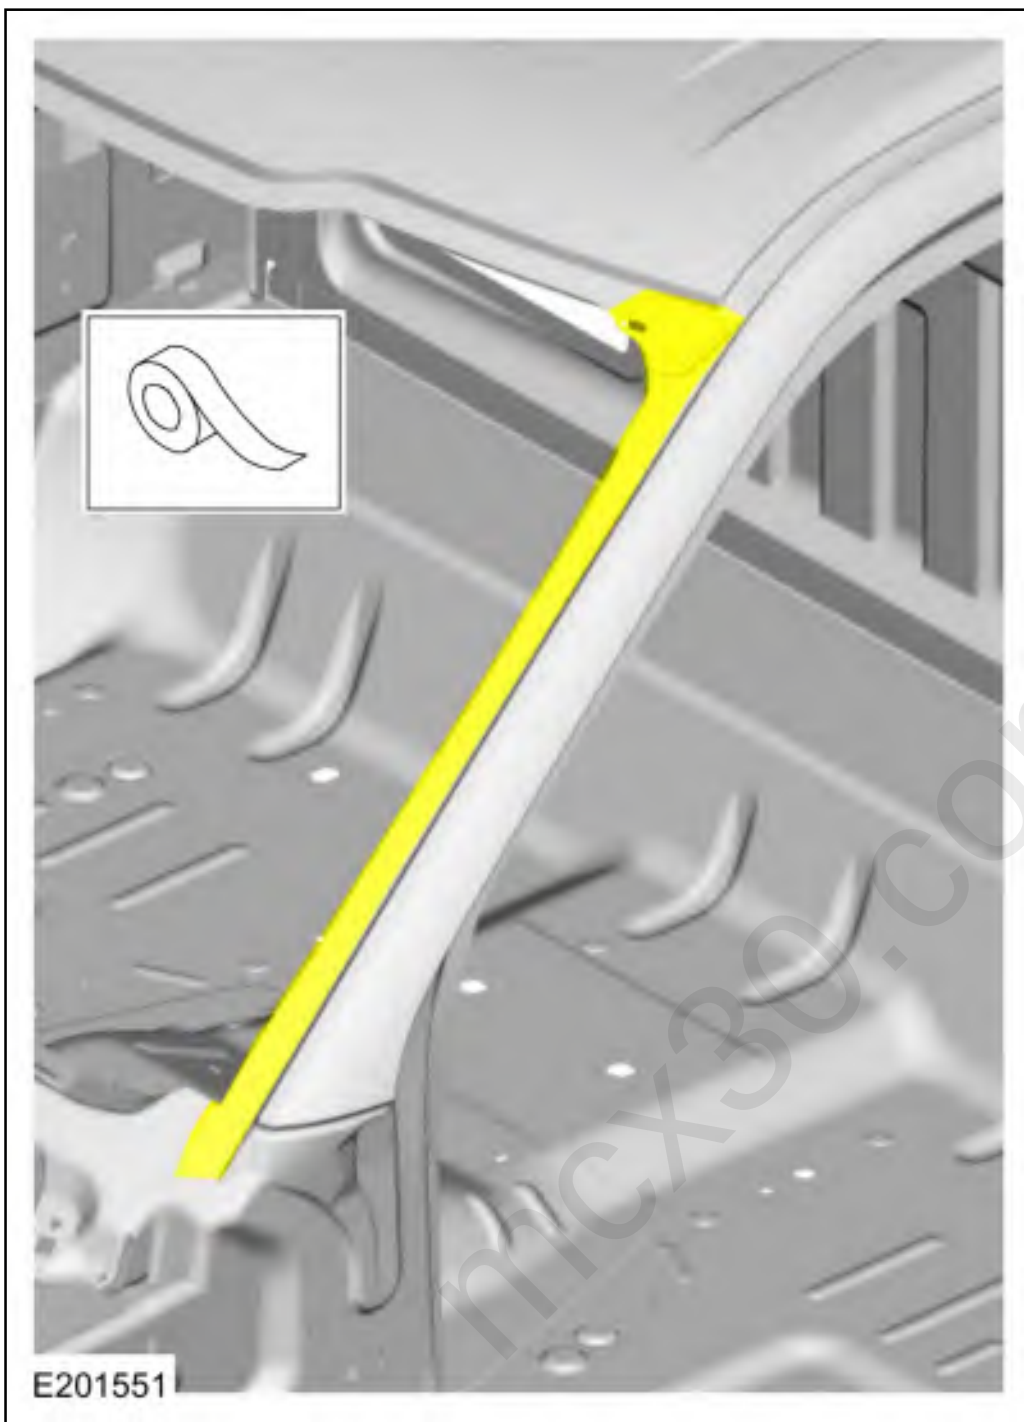

20. Mask the rear window glass opening channel.

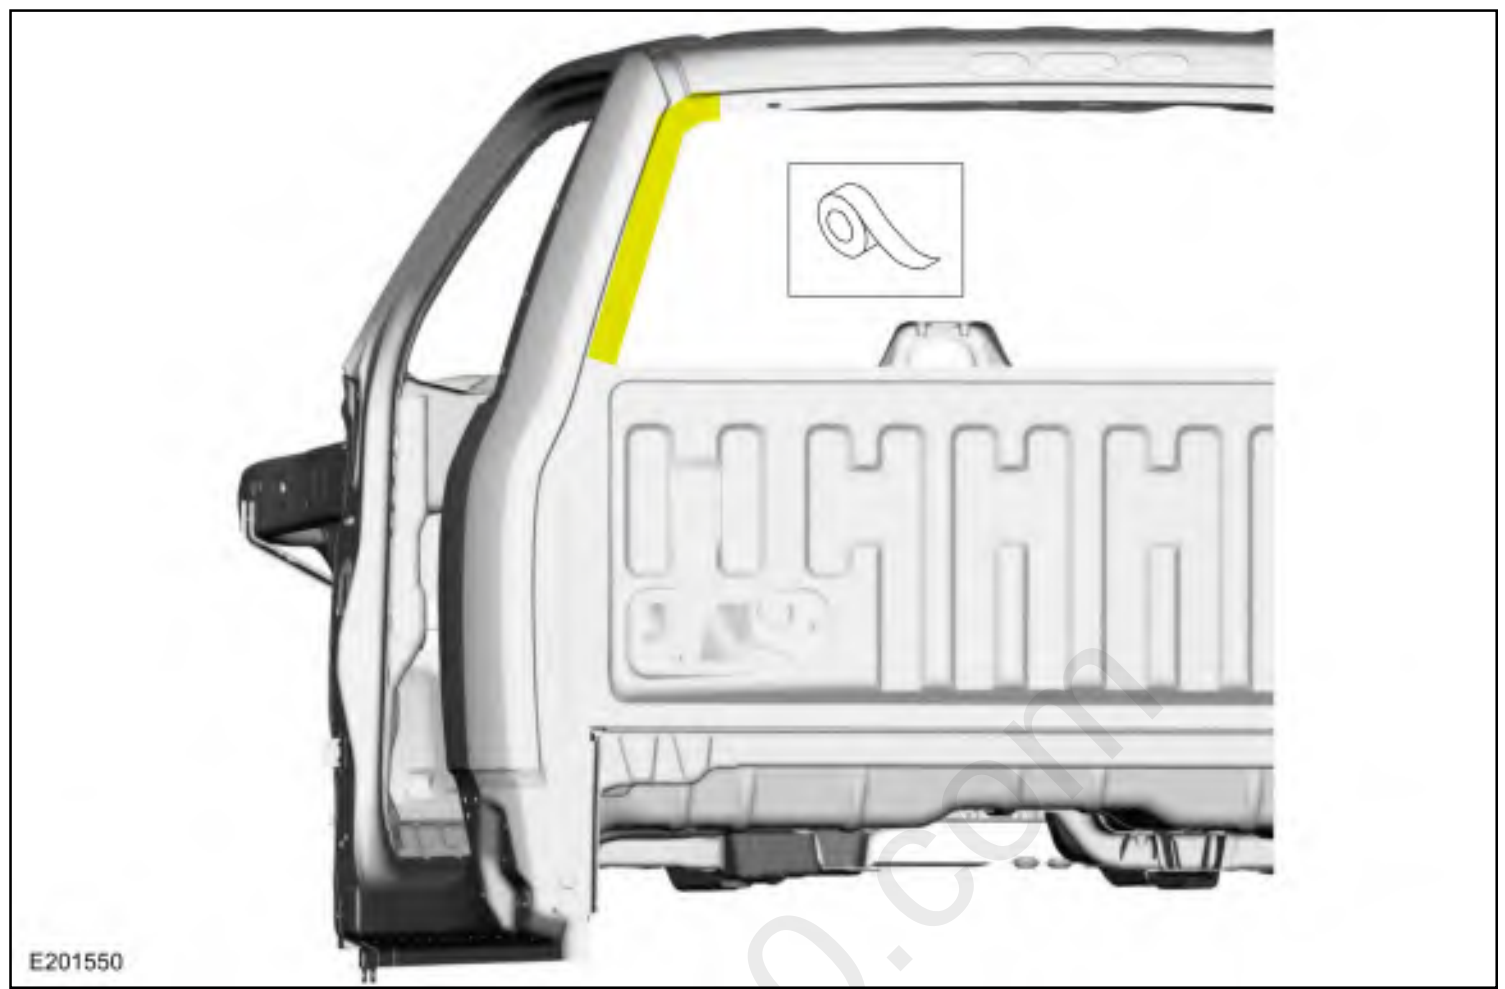


21. Apply NVH foam to all locations noted during removal to assure complete sealing.
Material: Flexible Foam Repair / 3M™ 08463, LORD Fusor® 121

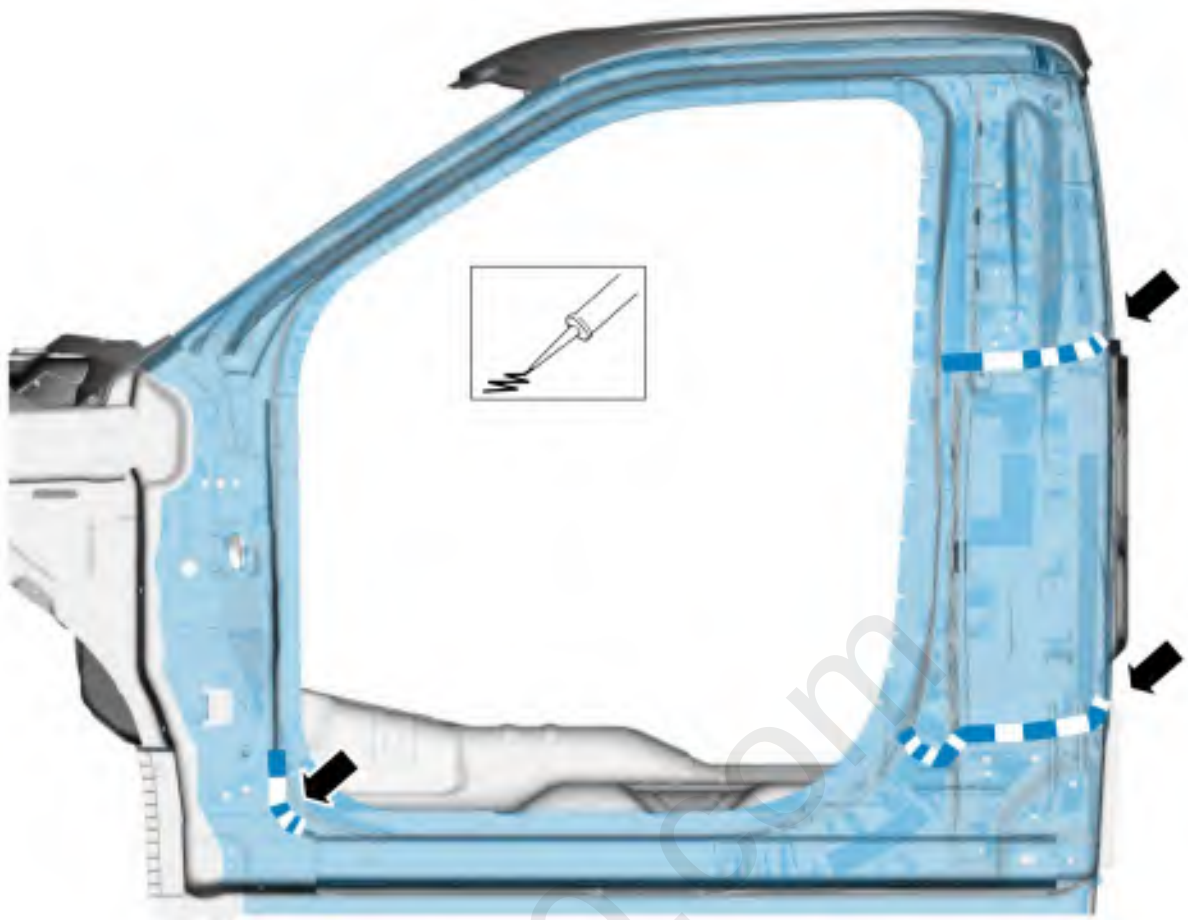

22. Seam Sealing:


All seams must be sealed to production level.

Material: Seam Sealer / TA-2-B, 3M™ 08308, LORD Fusor® 805DTM

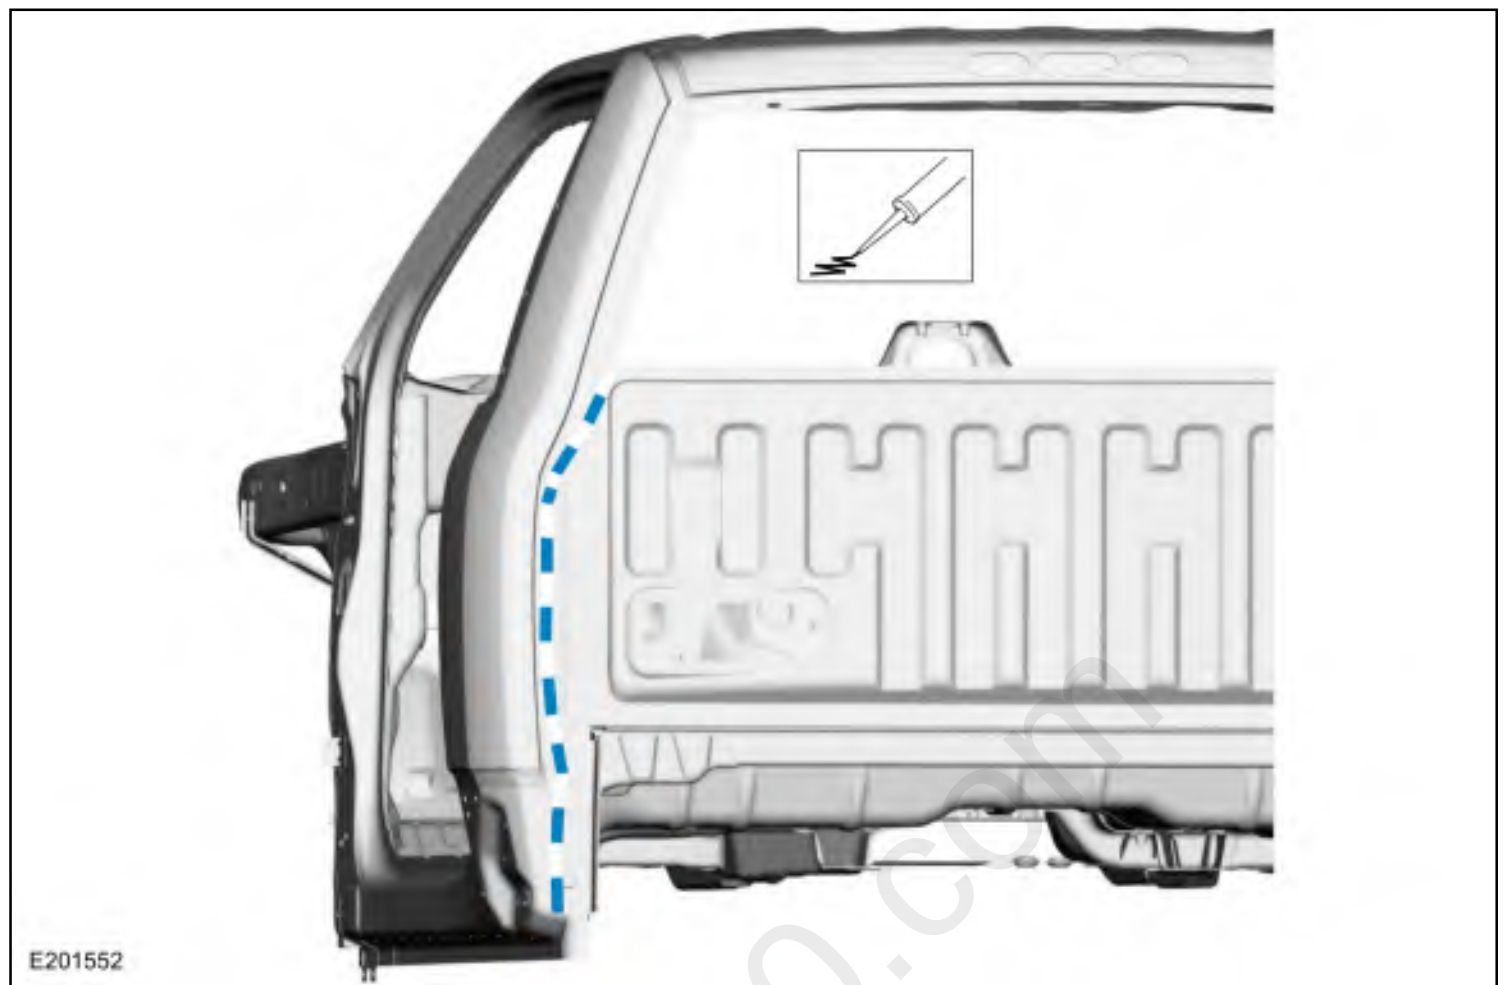


23. Apply roof ditch sealer.


Material: Roof Ditch Sealer / 3M™ 08307, LORD Fusor® 122EZ

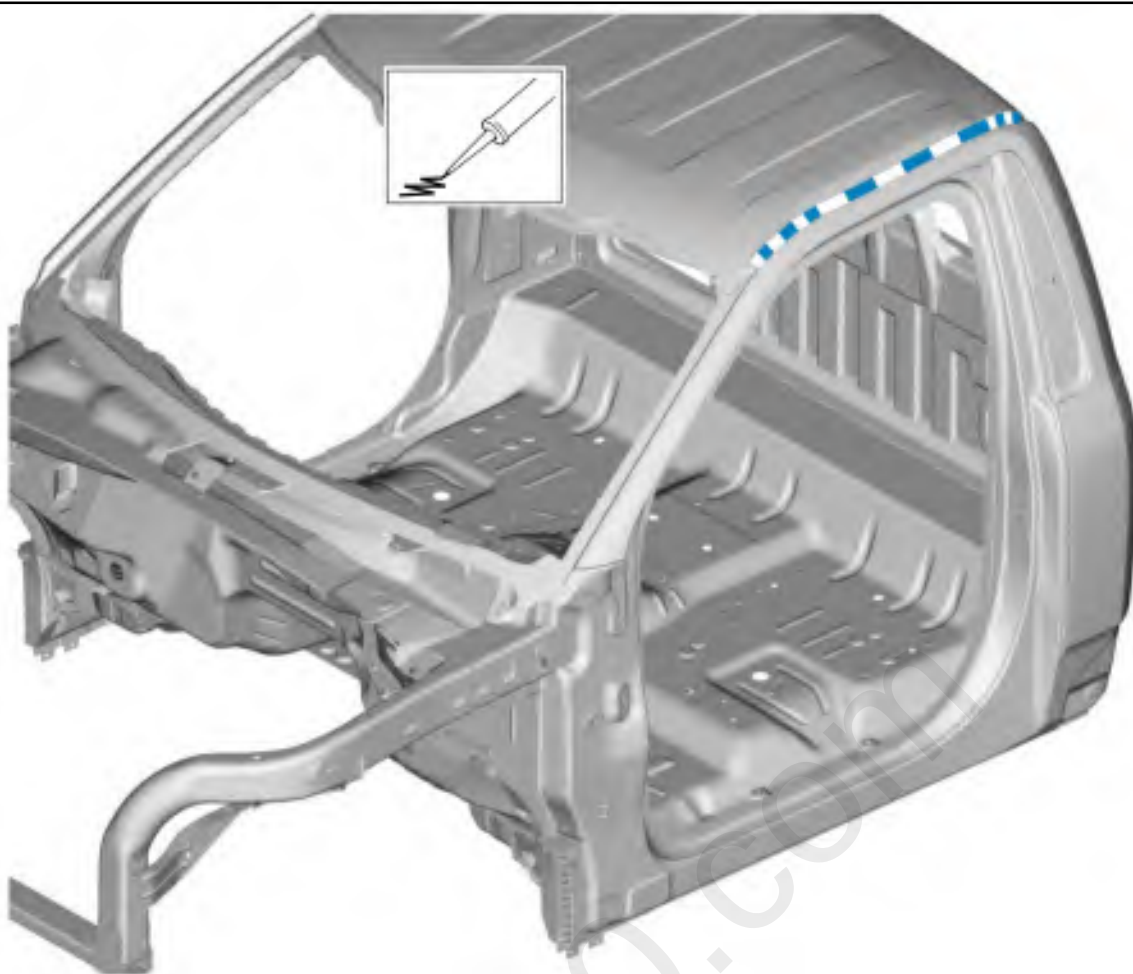

24. Refinish the entire repair area using a Ford approved paint system and typical refinishing techniques.
25. Unmask the windshield opening channel.

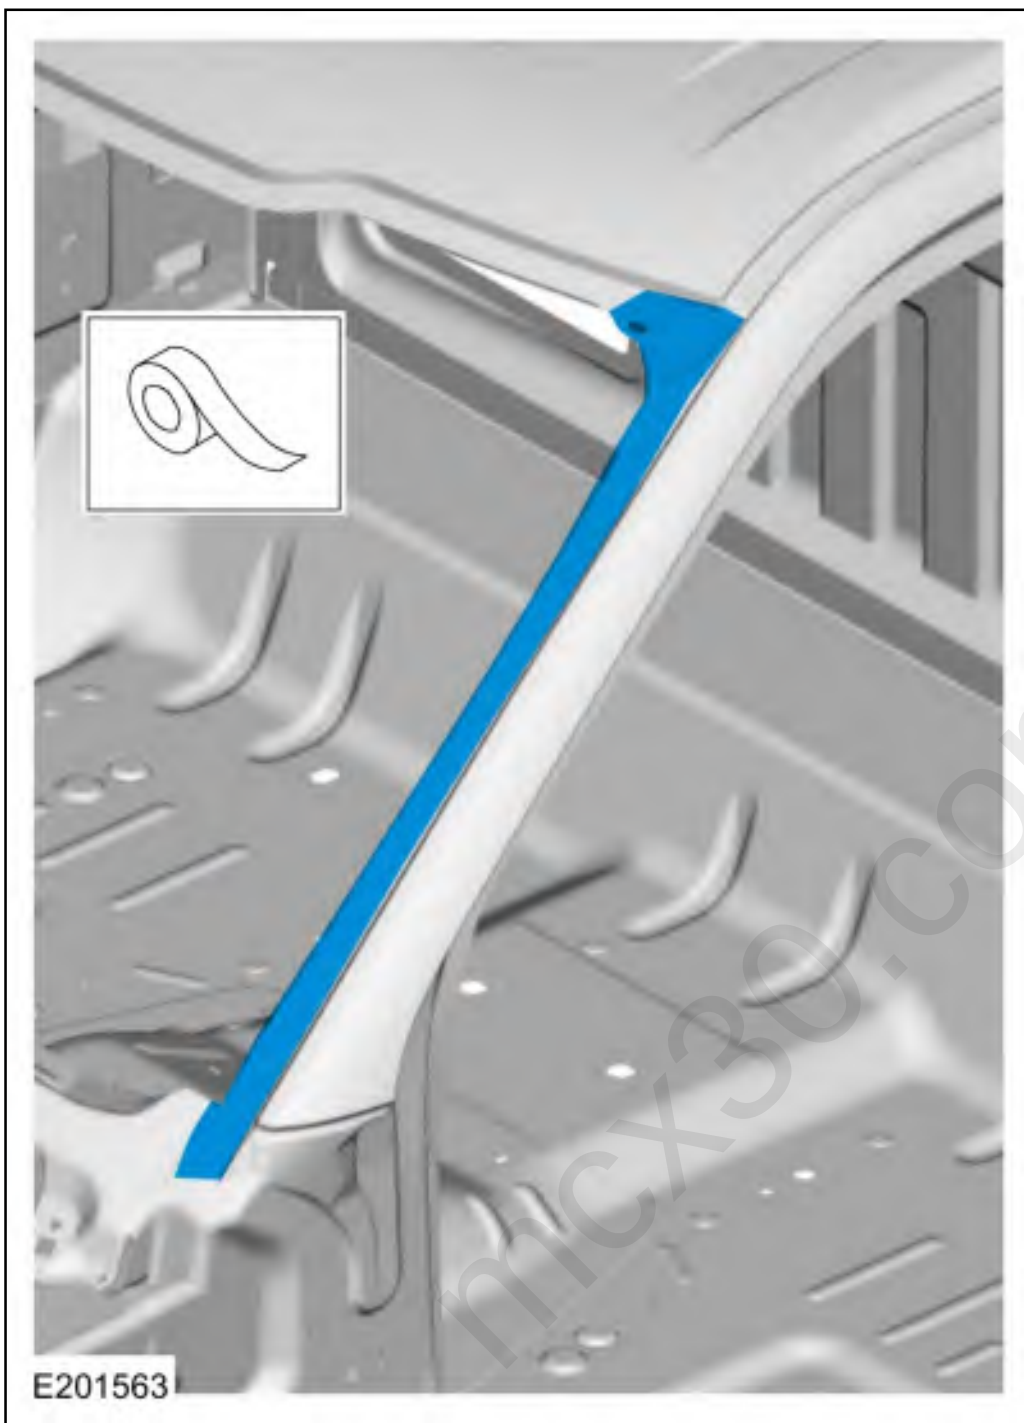

26. Unmask the rear window glass opening channel.

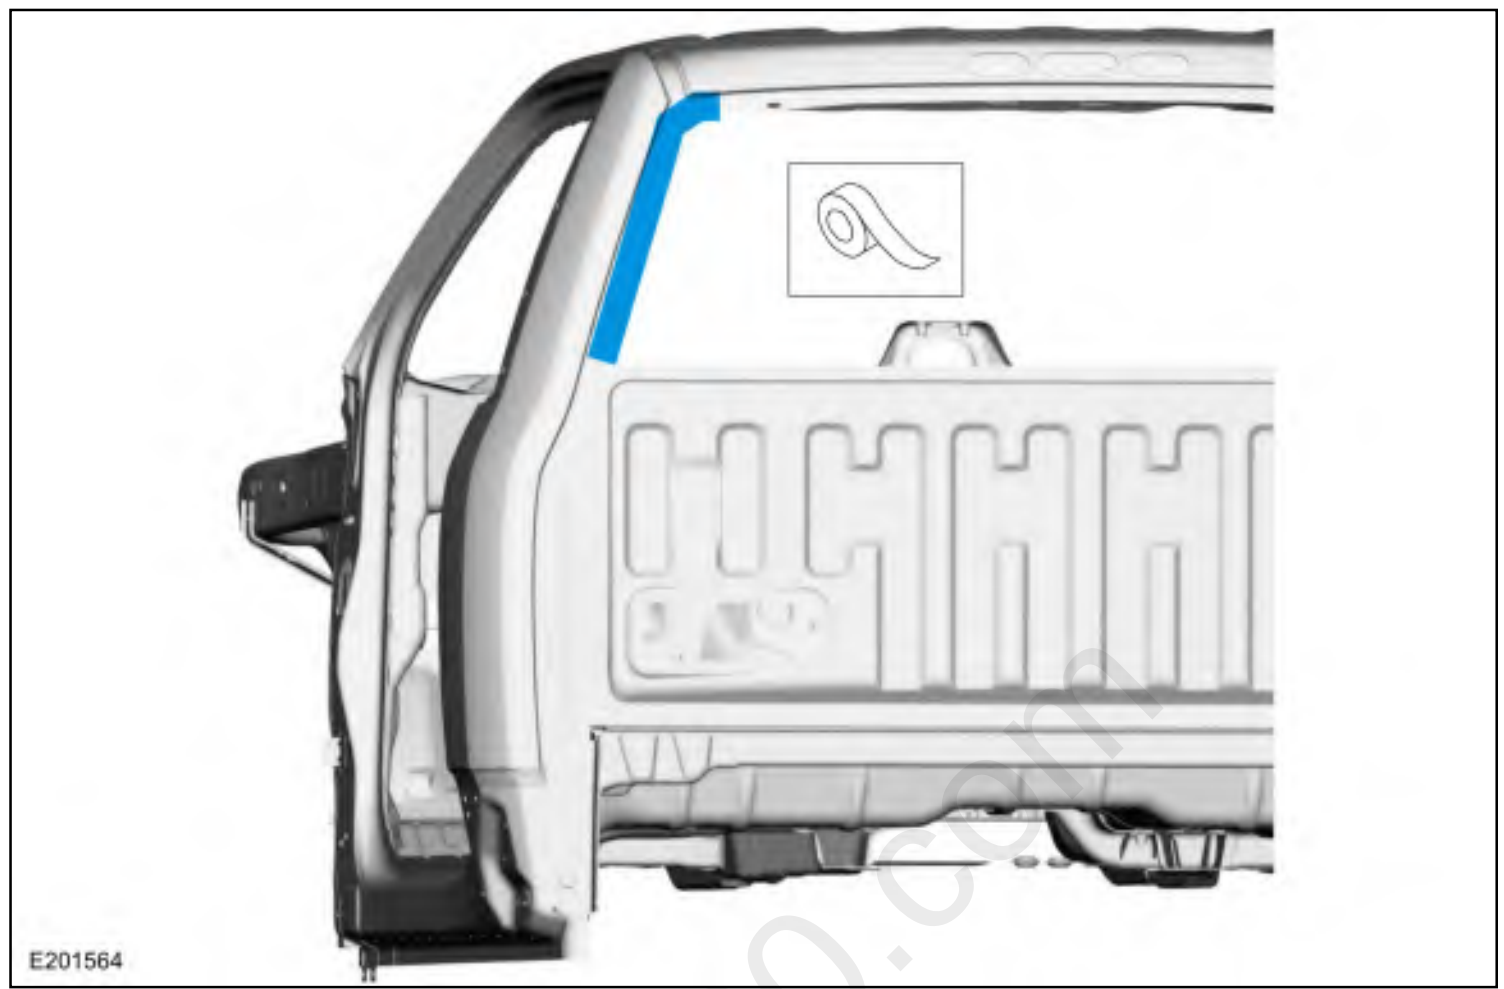


27. Install the side curtain air bag.
Refer to: [Side Curtain Airbag - Regular Cab](#) (501-20B Supplemental Restraint System, Removal and Installation).
28. Install the door opening weather strips and scuff plate.
29. Install the windshield and rear window glass.
Refer to: [Fixed Glass](#) (501-11 Glass, Frames and Mechanisms, General Procedures).
30. Install the outer cab trim.
Refer to: [Roof Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
Refer to: [Bodyside Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
Refer to: [Front Door Upper Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
Refer to: [Rear Quarter Panel Moulding](#) (501-08 Exterior Trim and Ornamentation, Removal and Installation).
31. Install the door hinges and striker.
 - Door hinges.

Torque: 21 lb.ft (28 Nm)

- Striker.

Torque: 18 lb.ft (25 Nm)

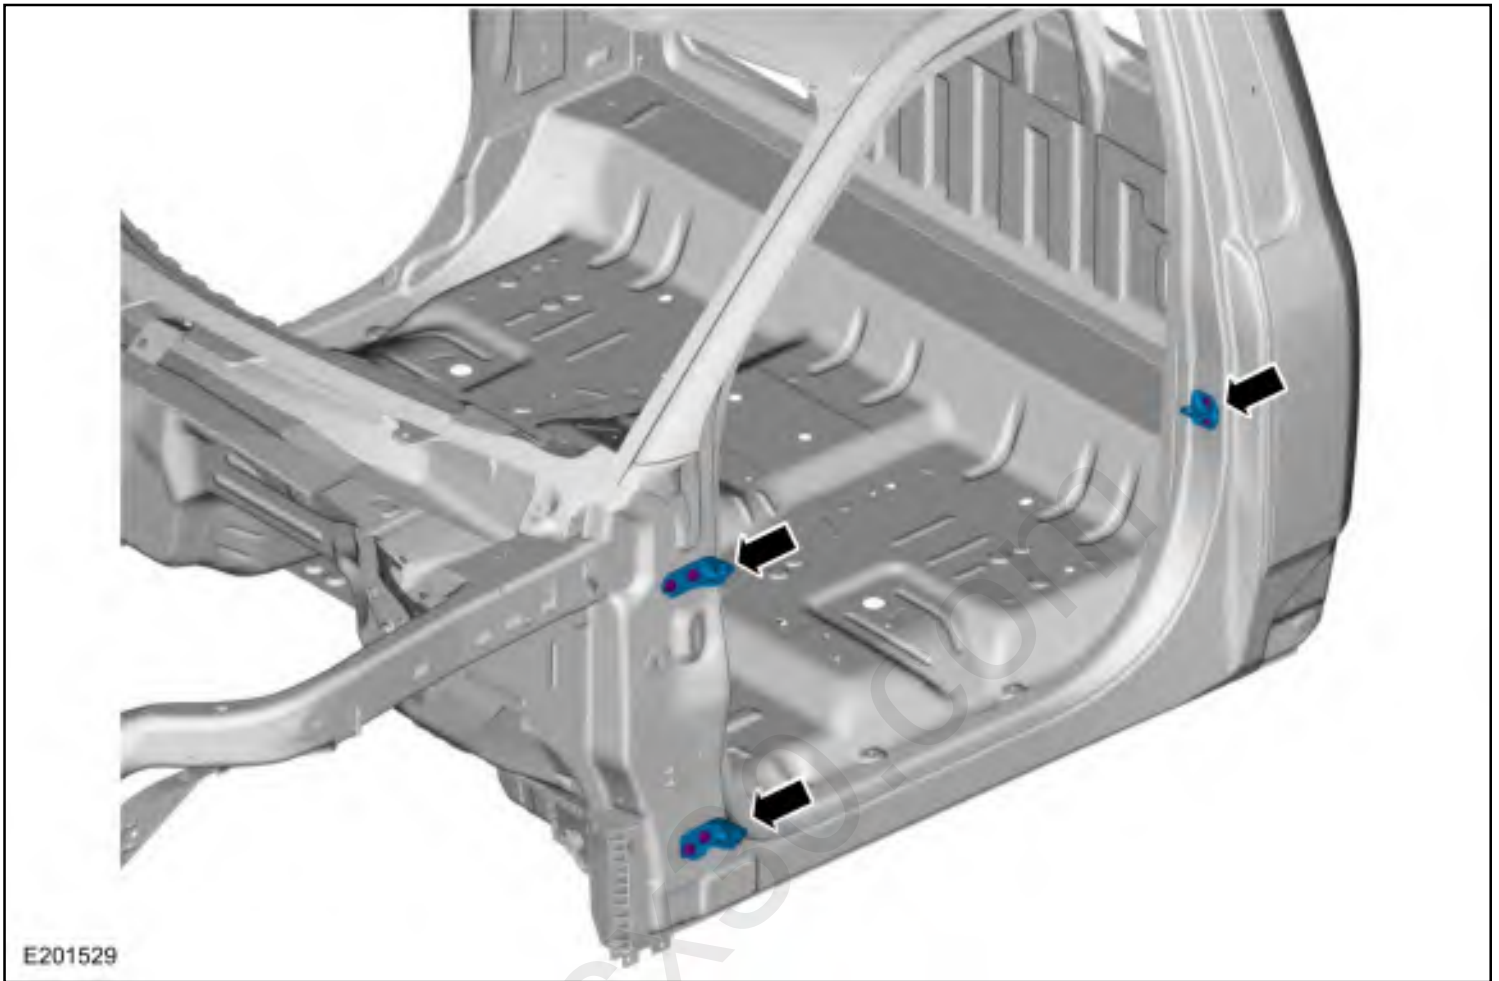

32. Install the A and C-pillar trim.

Refer to: [A-Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

Refer to: [C-Pillar Trim Panel](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).

33. Install the fender.

Refer to: [Fender](#) (501-02 Front End Body Panels, Removal and Installation).

34. Install and align the door.

Refer to: [Front Door - Regular Cab/SuperCrew](#) (501-03 Body Closures, Removal and Installation).

Refer to: [Front Door Alignment - Regular Cab/SuperCrew](#) (501-03 Body Closures, General Procedures).

35. Install the pickup box.

Refer to: [Pickup Bed](#) (501-04 Pickup Bed and Platform Body, Removal and Installation).

36. Repower the SRS.

Refer to: [Supplemental Restraint System \(SRS\) Repowering](#) (501-20B Supplemental Restraint System, General Procedures).

Copyright © 2018 Ford Motor Company

mcx30.com