

Axle Tube Bearing


Special Tool(s) / General Equipment

 E234300	205-123 (T78P-1177-A) Installer, Axle Shaft Oil Seal
 E231410	308-047 (T77F-1102-A) Remover, Bearing Cup
Slide Hammer	

Removal


1. Remove the axle shaft seal.
Refer to: [Axle Shaft Seal](#) (205-03 Front Drive Axle/Differential, Removal and Installation).
2. **NOTE:** *Right side shown, left side similar.*

Using special tool and a slide hammer, remove and discard the axle shaft pilot bearing.
Use Special Service Tool: 308-047 (T77F-1102-A) Remover, Bearing Cup.
Use the General Equipment: Slide Hammer

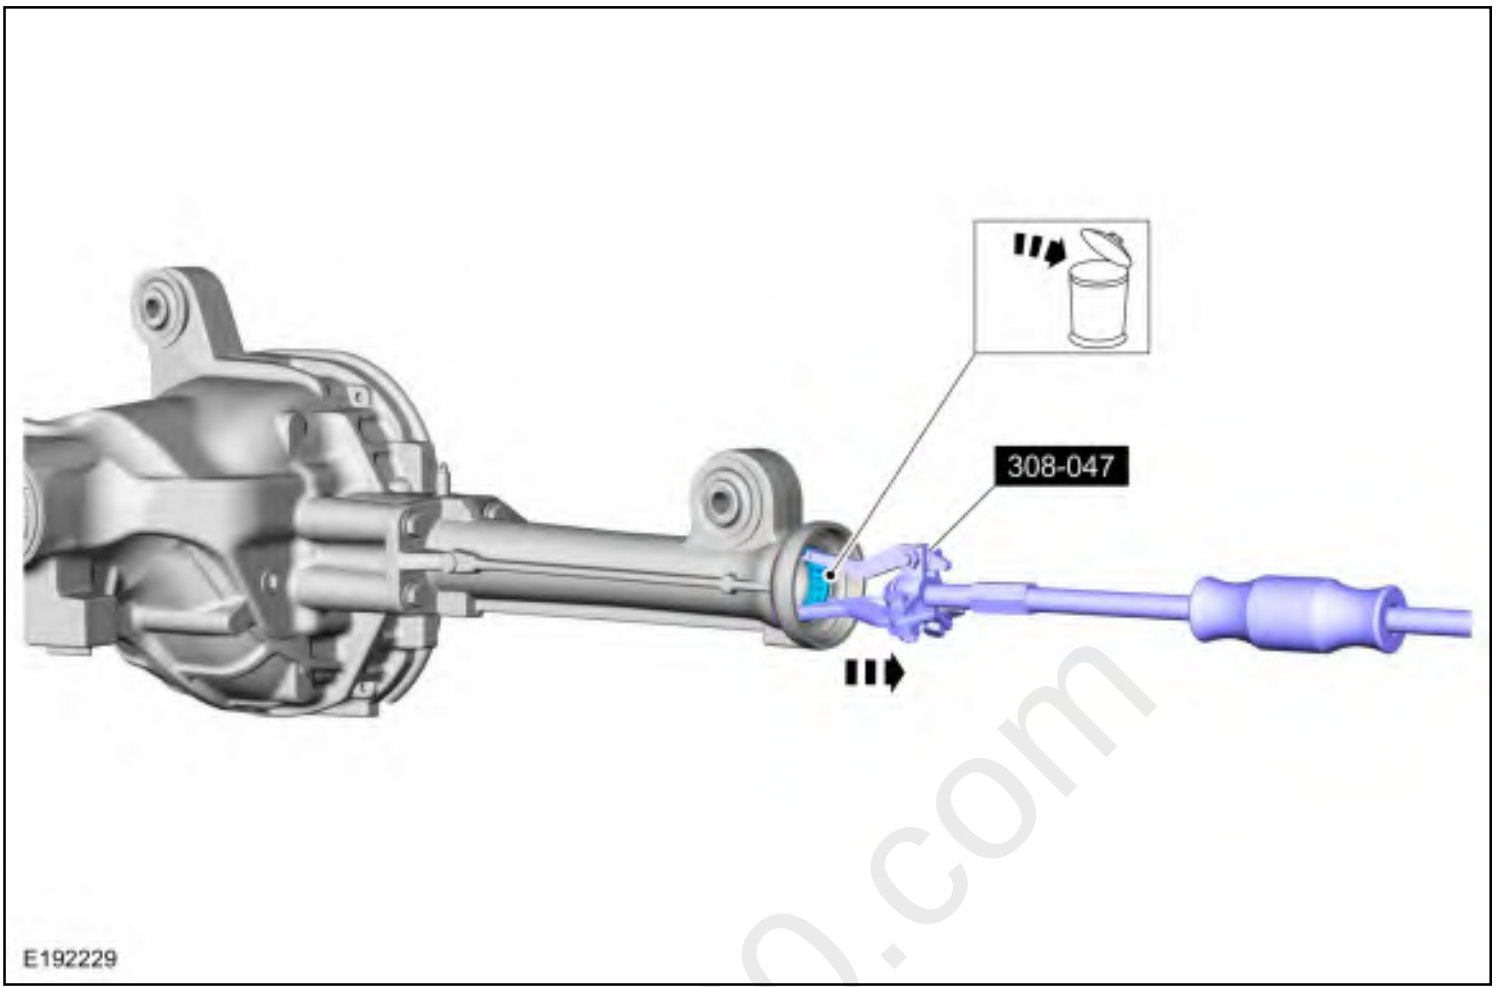

Installation

1. Using the special tool, install the new axle shaft bearing.
Use Special Service Tool: 205-123 (T78P-1177-A) Installer, Axle Shaft Oil Seal.

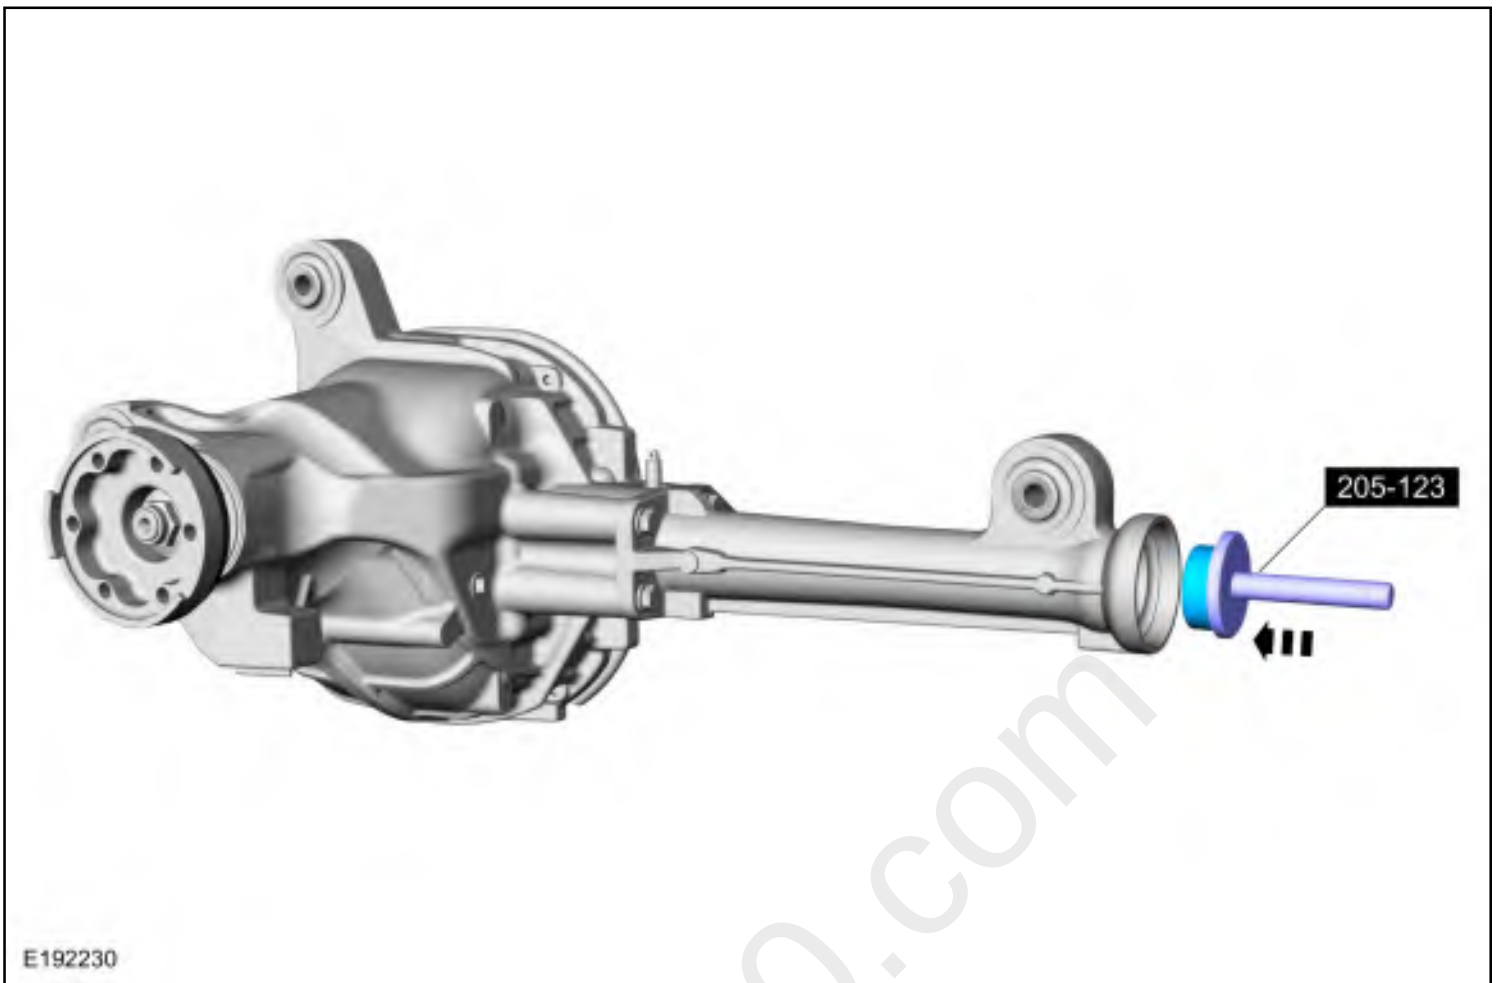

2. Install the axle shaft seal.

Refer to: [Axle Shaft Seal](#) (205-03 Front Drive Axle/Differential, Removal and Installation).