

Axle Shaft Seal


Special Tool(s) / General Equipment

 E133913	205-153 (T80T-4000-W) Handle
	206-034 (T88P-20202-B) Installer, Wheel Speed Sensor Ring TKIT-1988-FLM TKIT-1988-LM
	307-397 Remover, Transmission Fluid Pump TKIT-2000AP-FLM/LM TKIT-2002N-DEW
Slide Hammer	

Removal

1. Remove the halfshaft.
Refer to: [Halfshaft](#) (205-04 Front Drive Halfshafts, Removal and Installation).
2. **NOTE:** *Right side only.*


Using the special tool and a slide hammer, remove the axle shaft.
Use Special Service Tool: 307-397 Remover, Transmission Fluid Pump.
Use the General Equipment: Slide Hammer

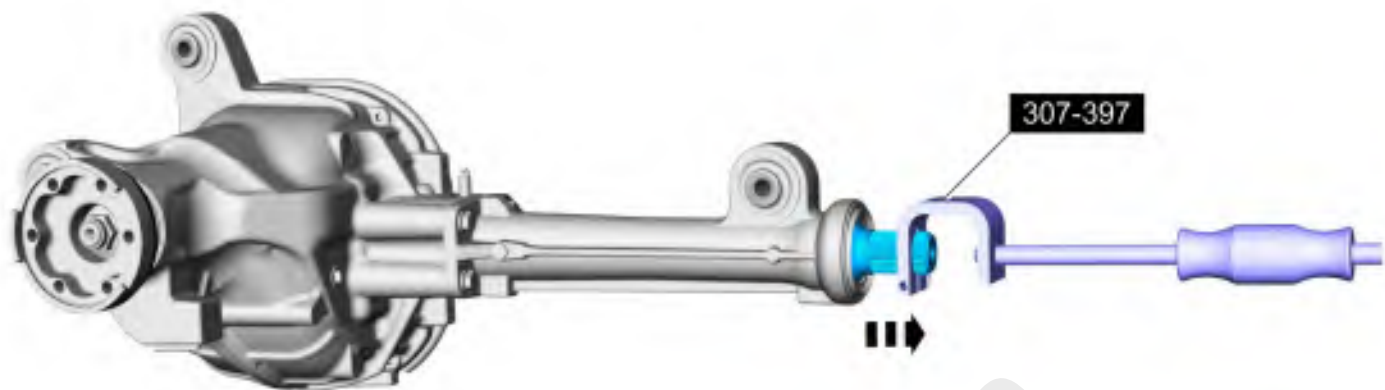

E192226


3. **NOTE:** *Right side shown, left side similar.*

Remove and discard the axle shaft seal.

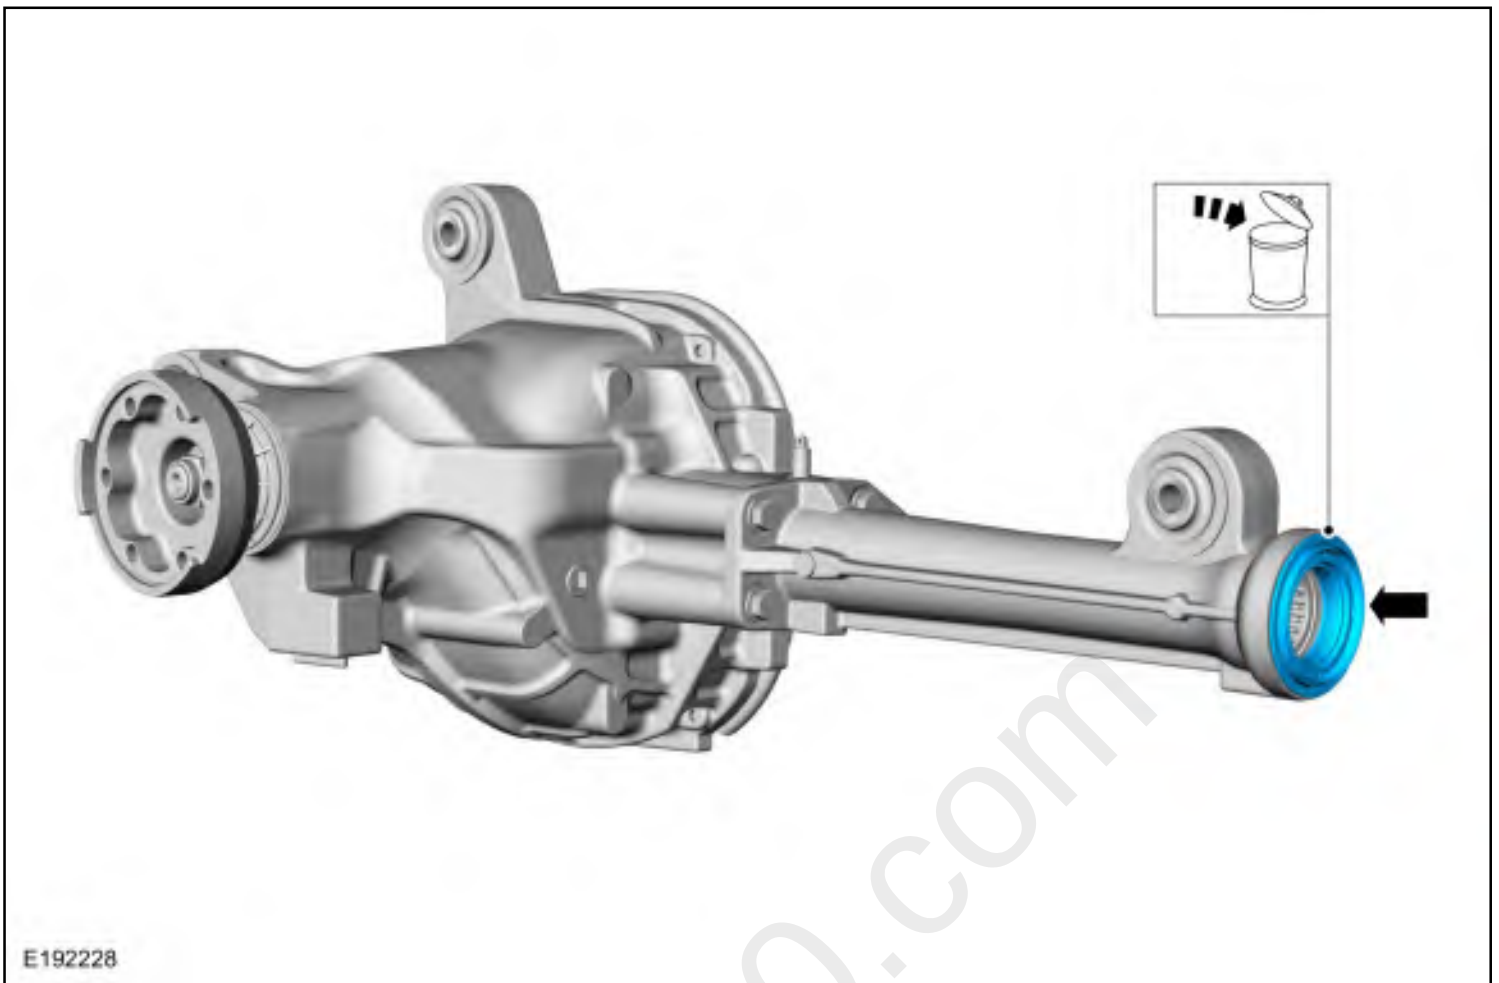


Installation

1. Replace the axle shaft circlips.

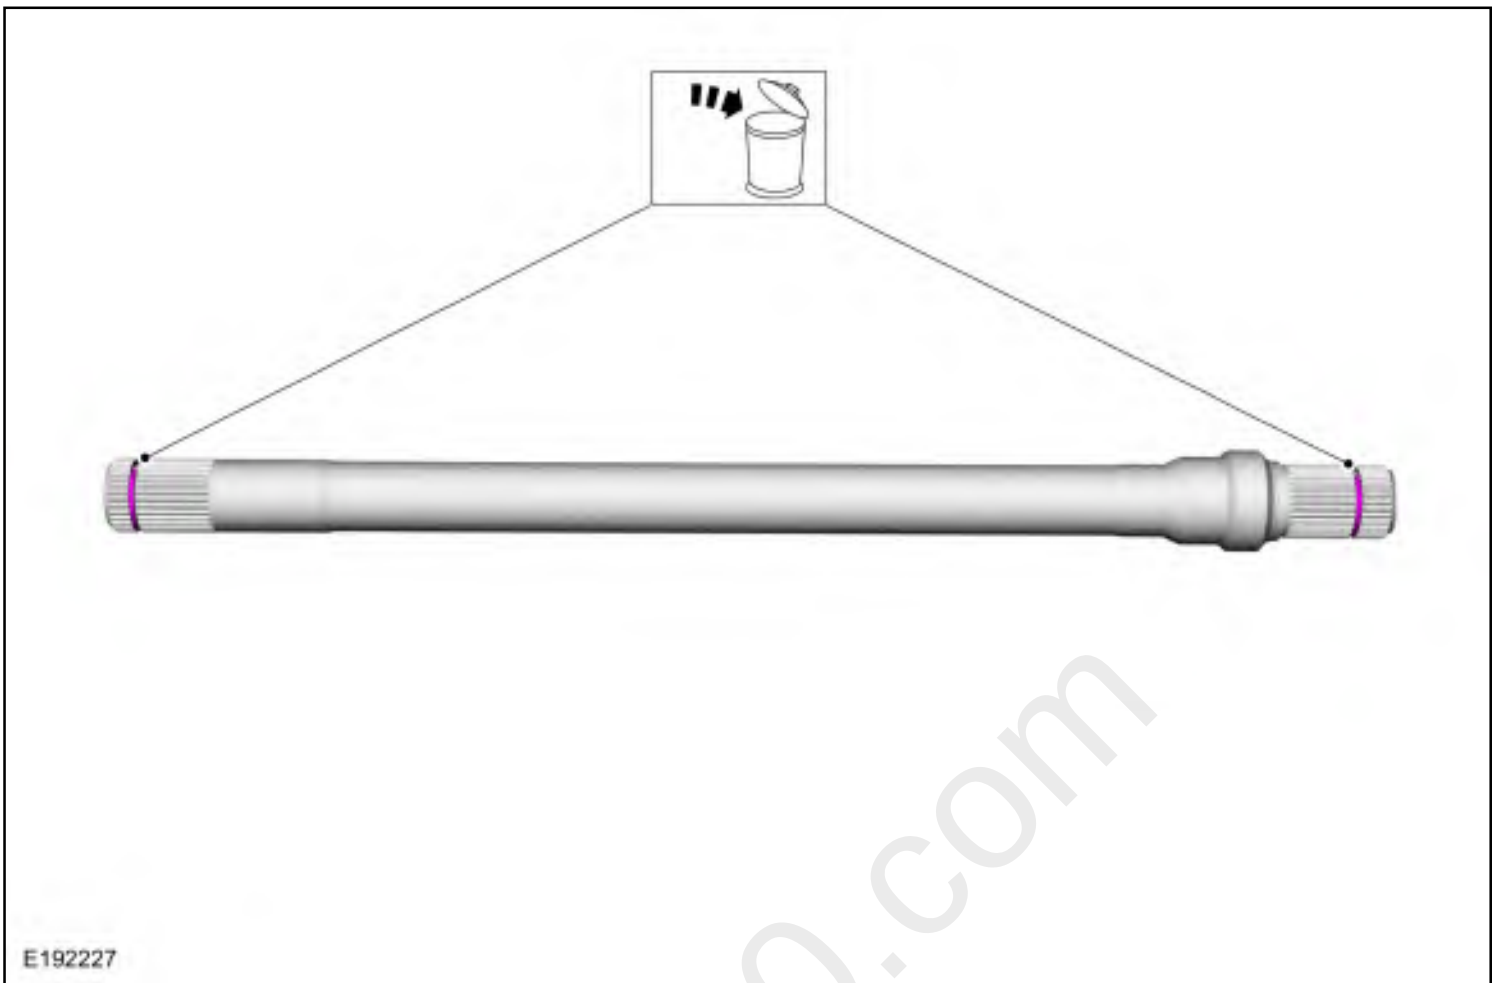


2. Using the special tools, install the new axle shaft seal.

Use Special Service Tool: 205-153 (T80T-4000-W) Handle. , 206-034 (T88P-20202-B) Installer, Wheel Speed Sensor Ring.

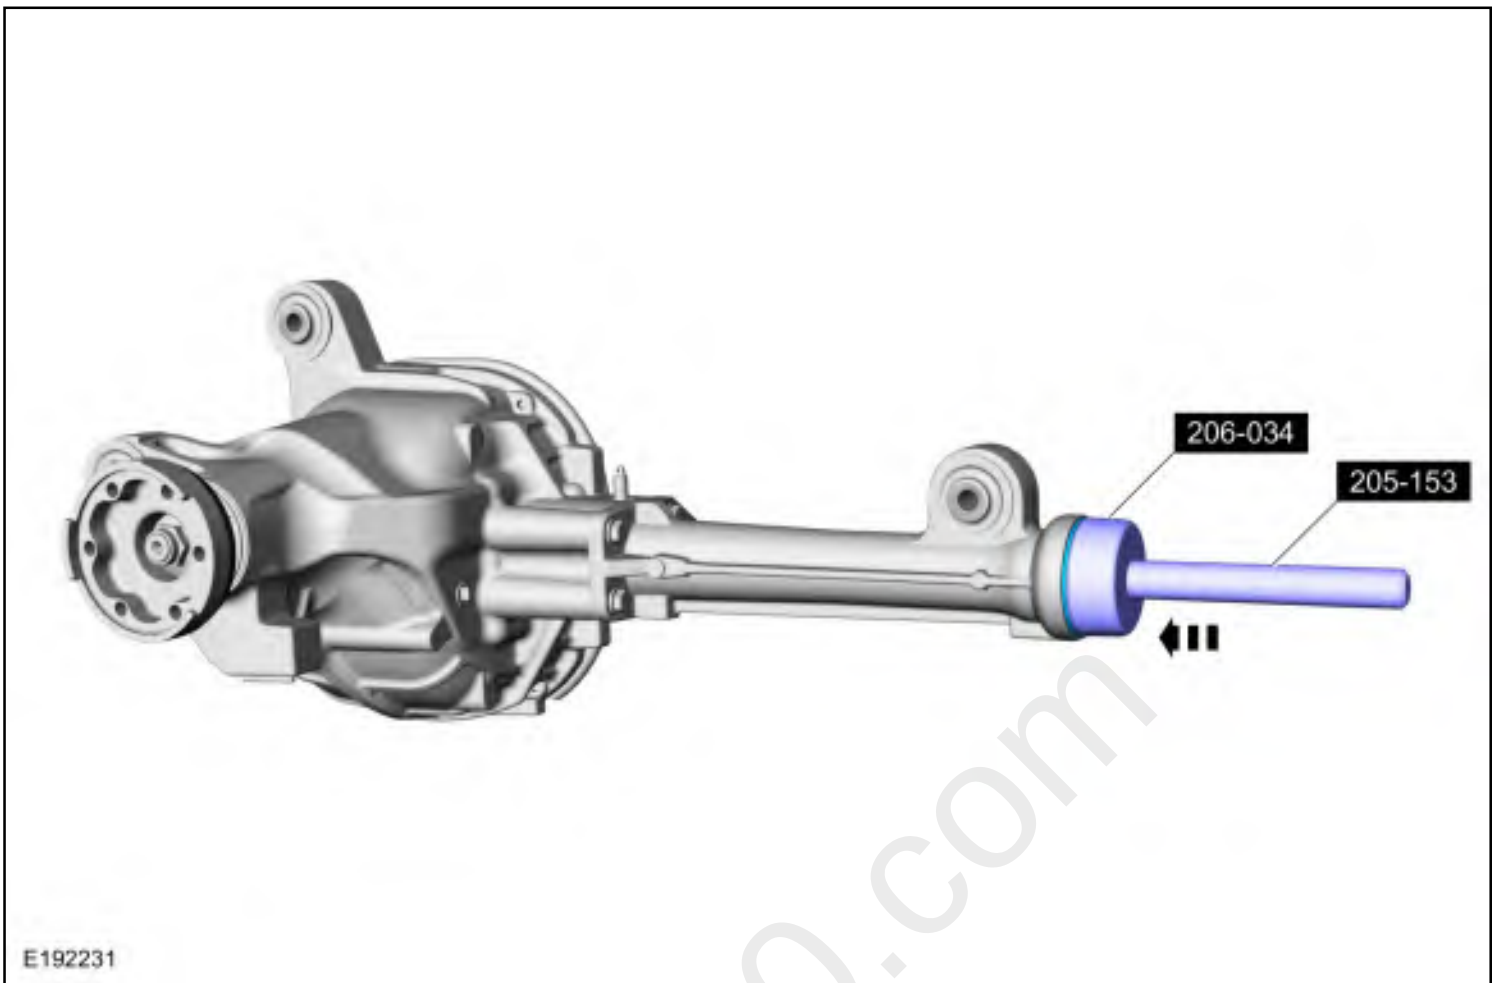

3. **NOTE:** *The axle shaft is not fully seated until the circlip is engaged with the differential side gear.*

Install the axle shaft.

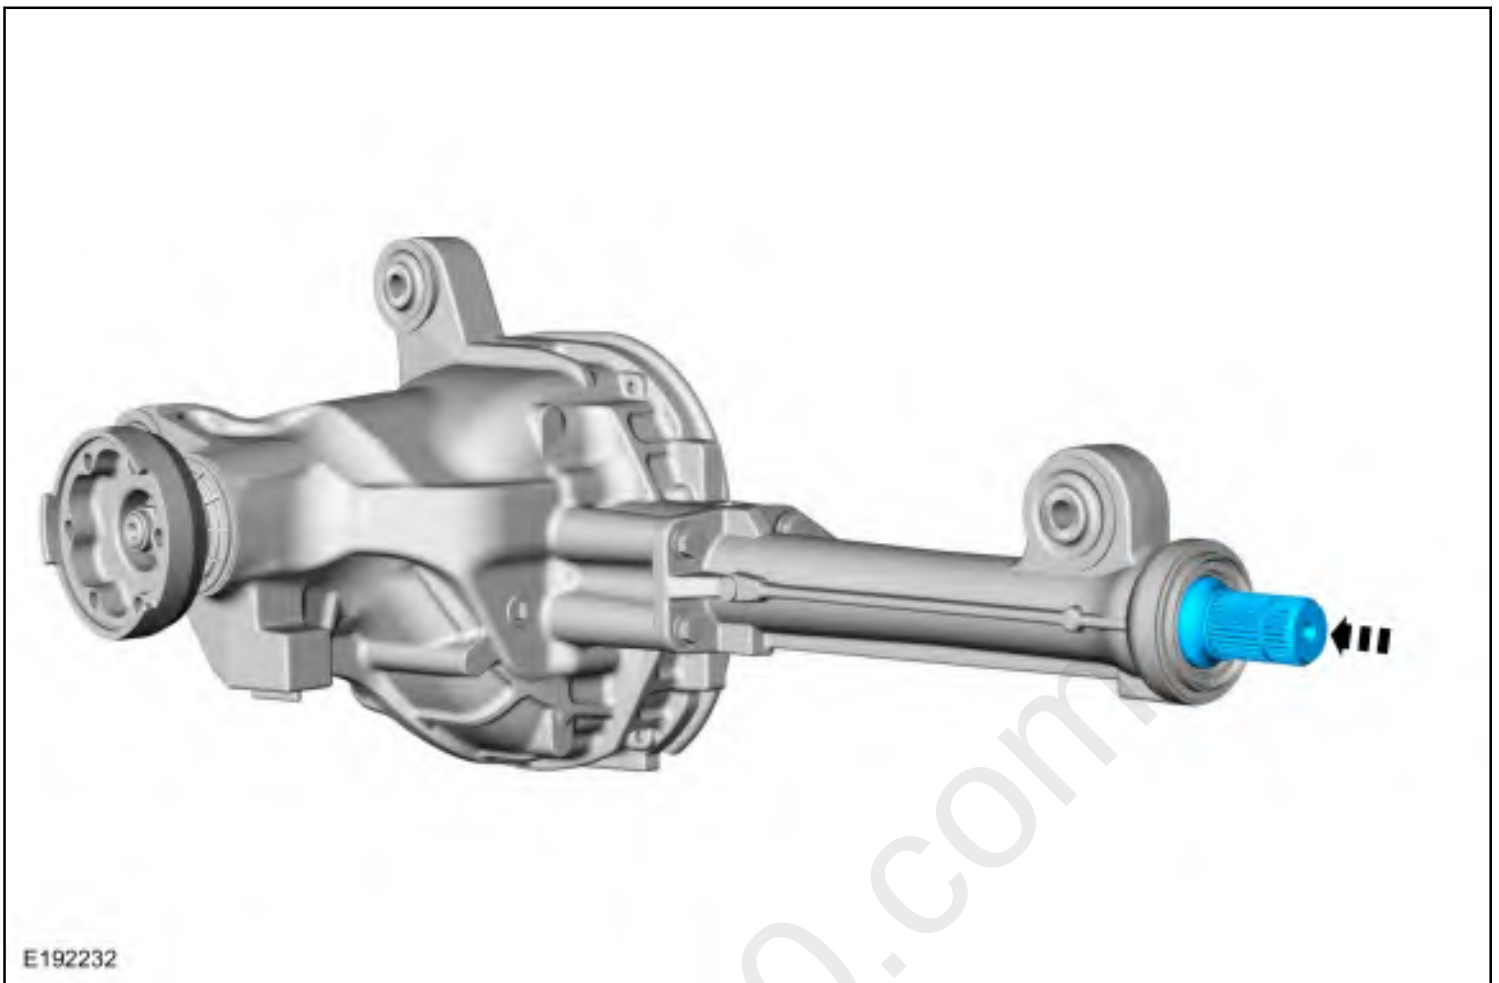

4. Install the halfshafts.

Refer to: [Halfshaft](#) (205-04 Front Drive Halfshafts, Removal and Installation).