


## Brake Caliper

### Removal


**NOTICE:** Make sure that all openings are sealed.

**NOTICE:** If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.

1. Remove the wheel and tire.  
Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. Remove the bolt and disconnect the brake hose. Discard the washers.  
*Torque:* 26 lb.ft (35 Nm)

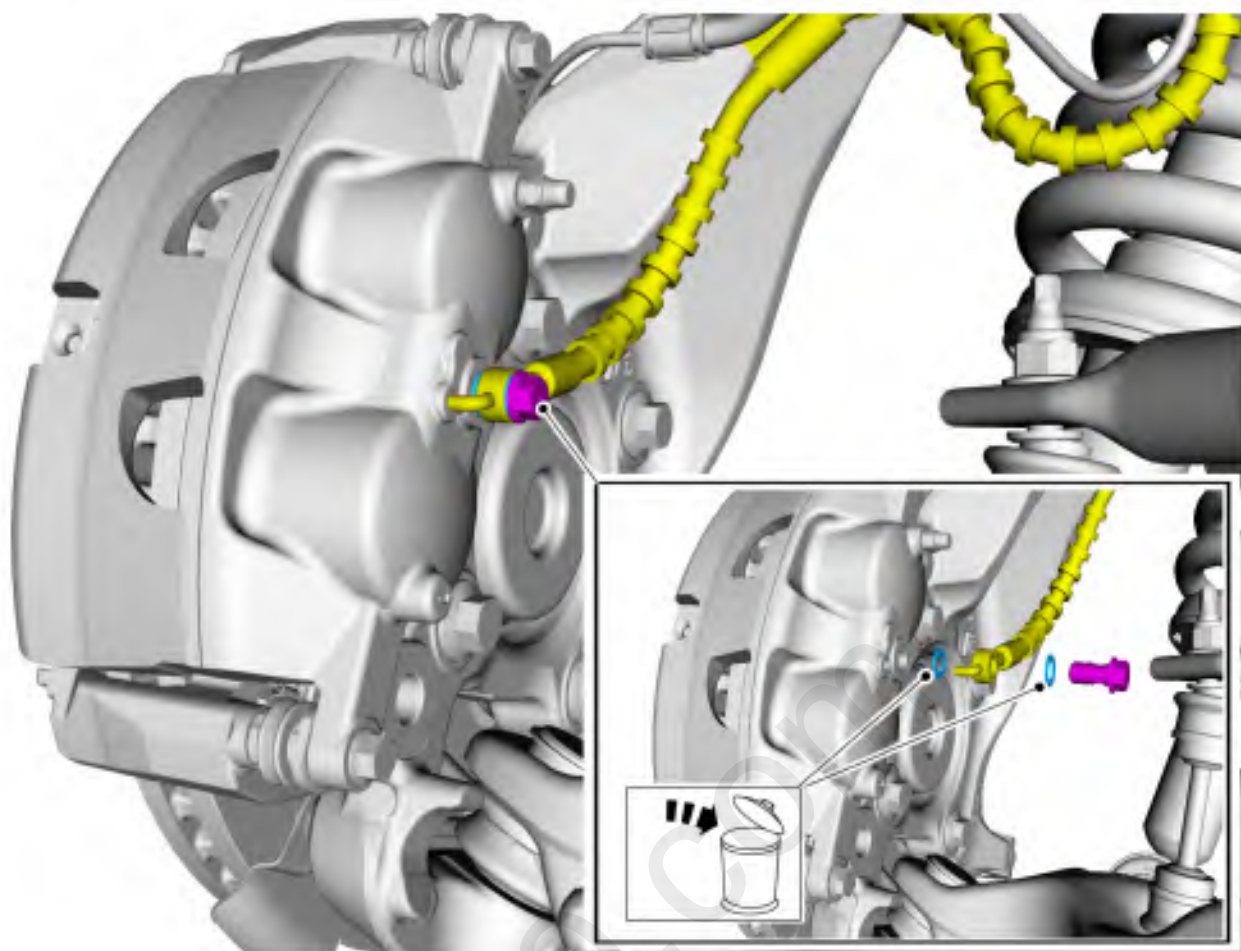

3. Remove the 2 bolts and the brake caliper.  
*Torque: 27 lb.ft (36 Nm)*

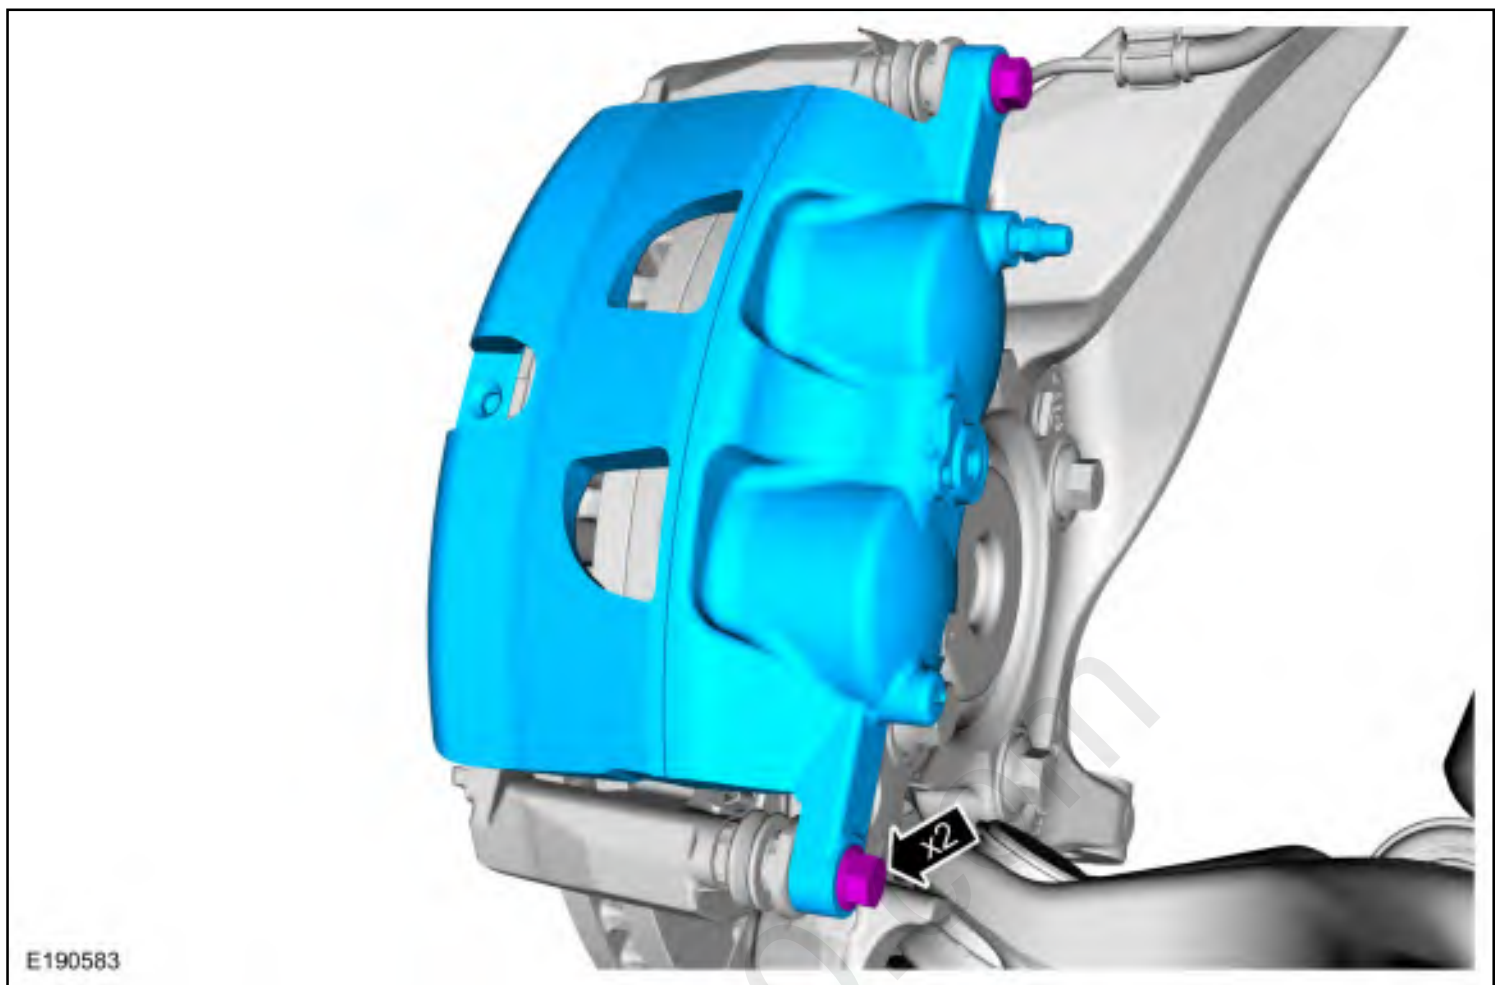

## Installation

1. To install, reverse the removal procedure.
2. Bleed the brake system.  
Refer to: [Brake System Pressure Bleeding](#) (206-00 Brake System - General Information, General Procedures).