

Rear Brake Outer Flexible Hose - Vehicles With: Electronic Parking Brake (EPB)

Removal


NOTICE: Make sure that all openings are sealed.

NOTICE: If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.

NOTE: Removal steps in this procedure may contain installation details.


Right hand (RH) and left hand (LH) outer brake hoses

1. Remove the wheel and tire.
Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. Remove the bolt and disconnect the brake hose. Discard the washers.
Torque: 26 lb.ft (35 Nm)

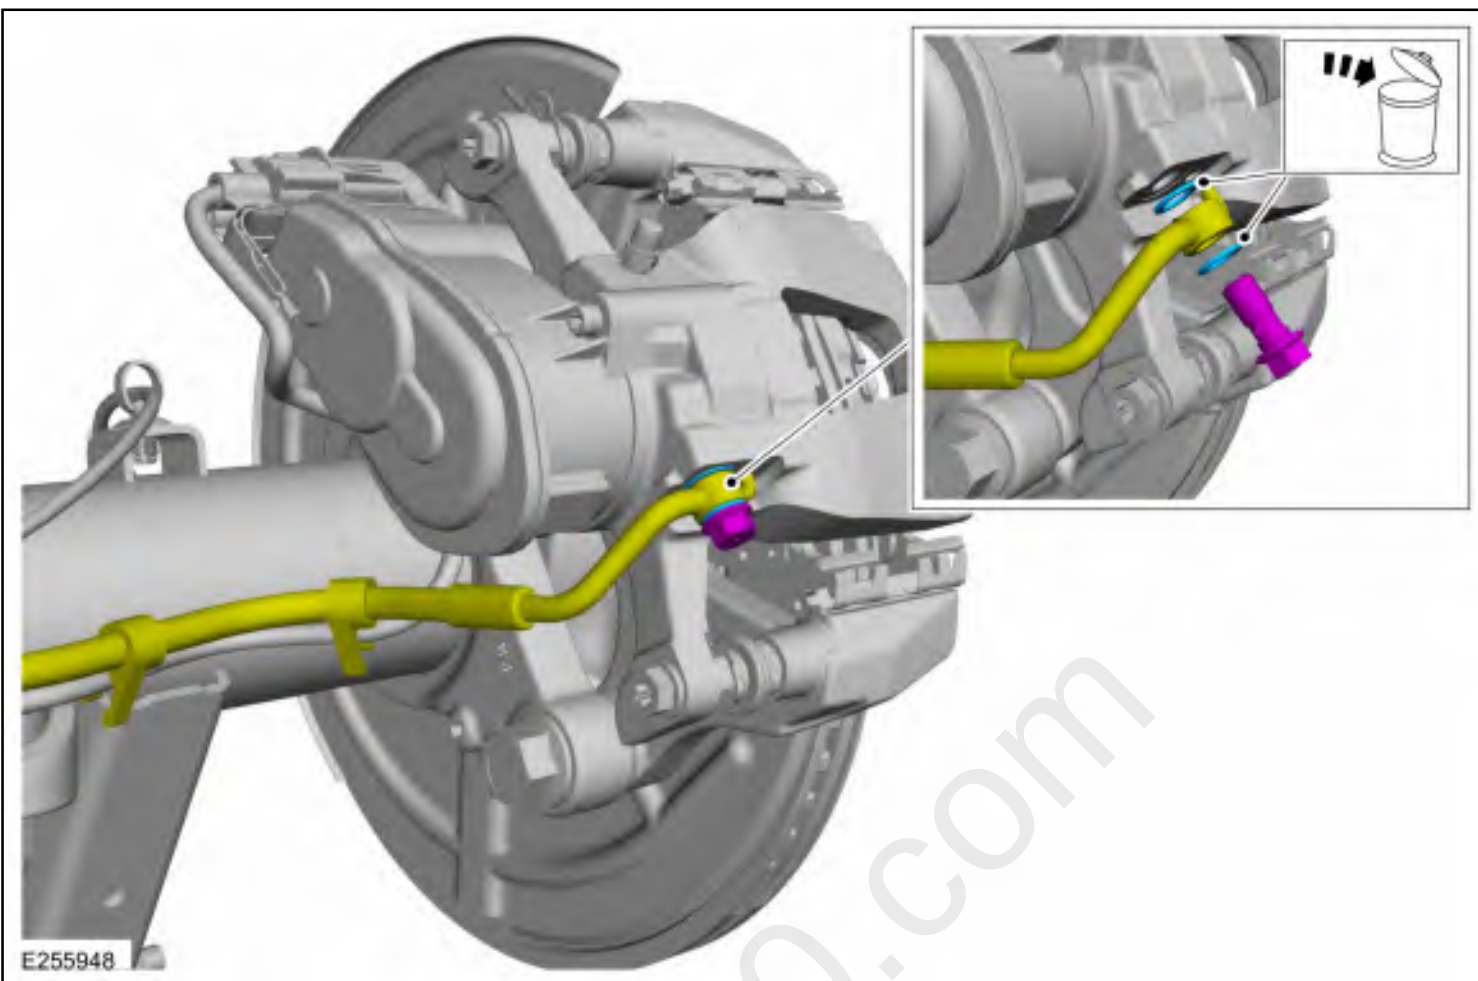

1. Detach the EPB wiring retainers and unclip the brake hose.
2. Detach the wheel speed sensor wiring retainer.
3. Remove the outer brake hose bracket bolt.


Torque: 22 lb.ft (30 Nm)

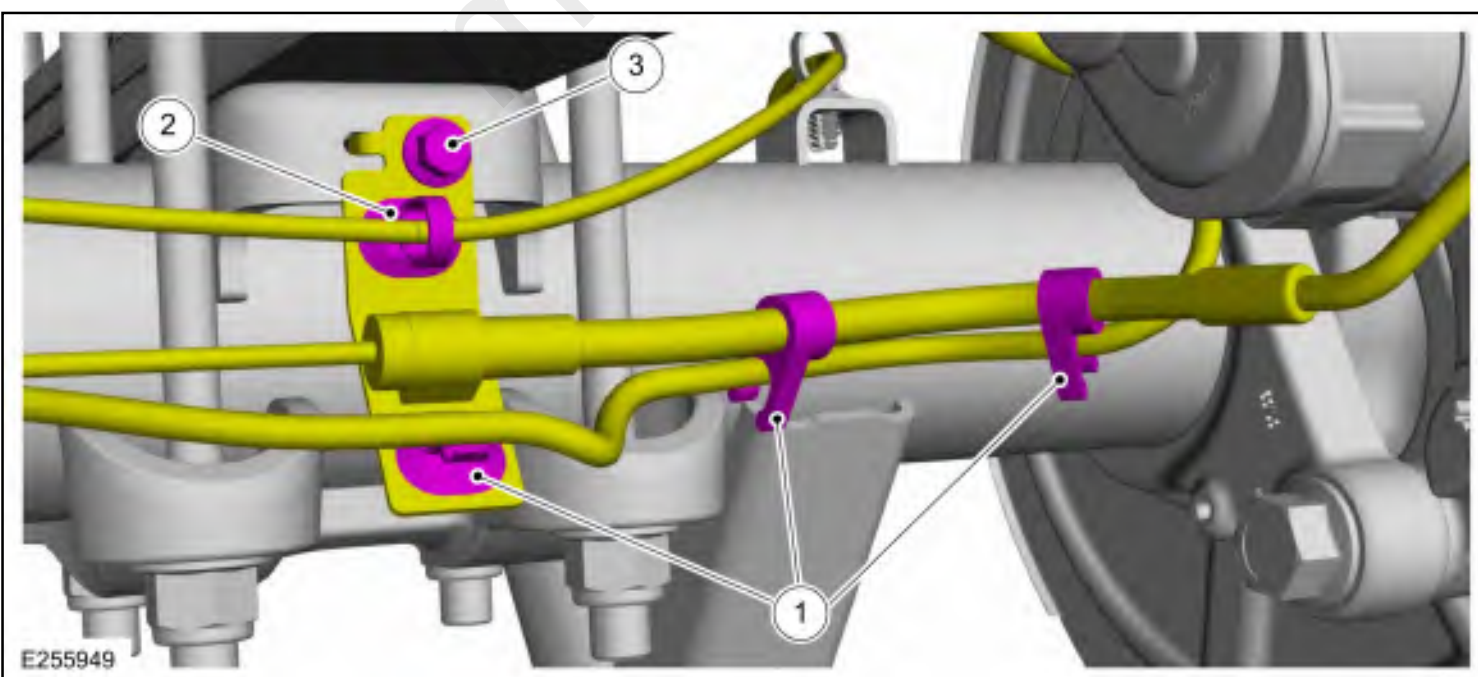

Right hand (RH) outer brake hose

4. Detach the brake tube from the 2 axle clips, disconnect the brake tube fitting and remove the RH rear outer brake flexible hose/tube assembly.


Torque: 159 lb.in (18 Nm)

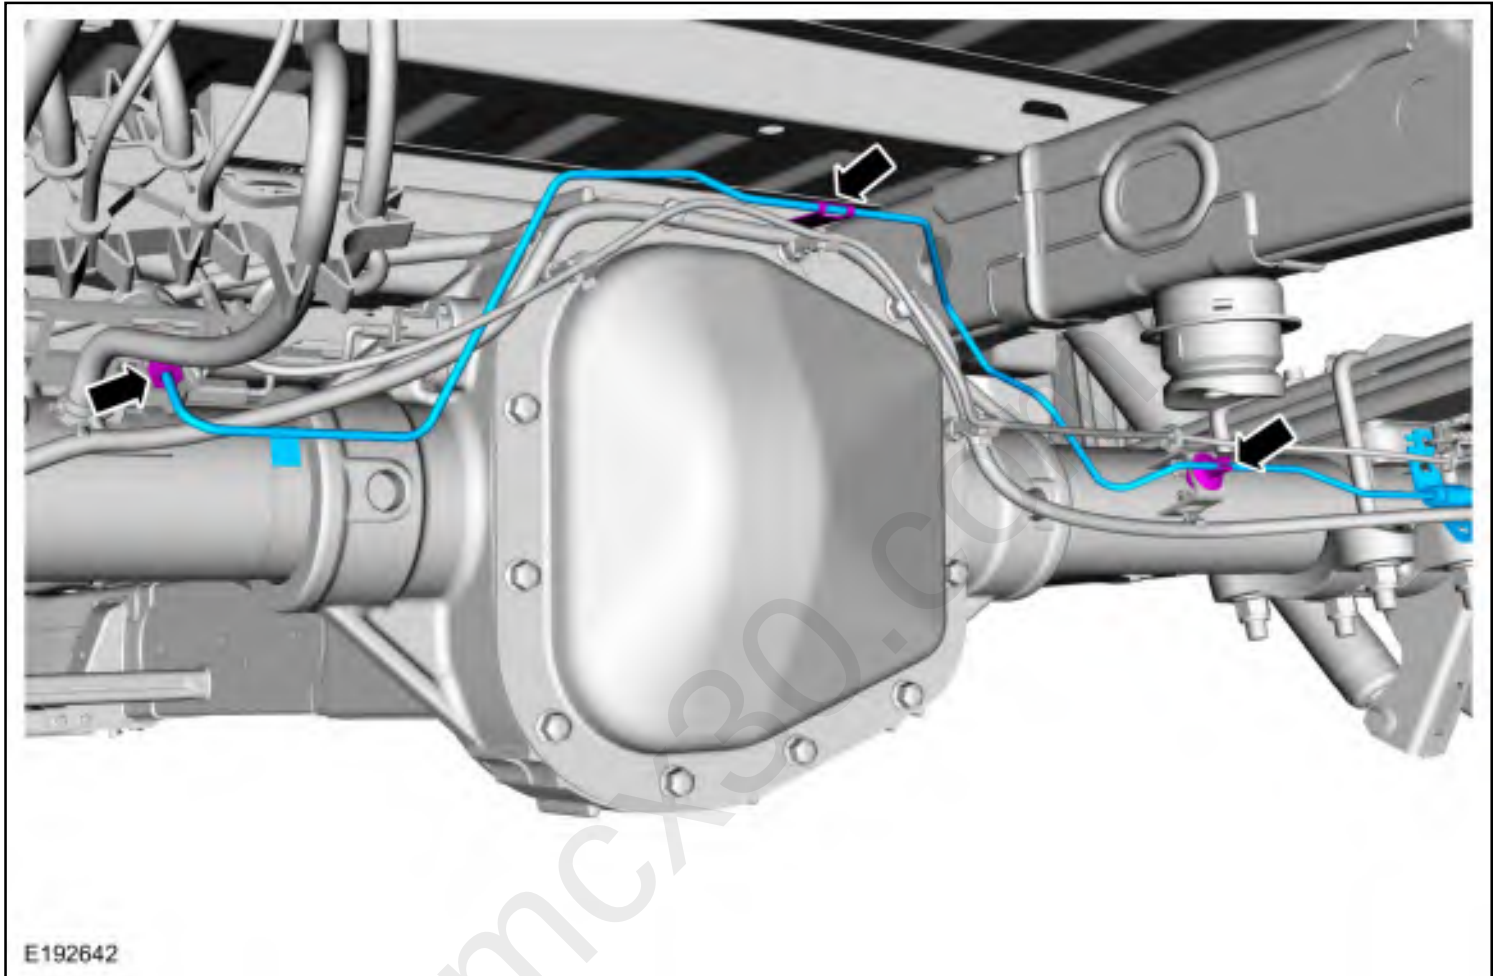

Left hand (LH) outer brake hose

5. Disconnect the brake tube fitting and remove the LH rear outer brake flexible hose/tube assembly.

Torque: 159 lb.in (18 Nm)

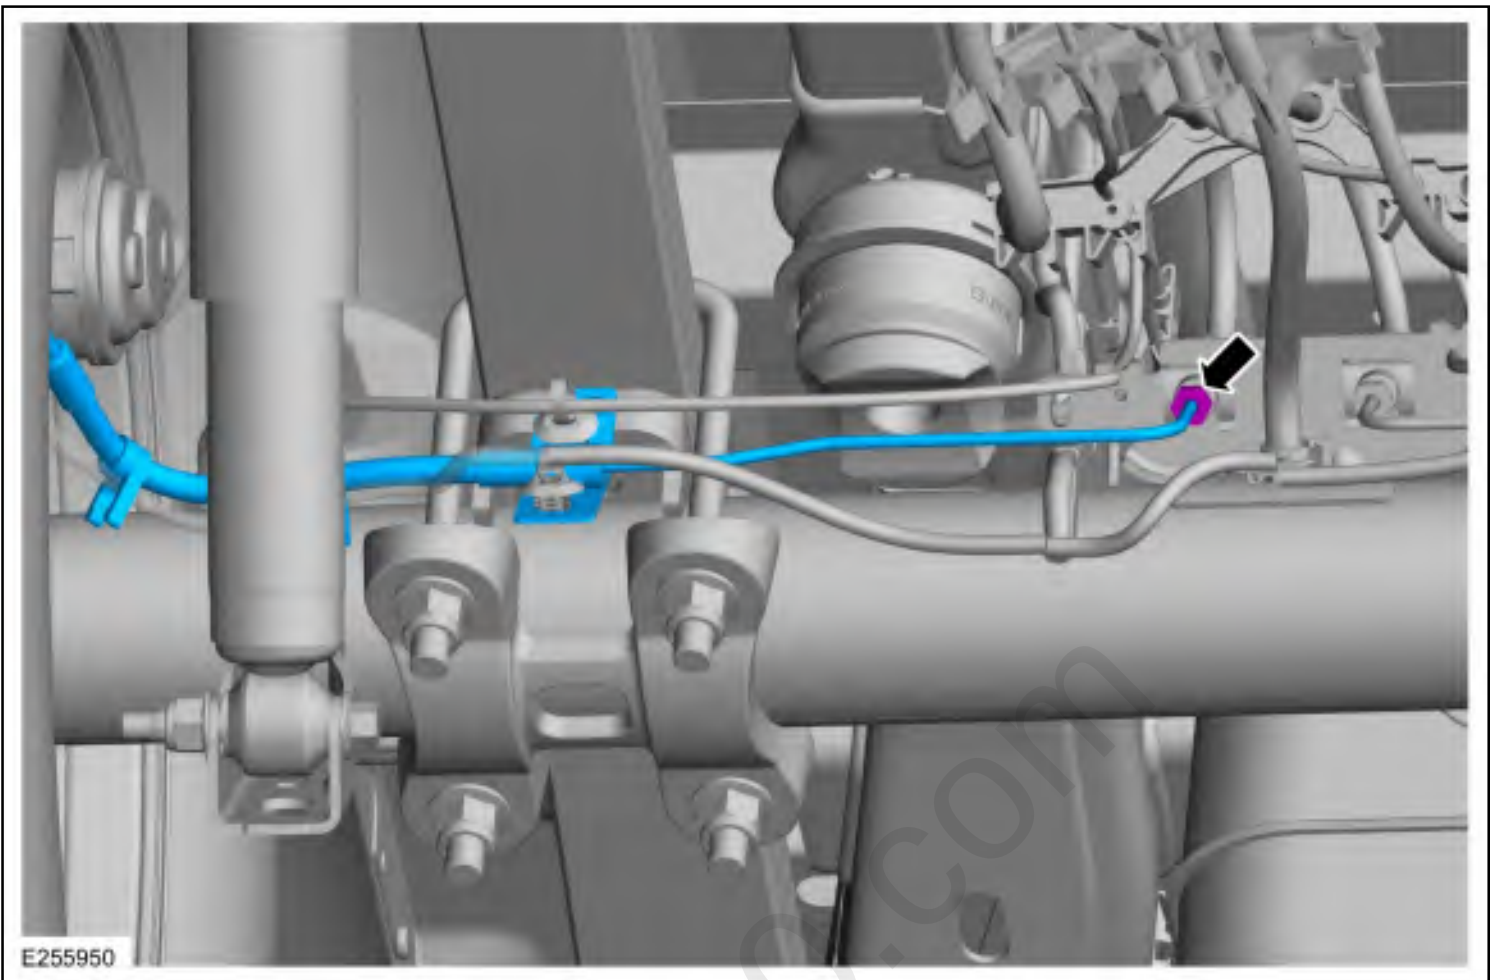

Installation

1. To install, reverse the removal procedure.
2. Bleed the brake system.
Refer to: [Brake System Pressure Bleeding](#) (206-00 Brake System - General Information, General Procedures).