

Brake Disc Shield

Removal


NOTE: Removal steps in this procedure may contain installation details.

All vehicles

1. Remove the axle shaft.
Refer to: [Axle Shaft](#) (205-02A Rear Drive Axle/Differential - Vehicles With: Ford 8.8 Inch Ring Gear, Removal and Installation).
Refer to: [Axle Shaft](#) (205-02B Rear Drive Axle/Differential - Vehicles With: Ford 9.75 Inch Ring Gear, Removal and Installation).


Vehicles without electronic parking brake (EPB)

2. Remove the parking brake shoes.
Refer to: [Parking Brake Shoes](#) (206-05A Parking Brake and Actuation, Removal and Installation).
3. Remove the 3 bolts and the brake disc shield.
Torque: 124 lb.in (14 Nm)

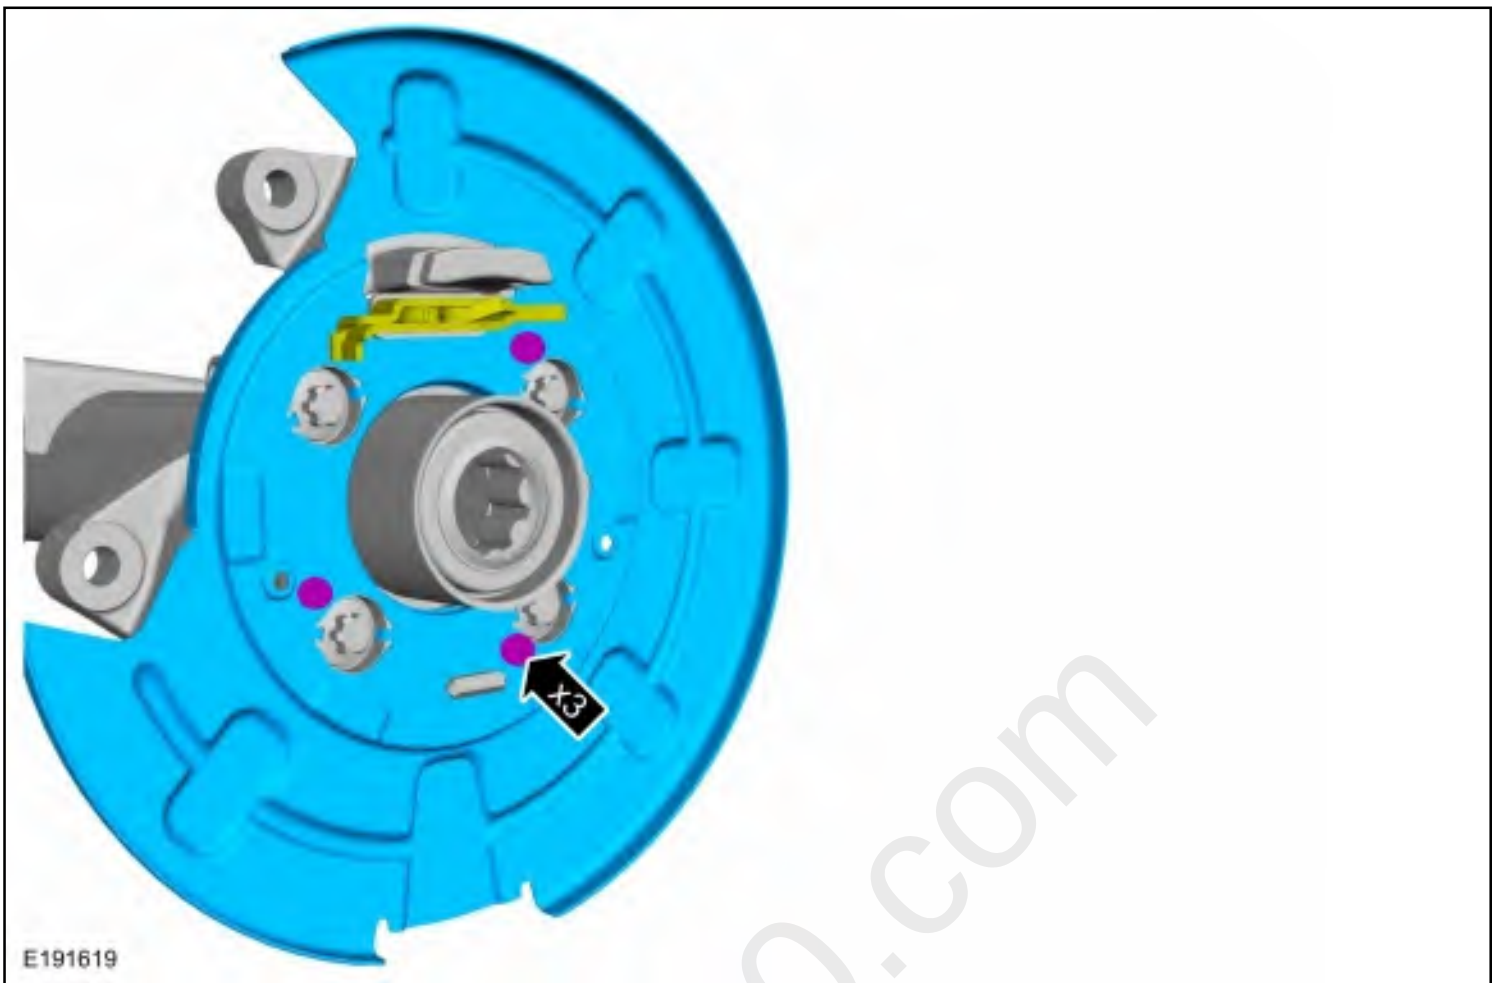

Vehicles with electronic parking brake (EPB)

4. Remove the 3 bolts and the brake disc shield.
Torque: 159 lb.in (18 Nm)

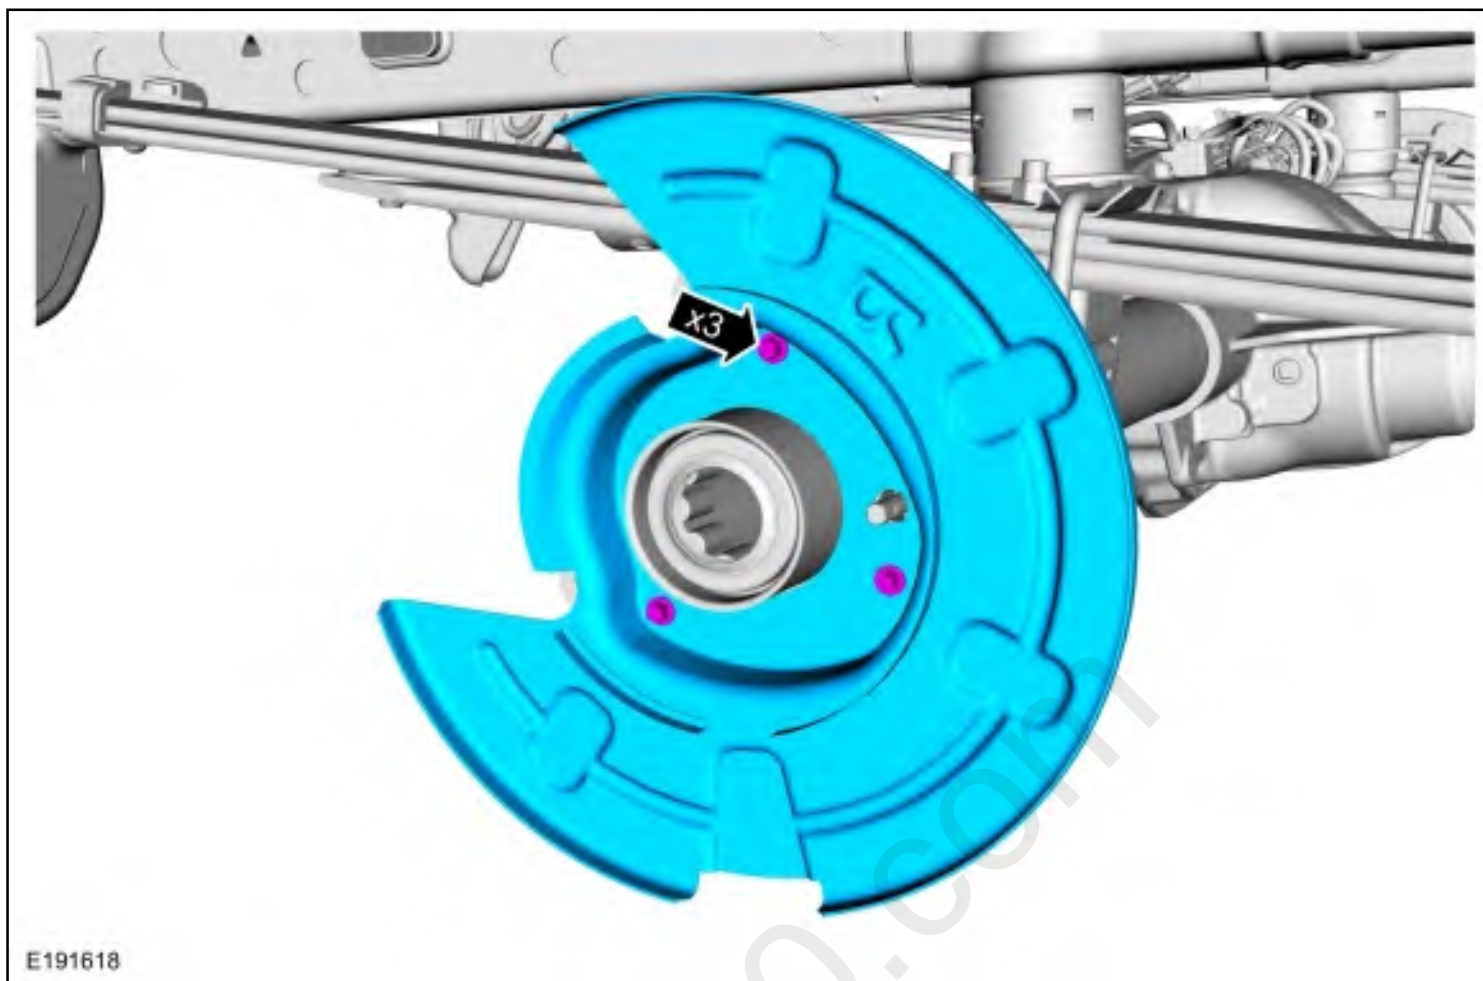

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company