

Rear Brake Inner Flexible Hose - Raptor


Removal

NOTICE: Make sure that all openings are sealed.


NOTICE: If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.

NOTE: Removal steps in this procedure may contain installation details.


1. Disconnect the brake tube fittings.
Torque: 159 lb.in (18 Nm)
2. Remove the upper bracket bolt.
Torque: 159 lb.in (18 Nm)

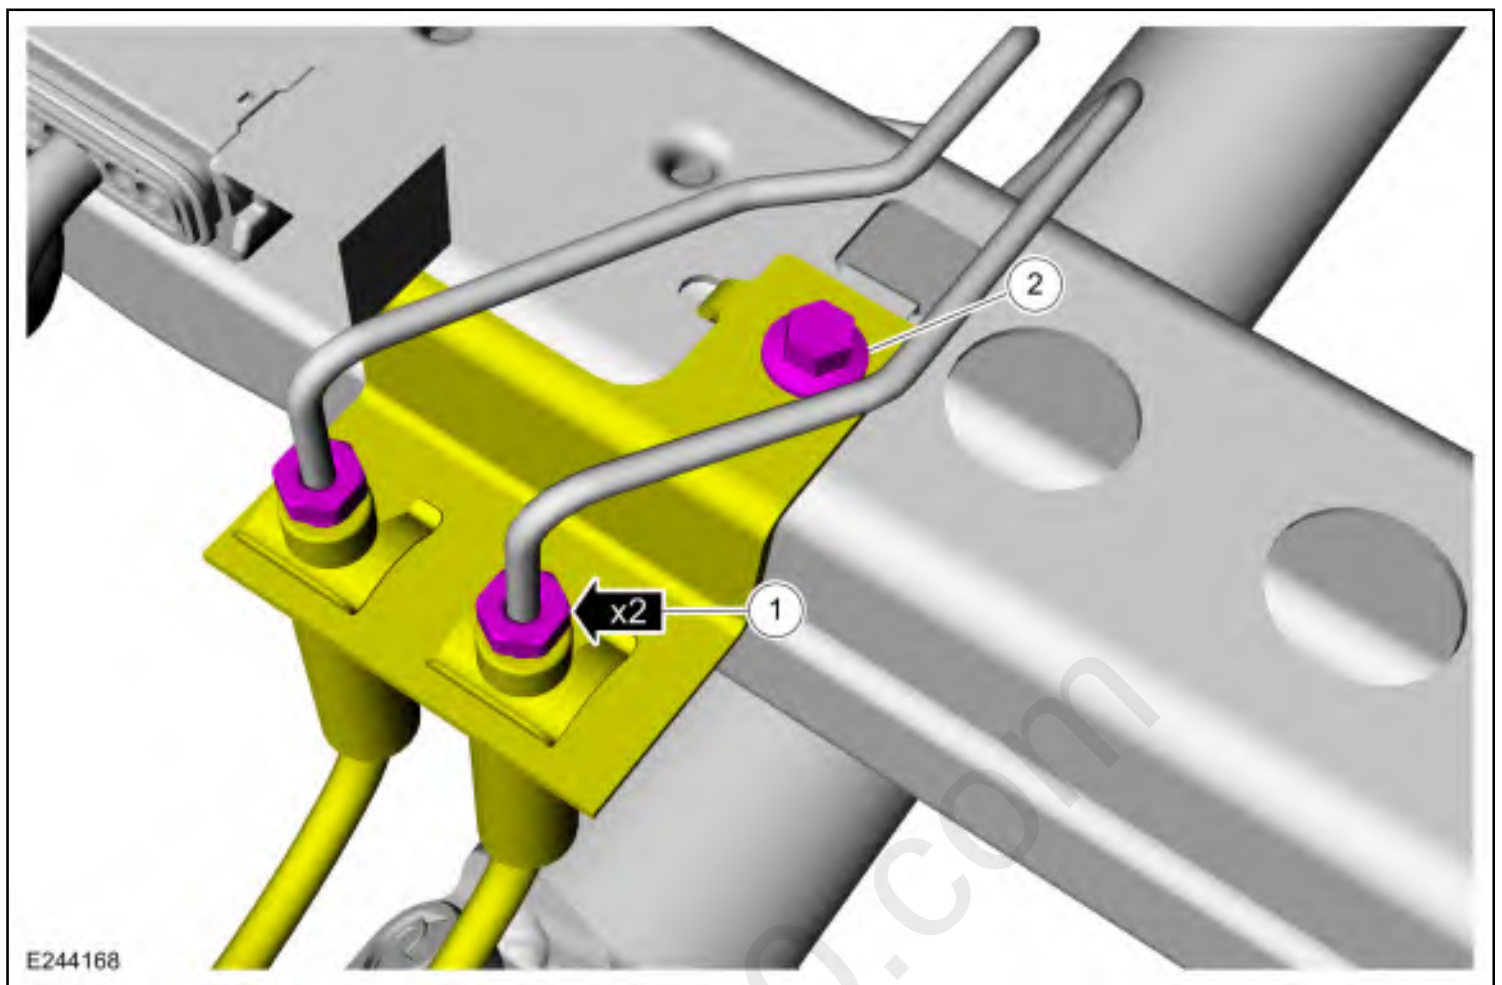

2. Detach the wheel speed sensor harness retainer and the parking brake cable.

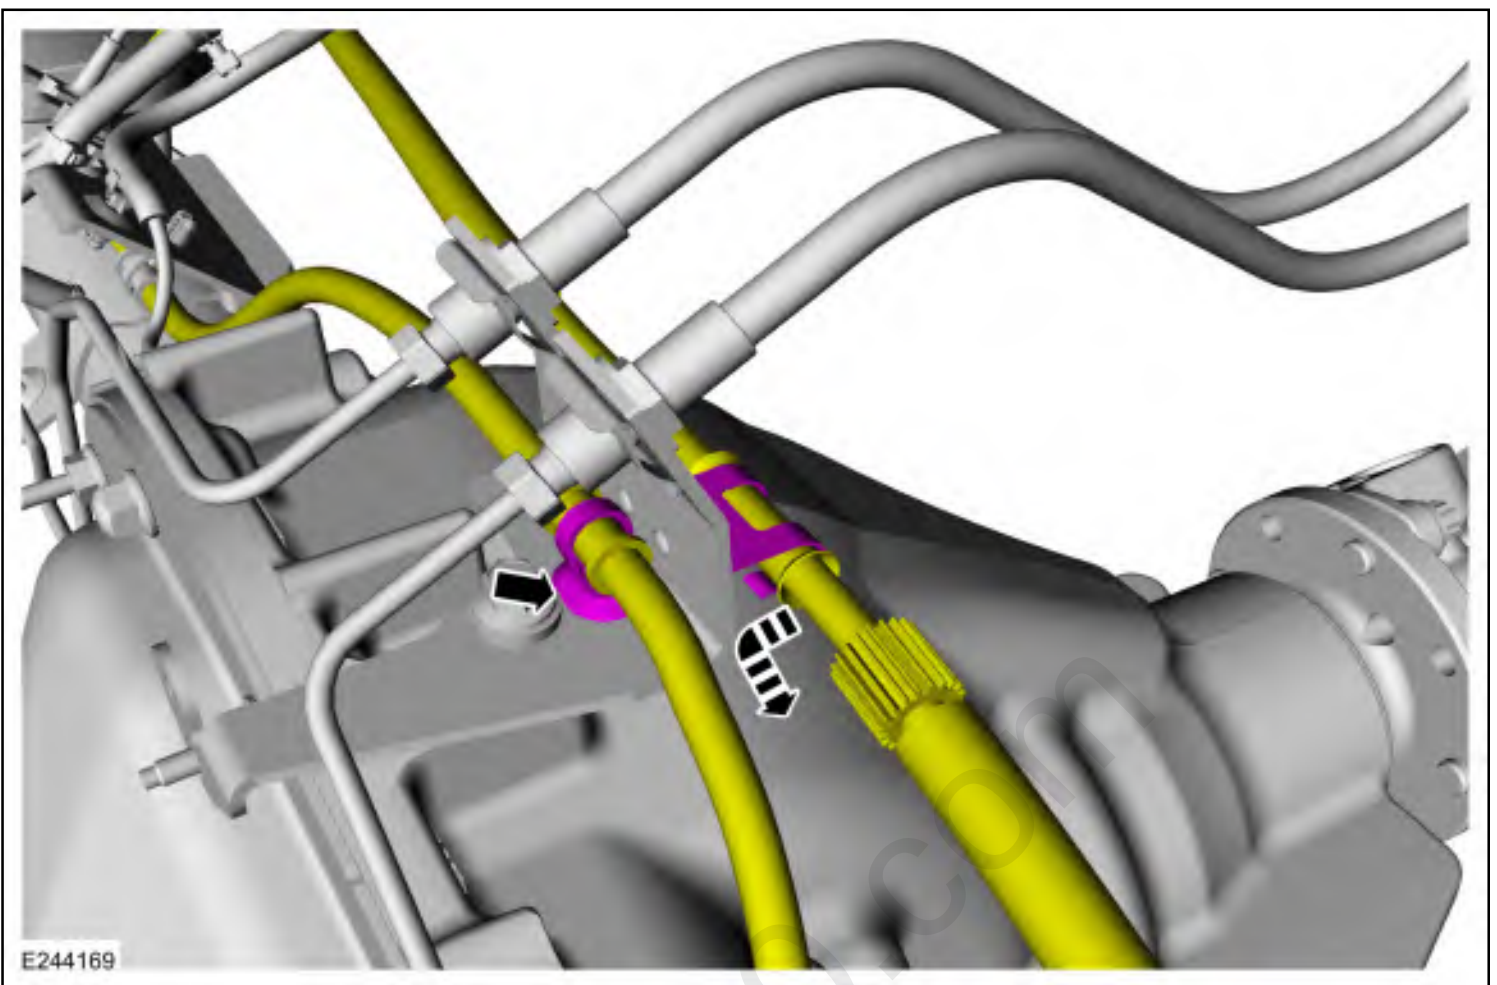

1. Disconnect the brake tube fittings.
Torque: 159 lb.in (18 Nm)
2. Remove the lower bracket bolt and the rear brake inner flexible hoses.
Torque: 159 lb.in (18 Nm)

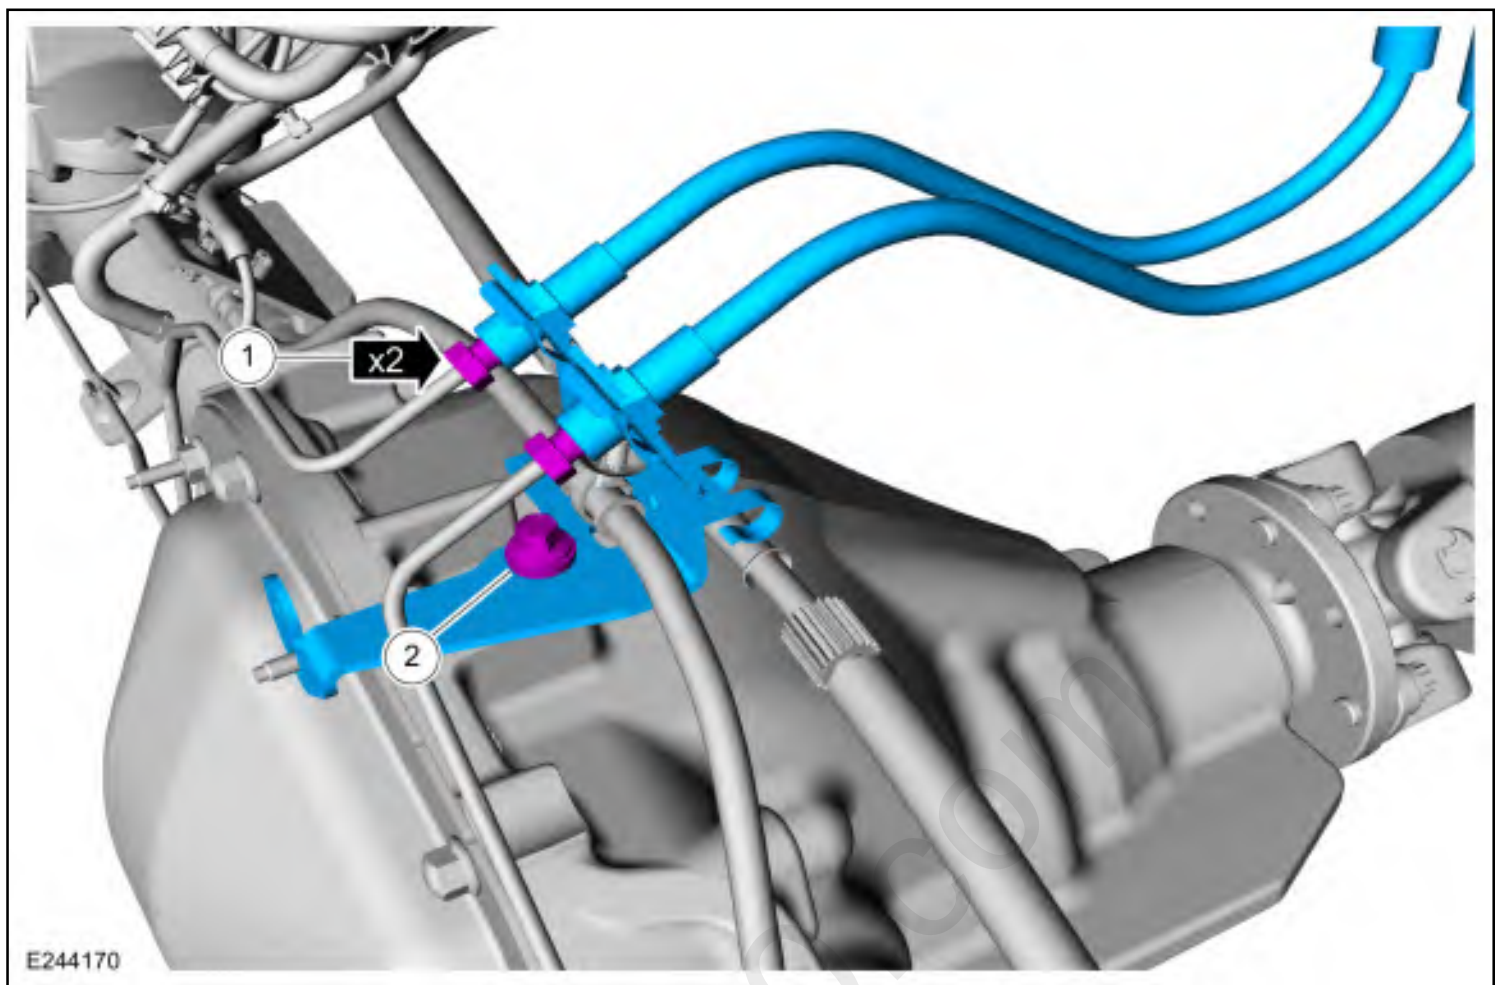

Installation

1. To install, reverse the removal procedure.
2. Bleed the brake system.
Refer to: [Brake System Pressure Bleeding](#) (206-00 Brake System - General Information, General Procedures).