

Parking Brake Front Cable


Removal

1. Remove the parking brake control.
Refer to: [Parking Brake Control](#) (206-05A Parking Brake and Actuation, Removal and Installation).
2. Remove the 4 pin-type retainers and the cover.



E194138

1. Rotate the cable upwards and pull the cable end out of the parking brake control.
2. Press inward on the 2 cable retainer tabs and remove the front parking brake cable.

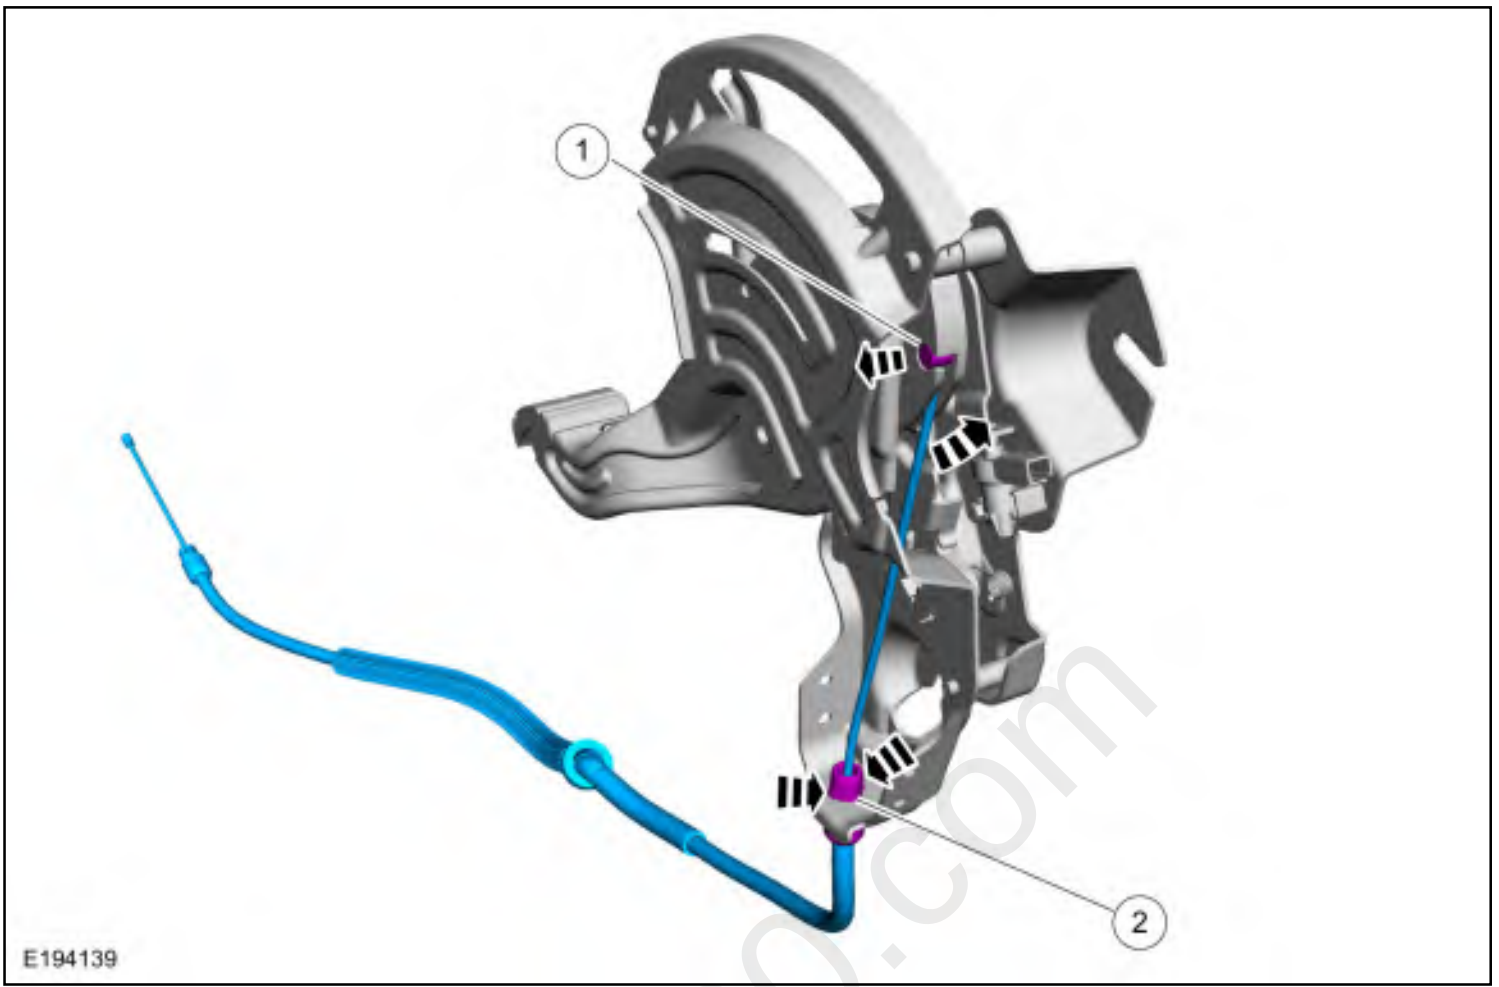

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company