


Parking Brake Cable LH

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: Vehicles with 3,683 mm (145 inch) wheel base shown, all others similar

1. Release the parking brake cable tension.
Refer to: [Parking Brake Cable Tension Release](#) (206-05A Parking Brake and Actuation, General Procedures).
 1. Press inward on the 2 LH parking brake cable retainer tabs and detach the cable from caliper support bracket.
 2. Detach the LH parking brake cable from the parking brake shoe actuator lever.

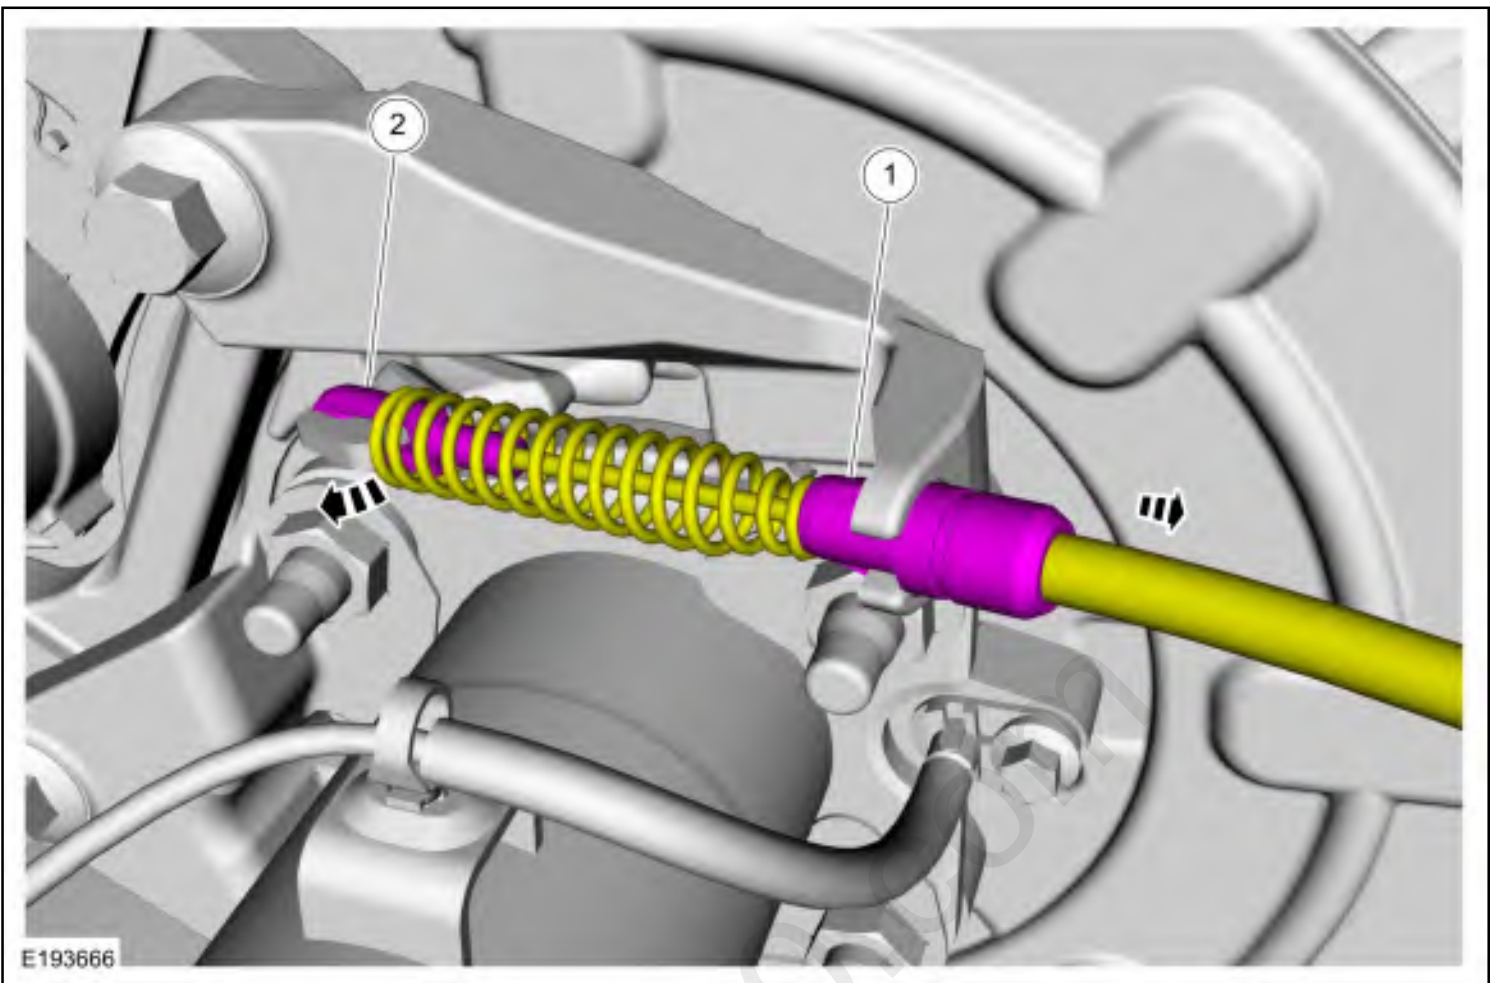


3. Detach the LH parking brake cable from the cable equalizer bracket.

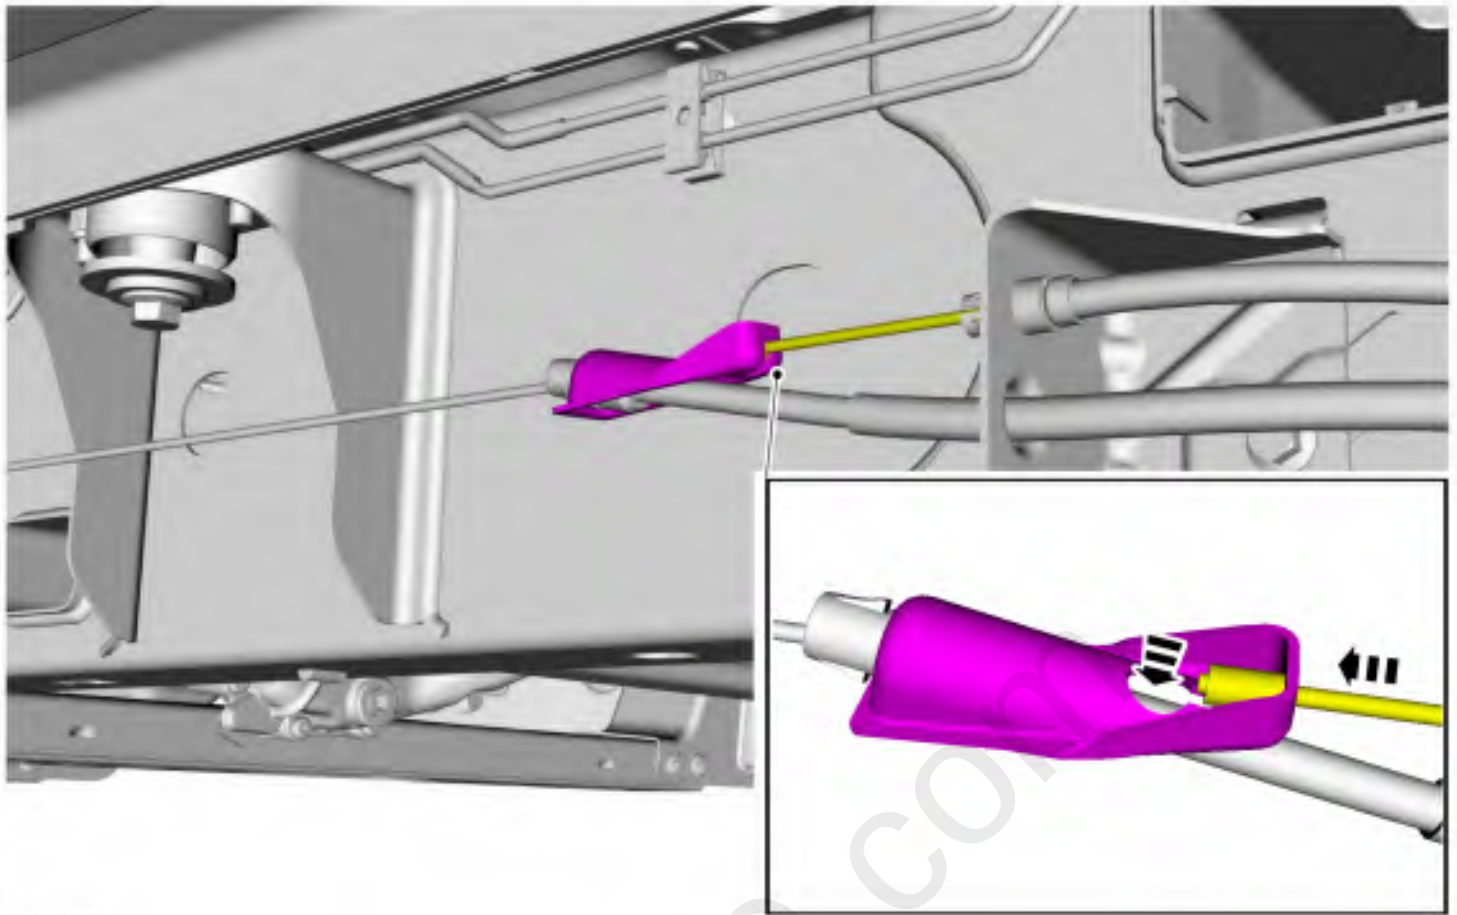


E193667


4. Press inward on the 3 LH parking brake cable retainer tabs and detach the cable from the frame bracket.

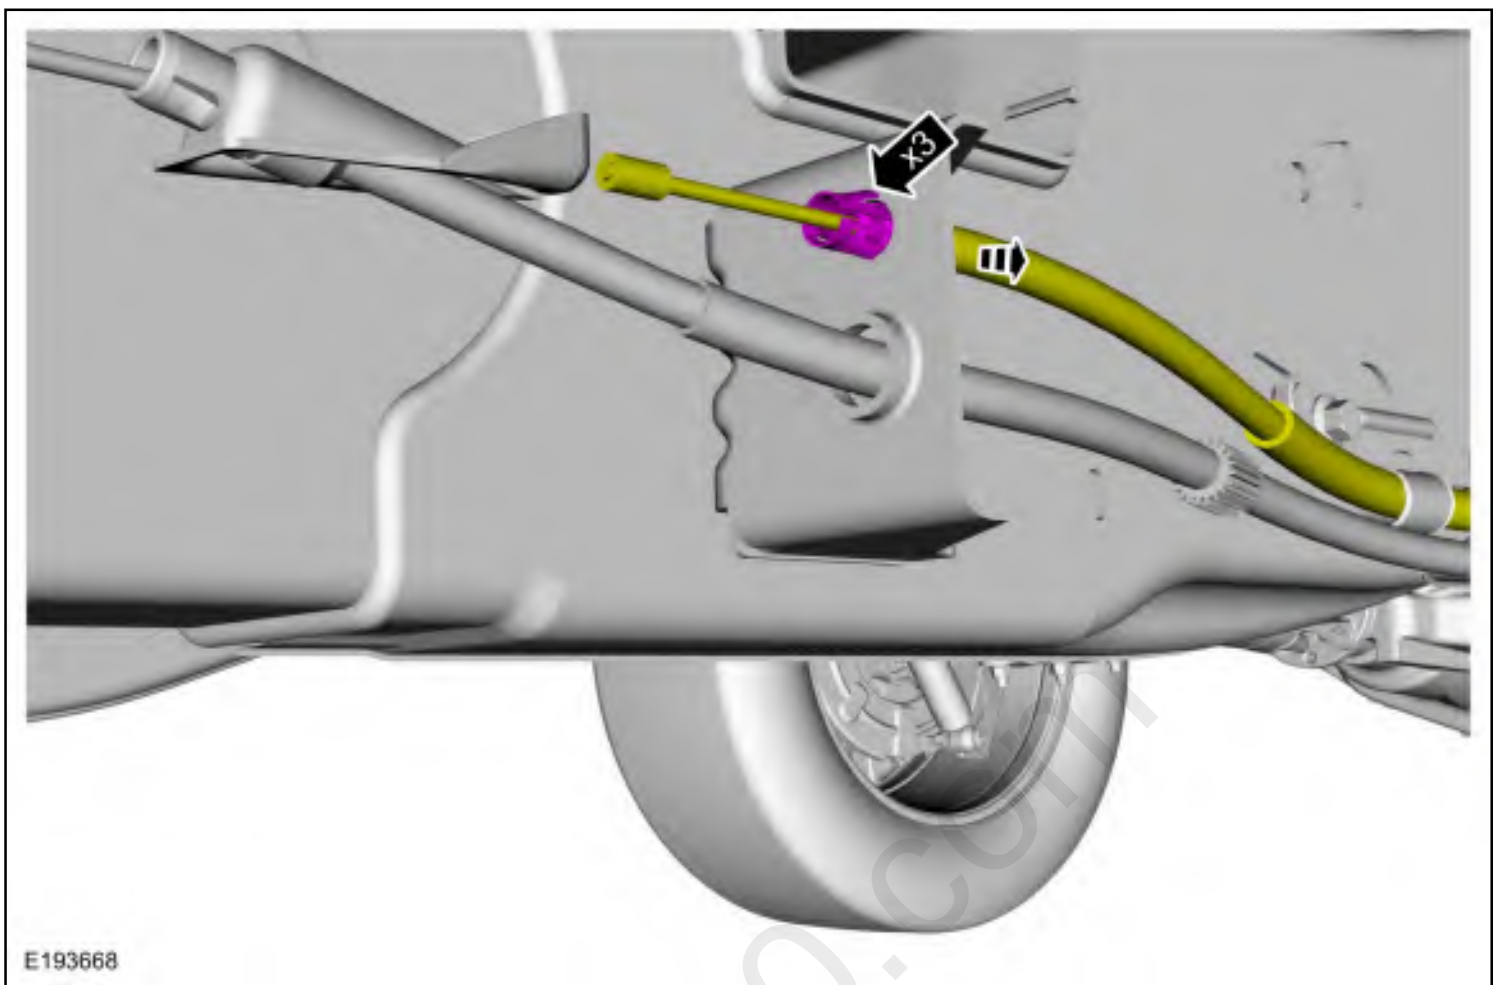

5. Open and remove the parking brake cable clip.

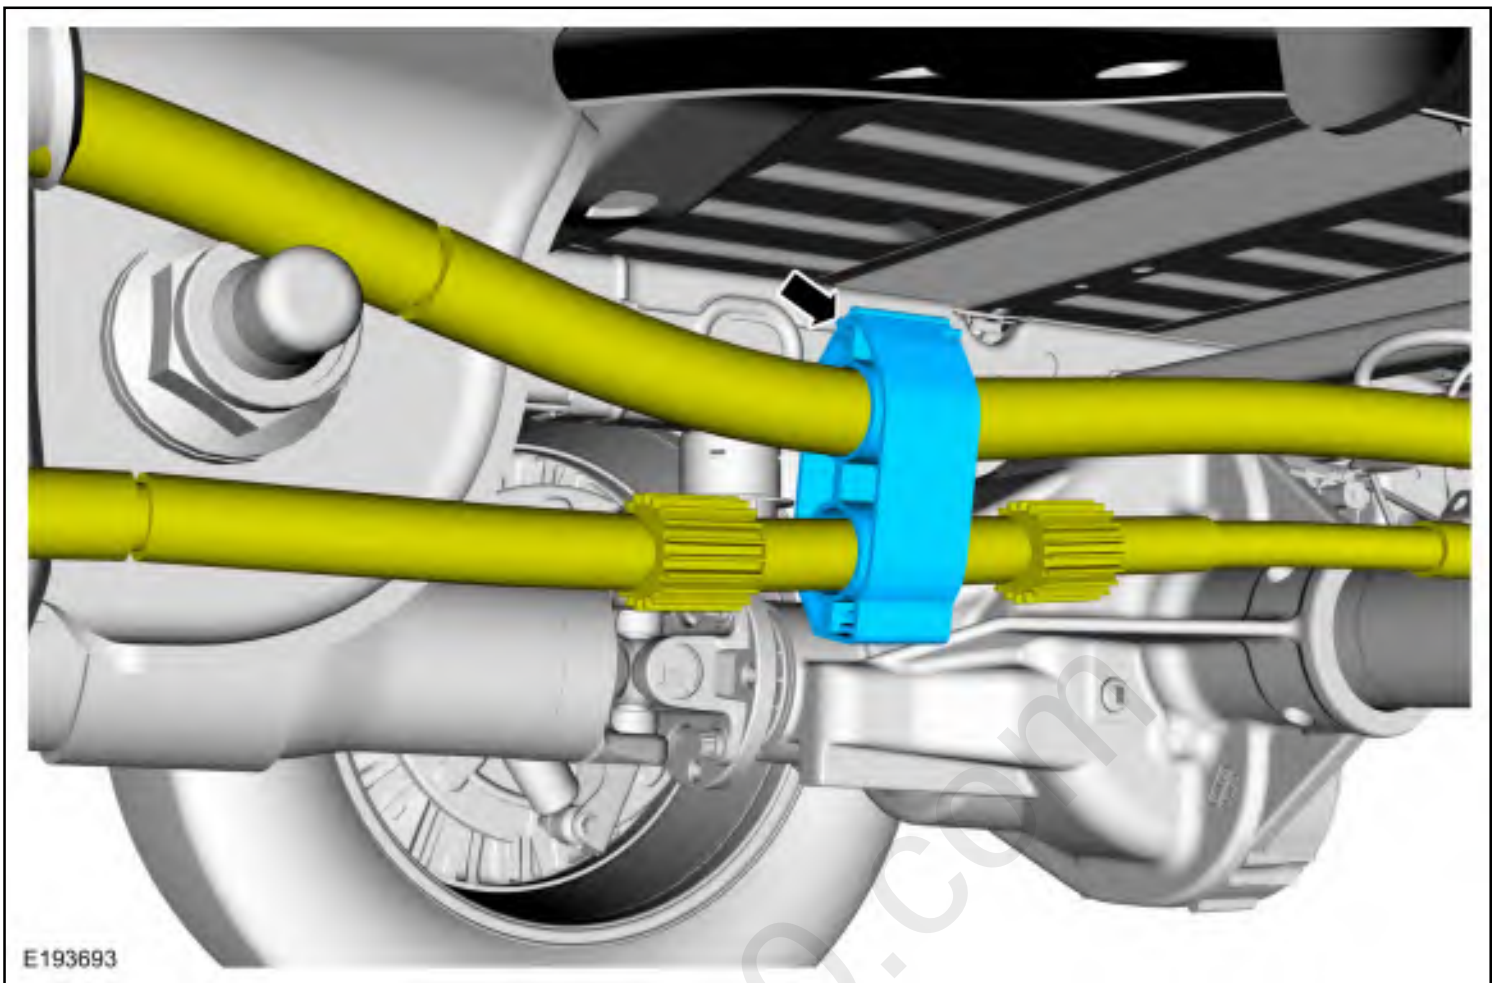

6. Route the LH parking brake cable through the RH parking brake cable brackets and remove the LH parking brake cable.

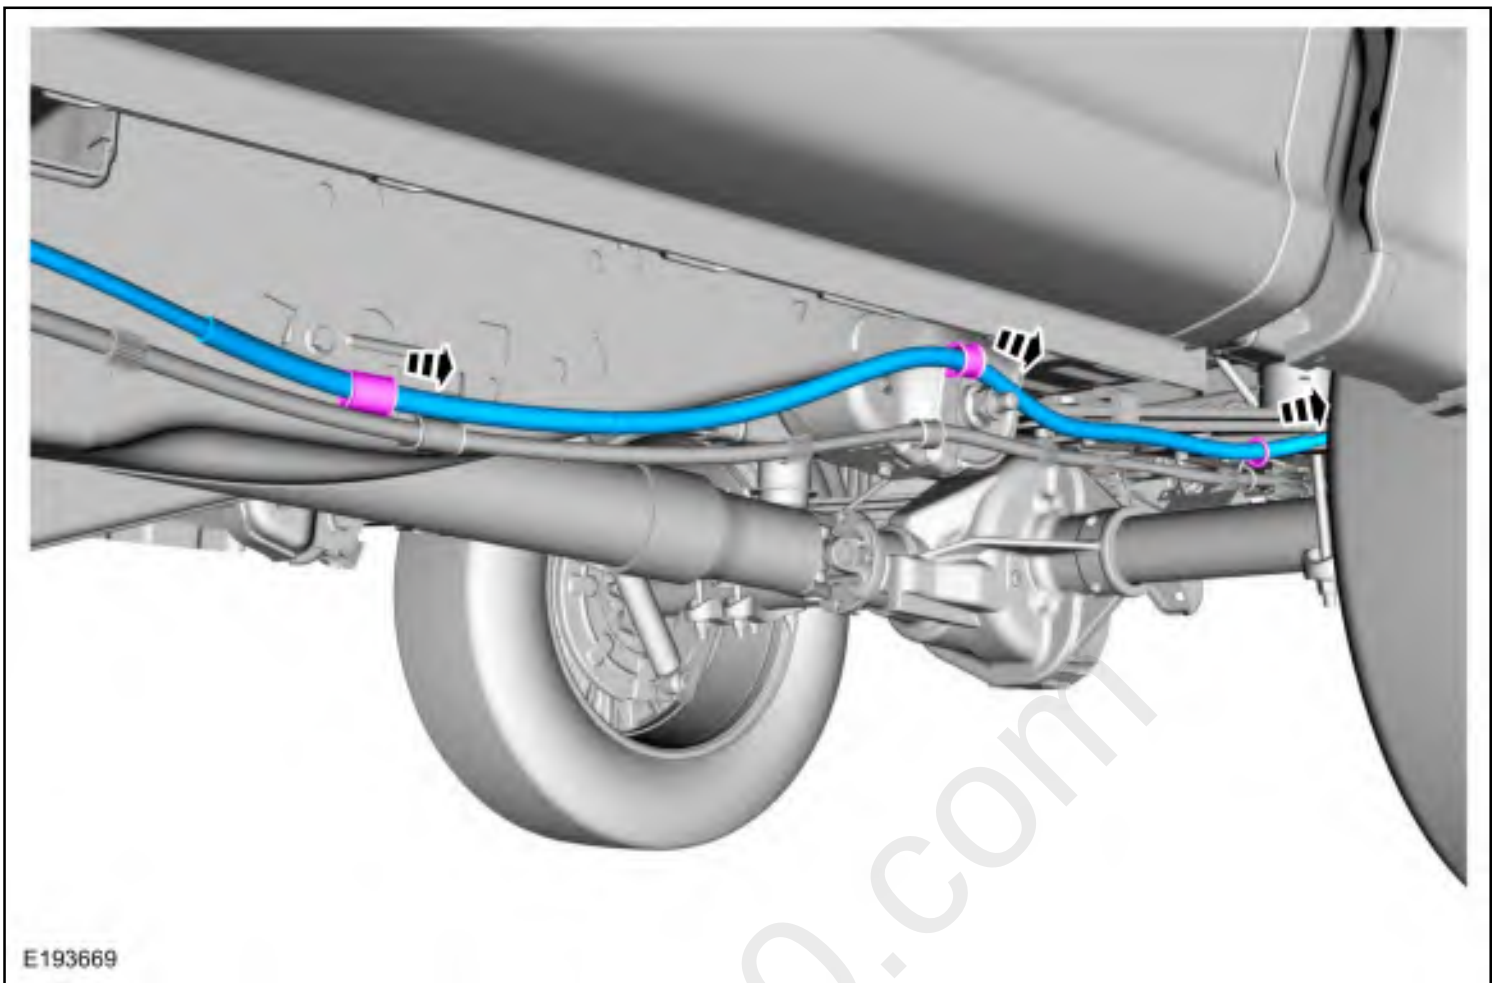

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company