


Parking Brake Switch


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Pull outward on the steering column opening cover detaching the 7 clips and position the cover downward.

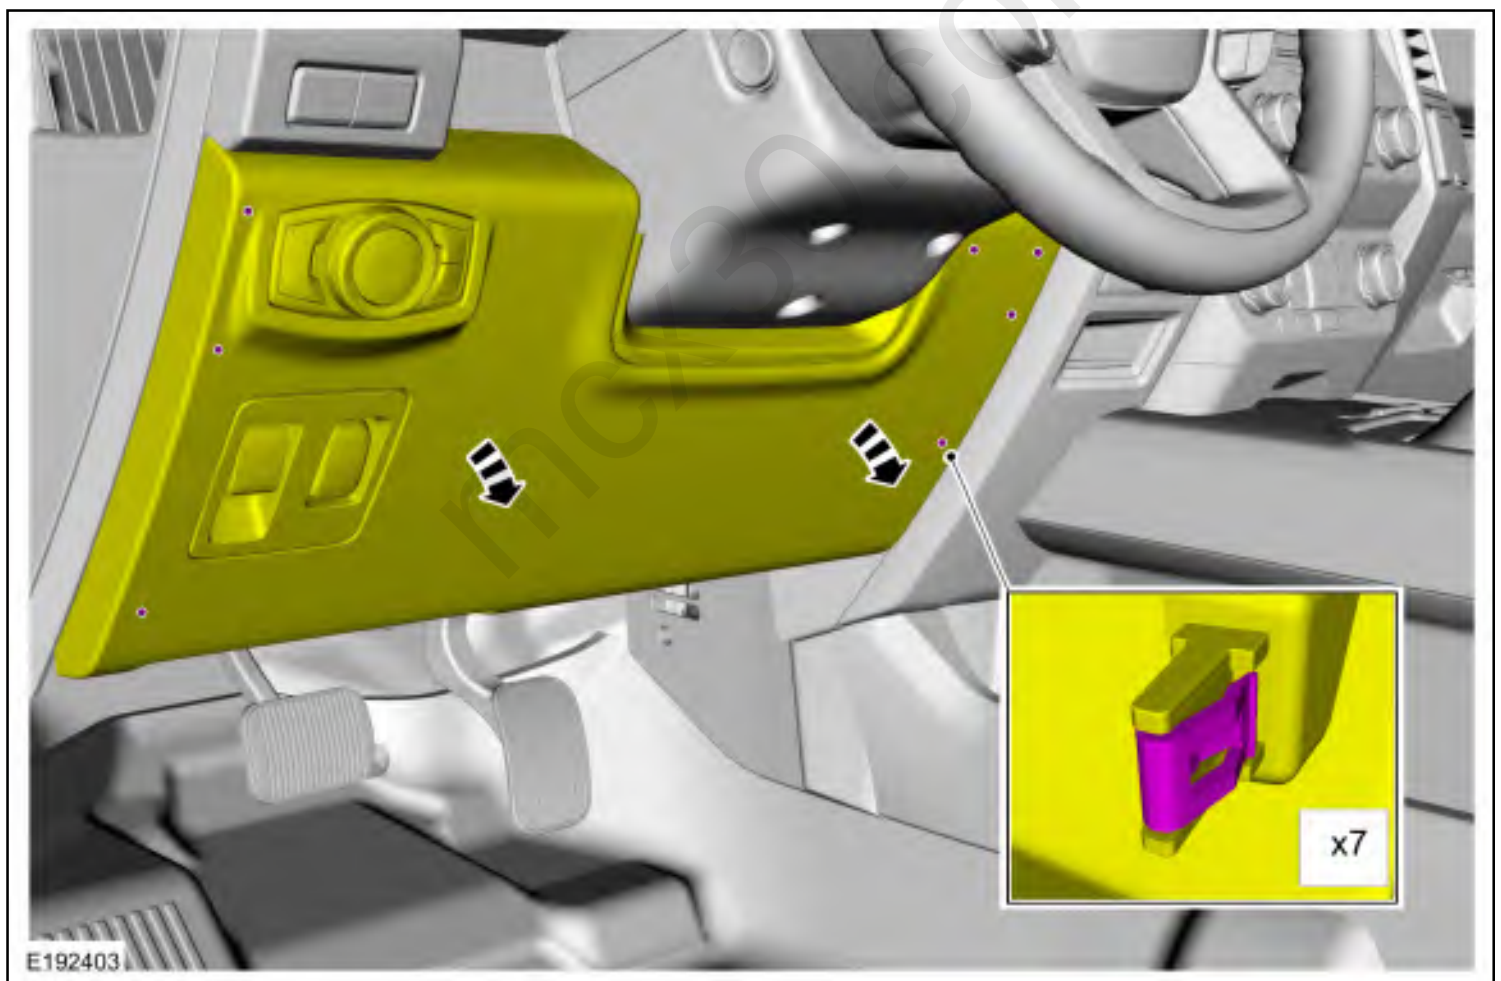

2. Disconnect the EPB switch electrical connector.

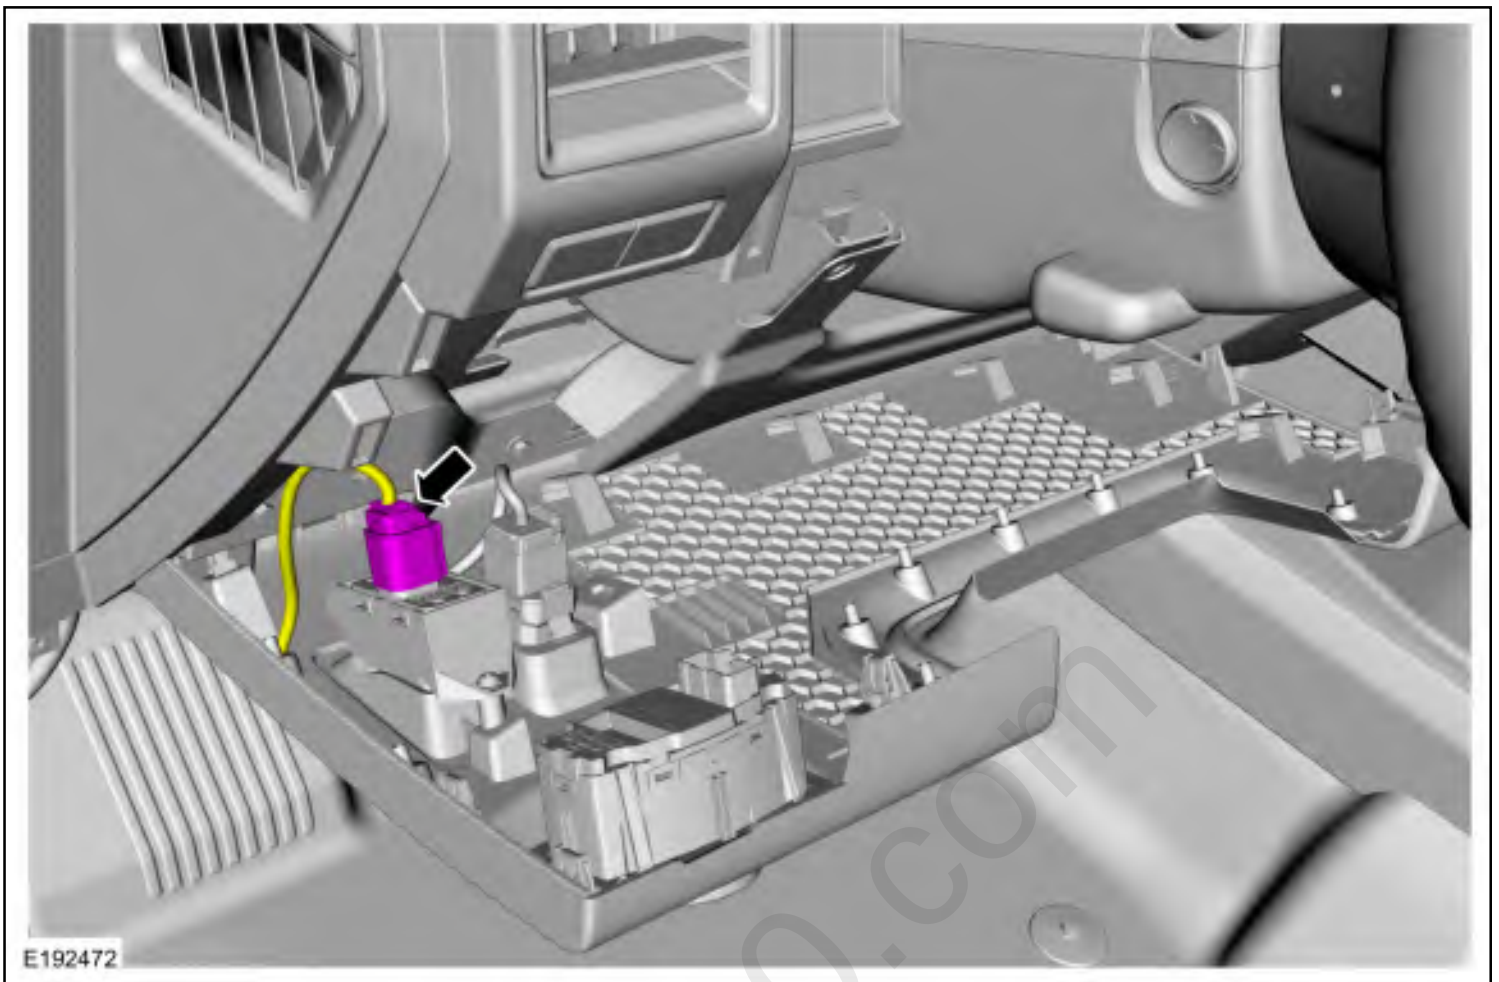

3. Remove the 3 screws and the EPB switch.
Torque: 9 lb.in (1 Nm)

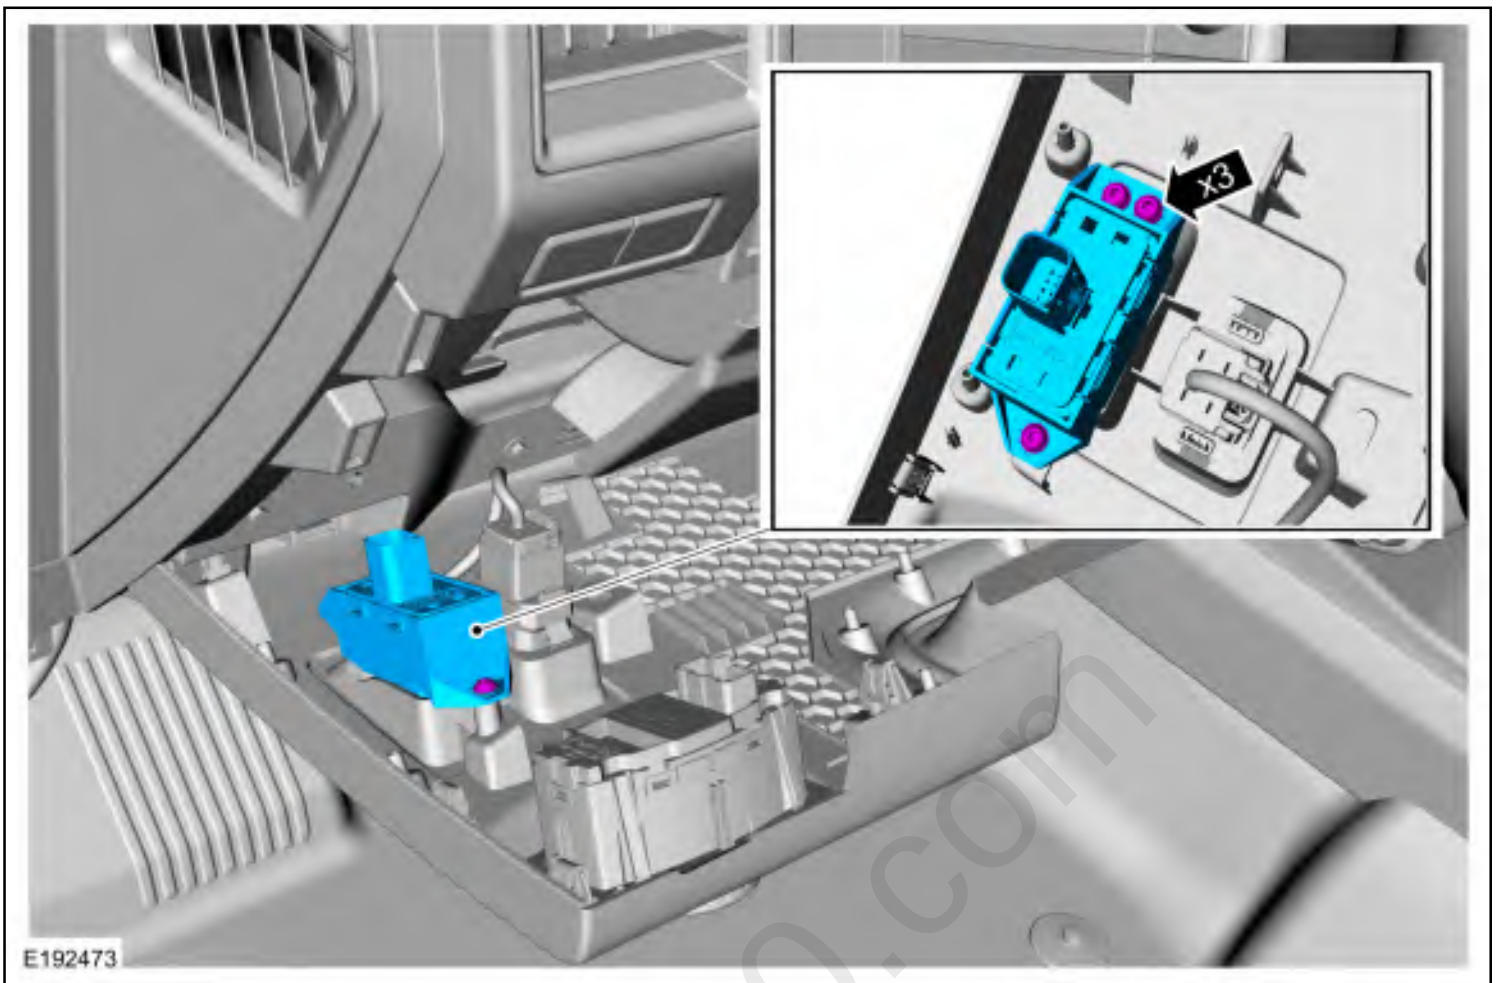

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *Anytime the parking brake switch electrical connector has been disconnected, the EPB system is deactivated and a DTC is stored in the EPB module. Perform the following step to restore the EPB system and clear the EPB module DTC.*

Apply and release the parking brake twice within 5 seconds, pausing with the switch in the NEUTRAL position for approximately one-half second between each apply and release. Using a diagnostic scan tool, clear the EPB module Diagnostic Trouble Codes (DTCs).