


Brake Master Cylinder

Base Part Number: Base Part Number: 2A032


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. If equipped, disconnect the front drive axle vent retainer.

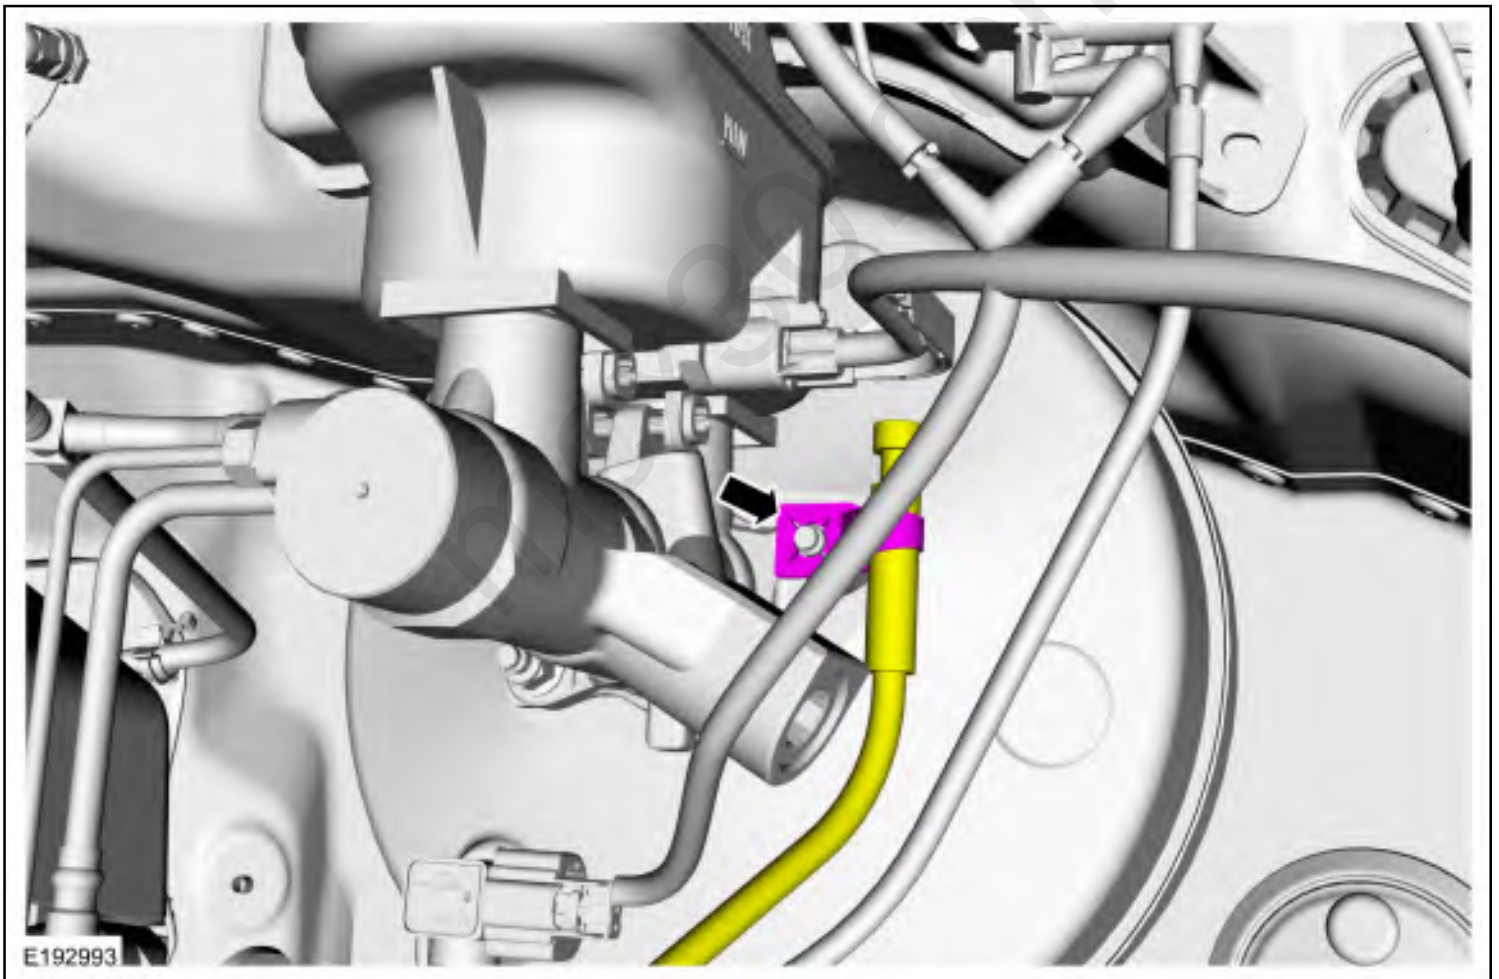


2. Disconnect the brake fluid level sensor electrical connector.

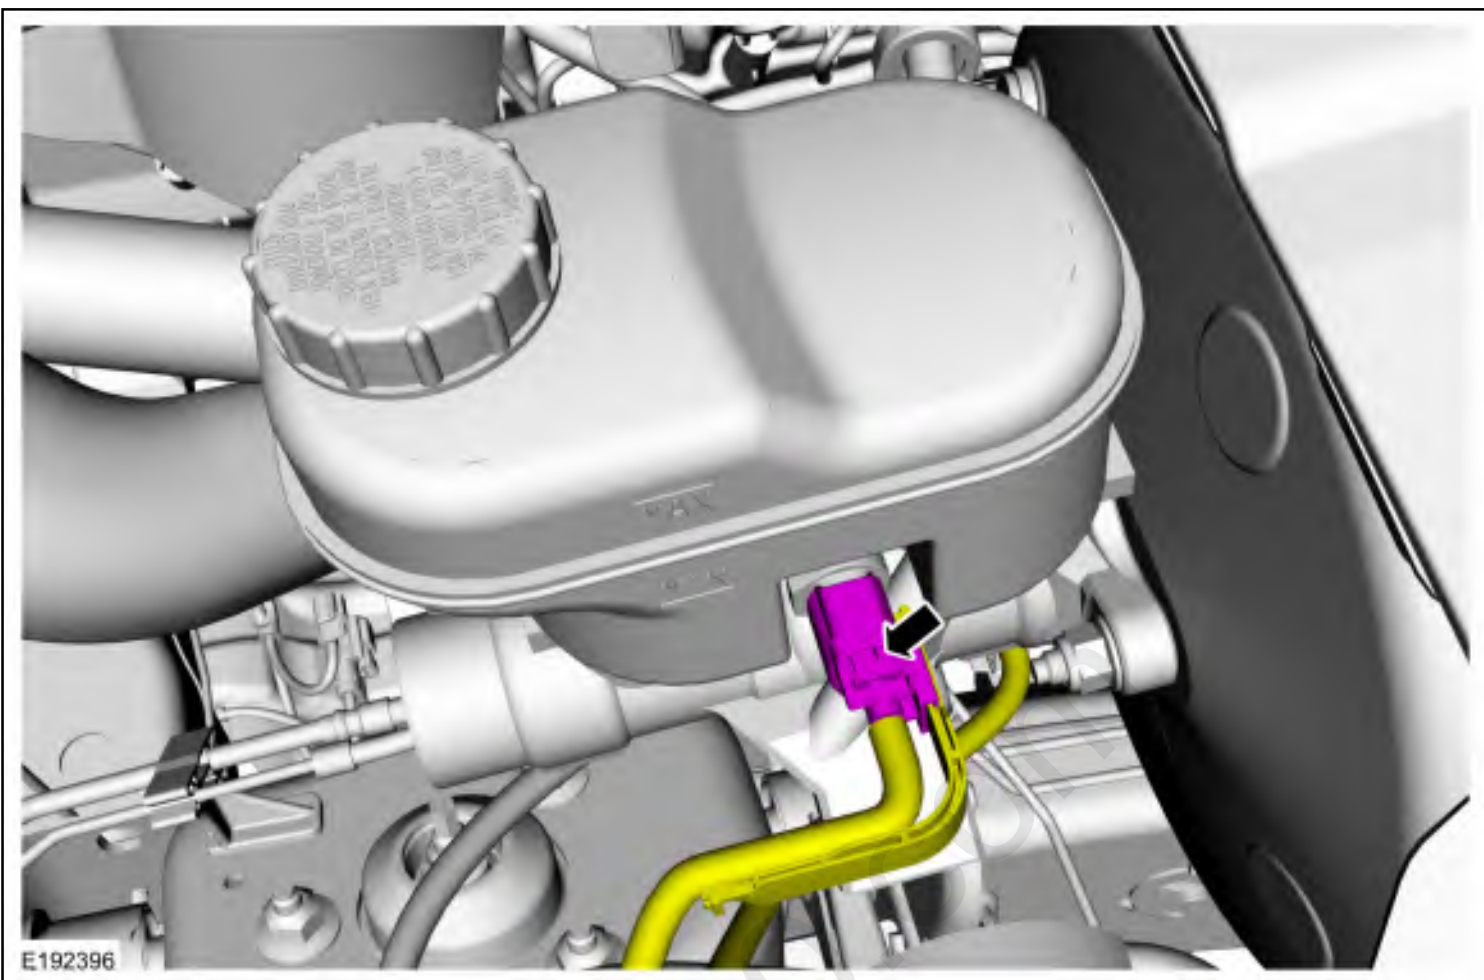

3. Disconnect the 2 brake tube fittings.
 1. Disconnect the primary brake tube fitting.
Torque: 22 lb.ft (30 Nm)
 2. Disconnect the secondary brake tube fitting.
Torque: 177 lb.in (20 Nm)

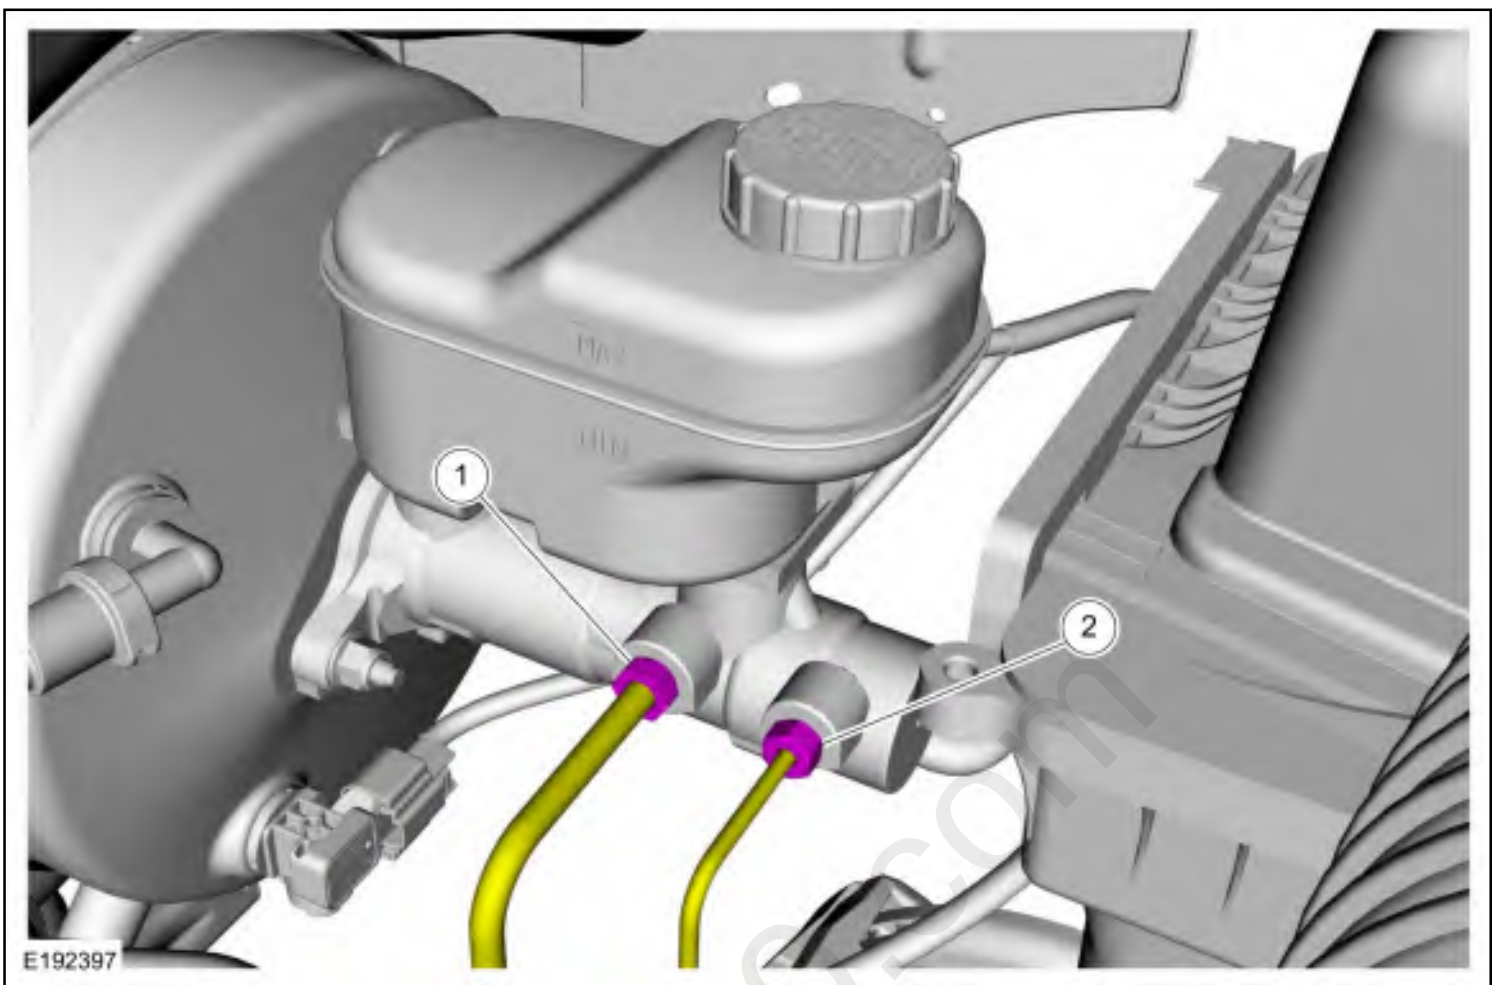

4. Remove the 2 nuts and the brake master cylinder.
Torque: 18 lb.ft (25 Nm)

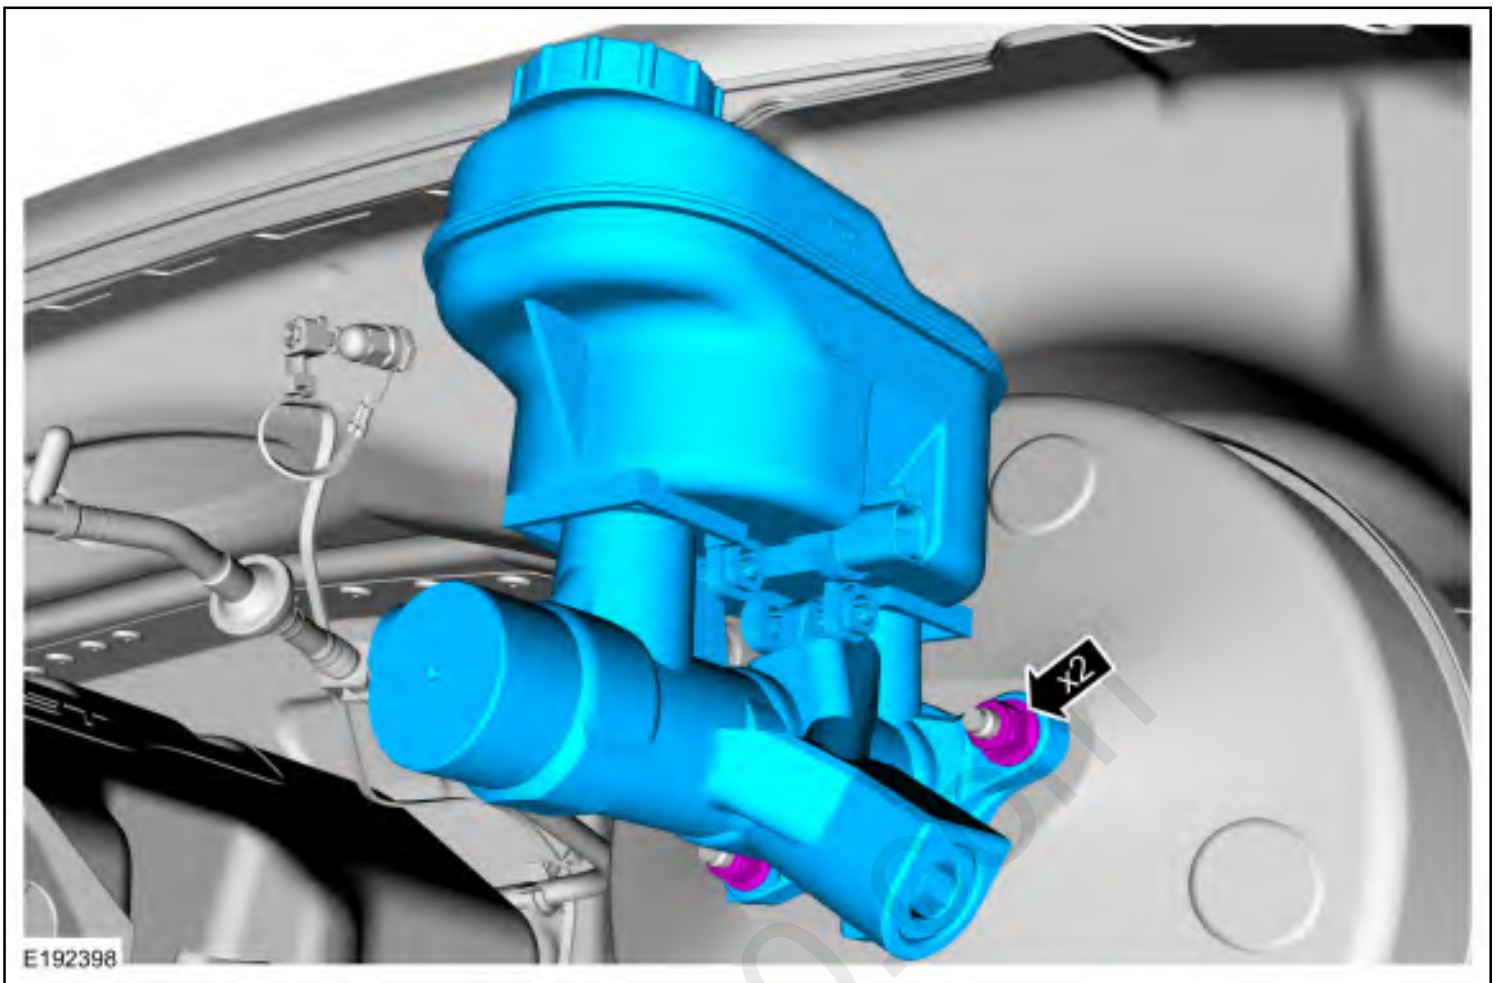

Installation

1. To install, reverse the removal procedure.
 - If installing a new brake master cylinder, bleed the master cylinder.
Refer to: [Component Bleeding](#) (206-00 Brake System - General Information, General Procedures).
 - If the brake master cylinder was removed to access other components, bleed the brake system.
Refer to: [Brake System Pressure Bleeding](#) (206-00 Brake System - General Information, General Procedures).