



Brake Vacuum Sensor

Removal

1. Disconnect the vacuum sensor electrical connector.

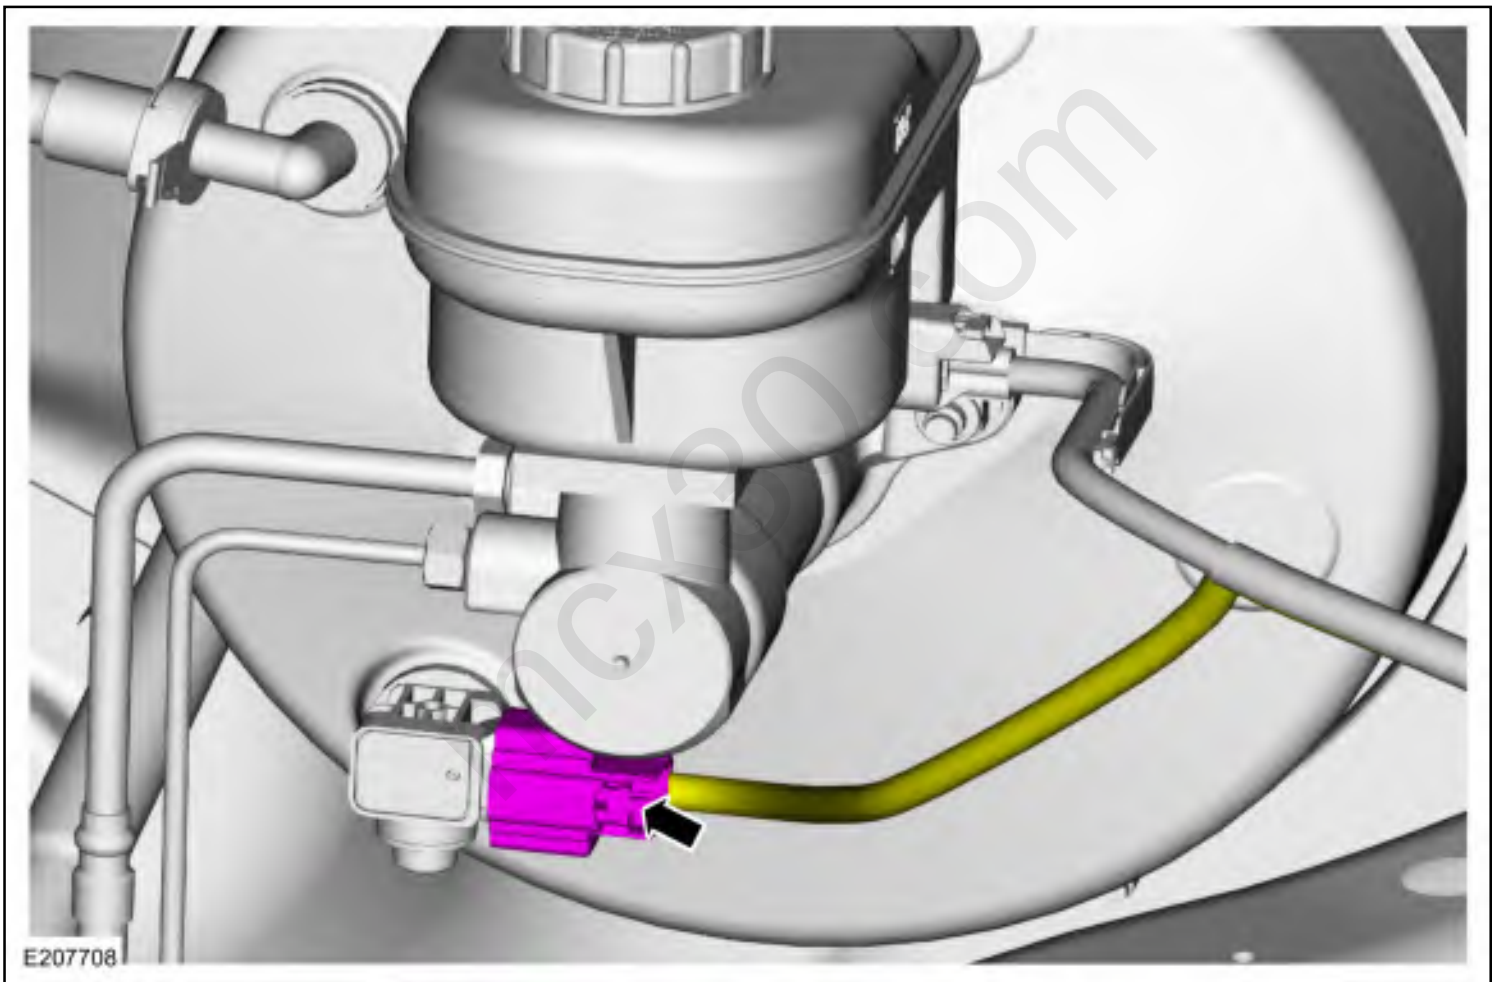

2. Remove the vacuum sensor.

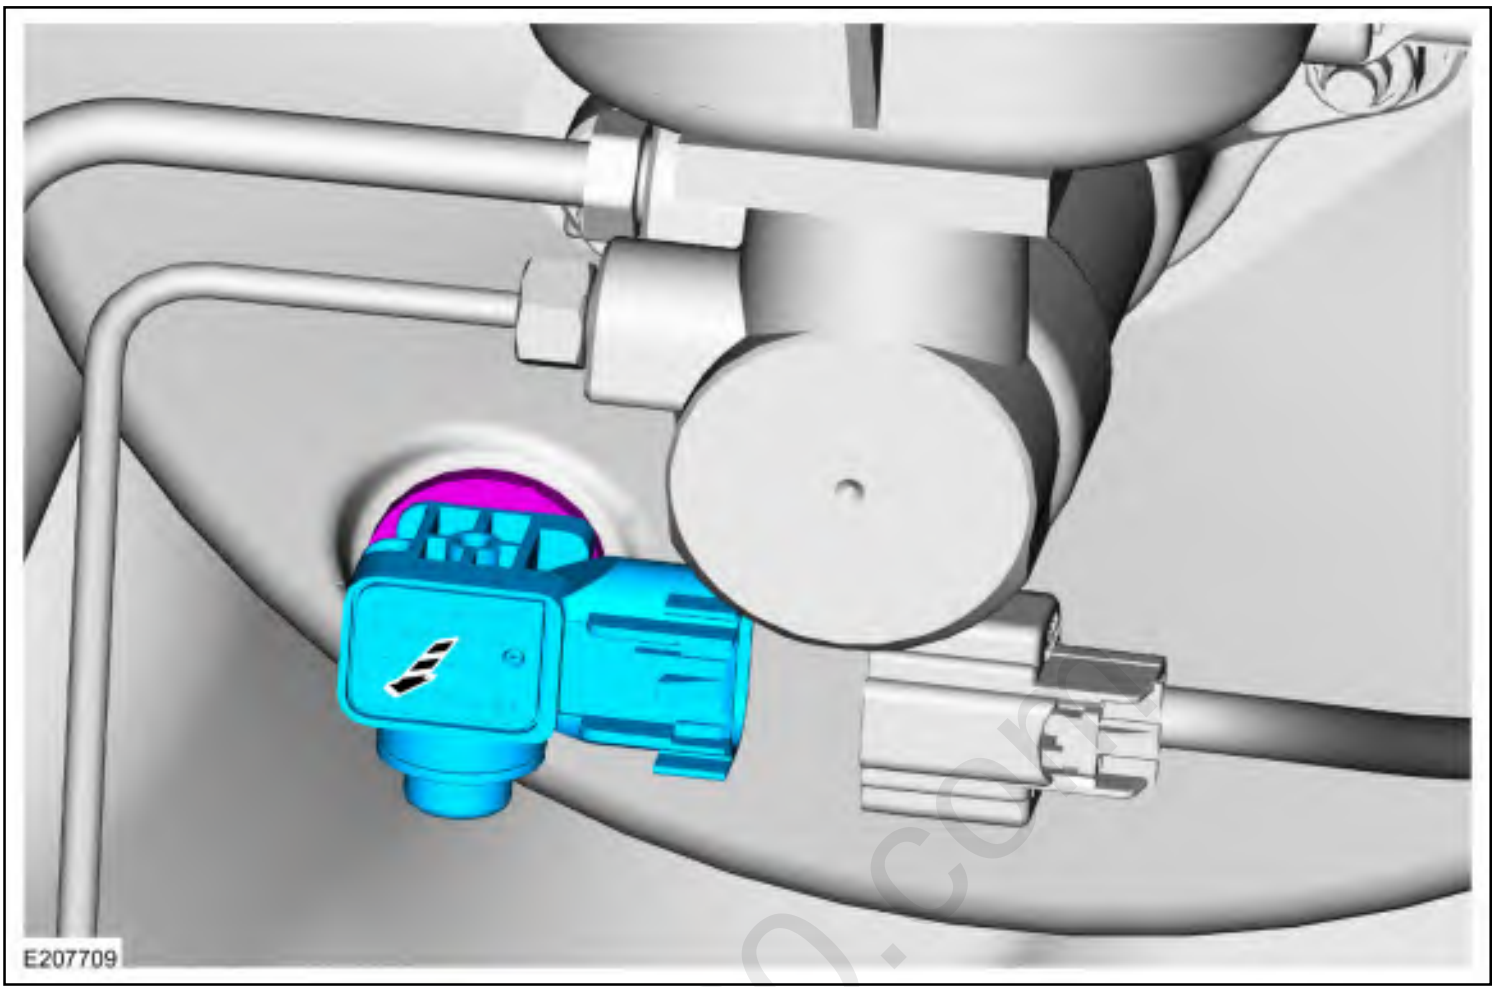

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company