


Brake Booster

Base Part Number: Base Part Number: 2002

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the brake master cylinder.
Refer to: [Brake Master Cylinder](#) (206-06 Hydraulic Brake Actuation, Removal and Installation).
2. Disconnect the vacuum tube and the vacuum sensor.

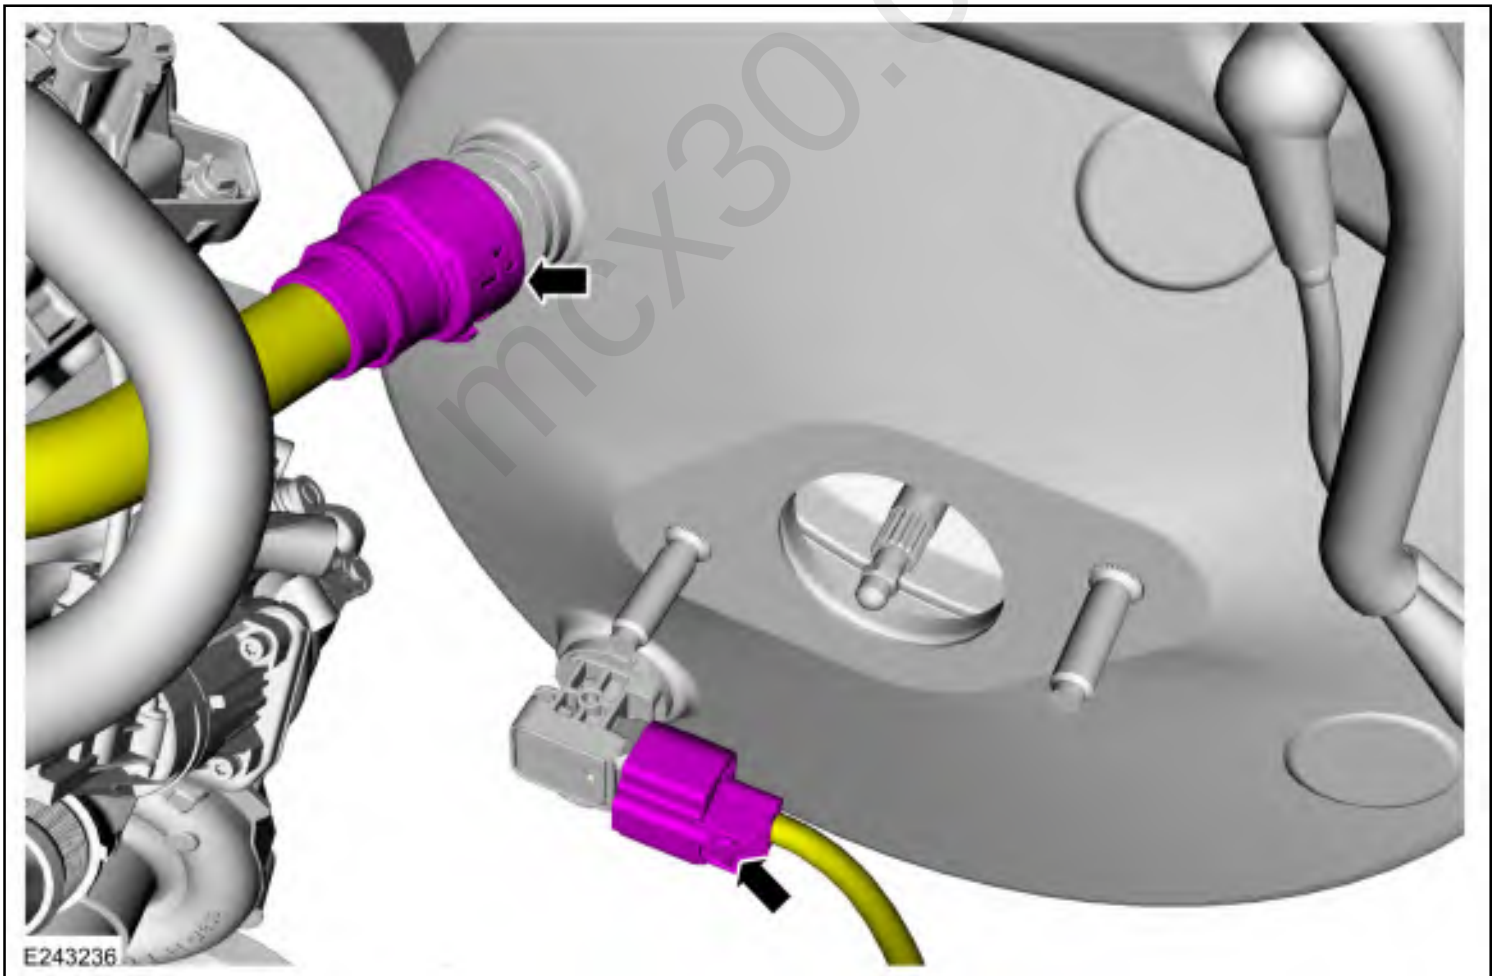


3. **NOTICE:** Do not service the brake pedal or brake booster without first removing the stoplamp switch. This switch must be removed with the brake pedal in the at-rest position. The switch plunger must be compressed for the switch to rotate in the bracket. Attempting to remove the switch when the plunger is extended (during pedal apply) will result in damage to the switch.


Remove the stoplamp switch.

Refer to: [Stoplamp Switch](#) (417-01 Exterior Lighting, Removal and Installation).


4. Remove the brake pedal clevis pin, and disconnect the brake booster push rod from the brake pedal arm. Discard the brake pedal clevis pin.

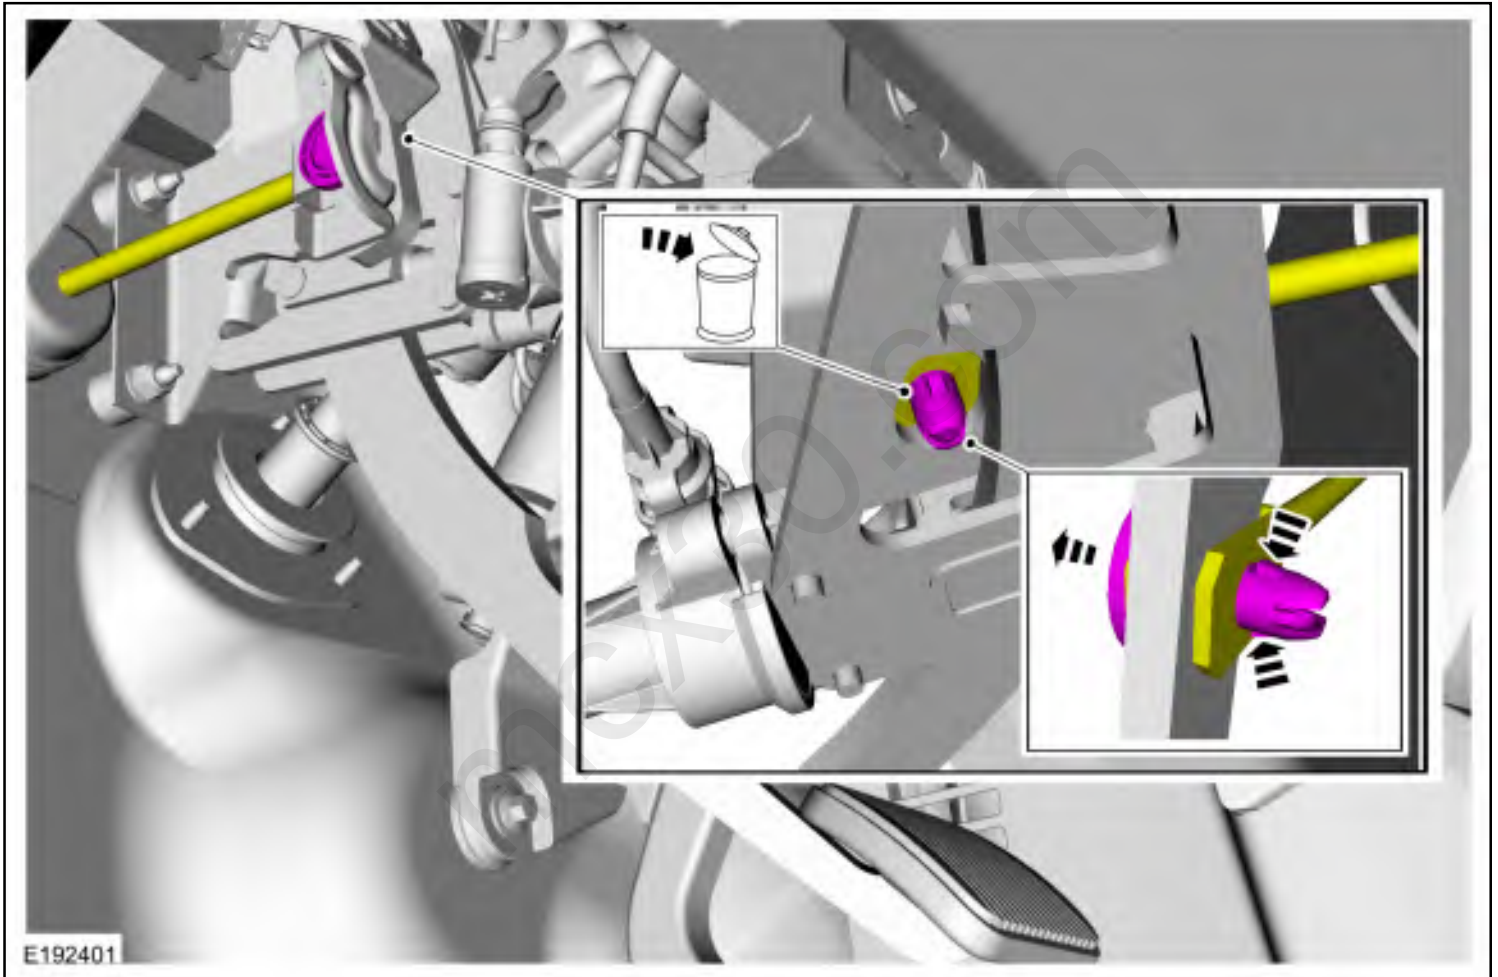

5. Remove the 4 brake booster nuts.
Torque: 18 lb.ft (25 Nm)

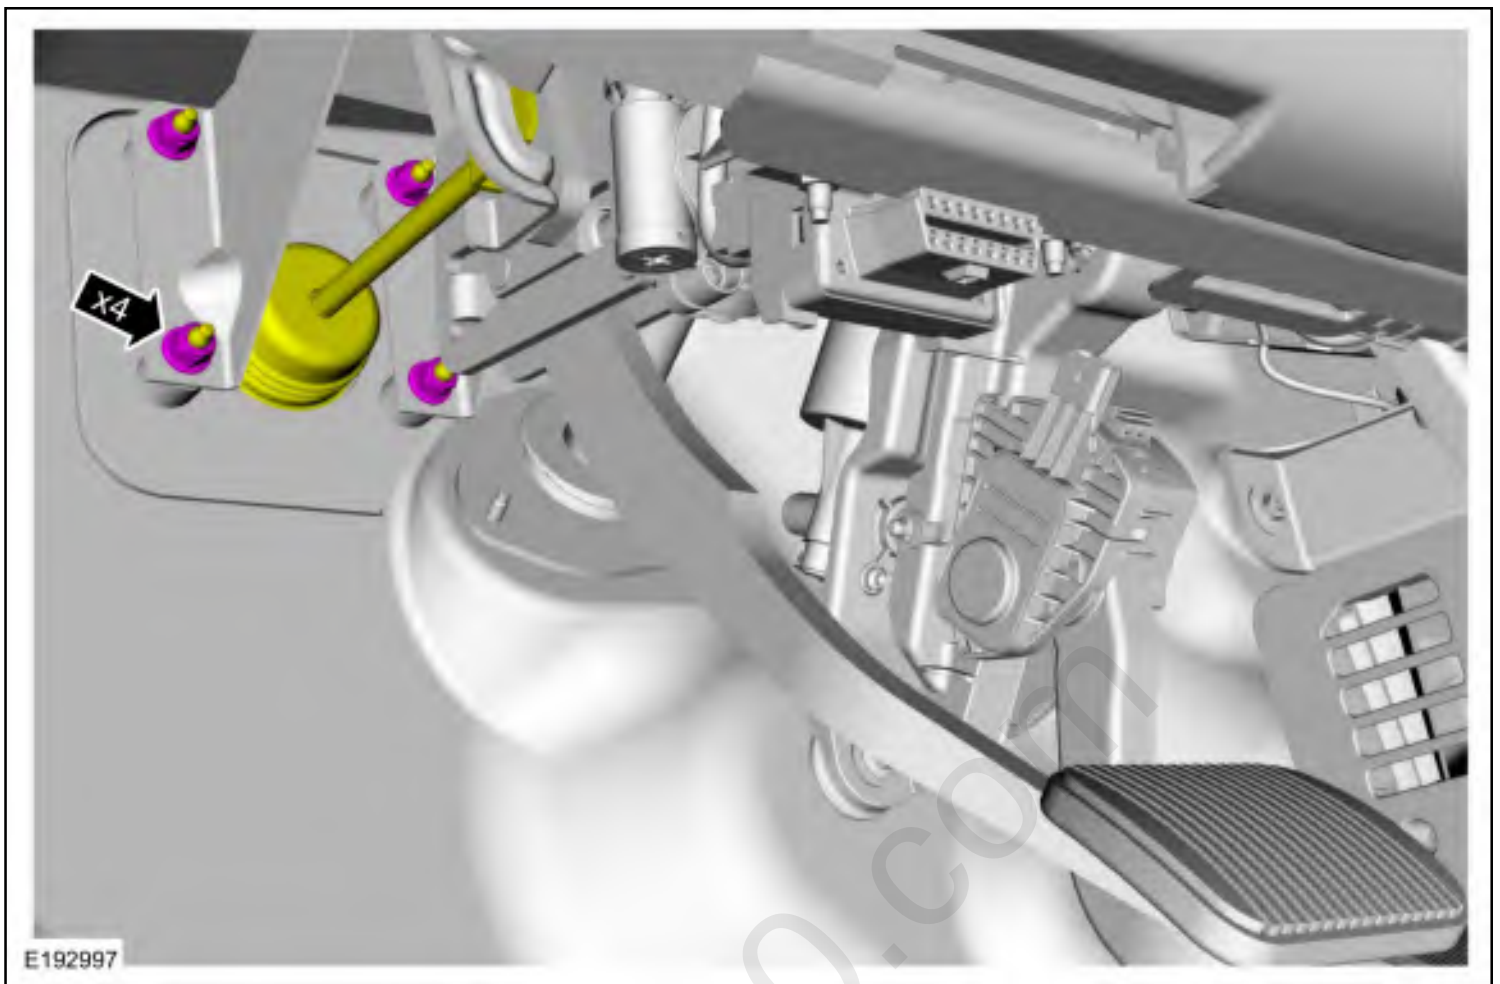

6. Remove the brake booster.

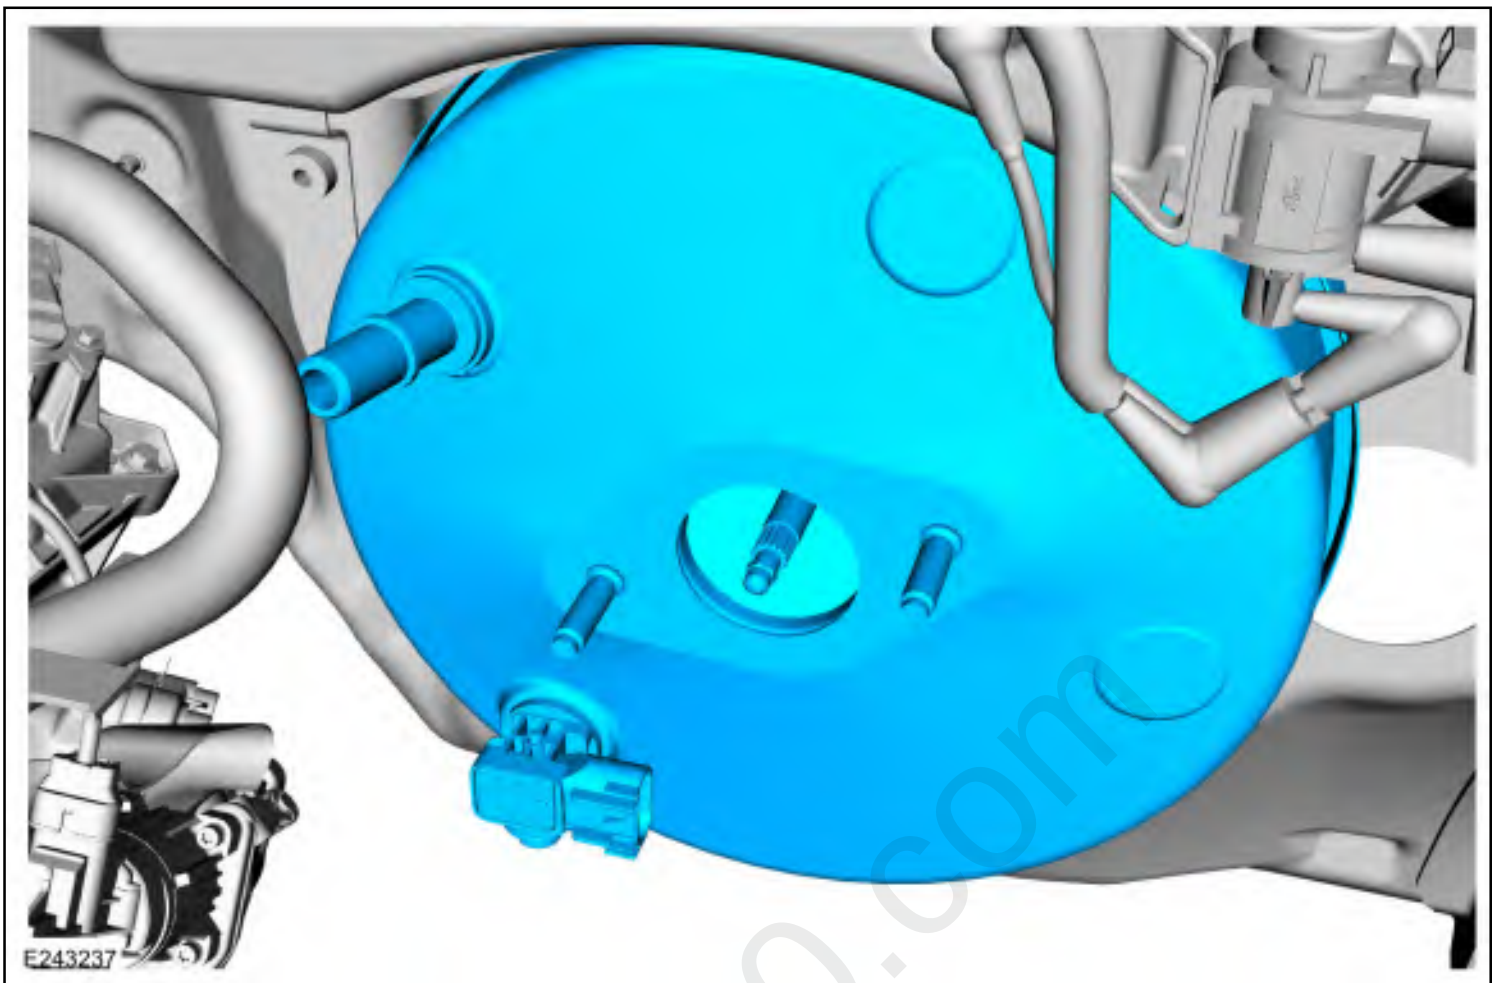

Installation

1. **NOTICE:** Do not press, pull or otherwise move the brake pedal while installing the stoplamp switch. Install the switch with the booster push rod attached to the brake pedal and with the brake pedal in the at-rest position. Installing the switch with the brake pedal in any other position will result in incorrect adjustment and may damage the switch.

To install, reverse the removal procedure.