

Rear Wheel Speed Sensor


Base Part Number: Base Part Number: 2C190

Removal

NOTE: Removal steps in this procedure may contain installation details.


Right hand (RH) wheel speed sensor

1. Detach the harness isolators from the brake hose brackets and detach the 5 harness retainers from the axle.

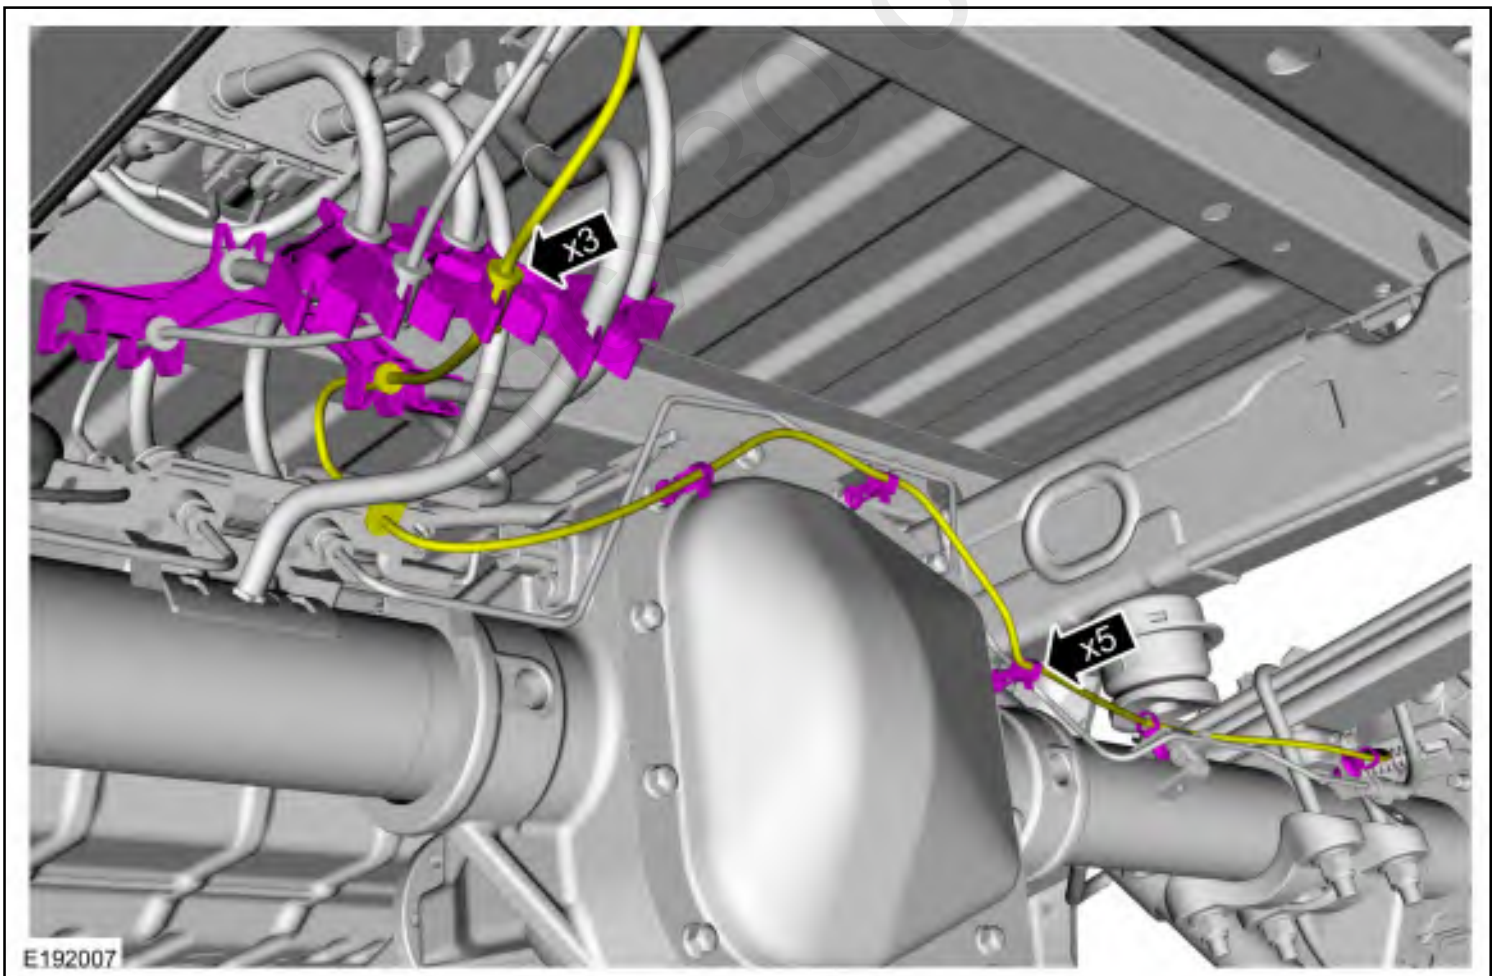


Left hand (LH) wheel speed sensor

2. Detach the harness isolators from the brake hose brackets and detach the harness retainer from the axle.

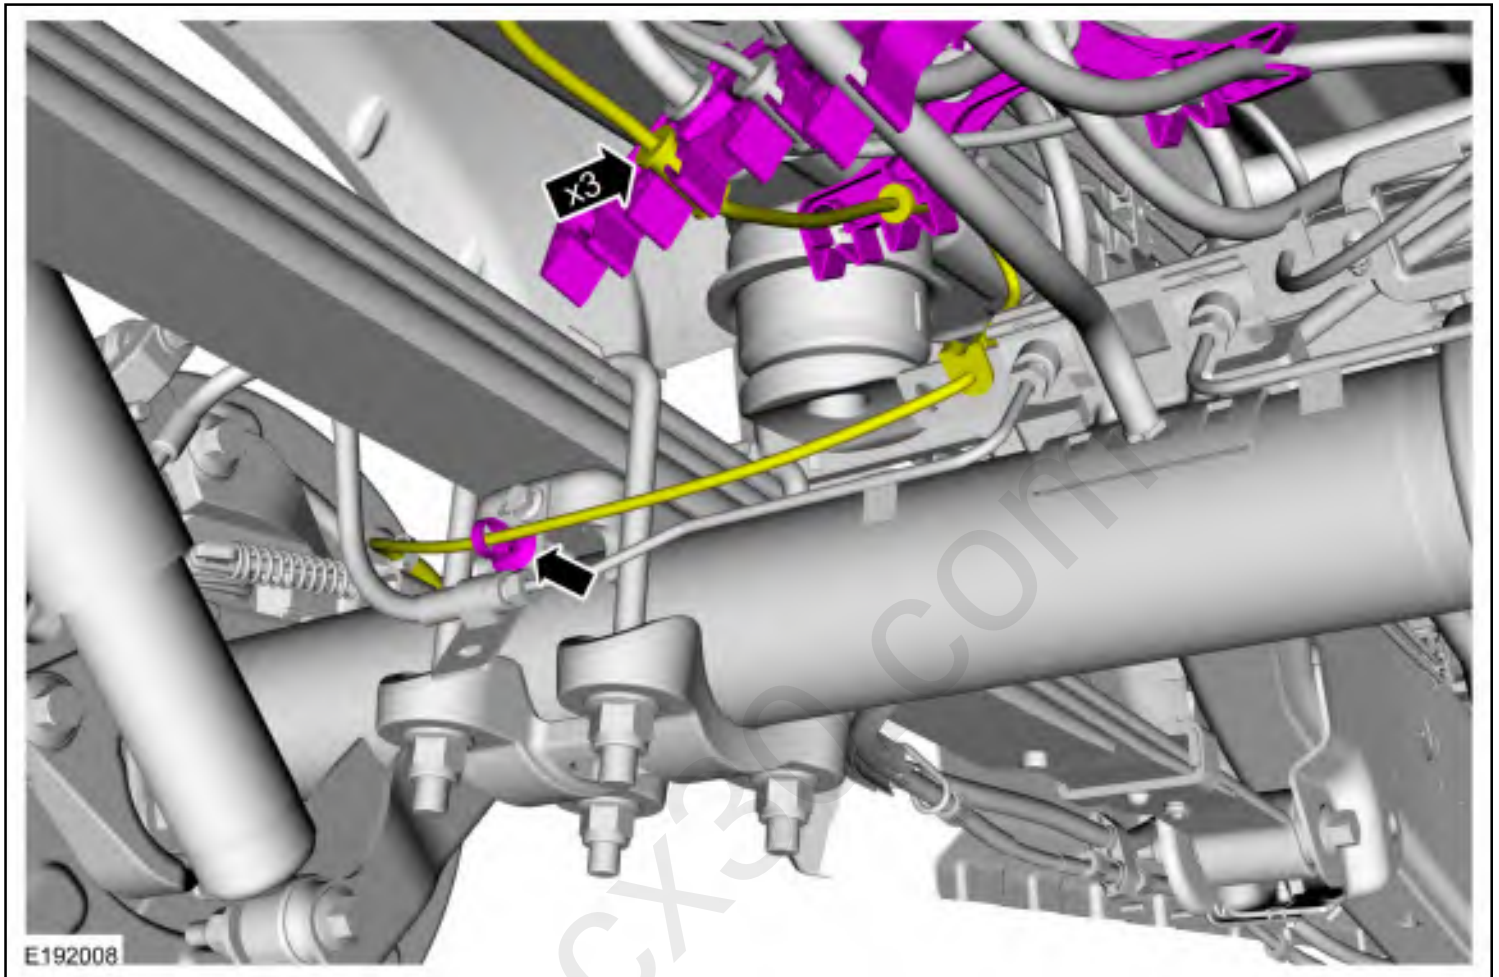


Right hand (RH) and left hand (LH) wheel speed sensors

3. Using compressed air, clean the area surrounding the rear wheel speed sensor.

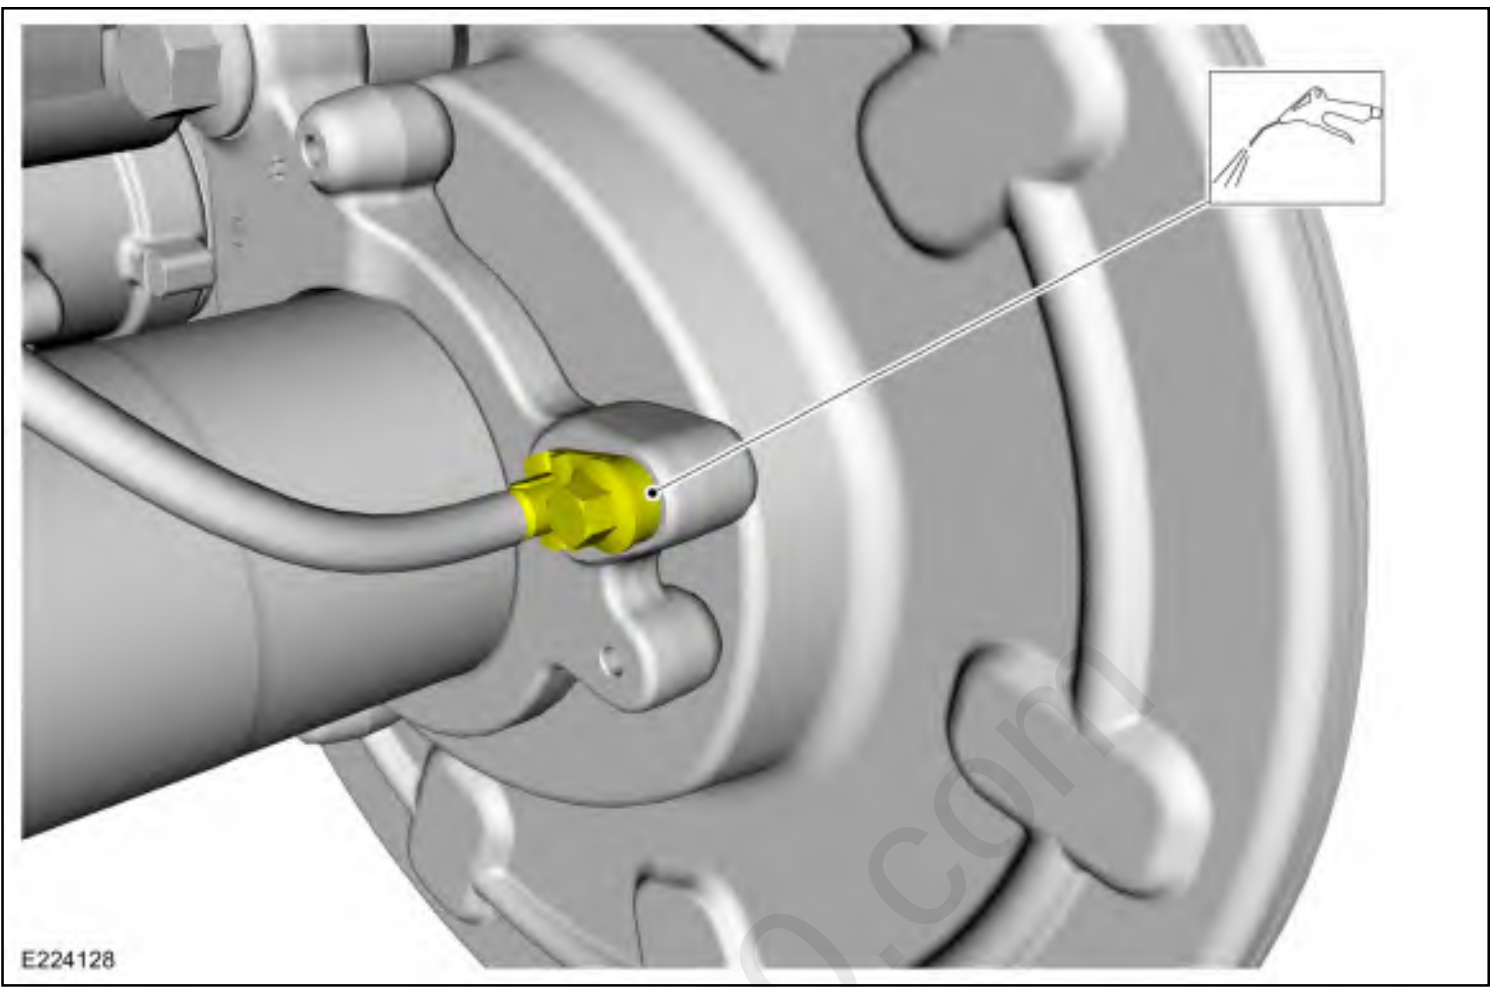


4. Detach the harness retainer, remove the bolt and the wheel speed sensor.
Torque: 133 lb.in (15 Nm)

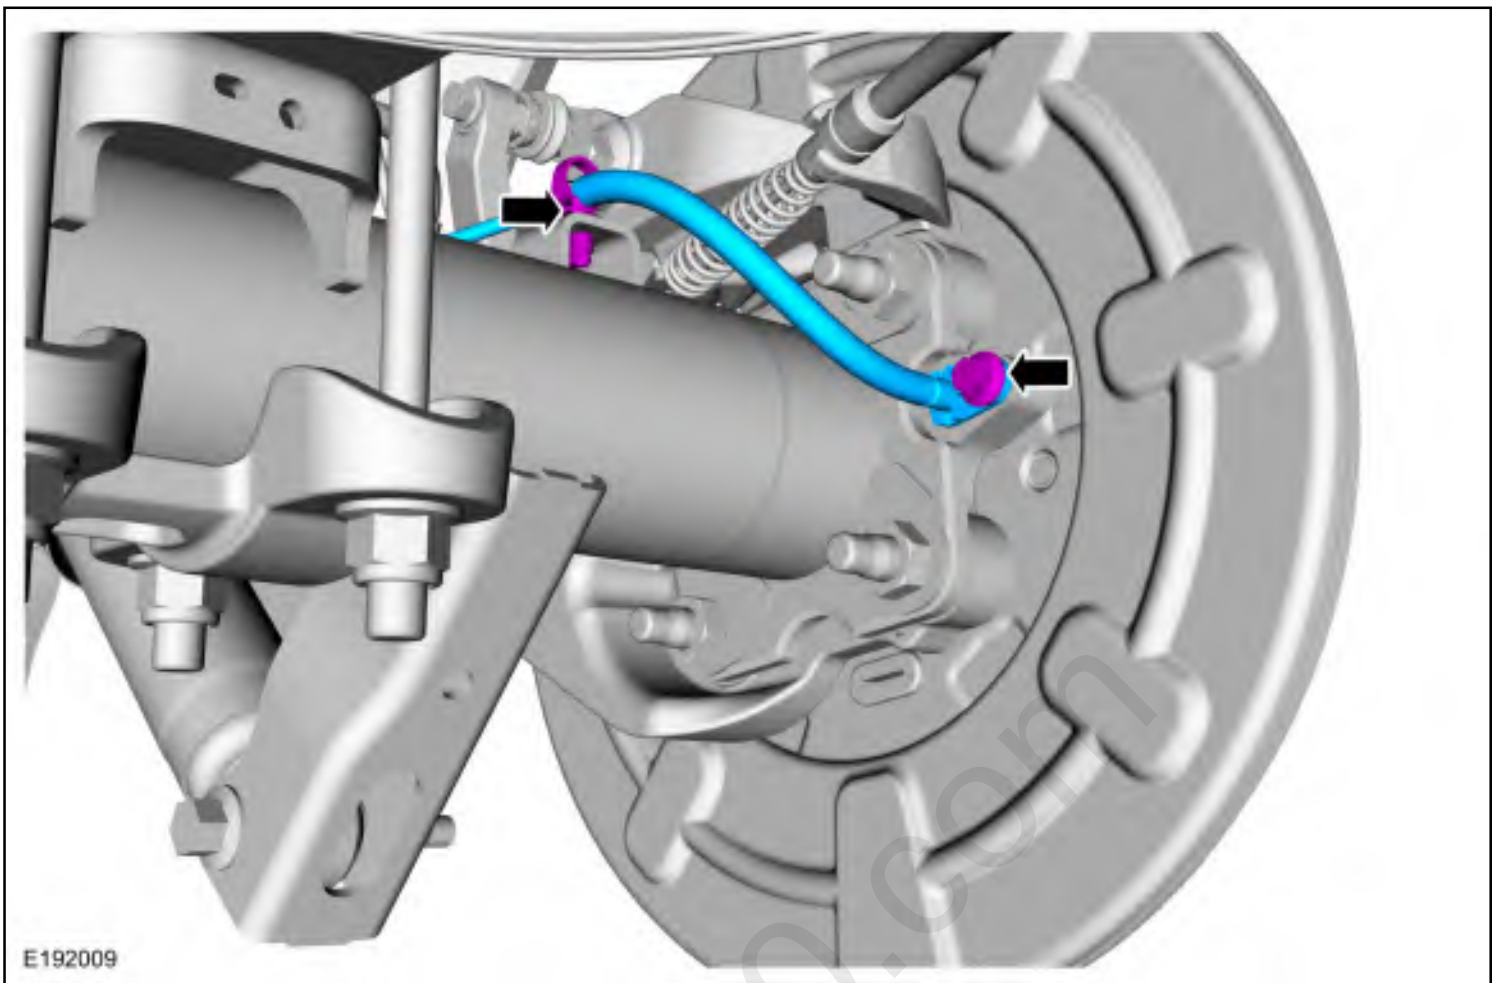

Installation

1. To install, reverse the removal procedure.
2. Before installing a new sensor, inspect the sensor housing to make sure the sensor cavity is clean and free of foreign material.

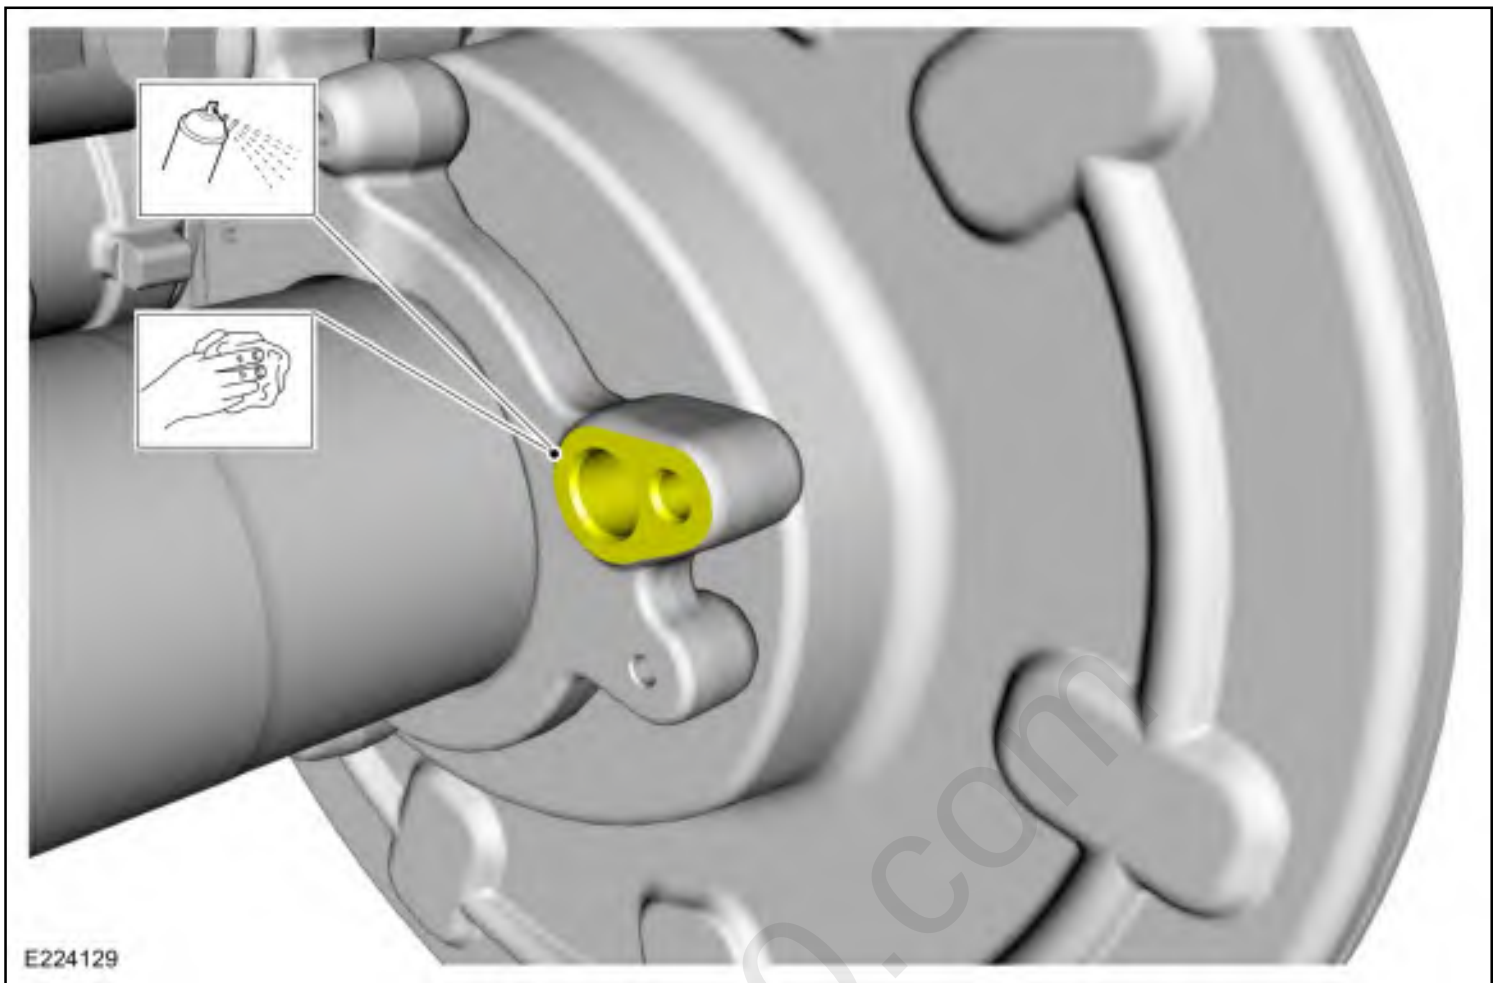

Copyright © 2018 Ford Motor Company