

Stability Assist/Traction Control Switch

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the FCIM.



Refer to: [Front Controls Interface Module \(FCIM\)](#) (415-00A Information and Entertainment System - General Information - Vehicles Without: SYNC, Removal and Installation).

Refer to: [Front Controls Interface Module \(FCIM\)](#) (415-00B Information and Entertainment System - General Information - Vehicles With: SYNC Without Touchscreen, Removal and Installation).

Refer to: [Front Controls Interface Module \(FCIM\)](#) (415-00C Information and Entertainment System - General Information - Vehicles With: Touchscreen Display, Removal and Installation).

Refer to: [Front Controls Interface Module \(FCIM\)](#) (415-00D Information and Entertainment System - General Information - Vehicles With: Bang and Olufsen Audio System, Removal and Installation).

2. Press the 2 tabs and remove the stability assist/traction control switch.

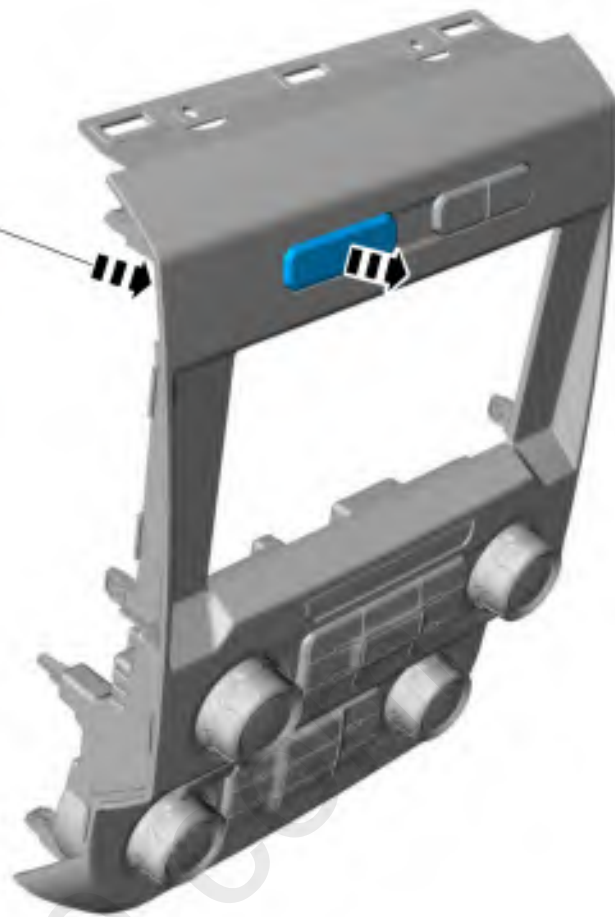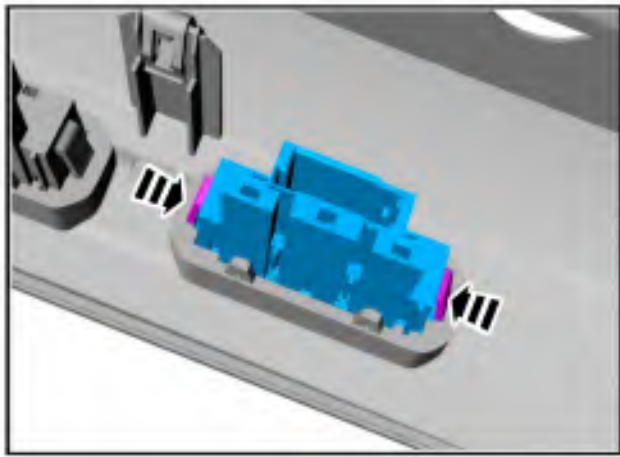

E192052



Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company