

Wheel Speed Sensor Ring

Special Tool(s) / General Equipment

Hydraulic Press
Punch
Wooden Block


Removal

1. Remove the axle shaft.

Refer to: [Axle Shaft](#) (205-02A Rear Drive Axle/Differential - Vehicles With: Ford 8.8 Inch Ring Gear, Removal and Installation).


Refer to: [Axle Shaft](#) (205-02B Rear Drive Axle/Differential - Vehicles With: Ford 9.75 Inch Ring Gear, Removal and Installation).

2. Using a suitable driver, remove the wheel speed sensor ring.
Use the General Equipment: Punch

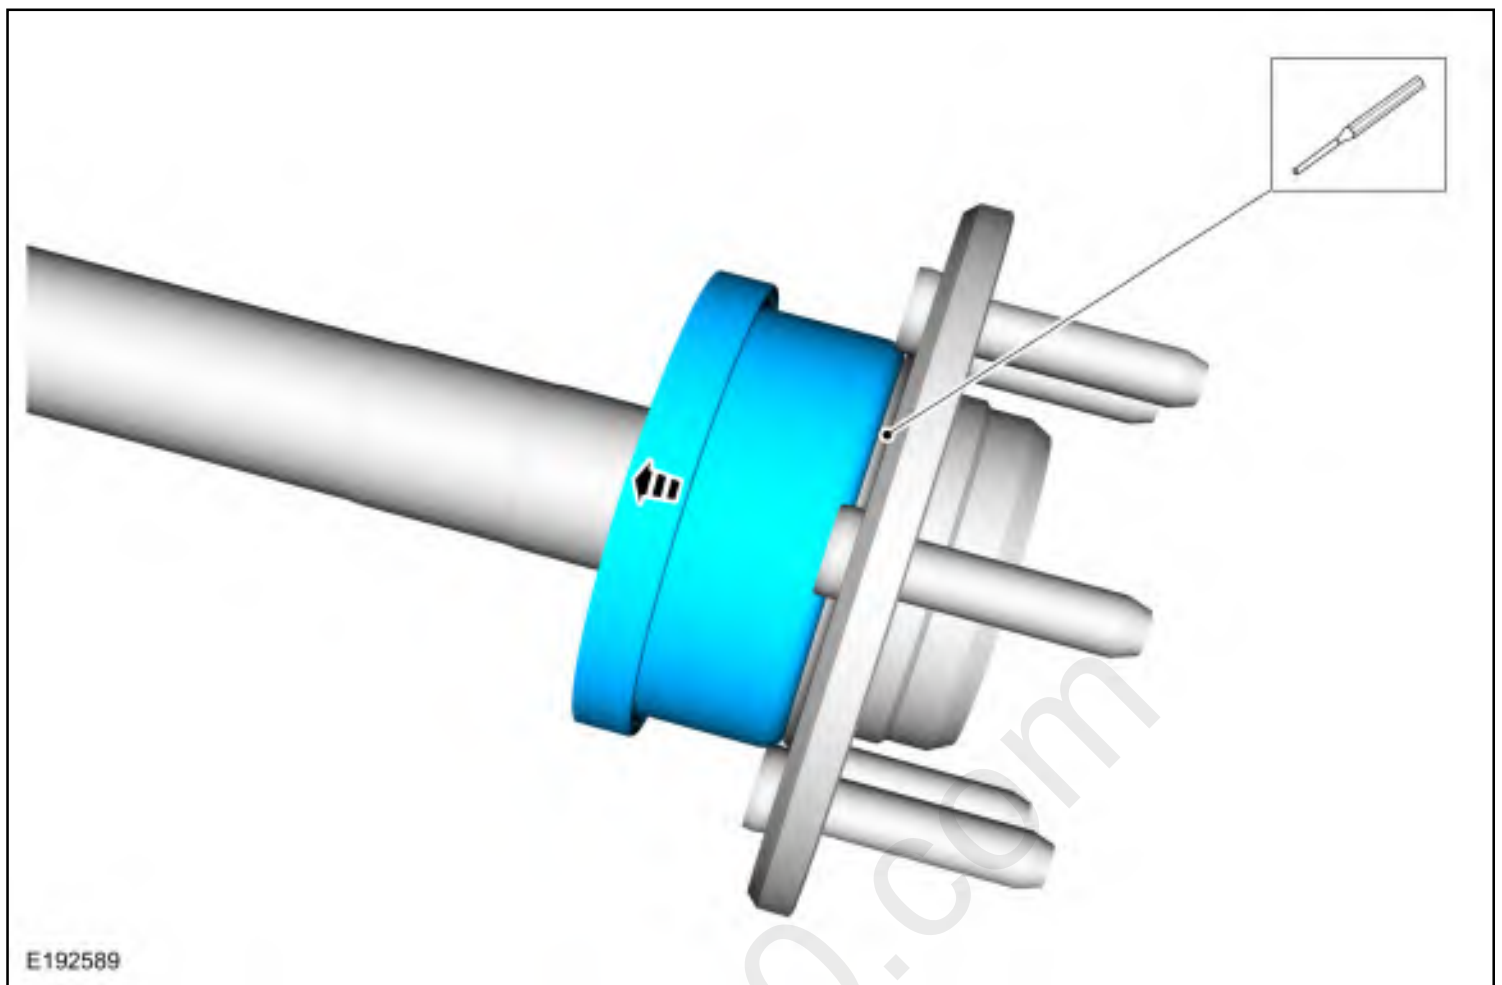

Installation

1. Using a hydraulic press and wooden blocks, install the wheel speed sensor ring.
Use the General Equipment: Hydraulic Press
Use the General Equipment: Wooden Block

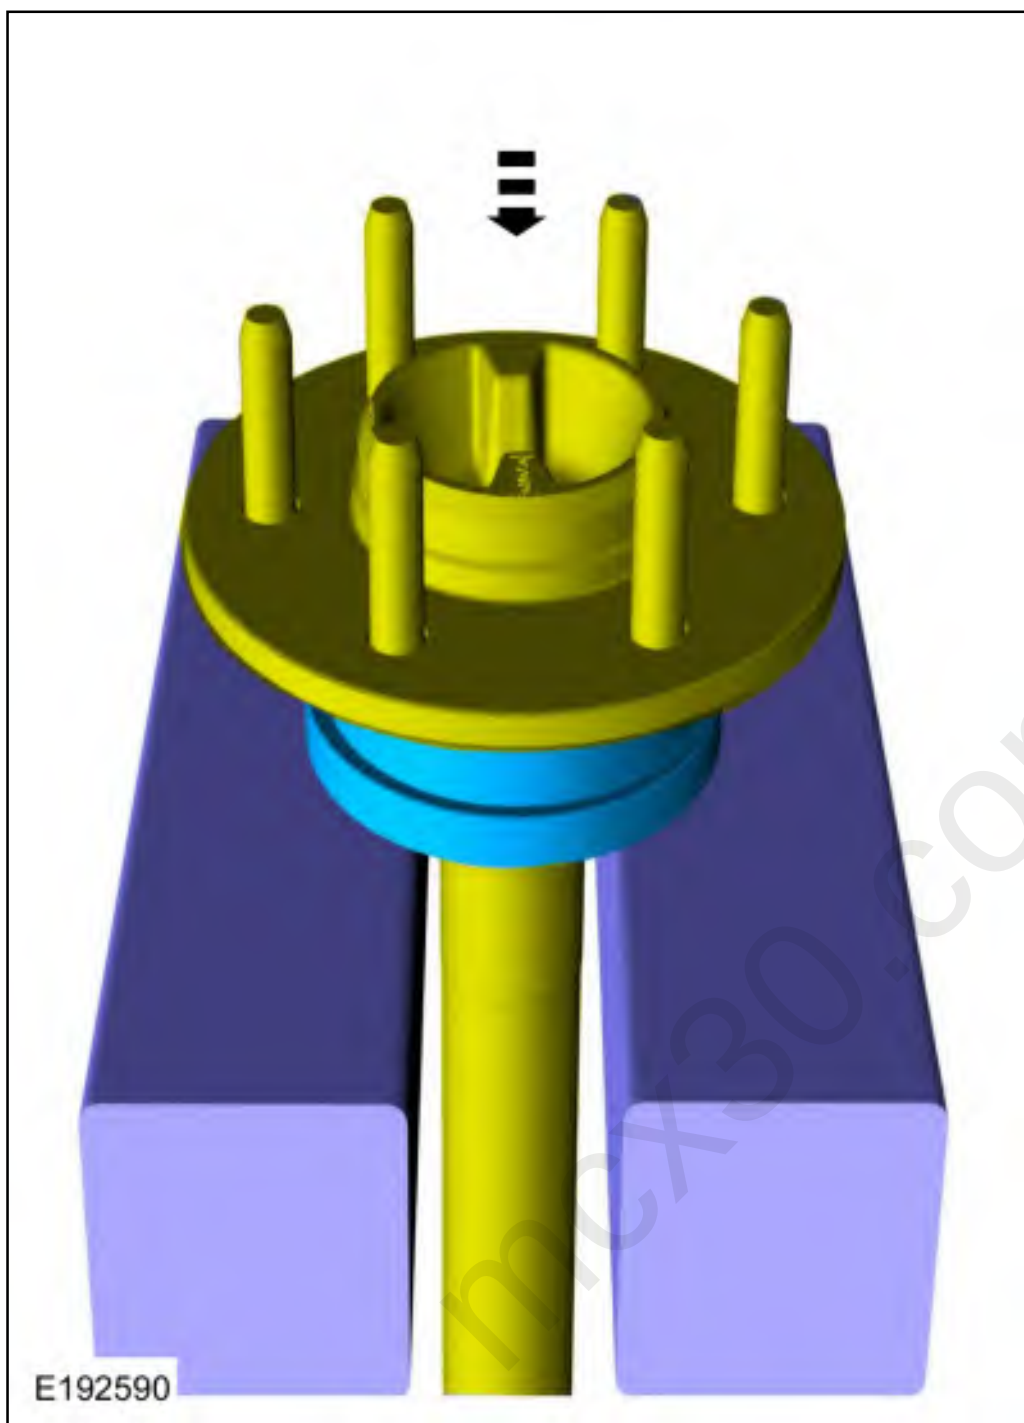

2. Install the axle shaft.

Refer to: [Axle Shaft](#) (205-02A Rear Drive Axle/Differential - Vehicles With: Ford 8.8 Inch Ring Gear, Removal and Installation).

Refer to: [Axle Shaft](#) (205-02B Rear Drive Axle/Differential - Vehicles With: Ford 9.75 Inch Ring Gear, Removal and Installation).