

Steering Wheel

Base Part Number: Base Part Number: 3600

Removal

NOTE: Removal steps in this procedure may contain installation details.


NOTE: High series heated steering wheel shown, all others similar.

NOTE: Make sure the wheels are in the straight ahead position.

1. Remove the driver airbag module.

Refer to: [Driver Airbag](#) (501-20B Supplemental Restraint System, Removal and Installation).


2. Disconnect the steering wheel electrical connector(s).

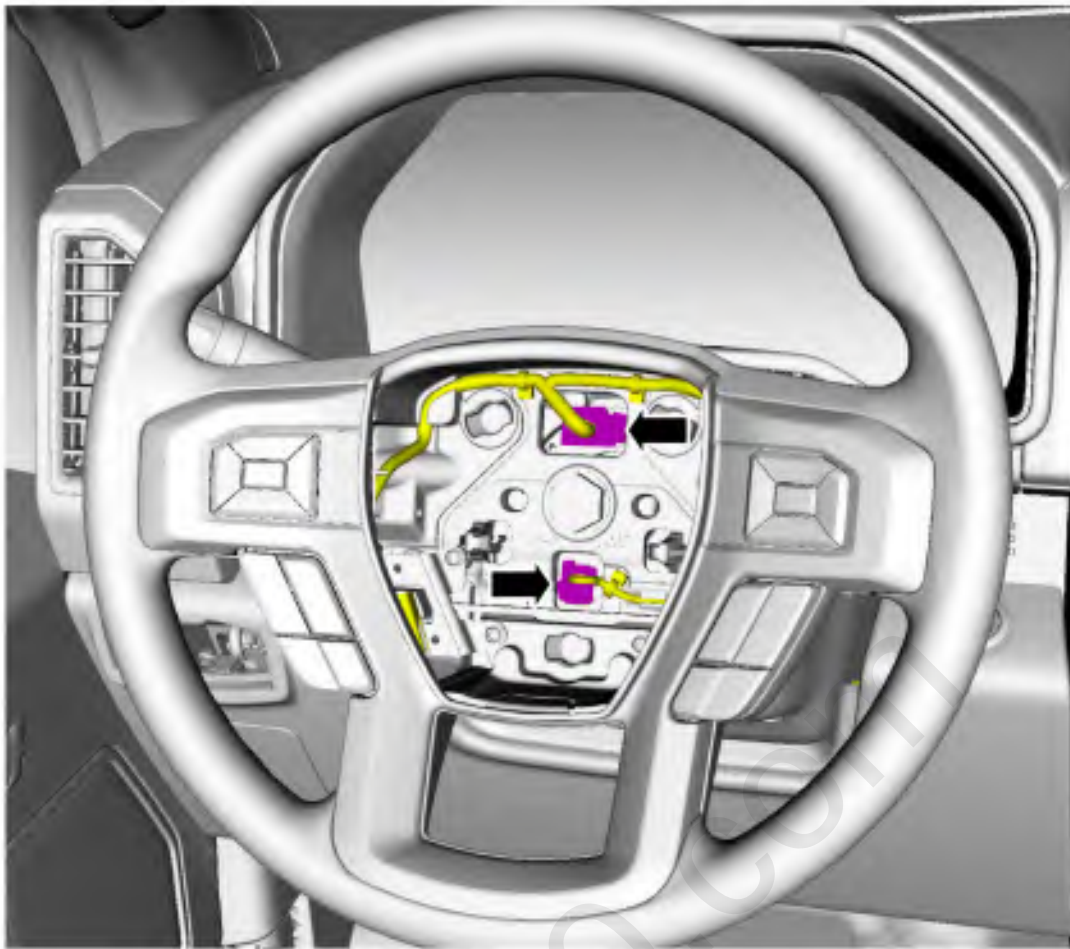


3. **NOTE:** Make sure the tick-mark on the end of the steering column shaft is on the top position.

Remove the steering wheel bolt and the steering wheel.

Torque: 41 lb.ft (55 Nm)

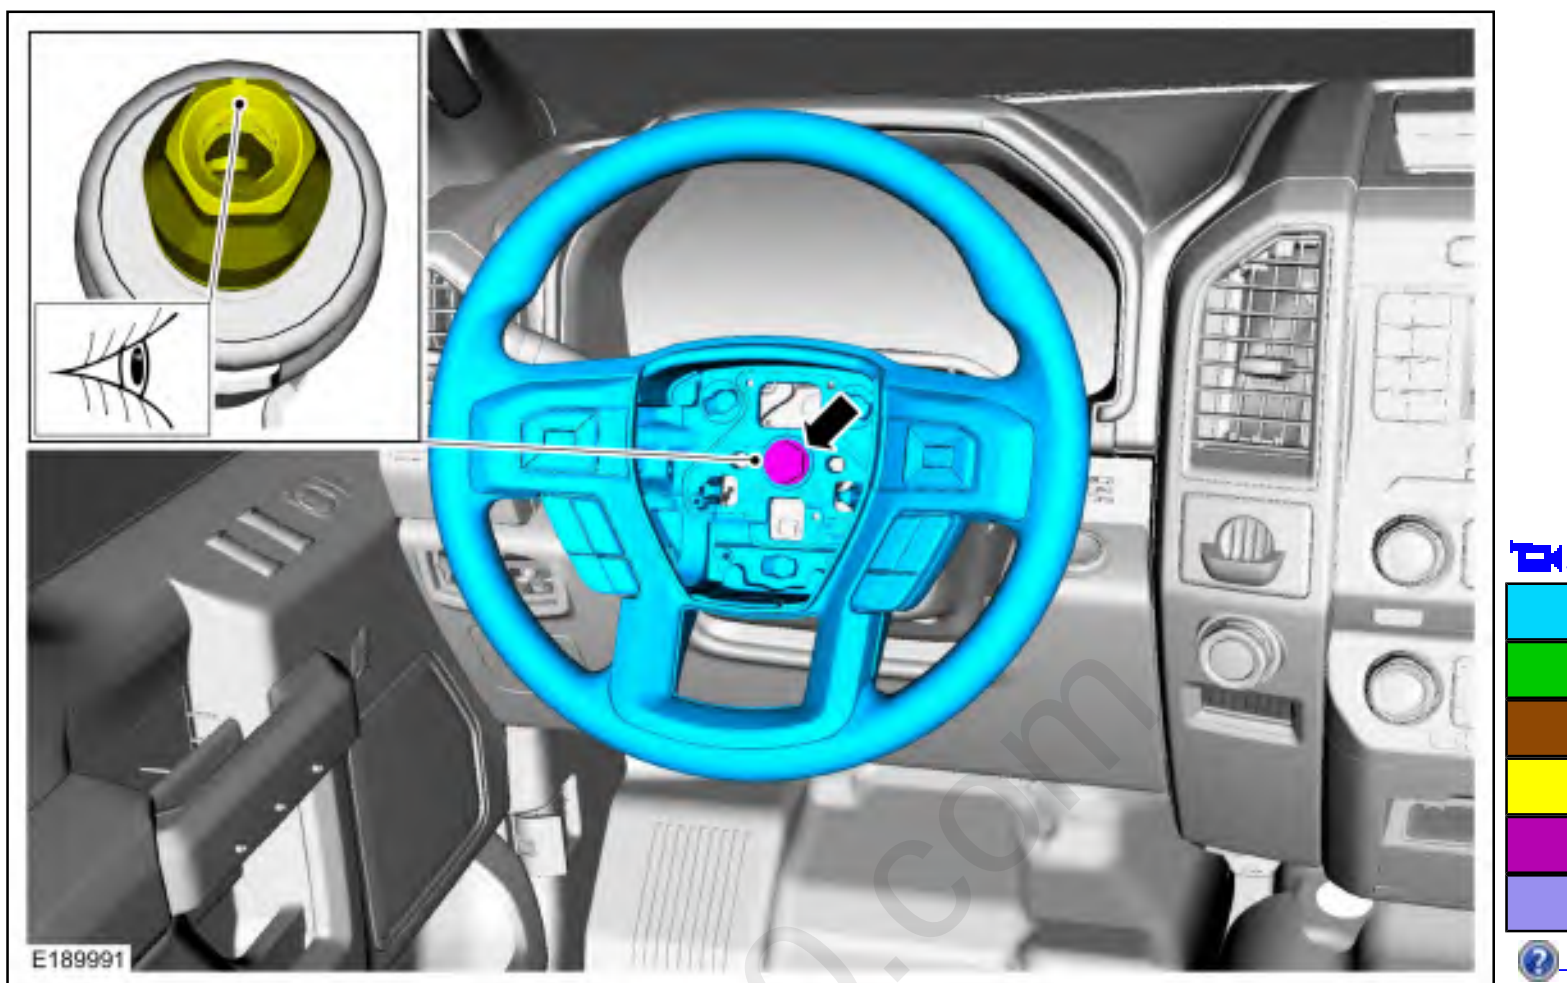

4. Tape the clockspring rotor to the outer housing to keep it from rotating.

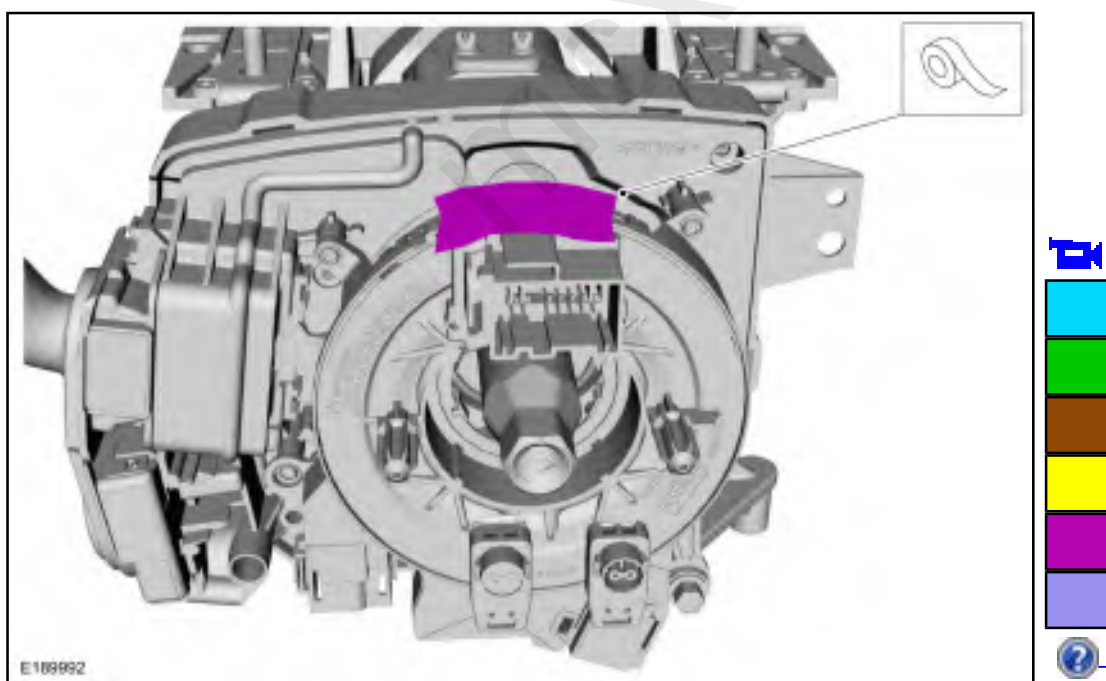

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company

mcx30.com