

Steering Column Lower Shaft


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. **NOTE:** Do not allow the steering column to rotate while the steering column shaft is disconnected or damage to the steering column internal sensor may result.

NOTE: Use a steering wheel holding device (such as Hunter® 28-75-1 or equivalent).


Keep the steering wheel in the straight ahead position.

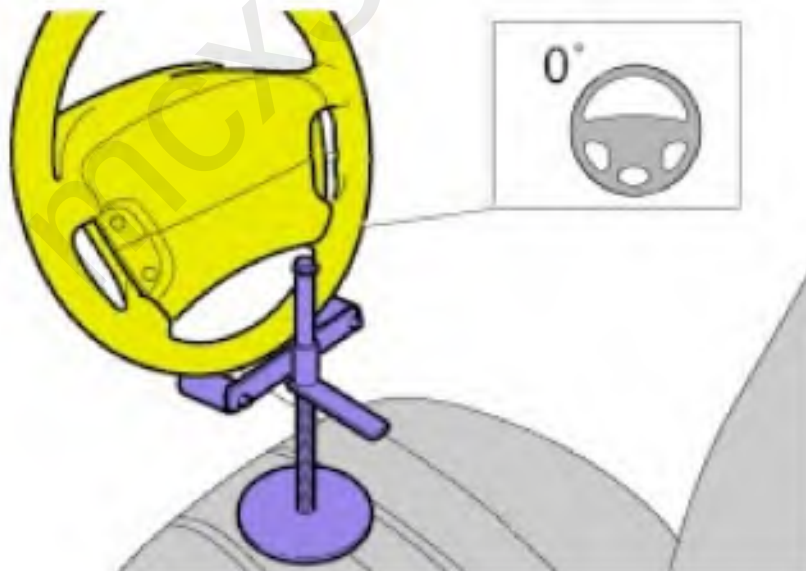

2.  **WARNING:** Install a new steering column shaft bolt. Reuse could result in bolt failure and loss of vehicle control. Failure to follow this instruction may result in serious injury to vehicle occupant(s).

Remove and discard the bolt and disconnect the upper steering column shaft.


Torque: 35 lb.ft (48 Nm)

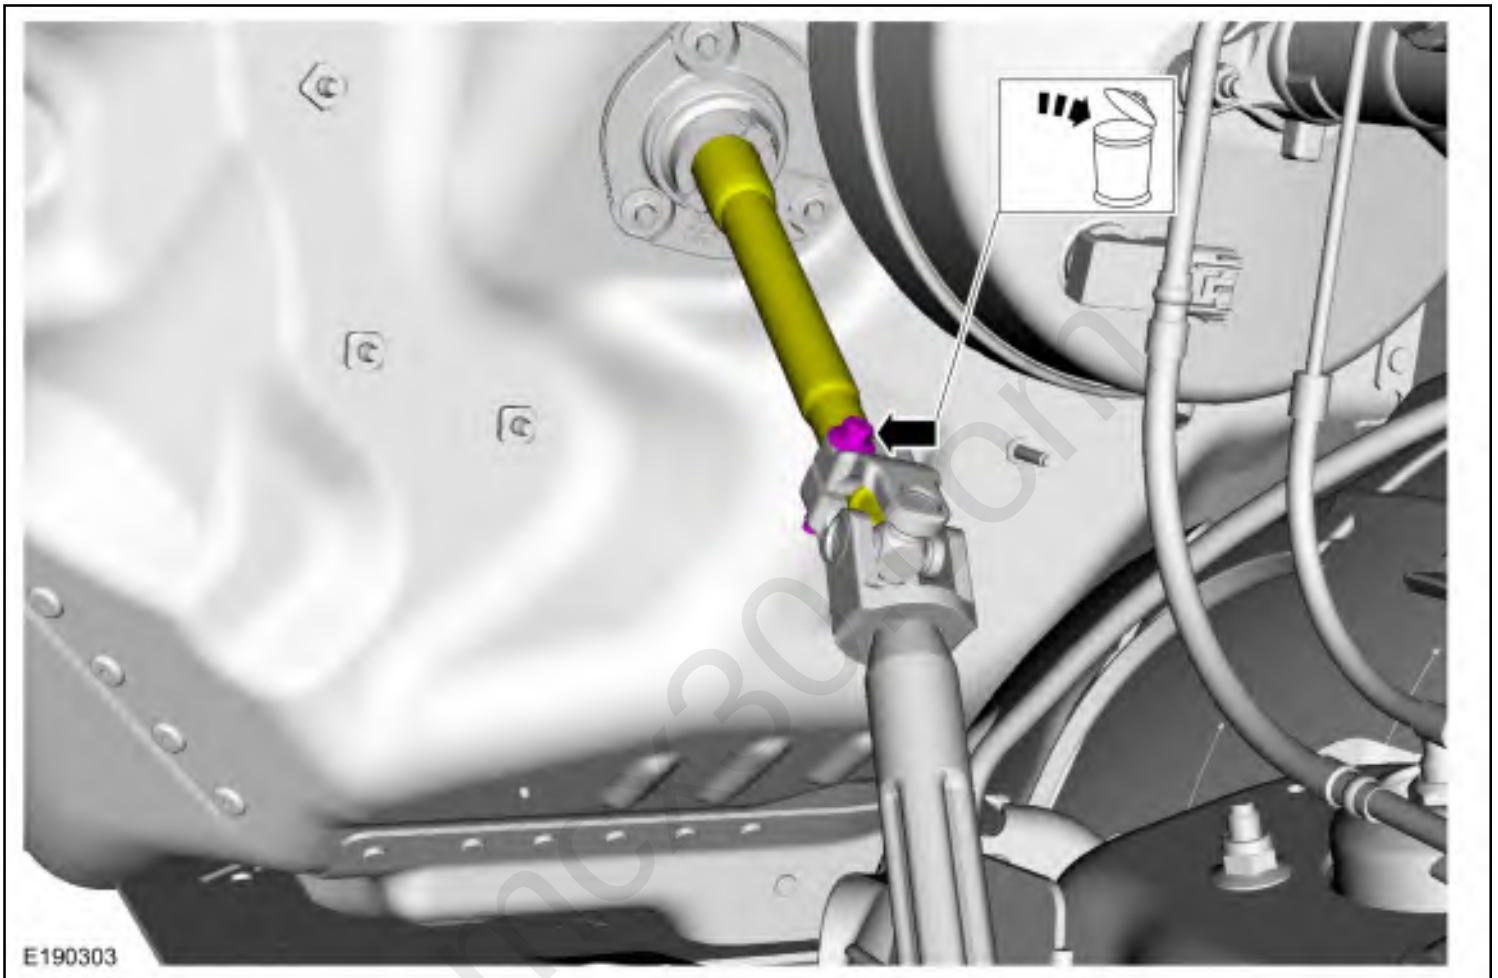

3.  **WARNING:** Install a new steering column shaft bolt. Reuse could result in bolt failure and loss of vehicle control. Failure to follow this instruction may result in serious injury to vehicle occupant(s).

Remove and discard the bolt and remove the lower steering column shaft.

Torque: 22 lb.ft (30 Nm)

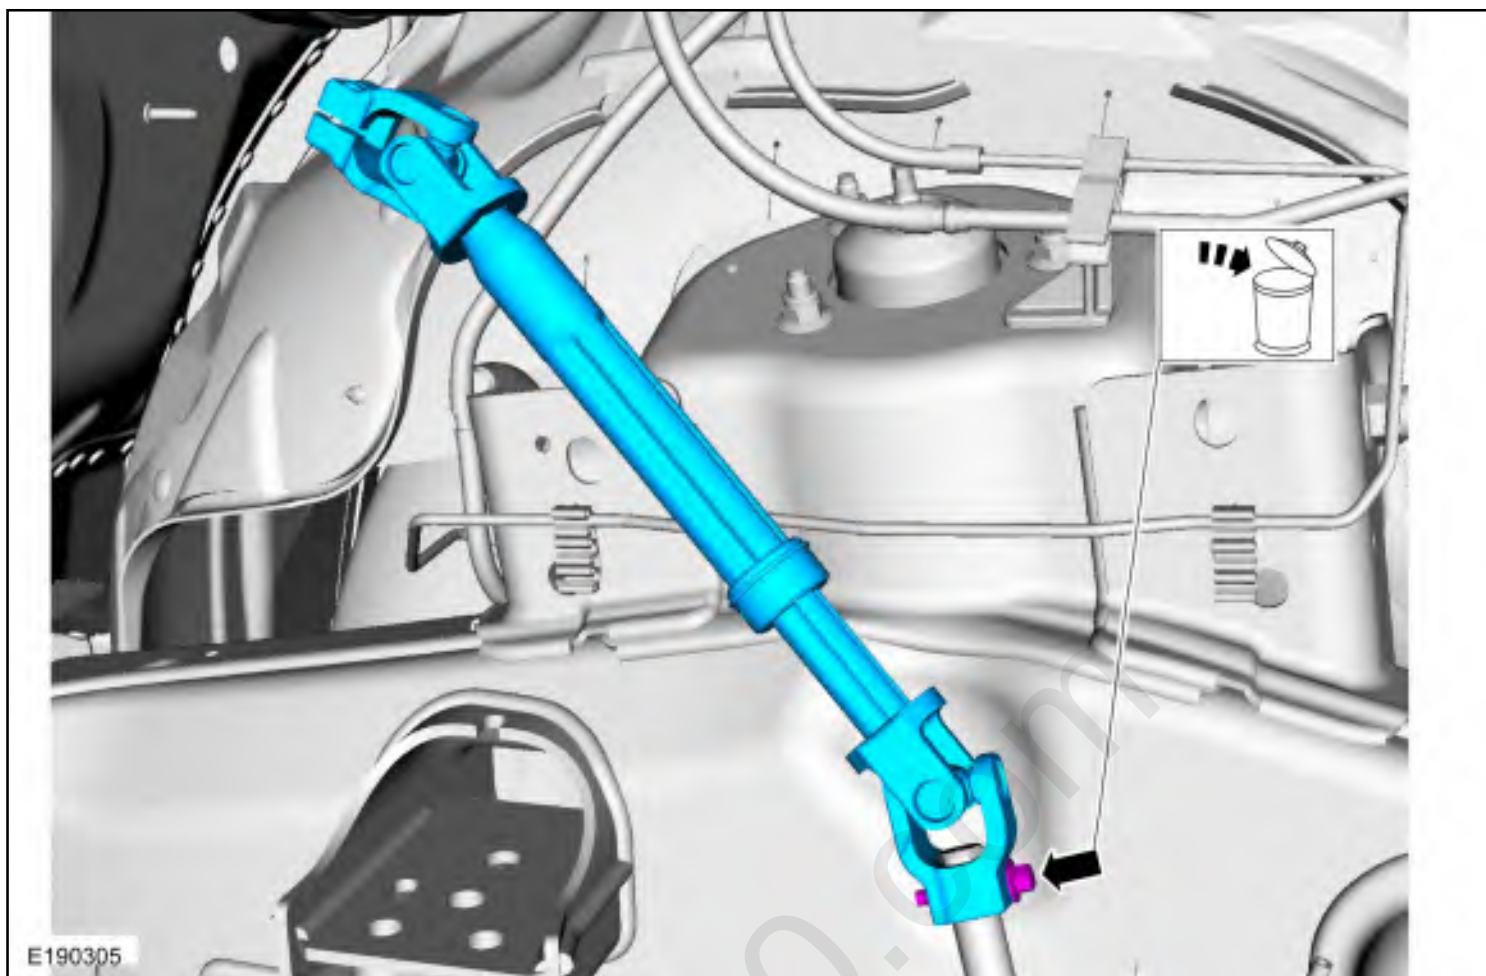

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company