


Steering Column Control Switch

Removal


1. Remove the steering column shrouds.
Refer to: [Steering Column Shrouds](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Turn the steering wheel 90 degrees left.



3. Remove the screws.

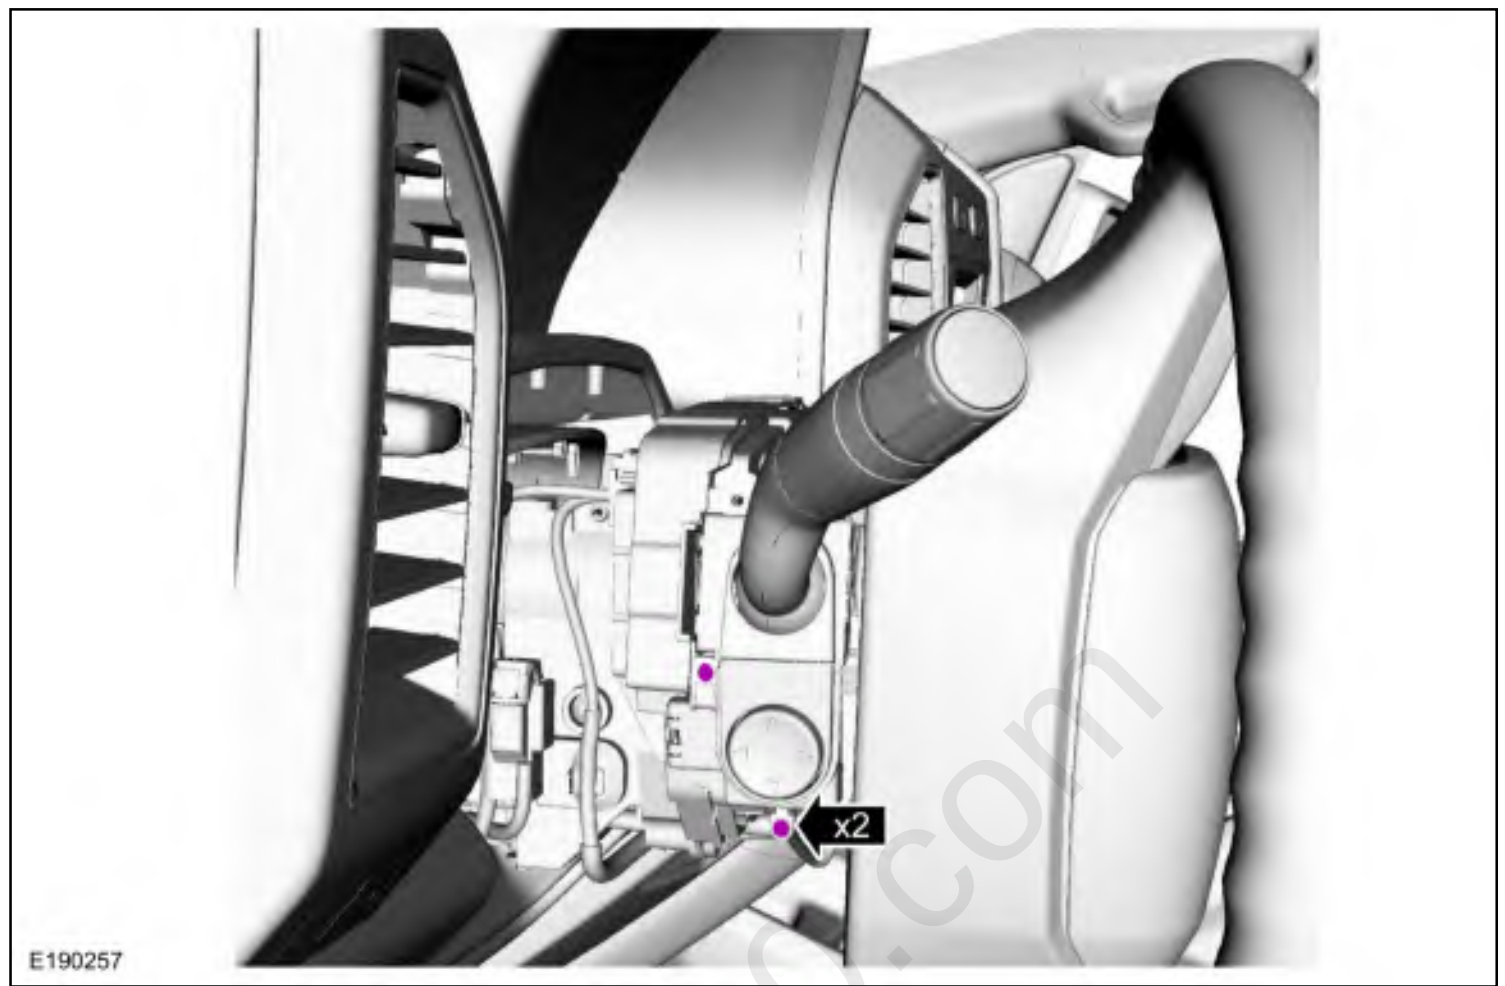

4. Squeeze the tabs and remove the steering column control switch.

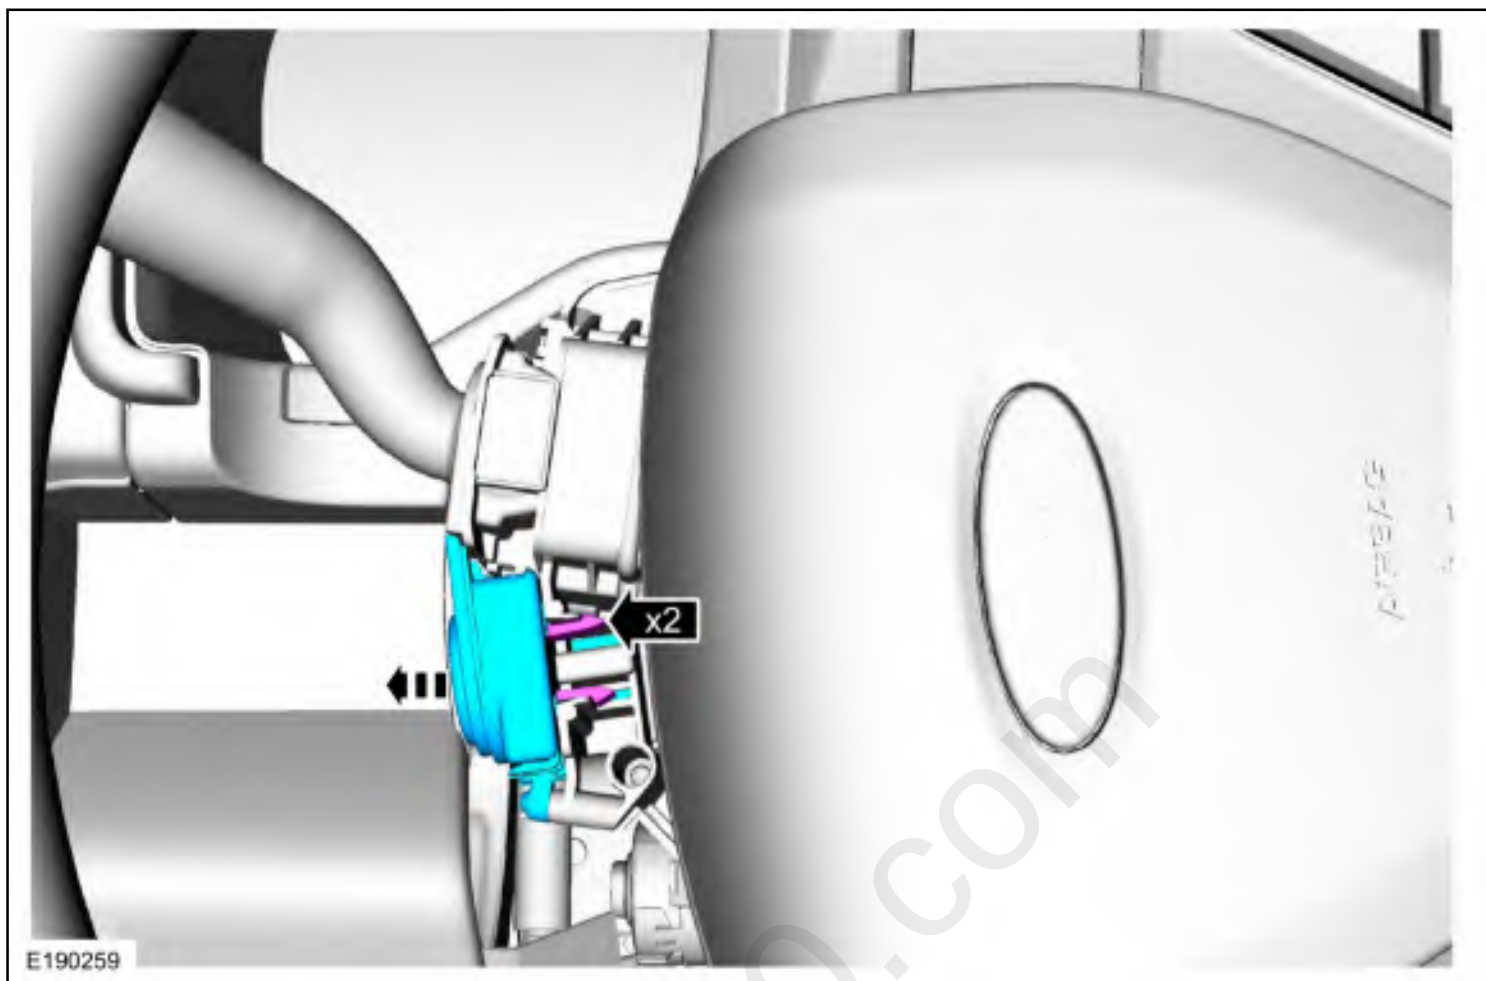

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company