



Ignition Switch

Removal

1. Remove the steering column shrouds.
Refer to: [Steering Column Shrouds](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Disconnect the ignition switch electrical connector.

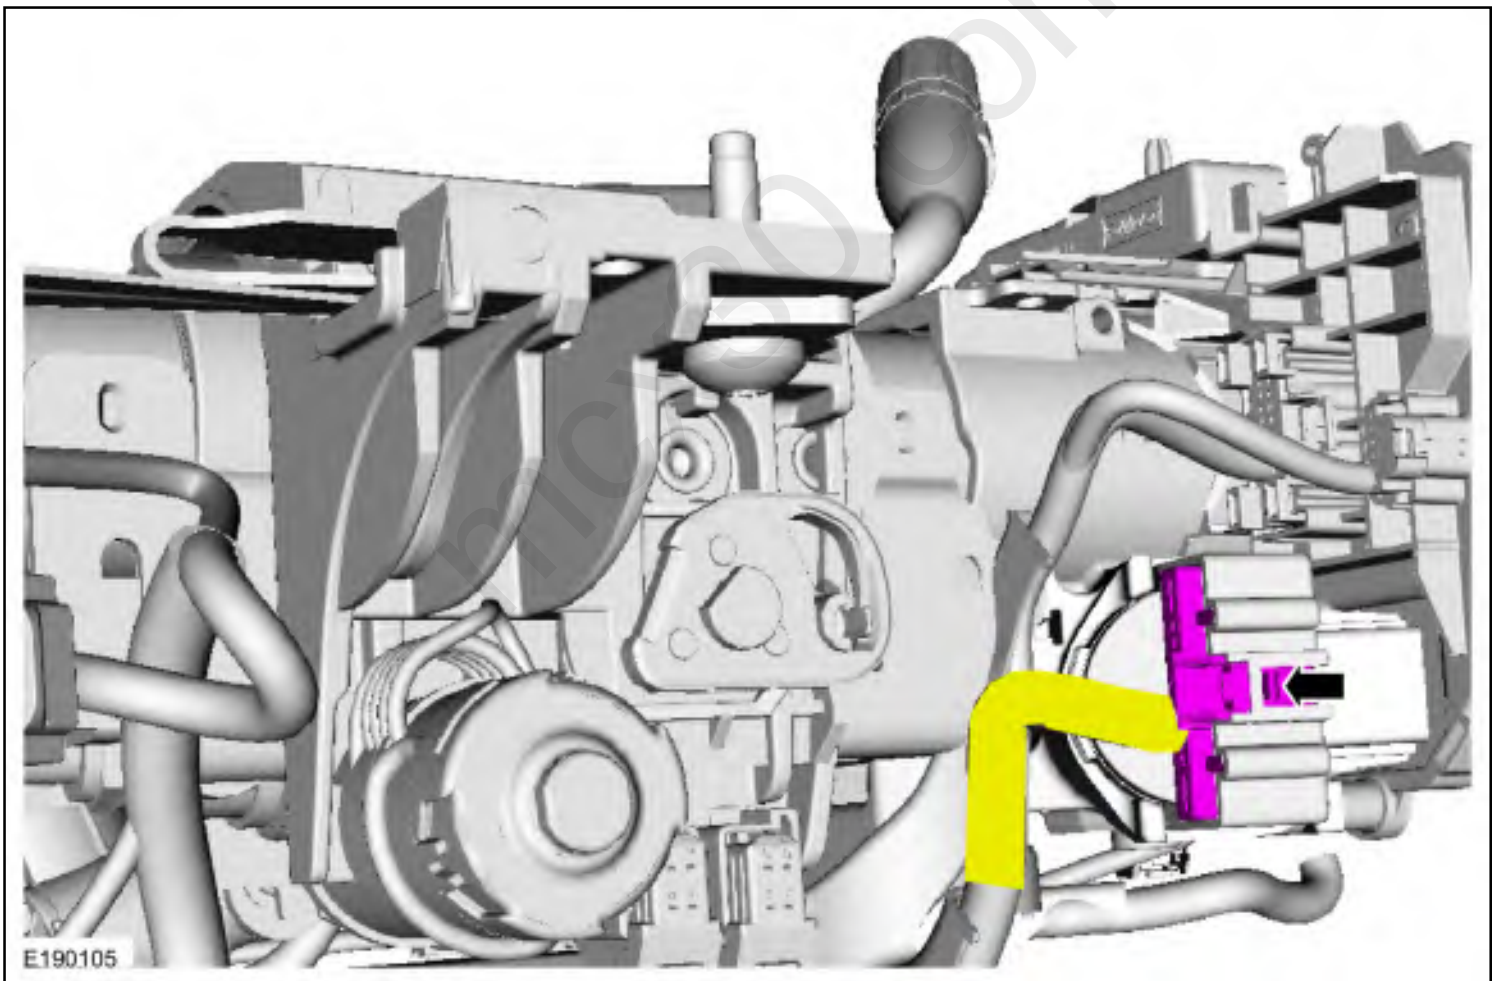

1. Push in the ignition switch tabs.
2. Remove the ignition switch.

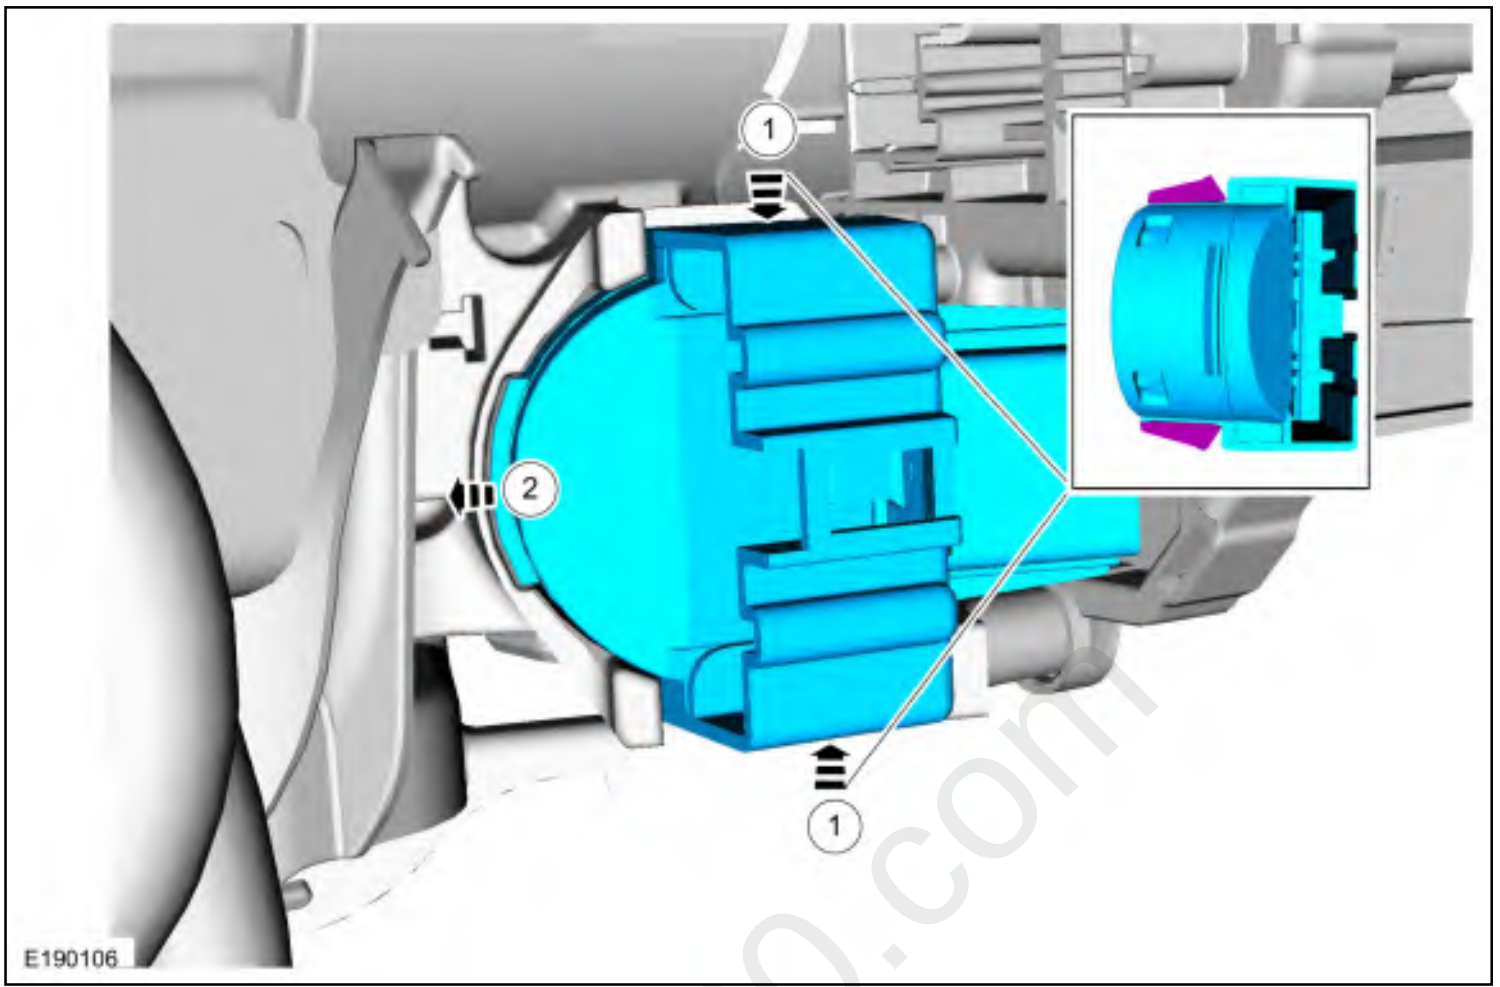

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company