


Steering Wheel Multifunction Switch


Removal

NOTE: *High series shown, others similar.*


1. Remove the driver airbag.
Refer to: [Driver Airbag](#) (501-20B Supplemental Restraint System, Removal and Installation).
1. On both sides, disconnect the electrical connector.
2. On both sides, detach the wire harness from the bezel.

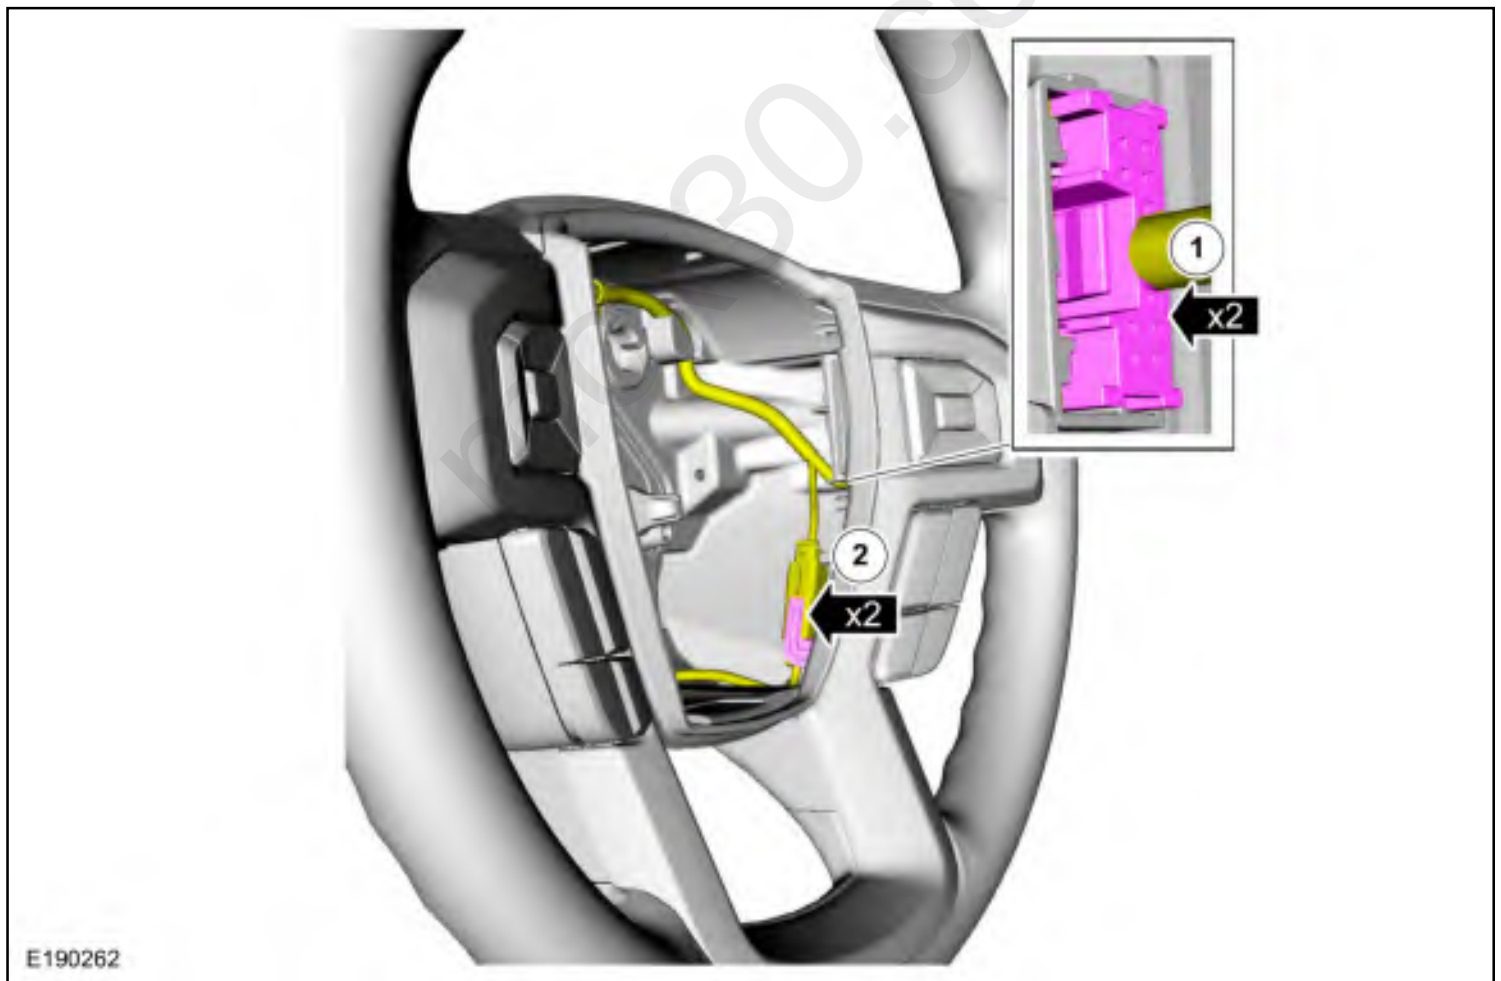

3. Using a suitable flat-bladed tool, remove the steering wheel switch bezel.

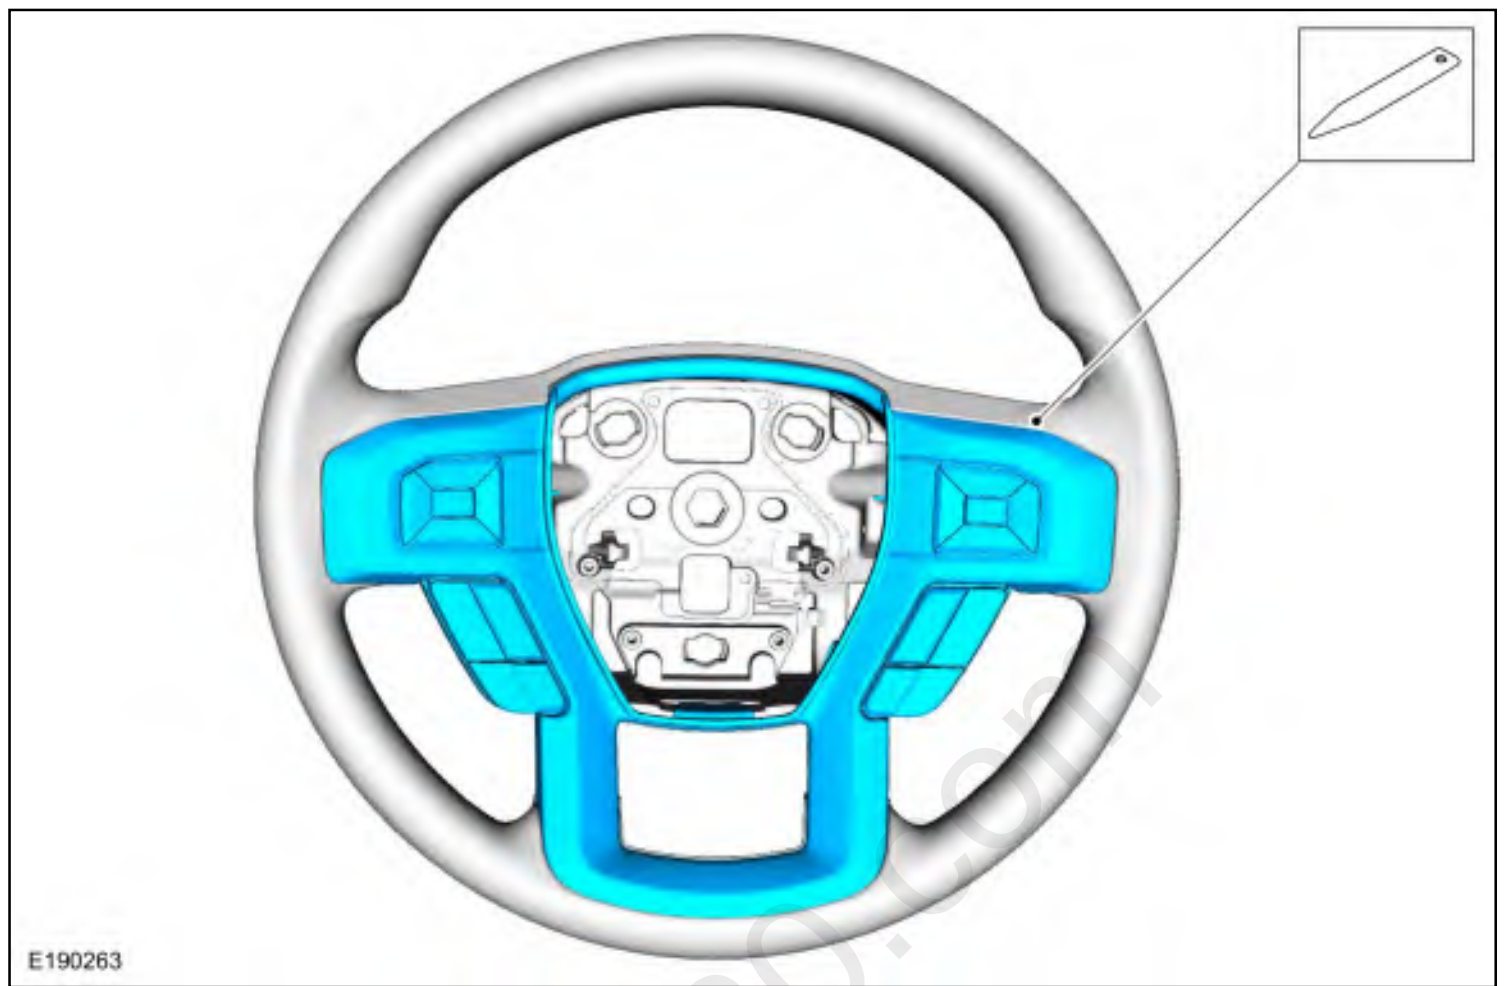

4. Remove the screws and the steering wheel multifunction switches.

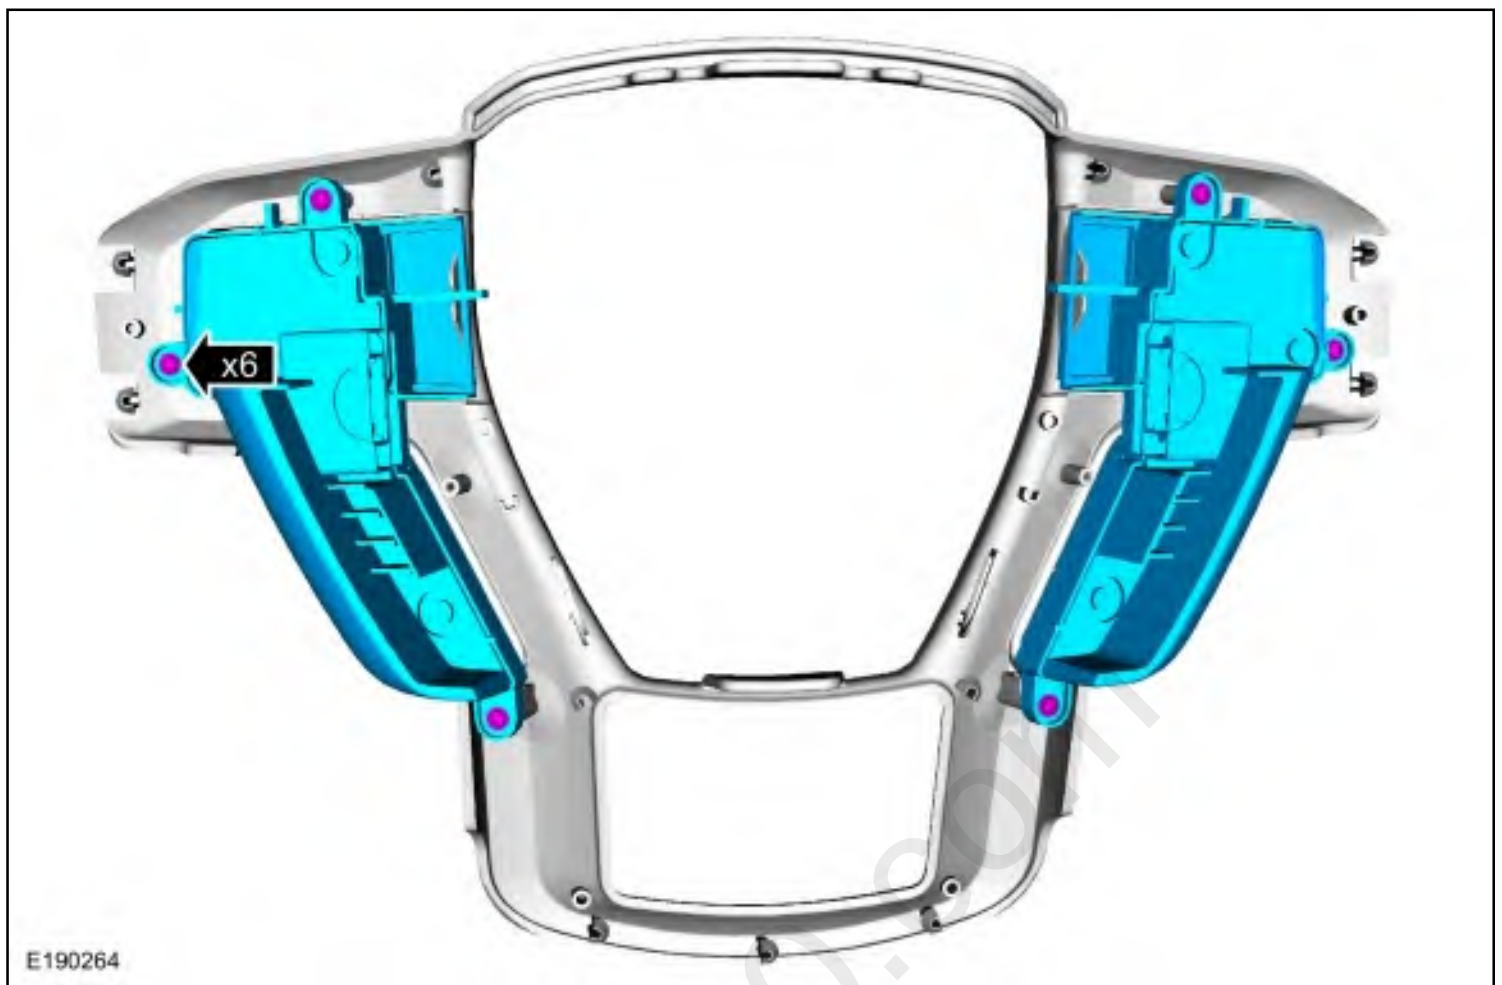

Installation

1. To install, reverse the removal procedure.

Copyright © 2018 Ford Motor Company